



IABU Headquarters

Delta Electronics, Inc.
Taoyuan3
No.18, Xinglong Rd., Taoyuan City,
Taoyuan County 330, Taiwan, R.O.C.
TEL: 886-3-362-6301 / FAX: 886-3-371-6301

Asia

Delta Electronics (Jiangsu) Ltd.

Wujiang Plant3
1688 Jiangxing East Road,
Wujiang Economic Development Zone
Wujiang City, Jiang Su Province,
People's Republic of China (Post code: 215200)
TEL: 86-512-6340-3008 / FAX: 86-769-6340-7290

Delta Greentech (China) Co., Ltd.

238 Min-Xia Road, Cao-Lu Industry Zone, Pudong, Shanghai,
People's Republic of China
Post code: 201209
TEL: 021-58635678 / FAX: 021-58630003

Delta Electronics (Japan), Inc.

Tokyo Office
2-1-14 Minato-ku Shibadaimon,
Tokyo 105-0012, Japan
TEL: 81-3-5733-1111 / FAX: 81-3-5733-1211

Delta Electronics (Korea), Inc.

234-9, Duck Soo Building 7F, Nonhyun-Dong,
Kangnam-Gu, Seoul, Korea 135-010
TEL: 82-2-515-5305 / FAX: 82-2-515-5302

Delta Electronics Int'l (S) Pte Ltd

4 Kaki Bukit Ave 1, #05-05, Singapore 417939
TEL: 65-6747-5155 / FAX: 65-6744-9228

Delta Electronics (India) Pvt. Ltd.

Plot No. 43, Sector - 35, HSIEDC,
Gurgaon 122001, Haryana, India
TEL: 1-919-767-3800 / FAX: 91-124-403-6045

Americas

Delta Products Corporation (USA)

Raleigh Office
P.O. Box 12173, 5101 Davis Drive,
Research Triangle Park, NC 27709, U.S.A.
TEL: 1-919-767-3813 / FAX: 1-919-767-3969

Delta Greentech (Brasil) S.A

Sao Paulo Office
Rua Itapeva, 26-30 Andar Edificio Itapeva One-Bela Vista
01332-000-Sao Paulo-SP-Brazil
TEL: +55 11 3568-3850/FAX: +55 11 3568-3865

Europe

Deltronics (The Netherlands) B.V.

Eindhoven Office
De Witboog 15, 5652 AG Eindhoven, The Netherlands
TEL: 31-40-2592850 / FAX: 31-40-2592851



Classical Field Oriented Control AC Motor Drive C2000 Series User Manual

C2000 Series User Manual



PLEASE READ PRIOR TO INSTALLATION FOR SAFETY.



- ☑ AC input power must be disconnected before any wiring to the AC motor drive is made.
- ☑ Even if the power has been turned off, a charge may still remain in the DC-link capacitors with hazardous voltages before the POWER LED is OFF. Please do not touch the internal circuit and components.
- ☑ There are highly sensitive MOS components on the printed circuit boards. These components are especially sensitive to static electricity. Please do not touch these components or the circuit boards before taking anti-static measures. Never reassemble internal components or wiring.
- ☑ Ground the AC motor drive using the ground terminal. The grounding method must comply with the laws of the country where the AC motor drive is to be installed.
- ☑ DO NOT install the AC motor drive in a place subjected to high temperature, direct sunlight and inflammables.



- ☑ Never connect the AC motor drive output terminals U/T1, V/T2 and W/T3 directly to the AC mains circuit power supply.
- ☑ Only qualified persons are allowed to install, wire and maintain the AC motor drives.
- ☑ Even if the 3-phase AC motor is stop, a charge may still remain in the main circuit terminals of the AC motor drive with hazardous voltages.
- ☑ If the AC motor drive is stored in no charge condition for more than 3 months, the ambient temperature should not be higher than 30 °C. Storage longer than one year is not recommended, it could result in the degradation of the electrolytic capacitors.

 **NOTE**

The content of this manual may be revised without prior notice. Please consult our distributors or download the most updated version at <http://www.delta.com.tw/industrialautomation>

Table of Contents

CHAPTER 1 INTRODUCTION	1-1
CHAPTER 2 INSTALLATION	2-1
CHAPTER 3 UNPACKING	3-1
CHAPTER 4 WIRING	4-1
CHAPTER 5 MAIN CIRCUIT TERMINALS	5-1
CHAPTER 6 CONTROL TERMINALS	6-1
CHAPTER 7 OPTIONAL ACCESSORIES	7-1
CHAPTER 8 OPTION CARDS	8-1
CHAPTER 9 SPECIFICATION	9-1
CHAPTER 10 DIGITAL KEYPAD	10-1
CHAPTER 11 SUMMARY OF PARAMETERS	11-1
CHAPTER 12 DESCRIPTION OF PARAMETER SETTINGS	12-1
CHAPTER 13 WARNING CODES	13-1
CHAPTER 14 FAULT CODES AND DESCRIPTIONS	14-1
CHAPTER 15 CANOPEN OVERVIEW	15-1
CHAPTER 16 PLC FUNCTION	16-1
CHAPTER 17 HOW TO SELECT THE RIGHT AC MOTOR DRIVE	17-1
CHAPTER 18 SUGGESTIONS AND ERROR CORRECTIONS FOR STANDARD AC MOTOR DRIVES	18-1

Application	Control BD V1.01;
	Keypad V1.01;

Publication History

The following changes summarize the differences to the C2000 Simplified Manual, Version 5011694702.

Chapters	Changes	Detail
[Table of Content]	New	New Chapters: <ul style="list-style-type: none"> Chapter 2 Installation Chapter 7 Optional Accessories Chapter 12 Description of Parameter Settings Chapter 15 CANopen Overview Chapter 16 PLC Function (Applicable model, AC motor drive selection) Applicable model AC motor drive selection
[01 Introduction]	New	Frame FRAME A~H KPC-CC01 digital keypad
	Update	Serial number
[02 Installation]	New	Mounting clearances and wiring information
	Update	Unpacking details moved to CH3
[03 Unpacking]	New	FRAME F~H FRAME H secure the drive FRAME F~H lifting weight
[04Wiring]	New	RB-RC power protection system diagram
[05 Main circuit terminal]	Updates	Wiring diagram 1, 2 Control circuit description Figure1,2 Figure 3 FRAME E-H DC-LINK
	Update	Remove the cover for wiring figure Main circuit terminal specifications Frame A~E (max. and min. wire gauge,torque, note, diagram)
[06 Control circuit terminal]	Update	Remove the cover for wiring figure
[07 Optional Accessories]	Update	1. All Brake Resistors and Brake Units Used in AC Motor Drives 2. AC Reactor 3. EMI Filter 4. Fan kit Model 『MKC-FFKB』 5. Fan kit Model 『MKC-GFKM』
[08 Option cards]	New	EMC-BPS01: terminal Screw Specifications
	Update	EMC-PG01O, EMC-PG01L, EMC-PG01U, EMC-PG01R: terminal Screw specifications, wiring diagram
[09 Specification]	New	AC Drive Weight
	Update	Braking Chopper
		DC reactor
		EMC Filter
		EMC-COP01
[10 Digital Keypad]	New	10-4 Fault Code Description of Digital Keypad KPC-CC01
[11 Summary of Parameters]	Update	Group 00 Pr. 00-04, 00-29, 00-40,
[12 Description of Parameters]		Group 01 Pr. 01-34, 01-43, 01-44,
		Group 02 Pr.02-10, 02-12, 02-18~02-20, 02-34
		Group 03 Pr.03-06, 03-15~03-17
		Group 05

		Pr.05-05~05-09, 05-018~05-21
		Group 06 Pr.06-48, 06-69, 06-70
		Group 07 Pr.07-05
		Group 08 Pr.08-00, 08-06
		Group 09 Pr.09-04, 09-31, 09-43
		Group 10 Pr.10-31~10-42
		Group 11 Pr.11-02, 11-13, 11-39, 11-42
	NEW	Pr. 02-55~02-58,
[13 Warning Codes]	New	PLra
[14 Fault Codes and Descriptions]	New	Fault code: "ryF" "PGF5", "FStp", "ictE"
	Update	LCM display icons Fault codes: "oH1", "oH2", "Uoc", "Voc", "Woc",
	Remove	LED display content Fault code: "PWR", "ccod", "ocU", "ovU",
[15 CAN Slave] [16 PLC]	Update	15.3 How to control by CANopen
	Update	16.6 Commands
		16.7 Error Code and Troubleshoot
[18]	NEW	New chapter


Chapter 1 Introduction

Receiving and Inspection


After receiving the AC motor drive, please check for the following:

1. Please inspect the unit after unpacking to assure it was not damaged during shipment. Make sure that the part number printed on the package corresponds with the part number indicated on the nameplate.
2. Make sure that the voltage for the wiring lie within the range as indicated on the nameplate. Please install the AC motor drive according to this manual.
3. Before applying the power, please make sure that all the devices, including power, motor, control board and digital keypad, are connected correctly.
4. When wiring the AC motor drive, please make sure that the wiring of input terminals “R/L1, S/L2, T/L3” and output terminals “U/T1, V/T2, W/T3” are correct to prevent drive damage.
5. When power is applied, select the language and set parameter groups via the digital keypad (KPC-CC01). When executes trial run, please begin with a low speed and then gradually increases the speed until the desired speed is reached.


Nameplate Information

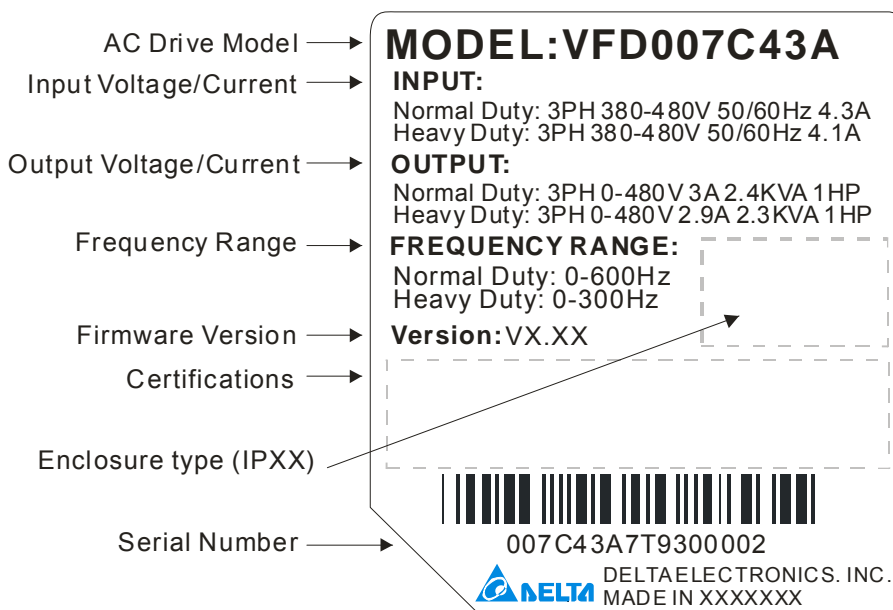

Model Name

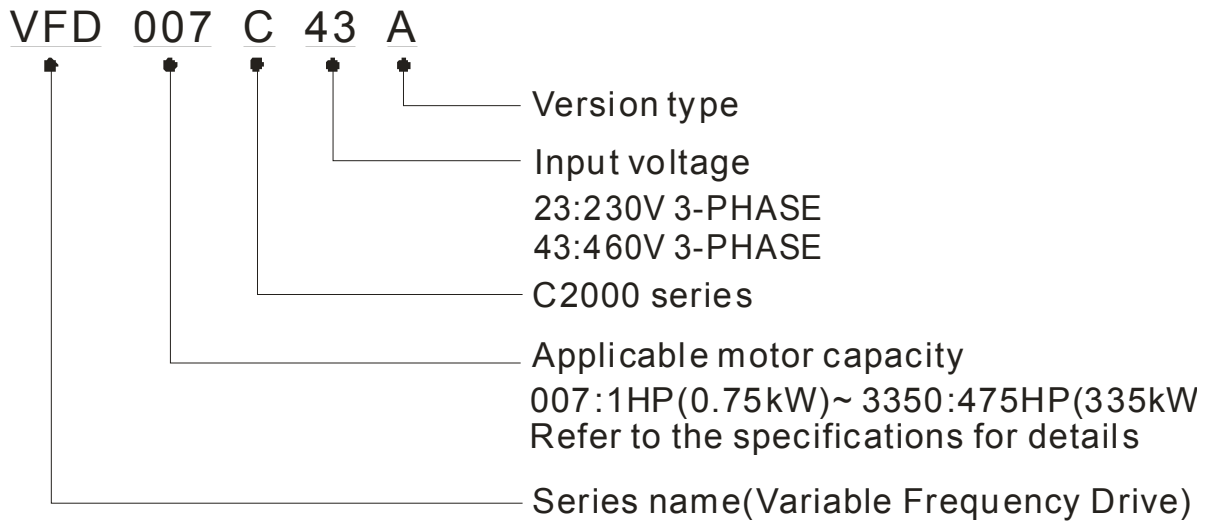

Serial Number

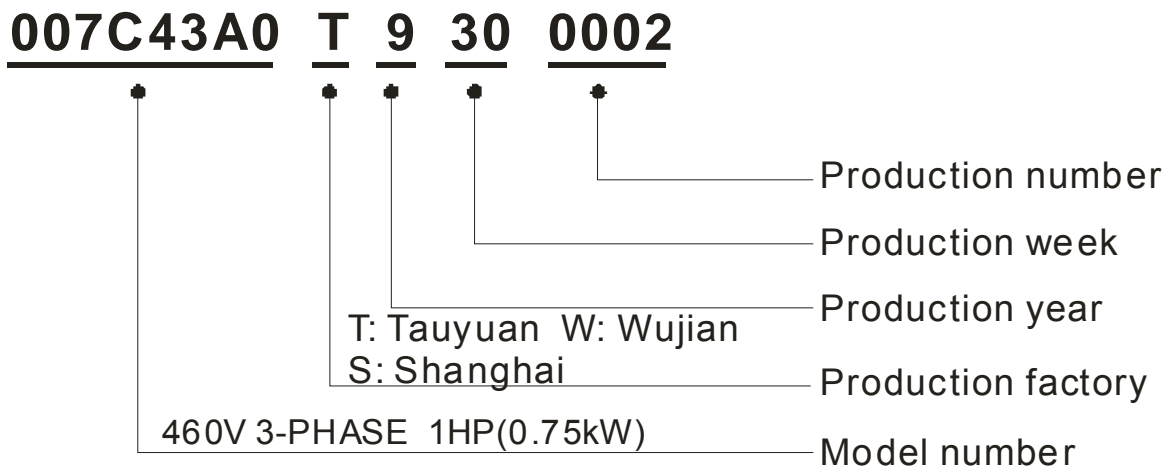


RFI Jumper

RFI Jumper: The AC motor drive may emit the electrical noise. The RFI jumper is used to suppress the interference (Radio Frequency Interference) on the power line.

Frame A~C


Screw Torque: 8~10kg-cm(6.9-8.7 lb -in.)

Loosen the screws and remove the MOV-PLATE. Fasten the screws back to the original position after MOV-PLATE is removed.

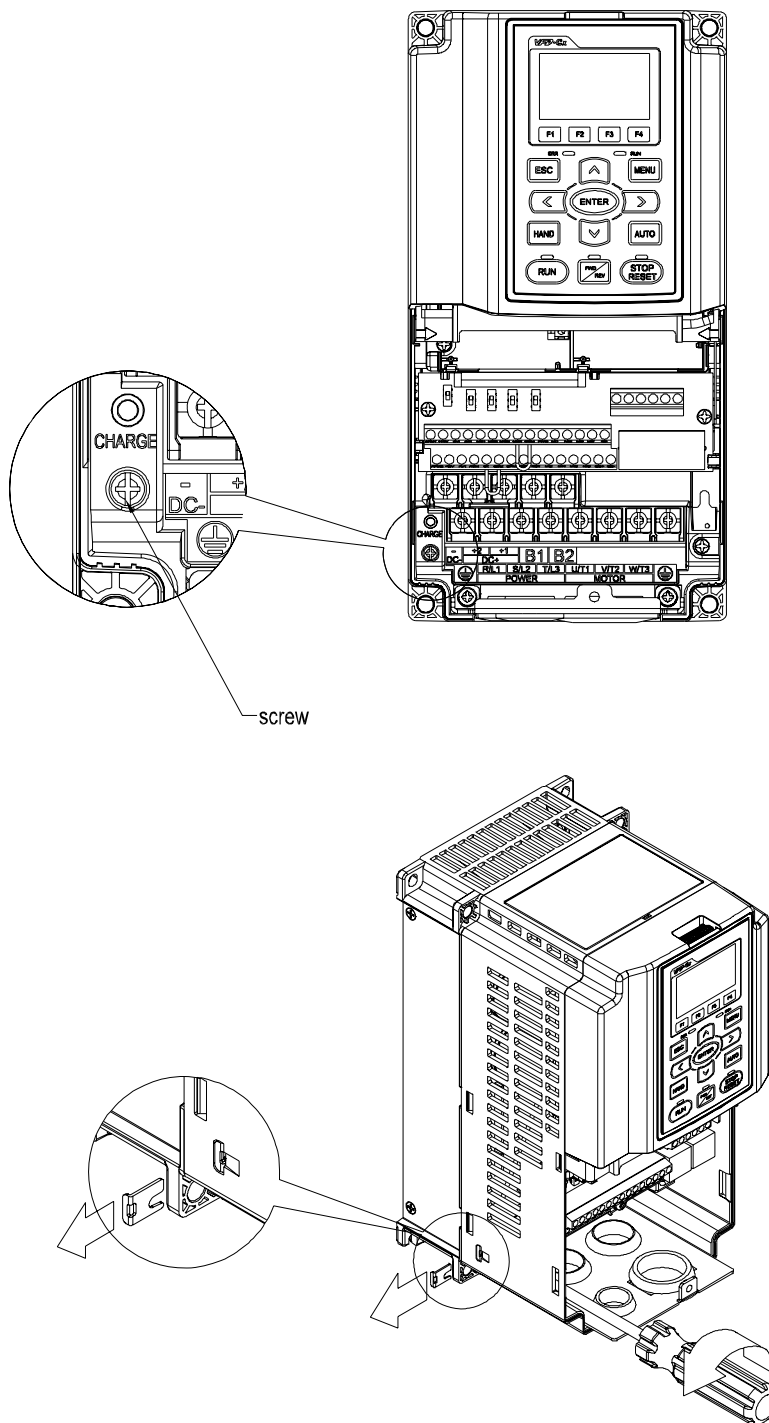

Frame D~H

Remove the MOV-PLATE by hands, no screws need to be loosen.

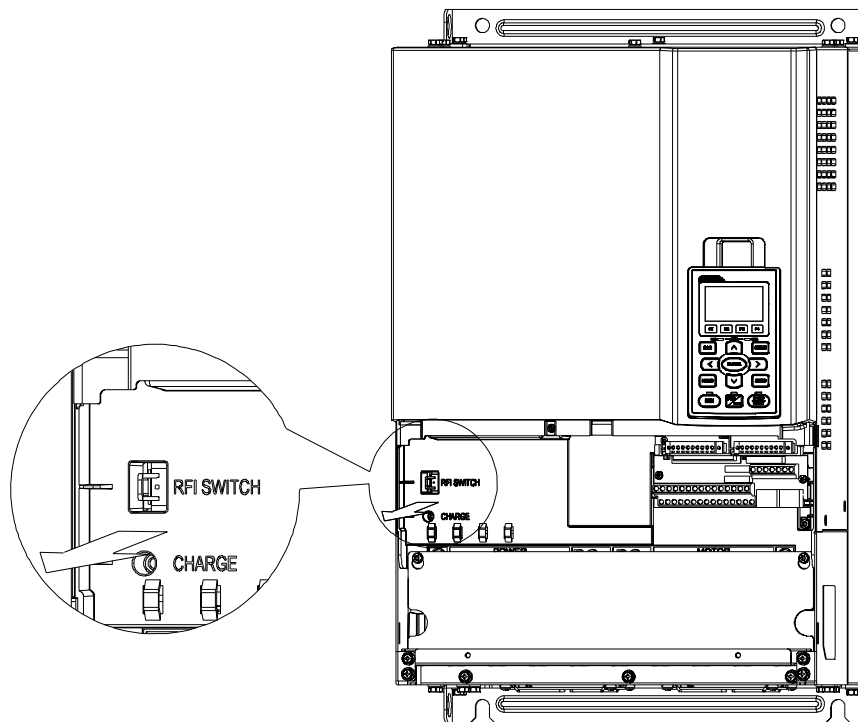

Main power isolated from earth:

If the AC motor drive is supplied from an isolated power (IT power), the RFI jumper must be cut off. Then the RFI capacities (filter capacitors) will be disconnected from ground to prevent circuit damage (according to IEC 61800-3) and reduce earth leakage current.




1. When power is applied to the AC motor drive, do not cut off the RFI jumper.
2. Make sure main power is switched off before cutting the RFI jumper.
3. The gap discharge may occur when the transient voltage is higher than 1,000V. Besides, electro-magnetic compatibility of the AC motor drives will be lower after cutting the RFI jumper.
4. Do NOT cut the RFI jumper when main power is connected to earth.
5. The RFI jumper cannot be cut when Hi-pot tests are performed. The mains power and motor must be separated if high voltage test is performed and the leakage currents are too high.
6. To prevent drive damage, the RFI jumper connected to ground shall be cut off if the AC motor drive is installed on an ungrounded power system or a high resistance-grounded (over 30 ohms) power system or a corner grounded TN system.

Dimensions

Frame A

VFD007C23A; VFD007C43A/E; VFD015C23A; VFD015C43A/E; VFD022C23A; VFD022C43A/E;
 VFD037C23A; VFD037C43A/E; VFD040C43A/E; VFD055C43A/E

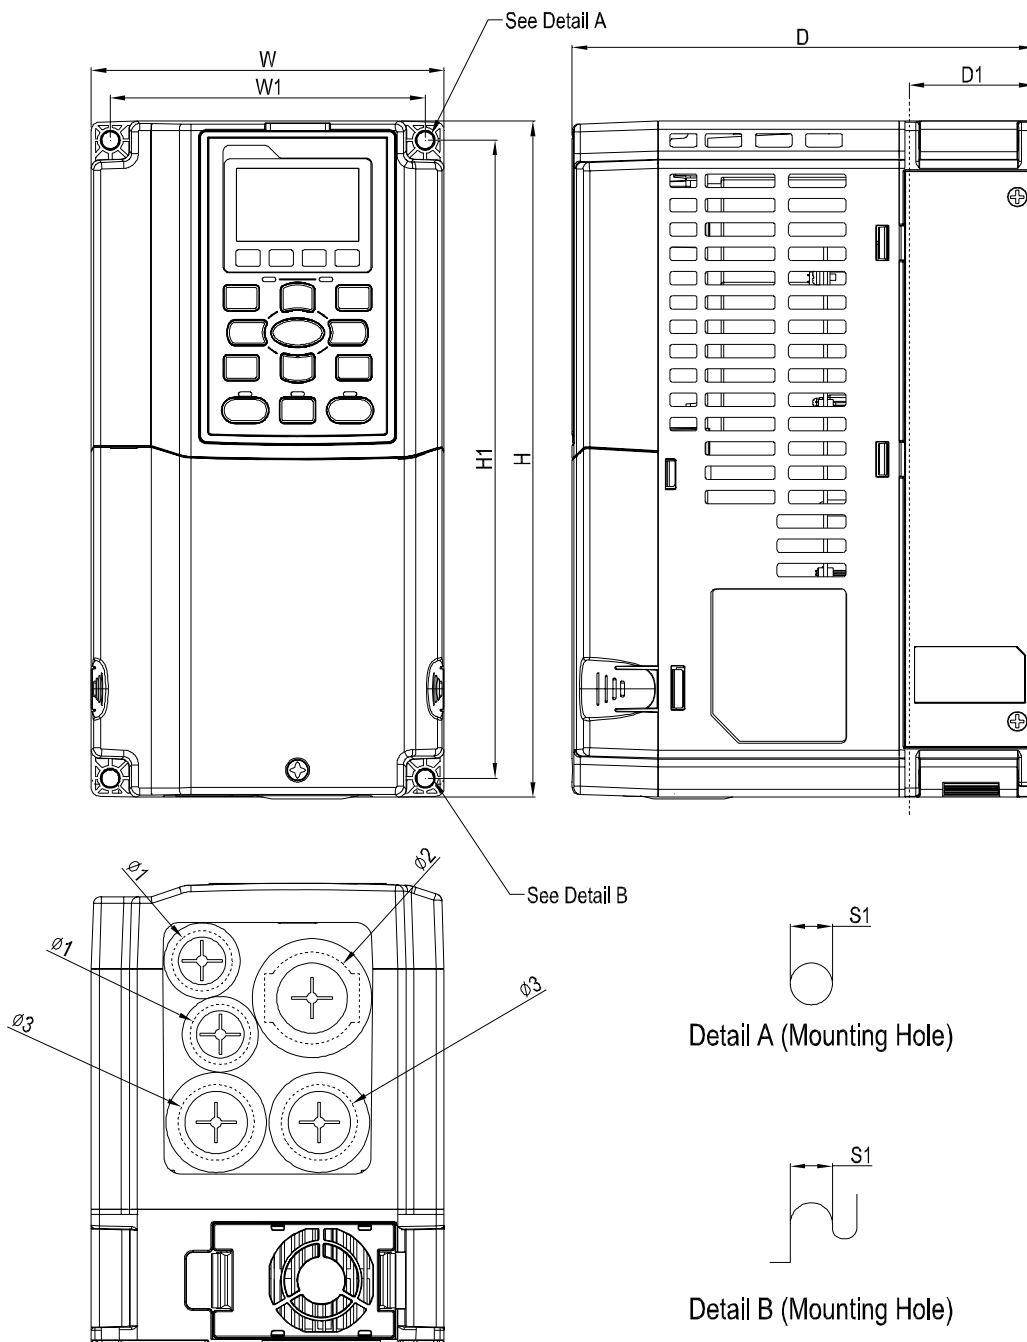





Unit: mm [inch]

Frame	W	H	D	W1	H1	D1*	S1	$\phi 1$	$\phi 2$	$\phi 3$
A1	130.0 [5.12]	250.0 [9.84]	170.0 [6.69]	116.0 [4.57]	236.0 [9.29]	45.8 [1.80]	6.2 [0.24]	22.2 [0.87]	34.0 [1.34]	28.0 [1.10]


D1*: Flange mounting

Frame B

VFD055C23A; VFD075C23A; VFD075C43A/E; VFD110C23A; VFD110C43A/E; VFD150C43A/E

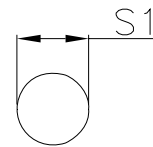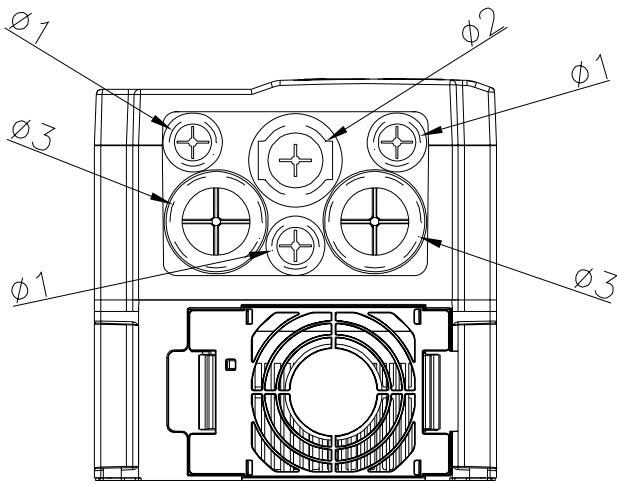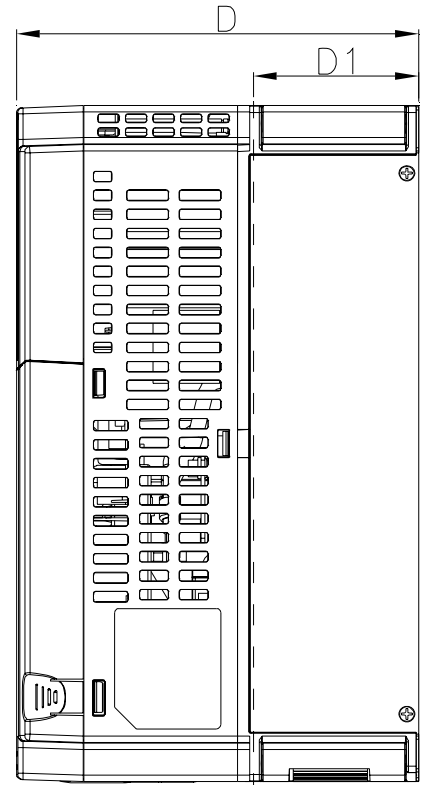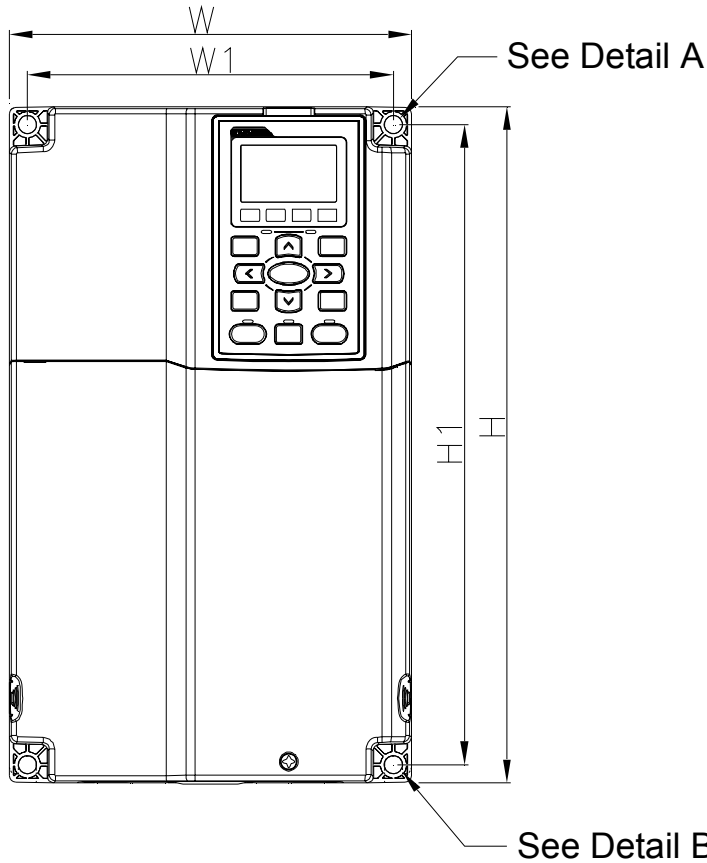

Detail A (Mounting Hole)

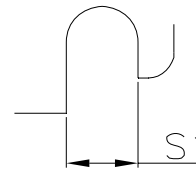

Detail B (Mounting Hole)





Unit: mm [inch]

Frame	W	H	D	W1	H1	D1*	S1	Φ1	Φ2	Φ3
B1	190.0 [7.48]	320.0 [12.60]	190.0 [7.48]	173.0 [6.81]	303.0 [11.93]	77.9 [3.07]	8.5 [0.33]	22.2 [0.87]	34.0 [1.34]	28.0 [1.10]

D1*: Flange mounting

Frame C

VFD150C23A; VFD185C23A; VFD185C43A/E; VFD220C23A; VFD220C43A/E; VFD300C43A/E

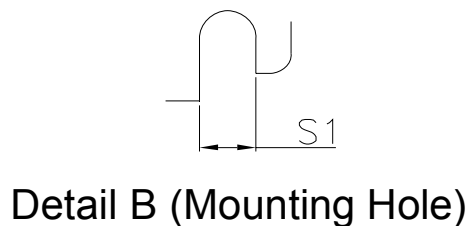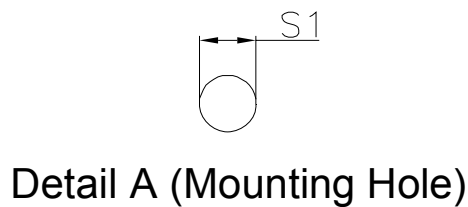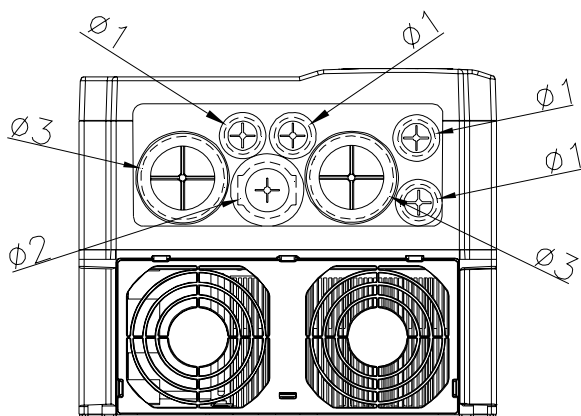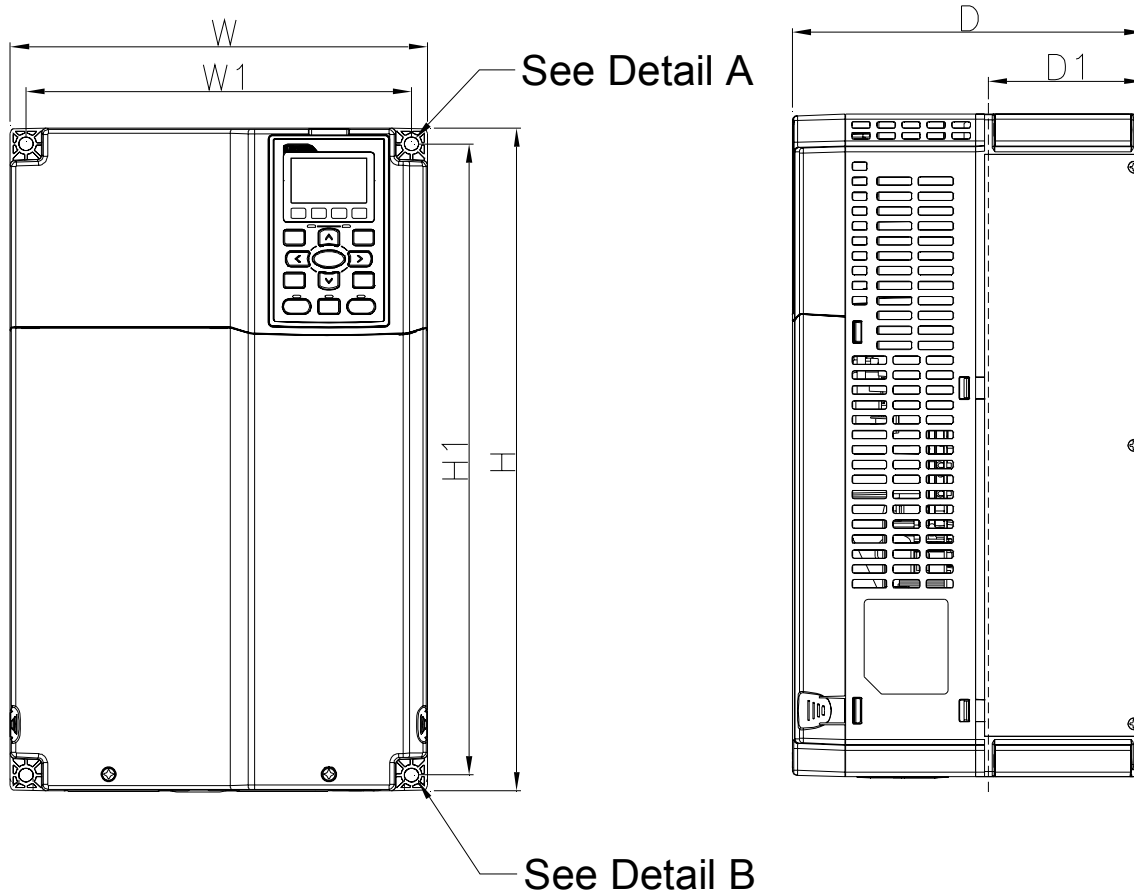




Unit: mm [inch]

Frame	W	H	D	W1	H1	D1*	S1	$\phi 1$	$\phi 2$	$\phi 3$
C1	250.0 [9.84]	400.0 [15.75]	210.0 [8.27]	231.0 [9.09]	381.0 [15.00]	92.9 [3.66]	8.5 [0.33]	22.2 [0.87]	34.0 [1.34]	50.0 [1.97]

D1*: Flange mounting

Frame D

D1: VFD300C23A; VFD370C23A; VFD370C43A; VFD450C43A; VFD550C43A; VFD750C43A

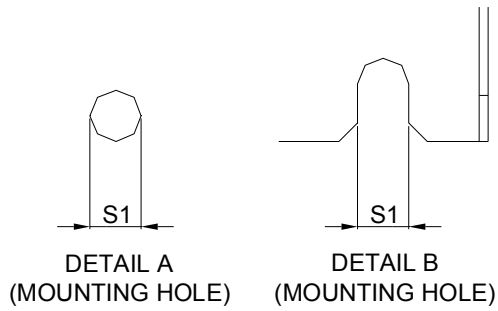
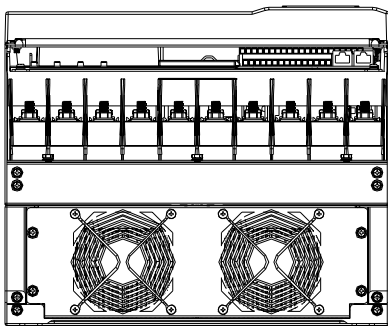
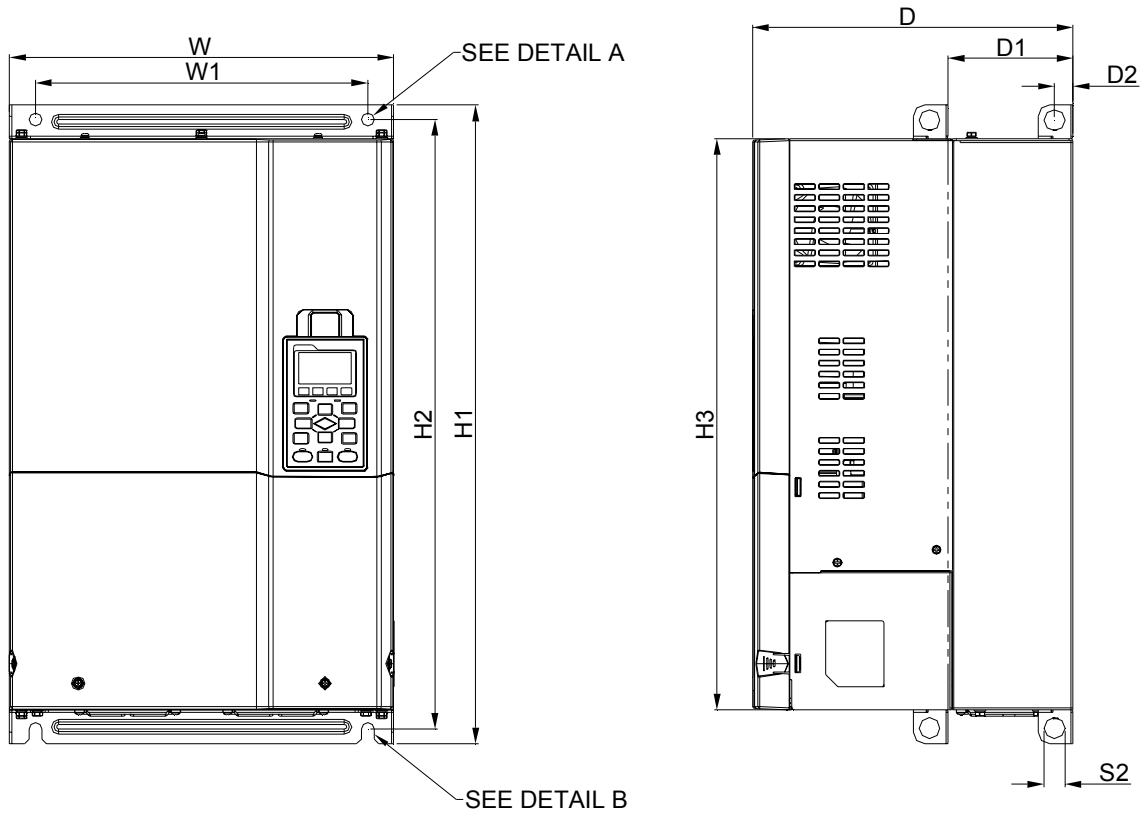


Unit: mm [inch]

Frame	W	H	D	W1	H1	H2	H3	D1*	D2	S1	S2	Φ1	Φ2	Φ3
D1	330.0 [12.99]	-	275.0 [10.83]	285.0 [11.22]	550.0 [21.65]	525.0 [20.67]	492.0 [19.37]	107.2 [4.22]	16.0 [0.63]	11.0 [0.43]	18.0 [0.71]	-	-	-

D1*: Flange mounting

D2: VFD300C23E; VFD370C23E; VFD370C43E; VFD450C43E; VFD550C43E; VFD750C43E

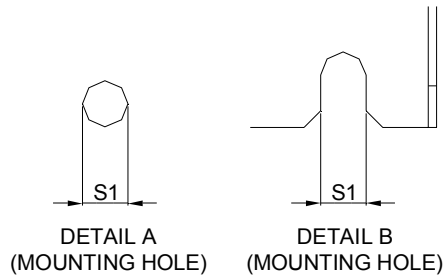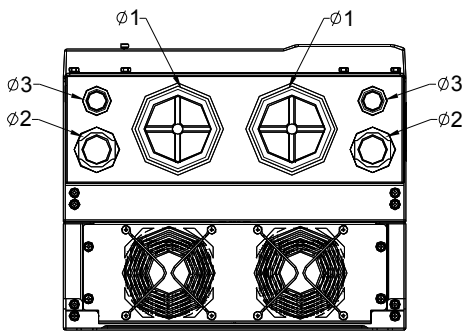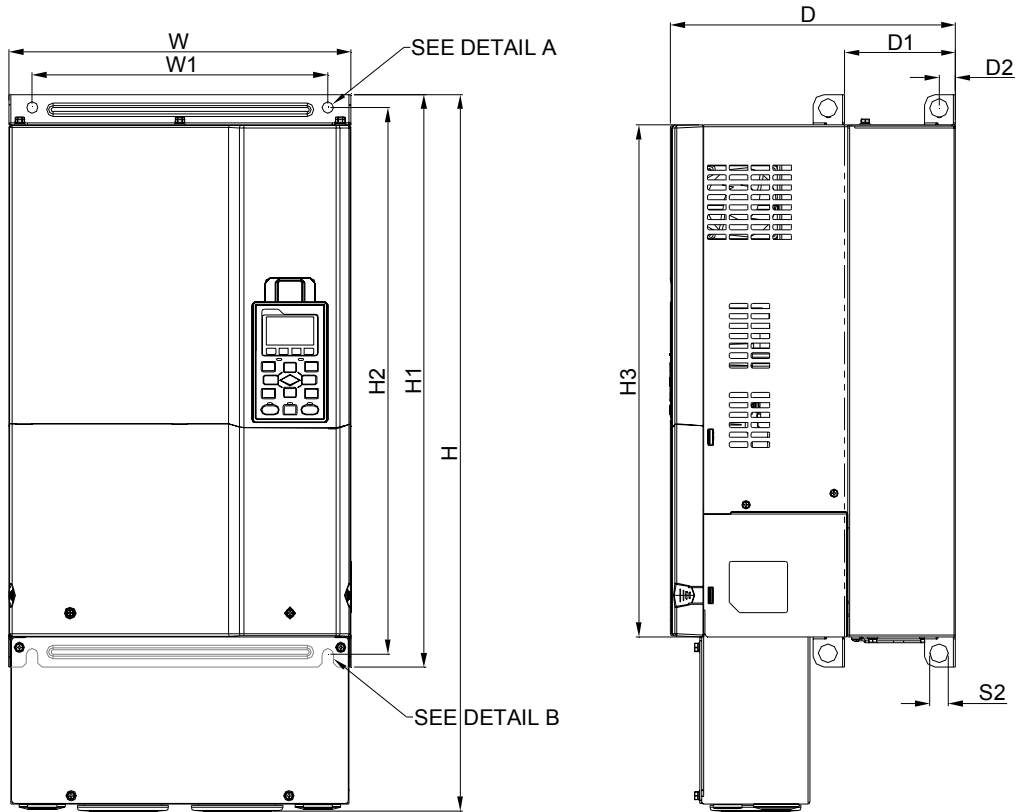





Unit: mm [inch]

Frame	W	H	D	W1	H1	H2	H3	D1*	D2	S1	S2	$\phi 1$	$\phi 2$	$\phi 3$
D2	330.0 [12.99]	688.3 [27.10]	275.0 [10.83]	285.0 [11.22]	550.0 [21.65]	525.0 [20.67]	492.0 [19.37]	107.2 [4.22]	16.0 [0.63]	11.0 [0.43]	18.0 [0.71]	76.2 [3.00]	34.0 [1.34]	22.0 [0.87]

D1*: Flange mounting

Frame E

  E1: VFD450C23A; VFD550C23A; VFD750C23A; VFD900C43A; VFD1100C43A

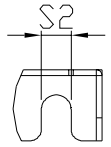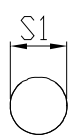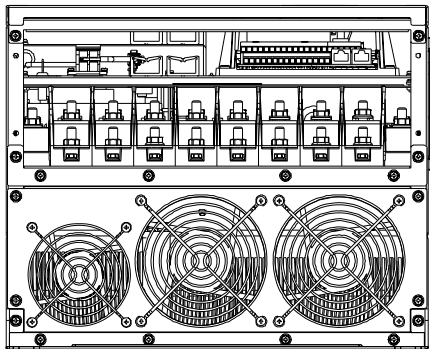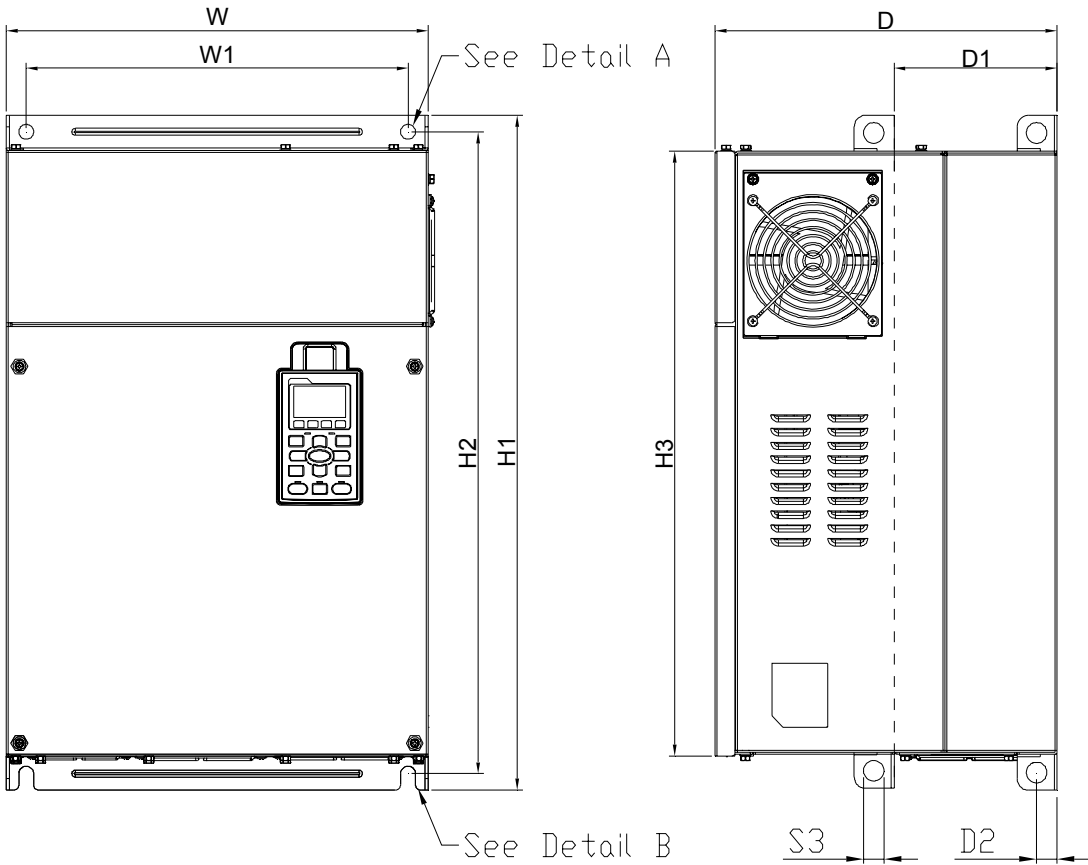

Detail A (Mounting Hole)

Detail B (Mounting Hole)




Unit: mm [inch]

Frame	W	H	D	W1	H1	H2	H3	D1*	D2	S1, S2	S3	ψ1	ψ2	ψ3
E1	370.0 [14.57]	-	300.0 [11.81]	335.0 [13.19]	589 [23.19]	560.0 [22.05]	528.0 [20.80]	143.0 [5.63]	18.0 [0.71]	13.0 [0.51]	18.0 [0.71]	-	-	-


D1*: Flange mounting

Frame E

 E2: VFD450C23E; VFD550C23E; VFD750C23E; VFD900C43E; VFD1100C43E

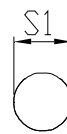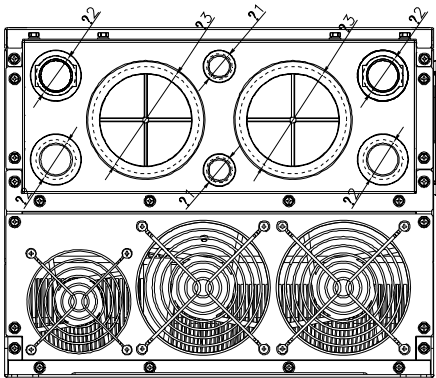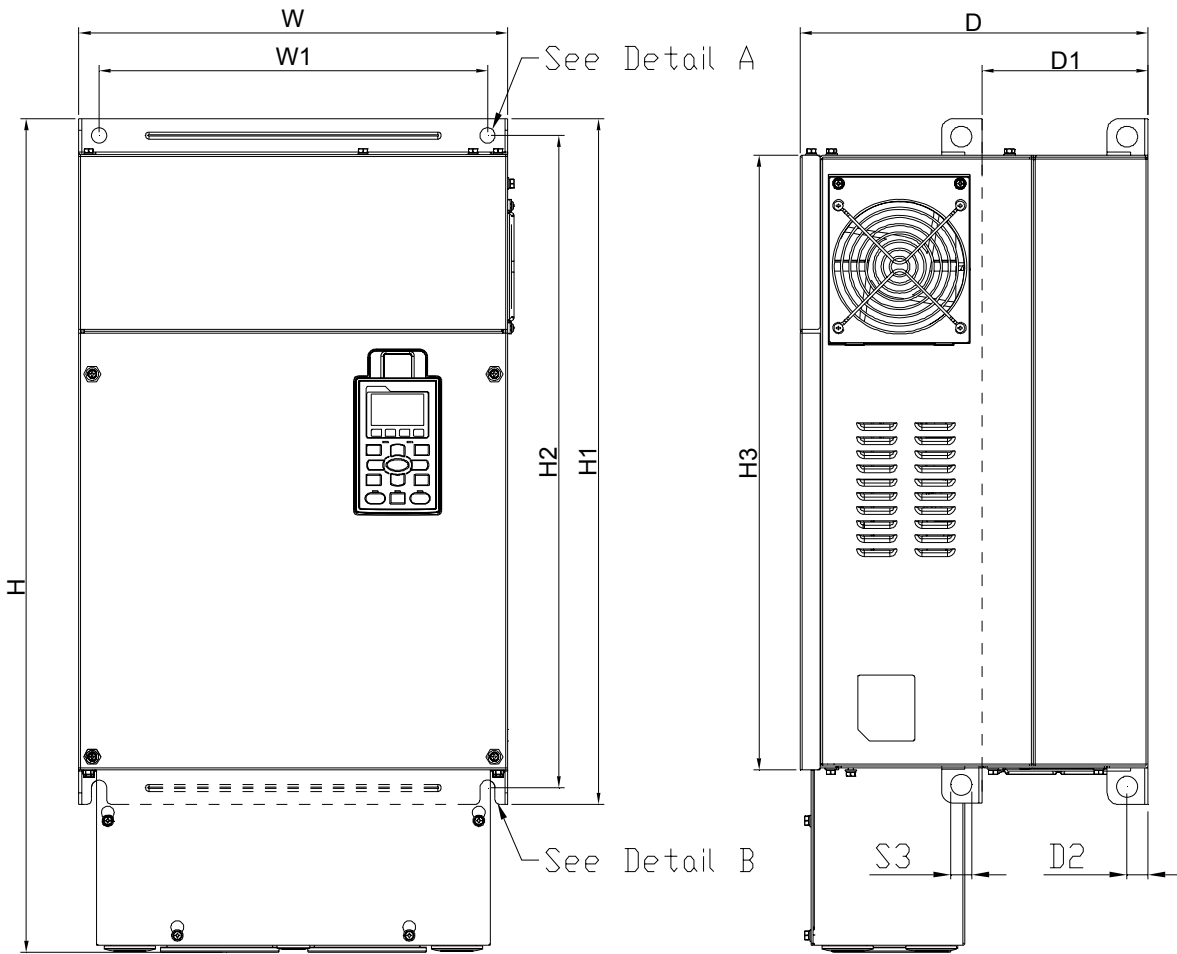

Detail A (Mounting Hole)

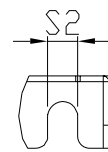 

Detail B (Mounting Hole)





Unit: mm [inch]

Frame	W	H	D	W1	H1	H2	H3	D1*	D2	S1, S2	S3	ψ 1	ψ 2	ψ 3
E2	370.0 [14.57]	715.8 [28.18]	300.0 [11.81]	335.0 [13.19]	589 [23.19]	560.0 [22.05]	528.0 [20.80]	143.0 [5.63]	18.0 [0.71]	13.0 [0.51]	18.0 [0.71]	22.0 [0.87]	34.0 [1.34]	92.0 [3.62]

D1*: Flange mounting

Frame F

F1: VFD900C23A; VFD1320C43A; VFD1600C43A

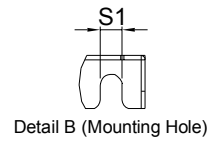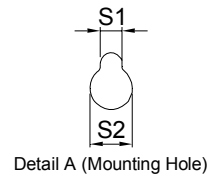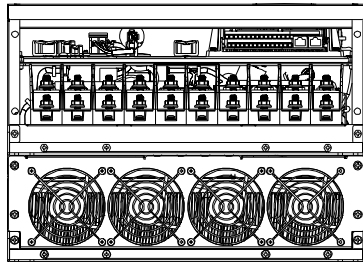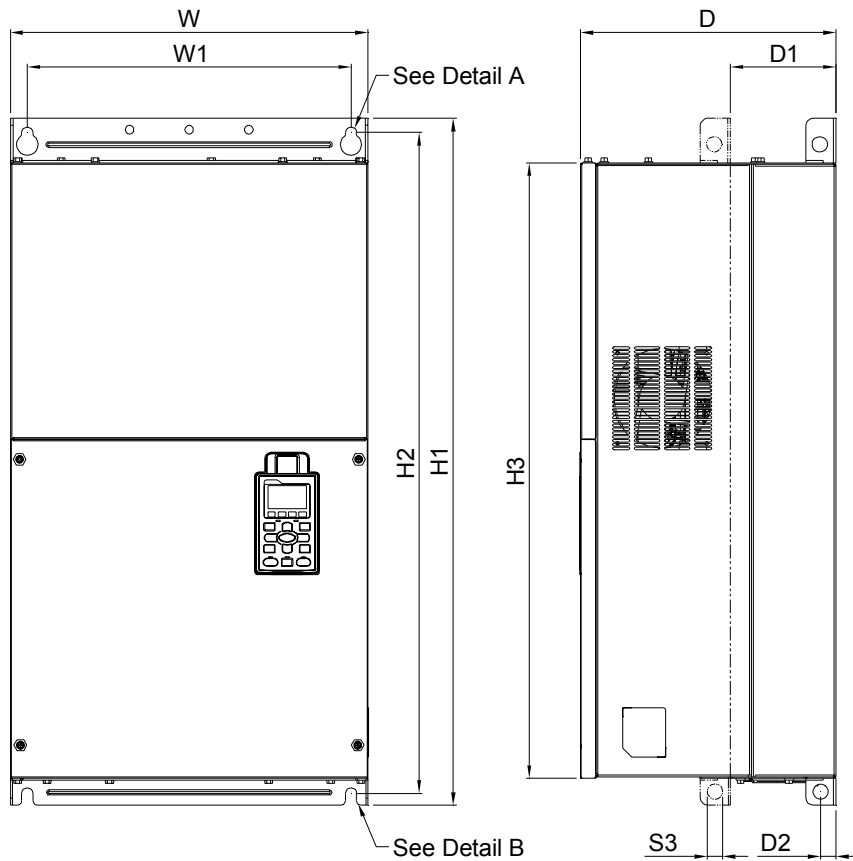





Unit: mm [inch]

Frame	W	H	D	W1	H1	H2	H3	D1*	D2	S1	S2	S3
F1	420.0 [16.54]	-	300.0 [11.81]	380.0 [14.96]	800.0 [31.50]	770.0 [30.32]	717.0 [28.23]	124.0 [4.88]	18.0 [0.71]	13.0 [0.51]	25.0 [0.98]	18.0 [0.71]

D1*: Flange mounting

Frame F

F2: VFD900C23E; VFD1320C43E; VFD1600C43E

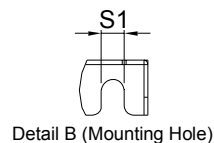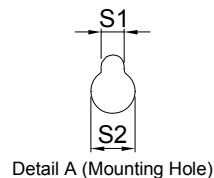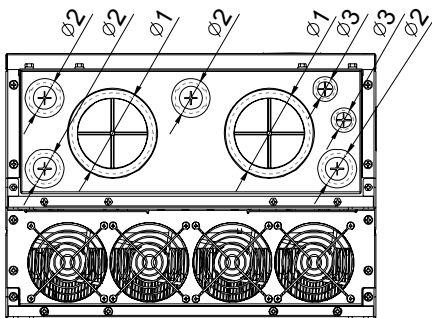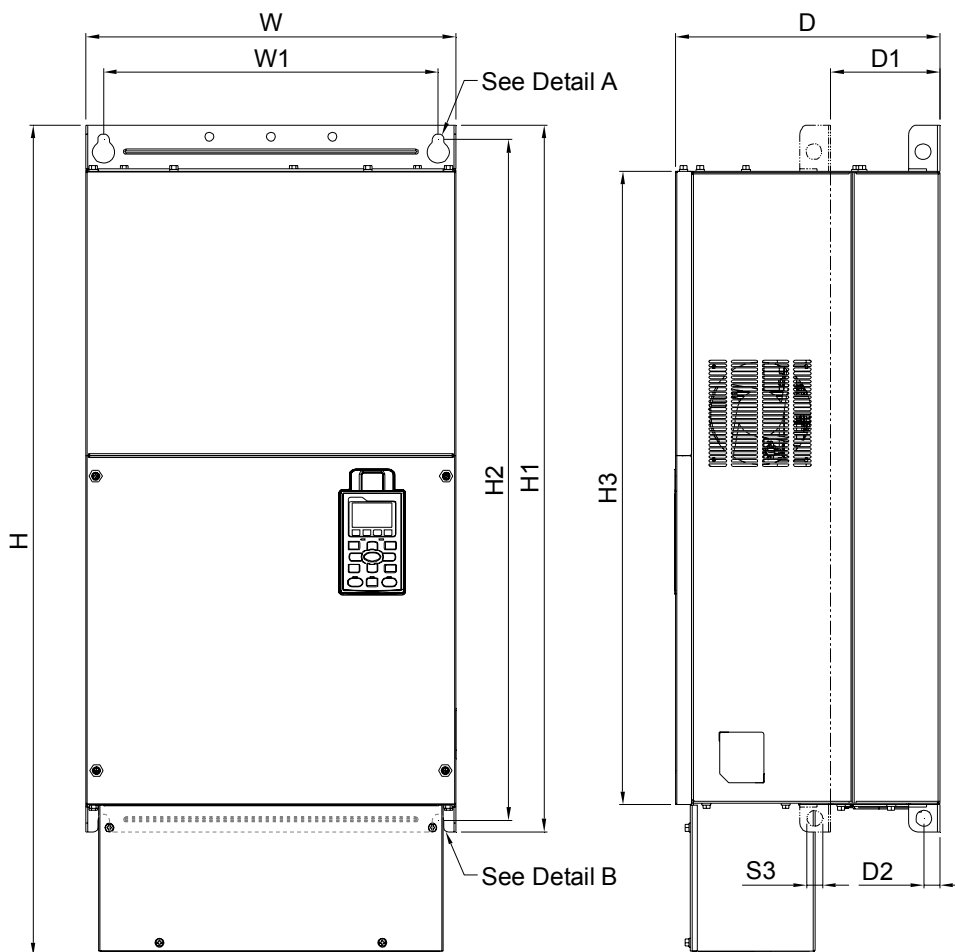

Unit: mm [inch]




Frame	W	H	D	W1	H1	H2	H3	D1*	D2	S1	S2	S3
F2	420.0 [16.54]	940.0 [37.00]	300.0 [11.81]	380.0 [14.96]	800.0 [31.50]	770.0 [30.32]	717.0 [28.23]	124.0 [4.88]	18.0 [0.71]	13.0 [0.51]	25.0 [0.98]	18.0 [0.71]

Frame	$\psi 1$	$\psi 2$	$\psi 3$
F2	92.0 [3.62]	35.0 [1.38]	22.0 [0.87]


D1*: Flange mounting

Frame G

 G1: VFD1850C43A; VFD2200C43A

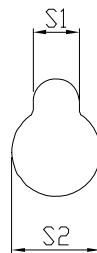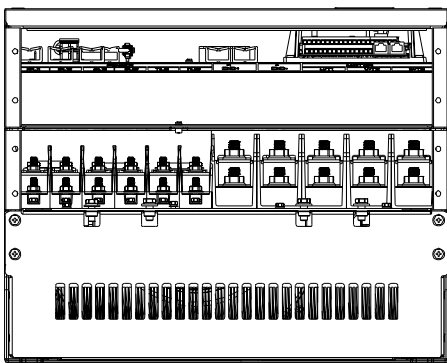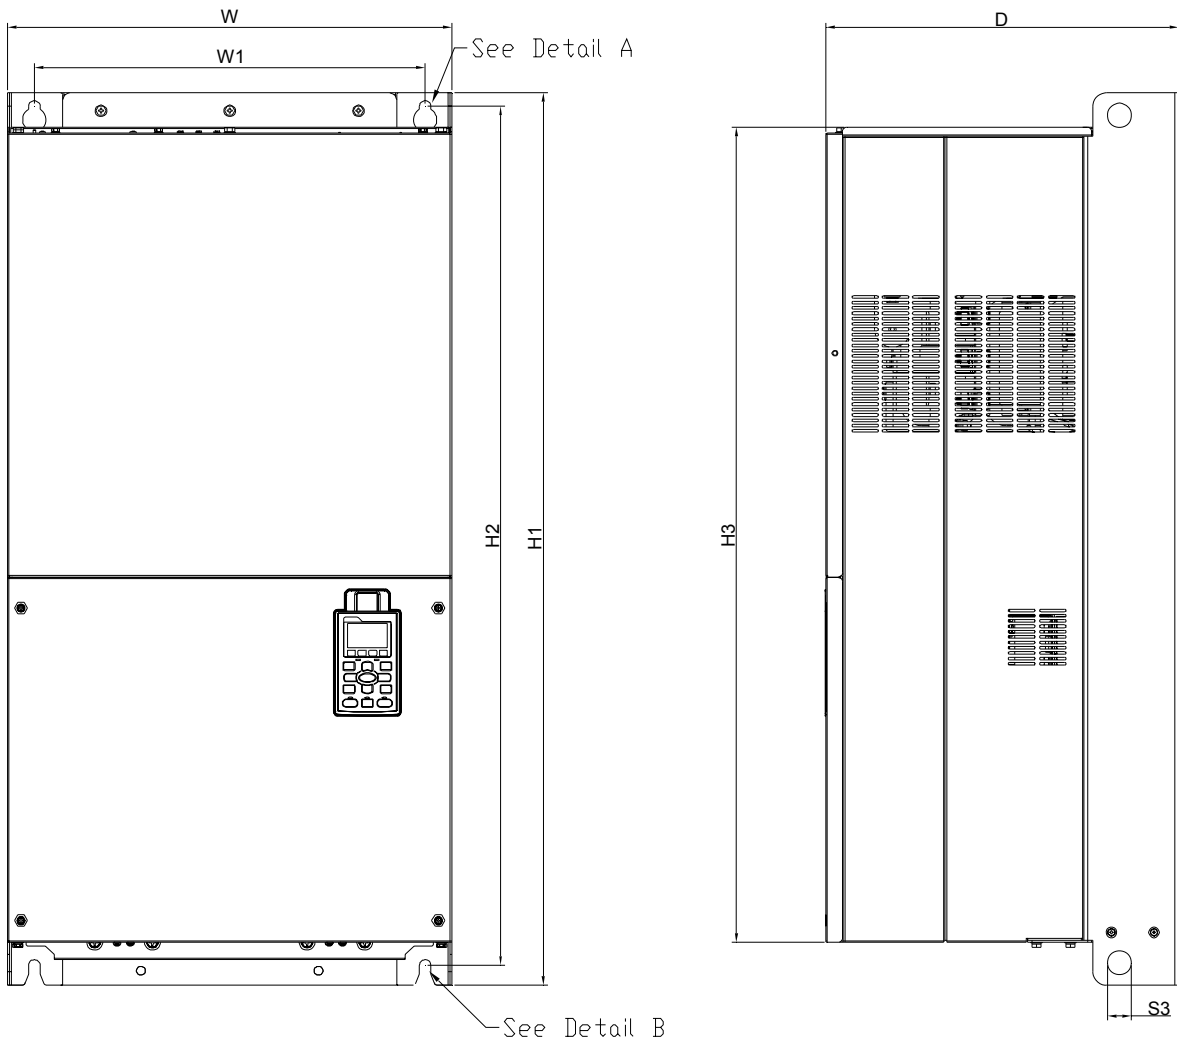

Detail A (Mounting Hole)

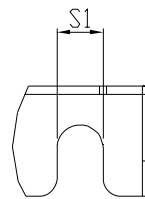





Detail B (Mounting Hole)

Unit: mm [inch]

Frame	W	H	D	W1	H1	H2	H3	S1	S2	S3	ψ 1	ψ 2	ψ 3
G1	500.0 [19.69]	-	397.0 [15.63]	440.0 [217.32]	1000.0 [39.37]	963.0 [37.91]	913.6 [35.97]	13.0 [0.51]	26.5 [1.04]	27.0 [1.06]	-	-	-

Frame G

 G2: VFD1850C43E; VFD2200C43E

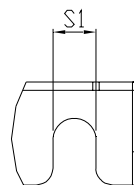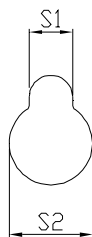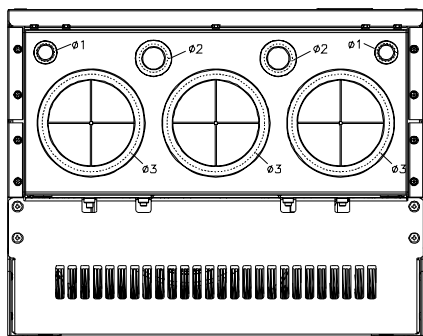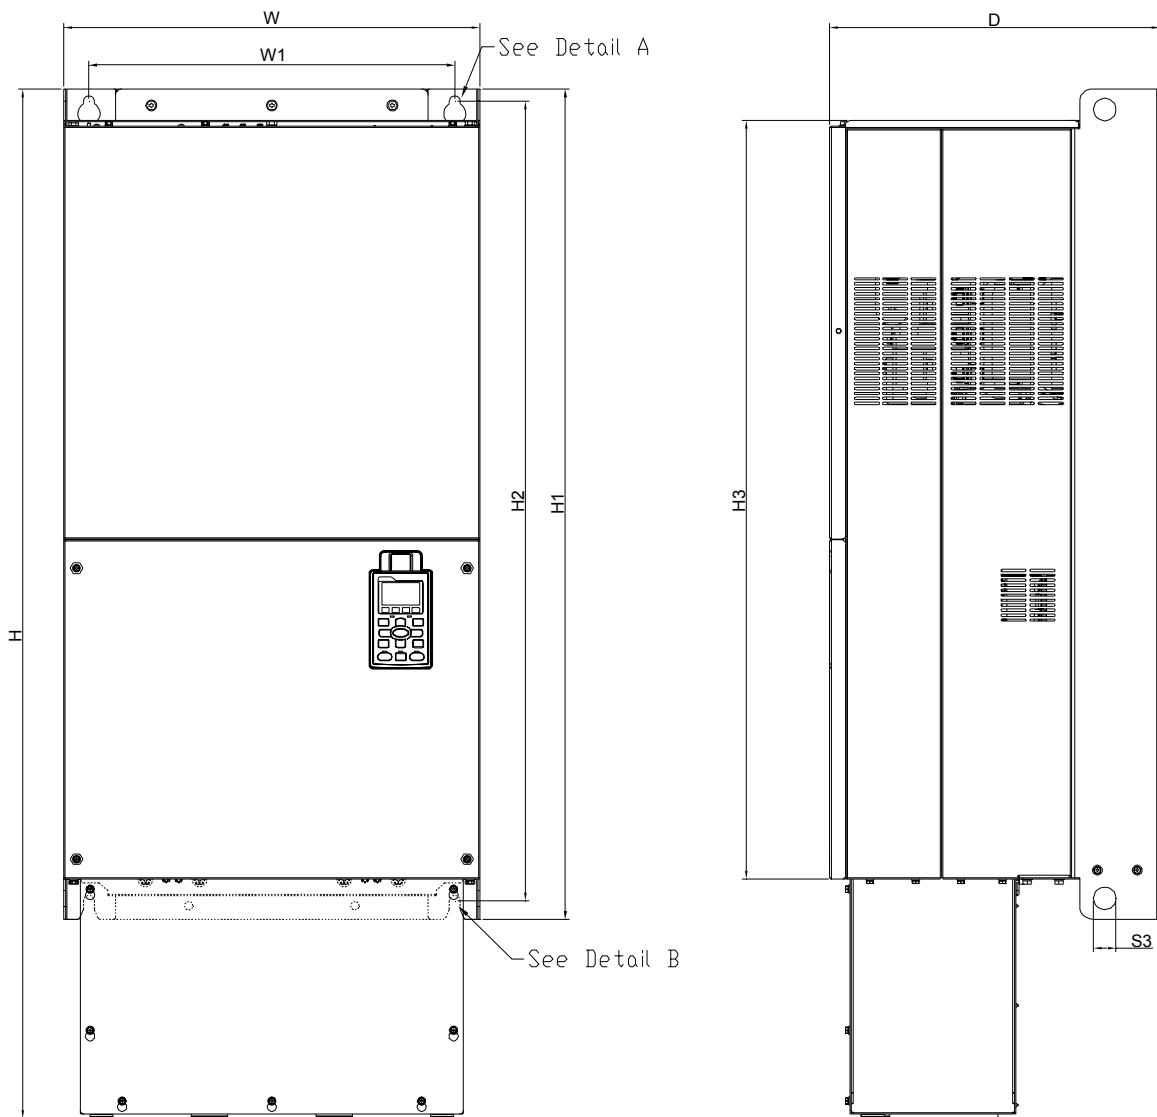

Detail A (Mounting Hole)





Detail B (Mounting Hole)

Unit: mm [inch]


Frame	W	H	D	W1	H1	H2	H3	S1	S2	S3	$\psi 1$	$\psi 2$	$\psi 3$
G2	500.0 [19.69]	1240.2 [48.83]	397.0 [15.63]	440.0 [217.32]	1000.0 [39.37]	963.0 [37.91]	913.6 [35.97]	13.0 [0.51]	26.5 [1.04]	27.0 [1.06]	22.0 [0.87]	34.0 [1.34]	117.5 [4.63]

Frame H

 H1: VFD2800C43A; VFD3150C43A; VFD3550C43A

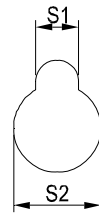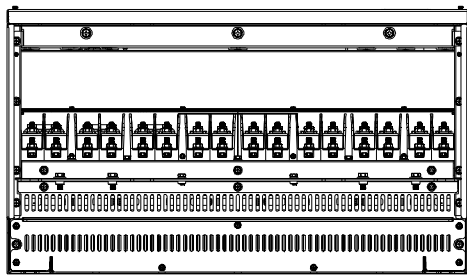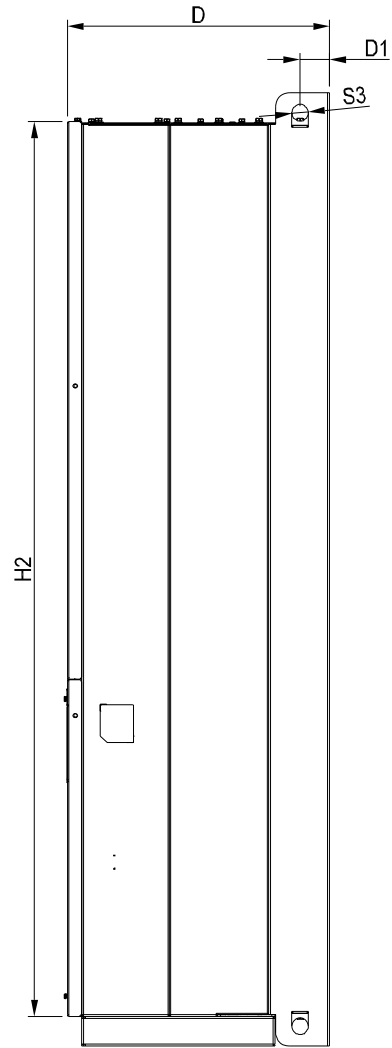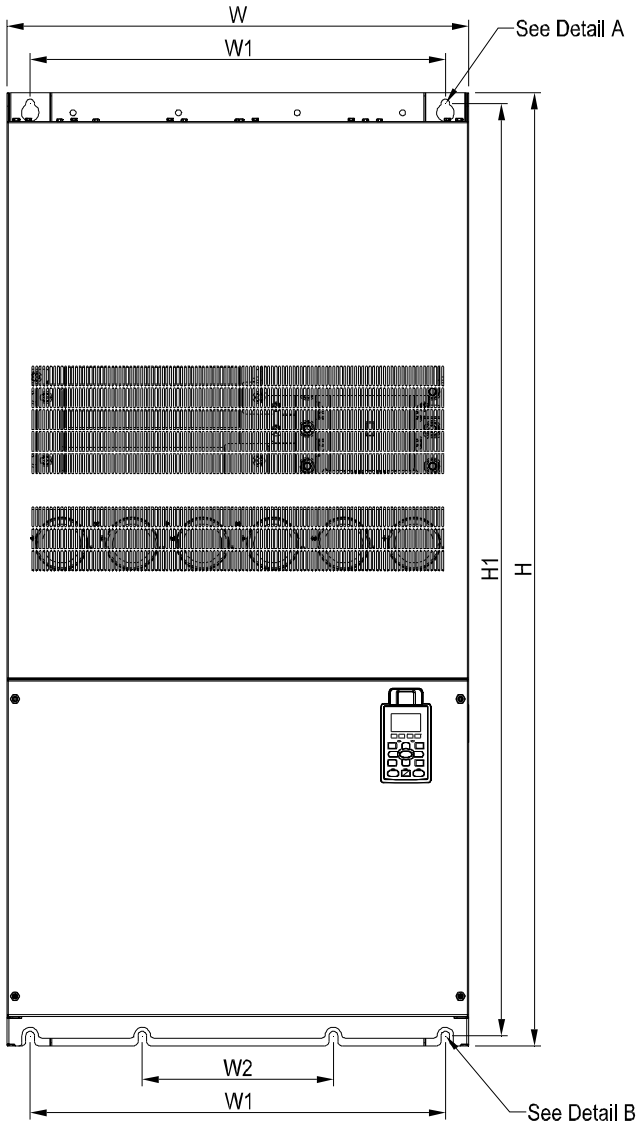

See Detail A(Mounting Hole)

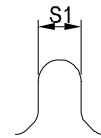 





See Detail B(Mounting Hole)

Unit: mm [inch]

Frame	W	H	D	W1	W2	W3	W4	W5	W6	H1	H2	H3	H4
H1	700.0 [27.56]	1435.0 [56.5]	398.0 [15.67]	630.0 [24.8]	290.0 [11.42]	-	-	-	-	1403.0 [55.24]	1346.6 [53.02]	-	-
Frame	H5	D1	D2	D3	D4	D5	D6	S1	S2	S3	ψ1	ψ2	ψ3
H1	-	45.0 [1.77]	-	-	-	-	-	13.0 [0.51]	26.5 [1.04]	25.0 [0.98]	-	-	-

Frame H

 H2: VFD2800C43E-1; VFD3150C43E-1; VFD3550C43E-1

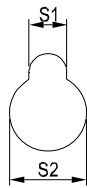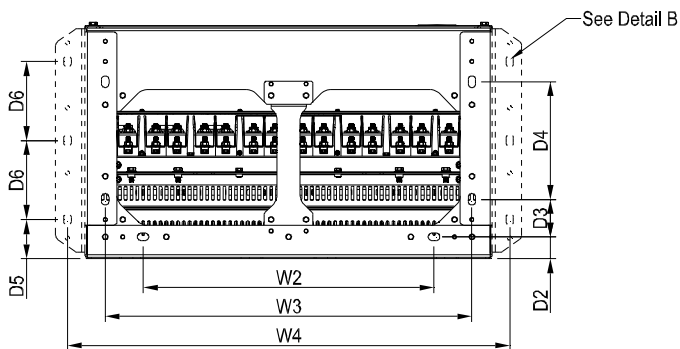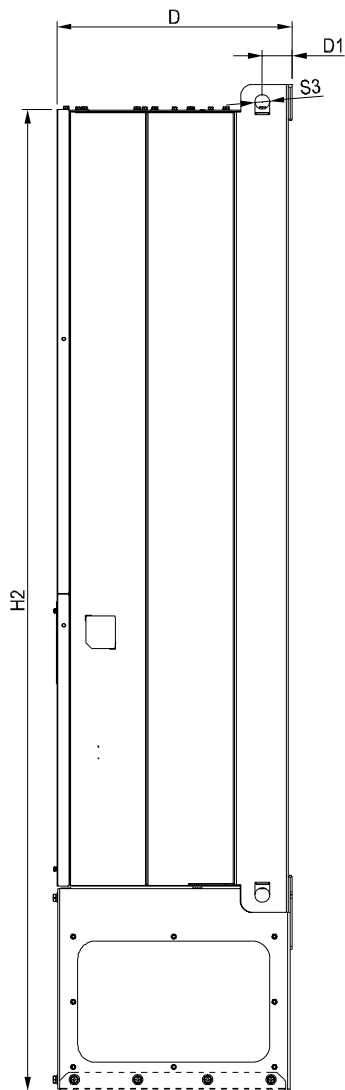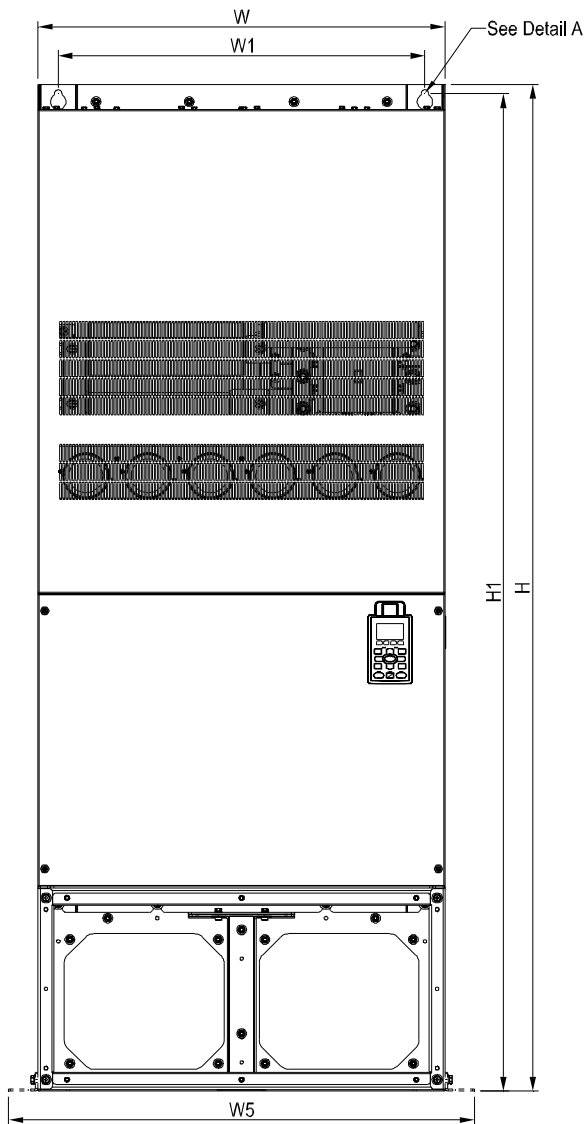

See Detail A(Mounting Hole)





See Detail B(Mounting Hole)

Unit: mm [inch]

Frame	W	H	D	W1	W2	W3	W4	W5	W6	H1	H2	H3	H4
H2	700.0 [27.56]	1745.0 [68.70]	404.0 [15.91]	630.0 [24.8]	500.0 [19.69]	630.0 [24.8]	760.0 [29.92]	800.0 [31.5]	-	1729.0 [68.07]	1701.6 [66.99]	-	-
Frame	H5	D1	D2	D3	D4	D5	D6	S1	S2	S3	Φ1	Φ2	Φ3
H2	-	51.0 [2.01]	38.0 [1.50]	65.0 [2.56]	204.0 [8.03]	68.0 [2.68]	137.0 [5.39]	13.0 [0.51]	26.5 [1.04]	25.0 [0.98]	-	-	-

Frame H

H3: VFD2800C43E; VFD3150C43E; VFD3550C43E

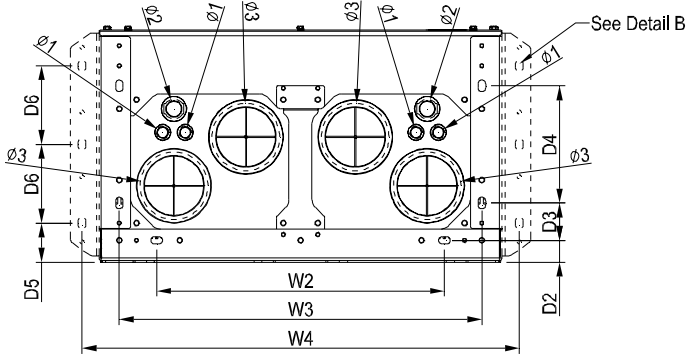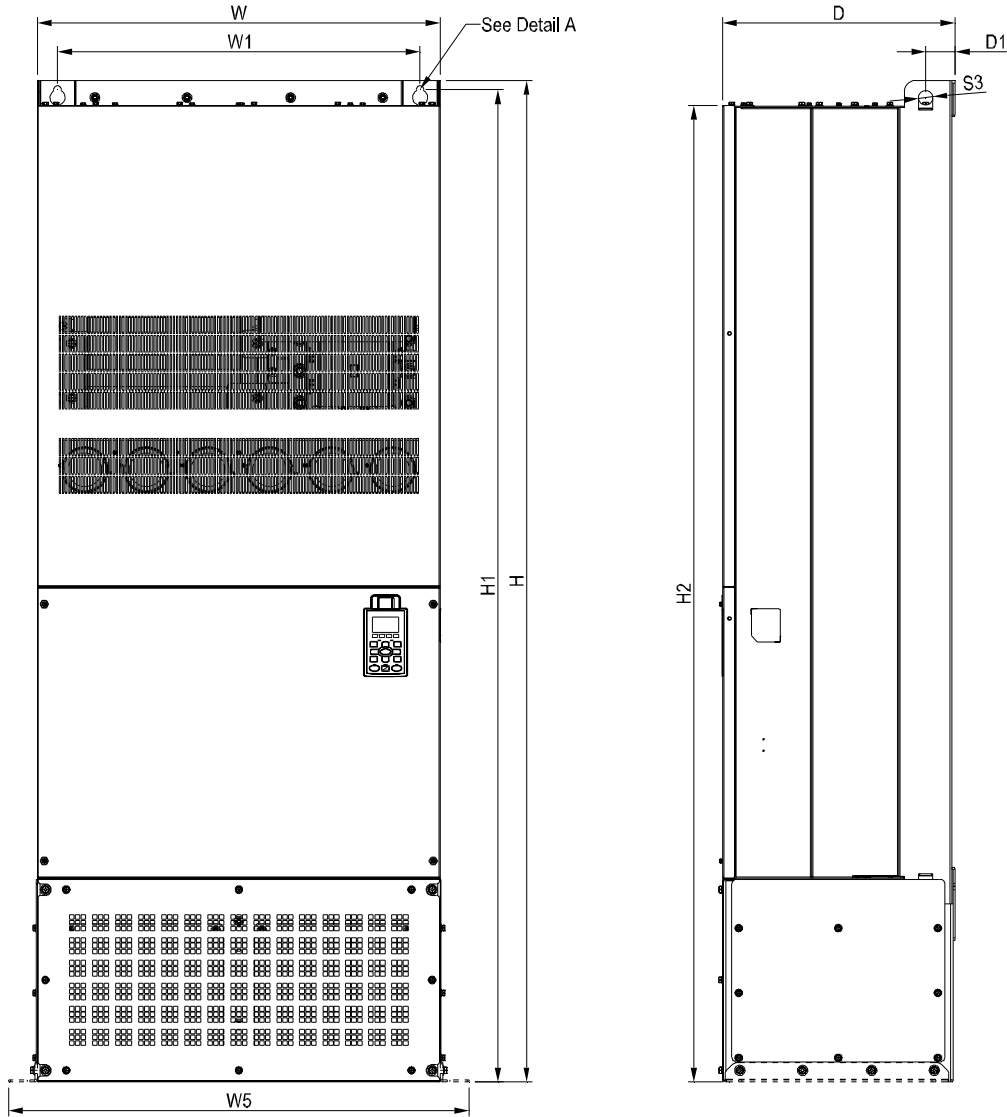

See Detail A(Mounting Hole)




See Detail B(Mounting Hole)

Unit: mm [inch]

Frame	W	H	D	W1	W2	W3	W4	W5	W6	H1	H2	H3	H4
H3	700.0 [27.56]	1745.0 [68.70]	404.0 [15.91]	630.0 [24.8]	500.0 [19.69]	630.0 [24.8]	760.0 [29.92]	800.0 [31.5]	-	1729.0 [68.07]	1701.6 [66.99]	-	-
Frame	H5	D1	D2	D3	D4	D5	D6	S1	S2	S3	$\phi 1$	$\phi 2$	$\phi 3$
H3	-	51.0 [2.01]	38.0 [1.50]	65.0 [2.56]	204.0 [8.03]	68.0 [2.68]	137.0 [5.39]	13.0 [0.51]	26.5 [1.04]	25.0 [0.98]	22.0 [0.87]	34.0 [1.34]	117.5 [4.63]

Digital Keypad
KPC-CC01

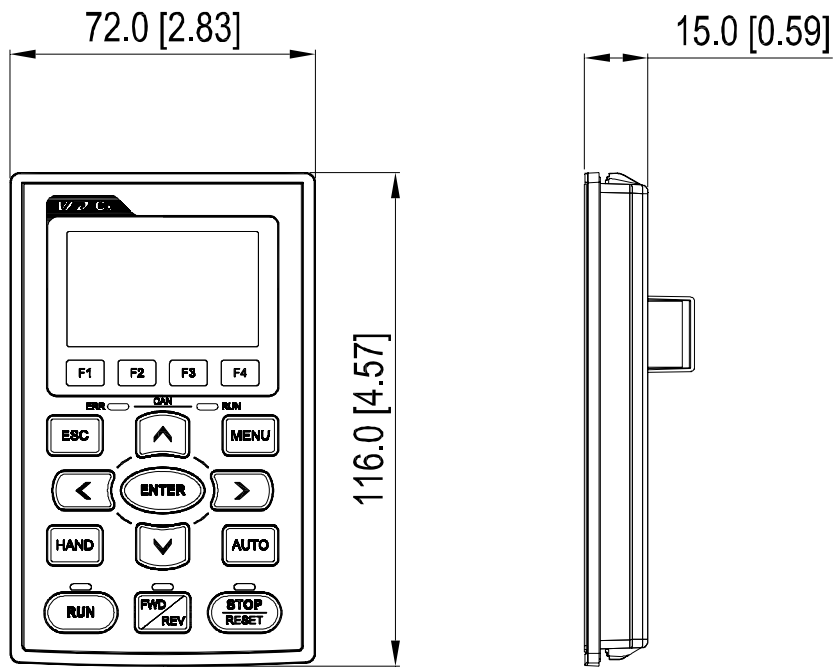

Chapter 2 Installation


Minimum Mounting Clearance and Installation

 **NOTE**


- ☑ Prevent fiber particles, scraps of paper, shredded wood saw dust, metal particles, etc. from adhering to the heat sink
- ☑ Install the AC motor drive in a metal cabinet. When installing one drive below another one, use a metal separation between the AC motor drives to prevent mutual heating and to prevent the risk of fire accident.
- ☑ Install the AC motor drive in Pollution Degree 2 environments only: normally only nonconductive pollution occurs and temporary conductivity caused by condensation is expected.

The appearances shown in the following figures are for reference only.

Airflow direction:  (Blue arrow) inflow  (Red arrow) outflow

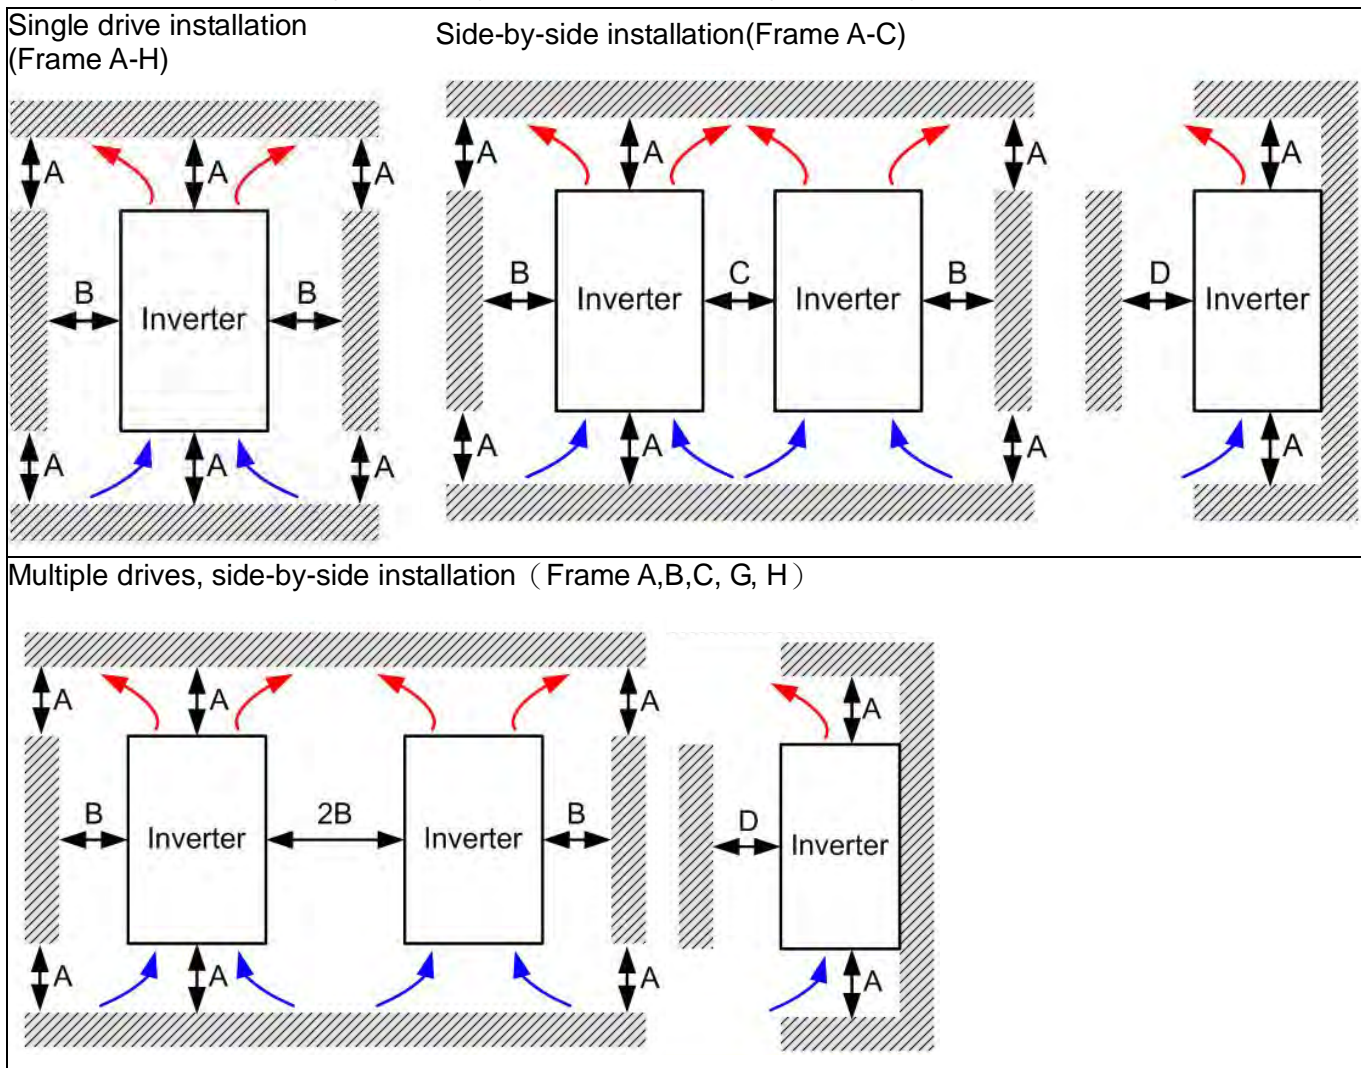

Multiple drives, side-by-side installation (Frame D, E, F) Install metal separation between the drives.

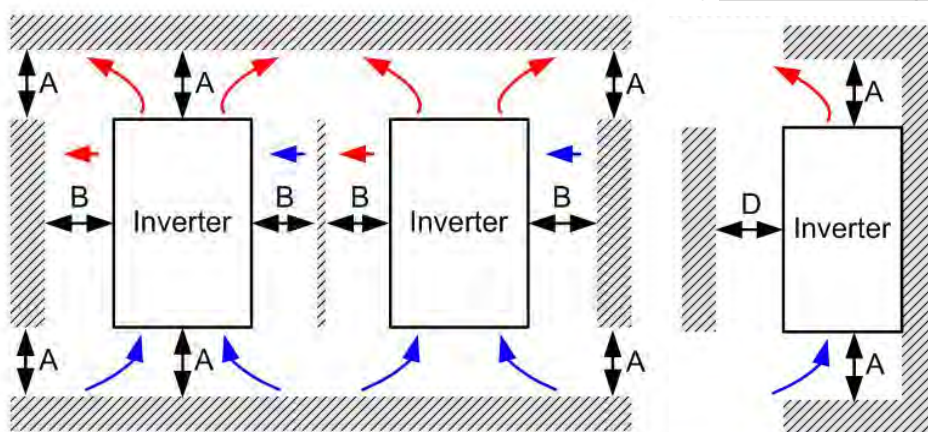


Multiple drives side-by-side installation and in rows (Frame A,B,C)

Ta: Frame A~G

Ta*: Frame H

When installing one AC motor drive below another one (top-bottom installation), use a metal separation between the drives to prevent mutual heating. The temperature measured at the fan's inflow side must be lower than the temperature measured at the operation side. If the fan's inflow temperature is higher, use a thicker or larger size of metal separation. Operation temperature is the temperature measured at 50mm away from the fan's inflow side. (As shown in the figure below)

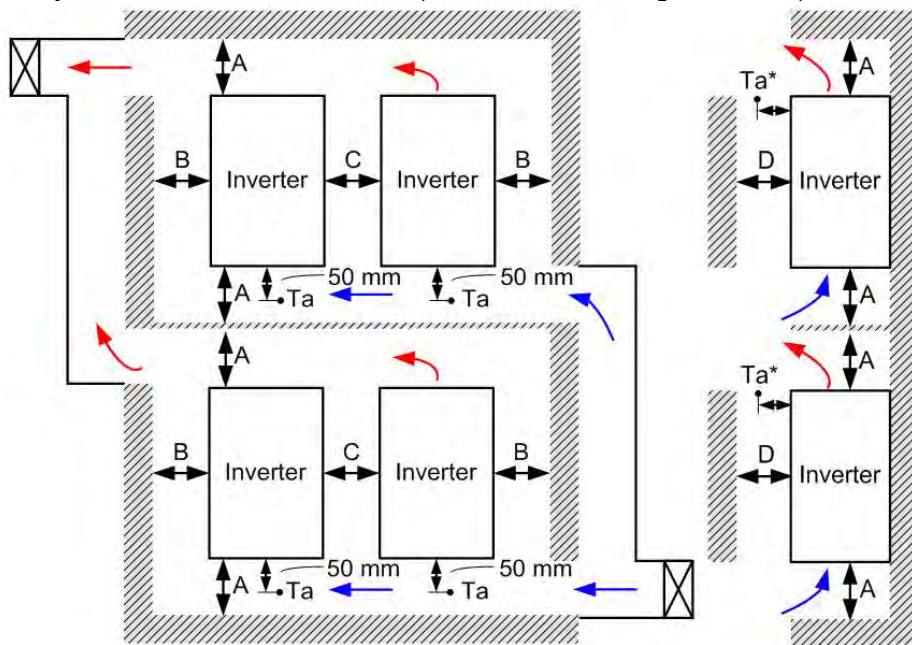

Minimum mounting clearance


Frame	A (mm)	B (mm)	C (mm)	D (mm)
A~C	60	30	10	0
D~F	100	50	-	0
G	200	100	-	0
H	350	0	0	200 (100, Ta=40°C)

Frame A	VFD007C23A; VFD007C43A/E; VFD015C23A; VFD015C43A/E; VFD022C23A; VFD022C43A/E; VFD037C23A; VFD037C43A/E; VFD040C43A/E; VFD055C43A/E
Frame B	VFD055C23A; VFD75C23A; VFD075C43A/E; VFD110C23A; VFD110C43A/E; VFD150C43A/E
Frame C	VFD150C23A; VFD185C23A; VFD185C43A/E; VFD220C23A; VFD220C43A/E; VFD300C43A/E;
Frame D	VFD300C23A/E; VFD370C23A/E; VFD370C43A/E; VFD450C43A/E; VFD550C43A/E; VFD750C43A/E

Frame E	VFD450C23A/E; VFD550C23A/E; VFD750C23A/E; VFD900C43A/E; VFD1100C43A/E
Frame F	VFD900C23A/E; VFD1320C43A/E; VFD1600C43A/E
Frame G	VFD1850C43A; VFD2200C43A; VFD1850C43E; VFD2200C43E
Frame H	VFD2800C43A; VFD3150C43A; VFD3550C43A; VFD2800C43E-1; VFD3150C43E-1; VFD3550C43E-1; VFD2800C43E; VFD3150C43E; VFD3550C43E

 **NOTE**

- The minimum mounting clearances stated in the table above applies to AC motor drives frame A to D. A drive fails to follow the minimum mounting clearances may cause the fan to malfunction and heat dissipation problem.

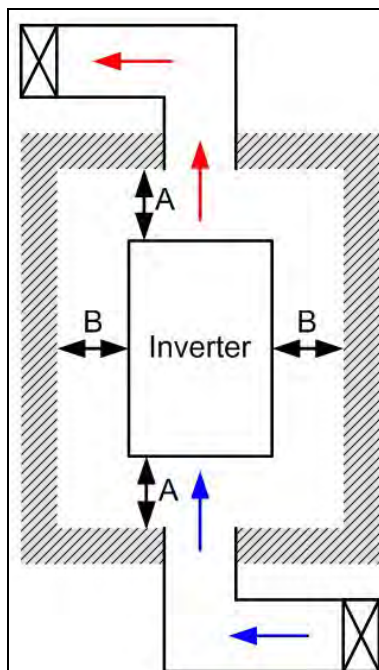

 **NOTE**

- ※ The mounting clearances stated in the figure is for installing the drive in an open area. To install the drive in a confined space (such as cabinet or electric box), please follow the following three rules: (1) Keep the minimum mounting clearances. (2) Install a ventilation equipment or an air conditioner to keep surrounding temperature lower than operation temperature. (3) Refer to parameter setting and set up Pr. 00-16, Pr.00-17, and Pr. 06-55.
- ※ The following table shows the heat dissipation and the required air volume when installing a single drive in a confined space. When installing multiple drives, the required air volume shall be multiplied by the number the drives.
- ※ Refer to the chart (Air flow rate for cooling) for ventilation equipment design and selection.
- ※ Refer to the chart (Power dissipation) for air conditioner design and selection.


Model No.	Air flow rate for cooling						Power dissipation of AC motor drive		
	Flow Rate (cfm)			Flow Rate (m ³ /hr)			Power Dissipation		
	External	Internal	Total	External	Internal	Total	Loss External (Heat sink)	Internal	Total
VFD007C23A	-	-	-	-	-	-	33	27	61
VFD015C23A	14	-	14	24	-	24	56	31	88
VFD022C23A	14	-	14	24	-	24	79	36	115
VFD037C23A	10	-	10	17	-	17	113	46	159
VFD055C23A	40	14	54	68	24	92	197	67	264
VFD075C23A	66	14	80	112	24	136	249	86	335
VFD110C23A	58	14	73	99	24	124	409	121	529
VFD150C23A	166	12	178	282	20	302	455	161	616
VFD185C23A	166	12	178	282	20	302	549	184	733
VFD220C23A	146	12	158	248	20	268	649	216	865
VFD300C23A/E	179	30	209	304	51	355	913	186	1099
VFD370C23A/E	179	30	209	304	51	355	1091	220	1311
VFD450C23A/E	228	73	301	387	124	511	1251	267	1518
VFD550C23A/E	228	73	301	387	124	511	1401	308	1709
VFD750C23A/E	246	73	319	418	124	542	1770	369	2139
VFD900C23A/E	224	112	336	381	190	571	2304	484	2788
VFD007C43A/E	-	-	-	-	-	-	33	25	59
VFD015C43A/E	-	-	-	-	-	-	45	29	74
VFD022C43A/E	14	-	14	24	-	24	71	33	104

VFD037C43A/E	10	-	10	17	-	17	103	38	141
VFD040C43A/E	10	-	10	17	-	17	116	42	158
VFD055C43A/E	10	-	10	17	-	17	134	46	180
VFD075C43A/E	40	14	54	68	24	92	216	76	292
VFD110C43A/E	66	14	80	112	24	136	287	93	380
VFD150C43A/E	58	14	73	99	24	124	396	122	518
VFD185C43A/E	99	21	120	168	36	204	369	138	507
VFD220C43A/E	99	21	120	168	36	204	476	158	635
VFD300C43A/E	126	21	147	214	36	250	655	211	866
VFD370C43A/E	179	30	209	304	51	355	809	184	993
VFD450C43A/E	179	30	209	304	51	355	929	218	1147
VFD550C43A/E	179	30	209	304	51	355	1156	257	1413
Air flow rate for cooling							Power dissipation of AC motor drive		
Model No.	Flow Rate (cfm)			Flow Rate (m ³ /hr)			Power Dissipation		
	External	Internal	Total	External	Internal	Total	Loss External (Heat sink)	Internal	Total
VFD750C43A/E	186	30	216	316	51	367	1408	334	1742
VFD900C43A/E	257	73	330	437	124	561	1693	399	2092
VFD1100C43A/E	223	73	296	379	124	503	2107	491	2599
VFD1320C43A/E	224	112	336	381	190	571	2502	579	3081
VFD1600C43A/E	289	112	401	491	190	681	3096	687	3783
VFD1850C43A/E	\		454	\		771	\		4589
VFD2200C43A/E			454			771			5772
VFD2800C43A/E			769			1307			6381
VFD3150C43A/E			769			1307			7156
VFD3550C43A/E			769			1307			8007
※ The required airflow shown in chart is for installing single drive in a confined space. ※ When installing the multiple drives, the required air volume should be the required air volume for single drive X the number of the drives.							※ The heat dissipation shown in the chart is for installing single drive in a confined space. ※ When installing the multiple drives, volume of heat dissipation should be the heat dissipated for single drive X the number of the drives. ※ Heat dissipation for each model is calculated by rated voltage, current and default carrier.		

Derating Curve Diagram of Normal Duty (Pr.00-16=0)


- Set Pr.06-55 = 1
- Set Pr.06-55 = 0 or 2
(50°C: UL open-type)
(40°C:UL type1 or open type_size by size)

460V

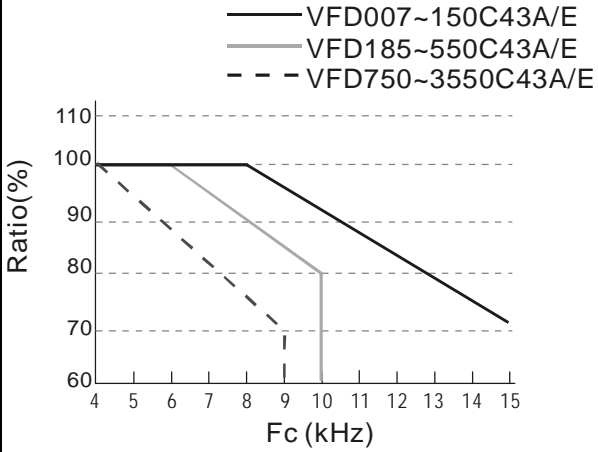


- Set Pr.06-55 = 0 or 2
(40°C: UL open-type)
(30°C: UL type1 or open type_size by size)

460V

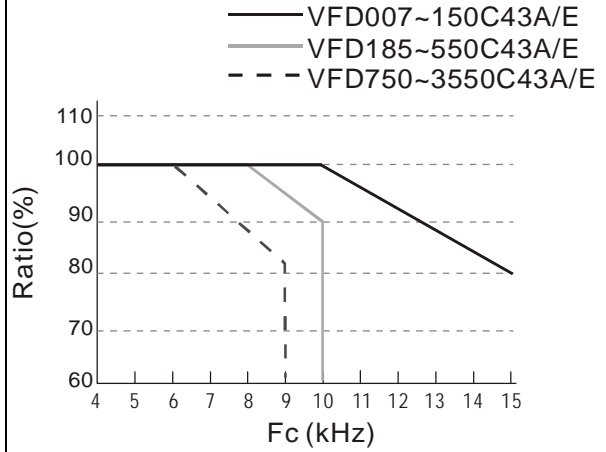


- Set Pr.06-55 = 1
- Set Pr.06-55 = 0 or 2
(50°C: UL open-type)
(40°C:UL type1 or open type_size by size)

230V

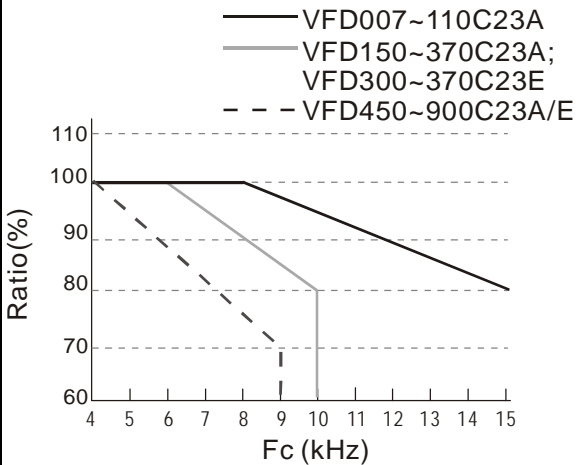

- Set Pr.06-55 = 0 or 2
(40°C: UL open-type)
(30°C: UL type1 or open type_size by size)


230V

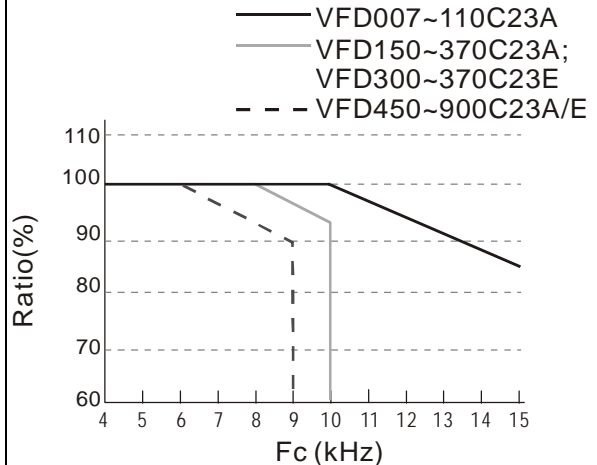


Derating Curve Diagram of Heavy Duty (Pr.00-16=1)

- Set Pr.06-55 = 1
- Set Pr.06-55 = 0 or 2
 (50°C: UL open-type)
 (40°C: UL type1 or open type_size by size)

460V

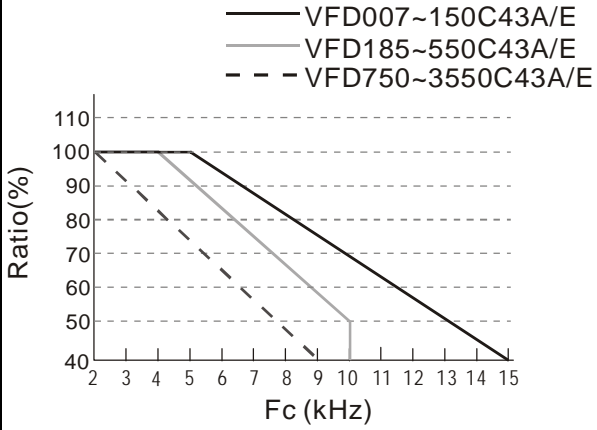


230V

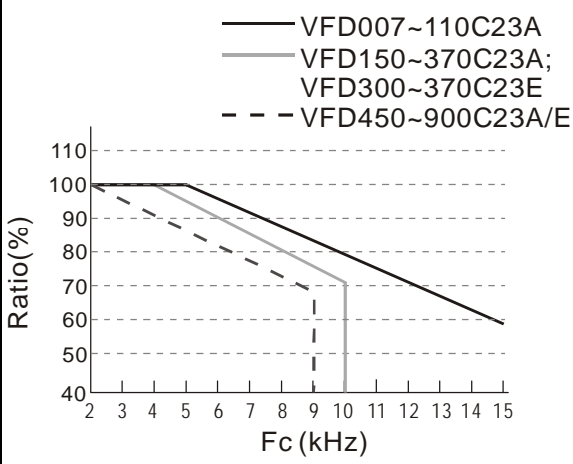


- Set Pr.06-55 = 0 or 2
 (40°C: UL open-type)
 (30°C: UL type1 or open type_size by size)

460V

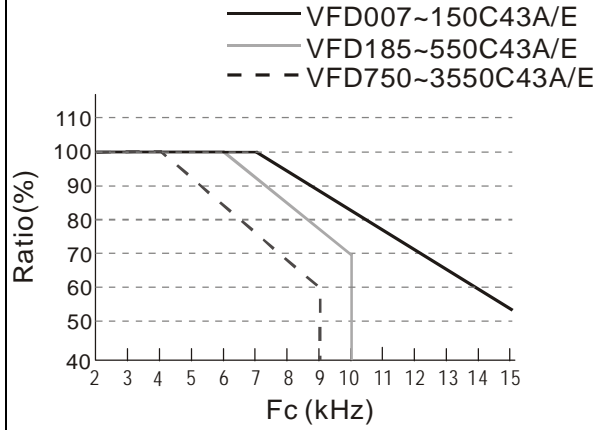

230V

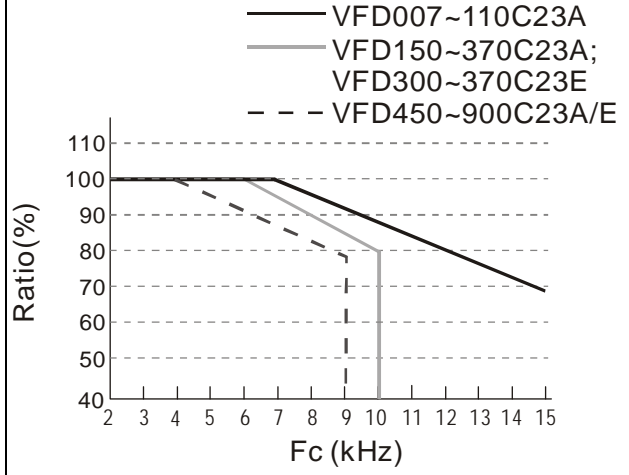

Chapter 3 Unpacking


The AC motor drive should be kept in the shipping carton or crate before installation. In order to retain the warranty coverage, the AC motor drive should be stored properly when it is not to be used for an extended period of time.

The AC motor drive is packed in the crate. Follows the following step for unpack:

Frame D


Crate 1 (VFDXXXCXXA)

Loosen the 12 cover screws to open the crate.

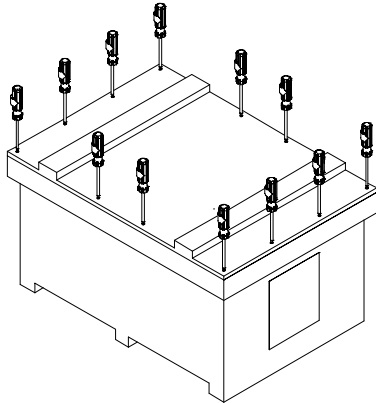


Crate 2 (VFDXXXCXXE)


Loosen the 4 screws on the iron plates. There are 4 iron plates and in total of 16 screws.

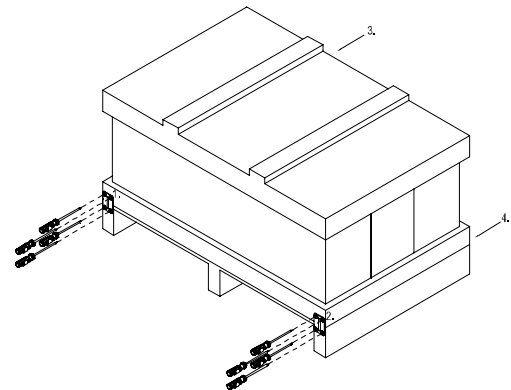



Remove the EPEs and manual.

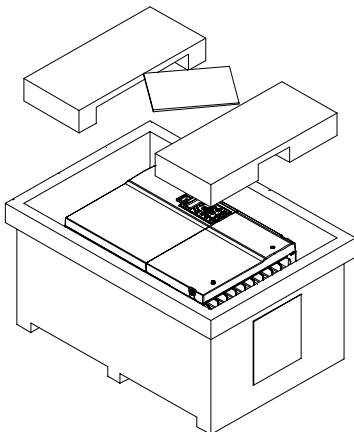


Remove the crate cover, EPEs, rubber and manual.

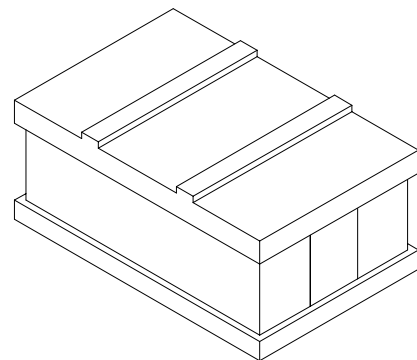


Loosen the 8 screws that fastened on the pallet and remove the wooden plate.

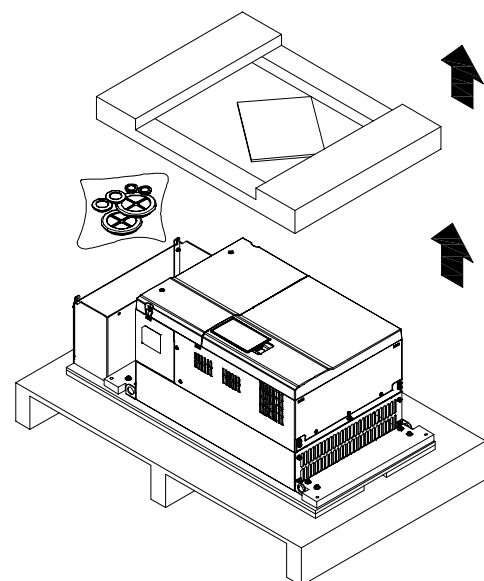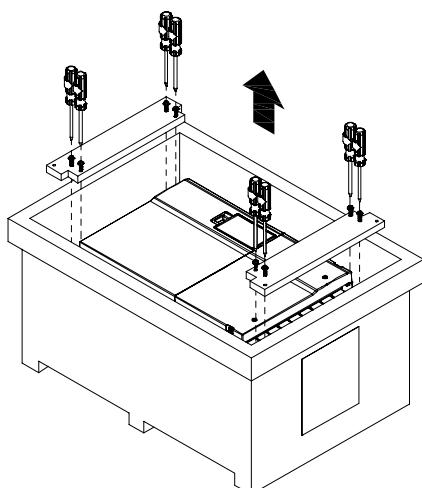


Lift the drive by hooking the lifting hole. It is now ready for installation.

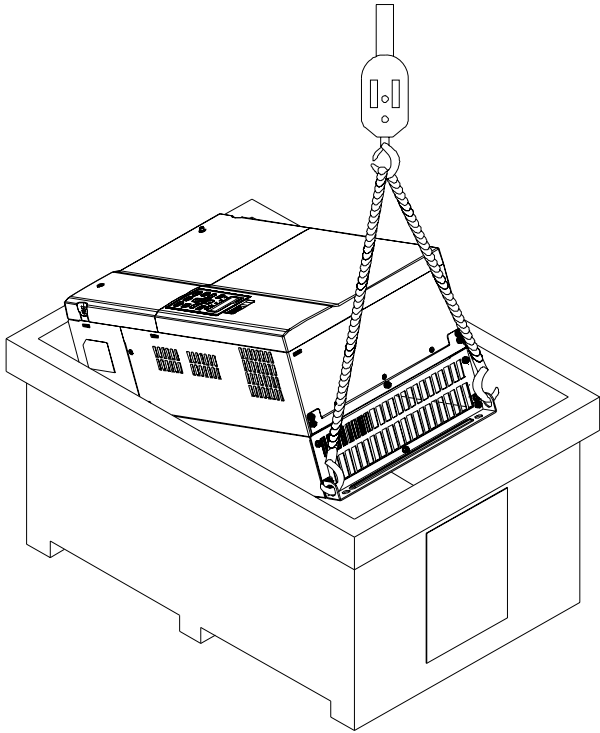

Loosen the 10 screws on the pallet, remove the wooden plate.

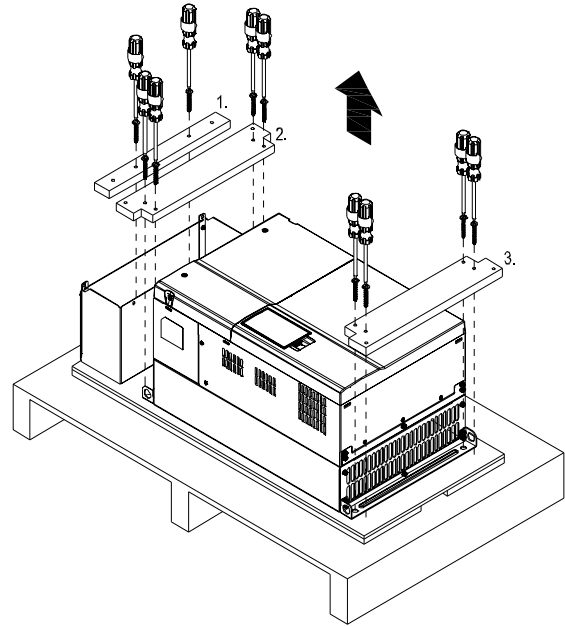


Lift the drive by hooking the lifting hole. It is now ready for installation.

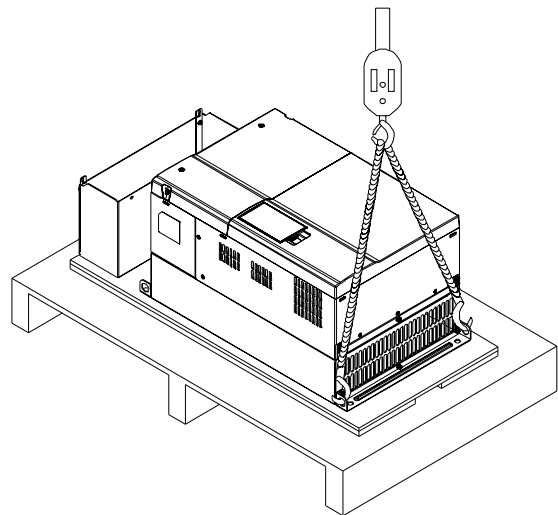

Frame E


Crate 1 (VFDXXXCXXA)

Loosen the 4 screws on the iron plates. There are 4 iron plates and in total of 16 screws.

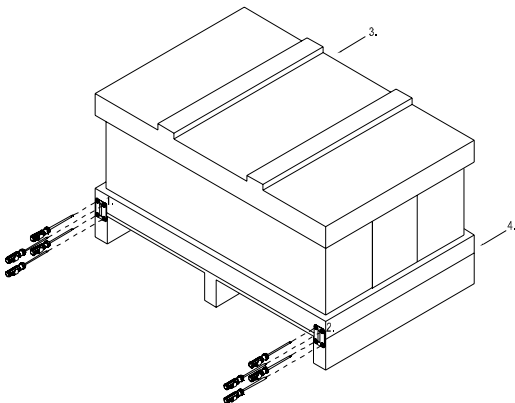


Crate 2 (VFDXXXCXXE)


Loosen the 4 screws on the iron plates. There are 4 iron plates and in total of 16 screws.

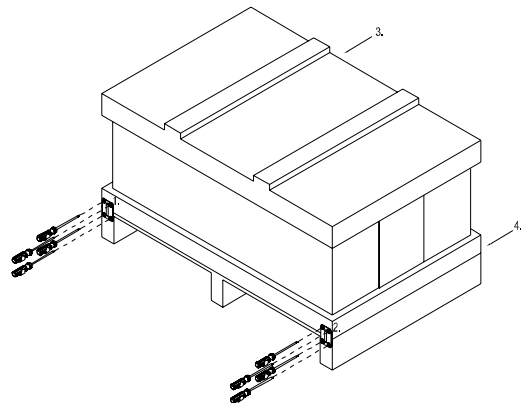


Remove the crate cover, EPEs and manual.

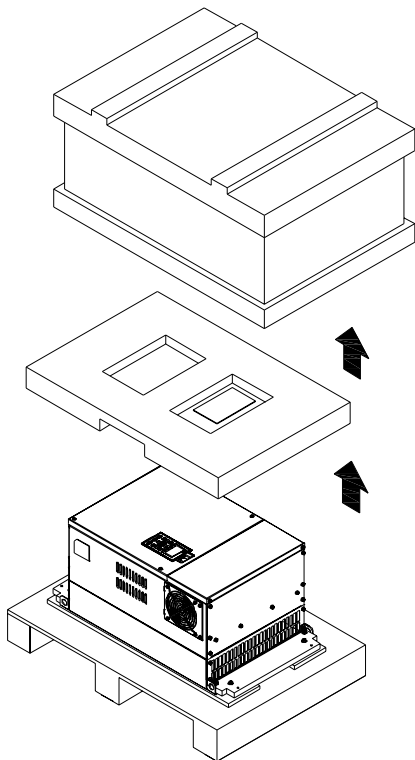


Remove the crate cover, EPEs, rubbers and manual.

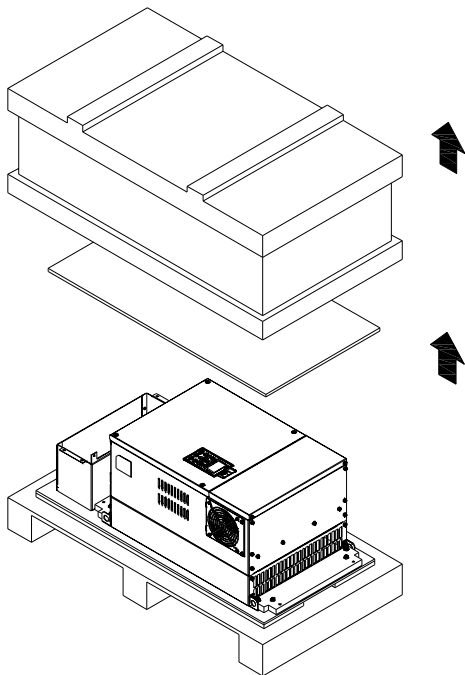


Loosen the 8 screws on the pallet as shown in the following figure.

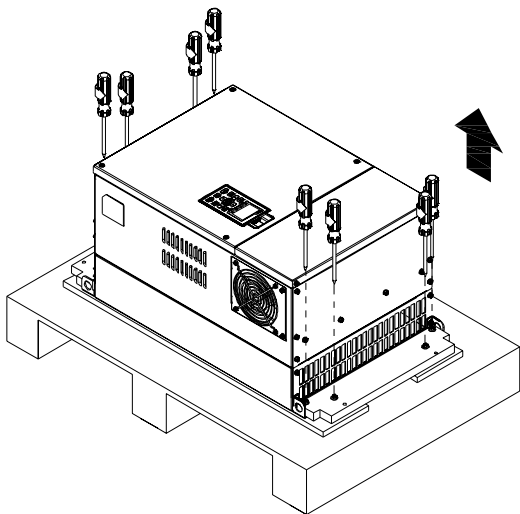


Loosen the 10 screws on the pallet and remove the wooden plate.

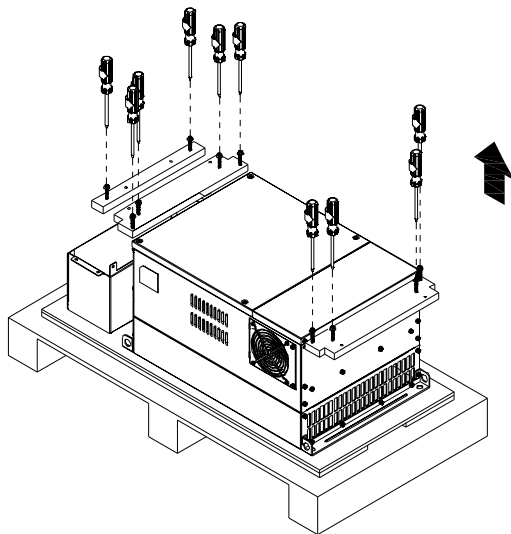

Lift the drive by hooking the lifting hole. It is now ready for installation.

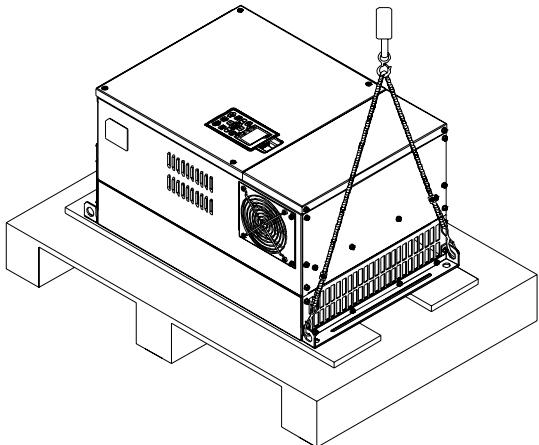


Lift the drive by hooking the lifting hole. It is now ready for installation.

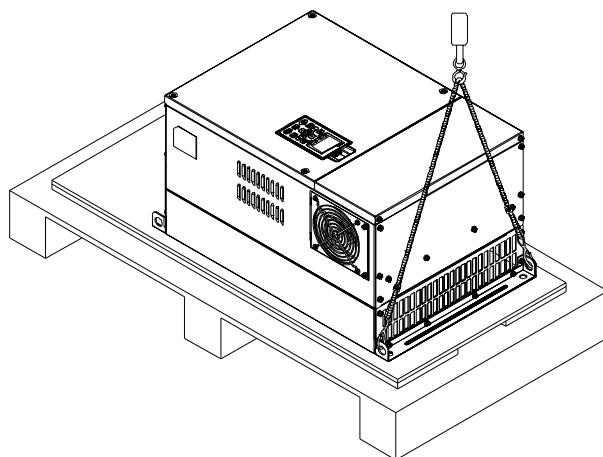

Frame F


Crate 1 (VFDXXXCXXA)

Remove the 6 clips on the side of the crate with a flat-head screwdriver. (As shown in figure below.)

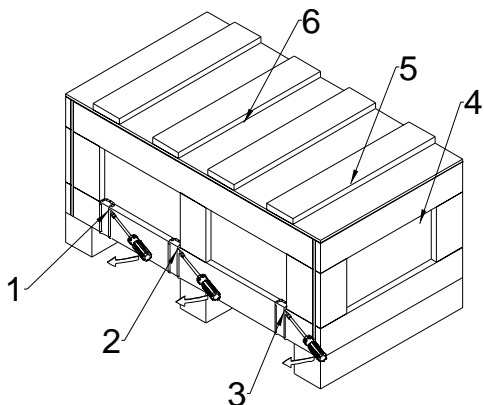


Crate 2 (VFDXXXCXXE)


Remove the 6 clips on the side of the crate with a flat-head screwdriver. (As shown in figure below.)

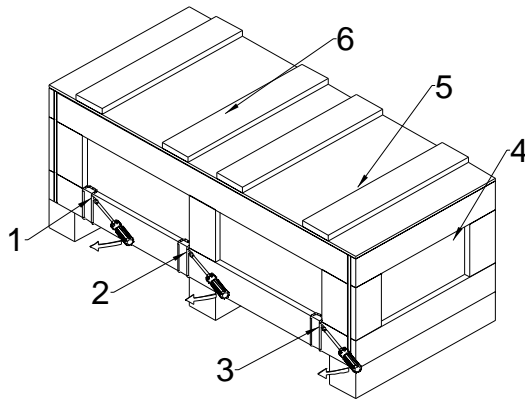


Remove the crate cover, EPEs and manual.

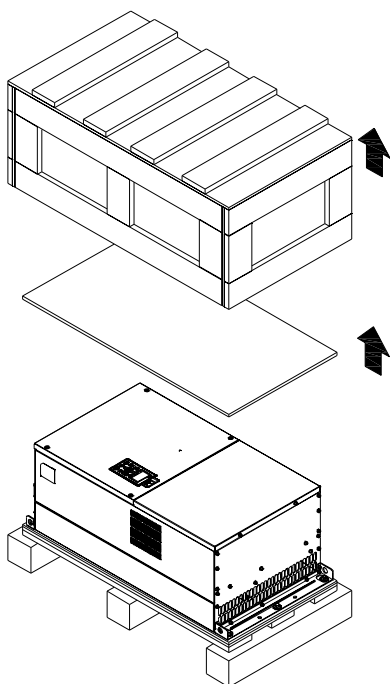


Remove the crate cover, EPEs, rubbers and manual.

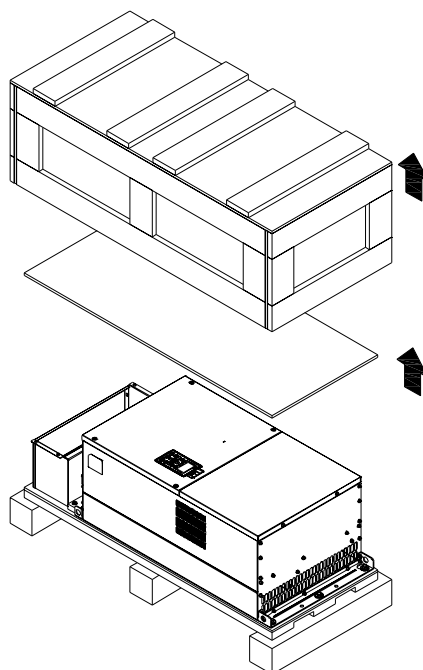


Loosen the 5 screws on the pallet as shown in the following figure.

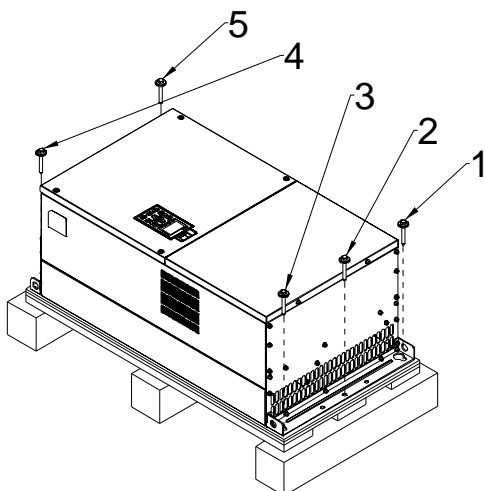


Loosen the 9 screws on the pallet and remove the wooden plate.

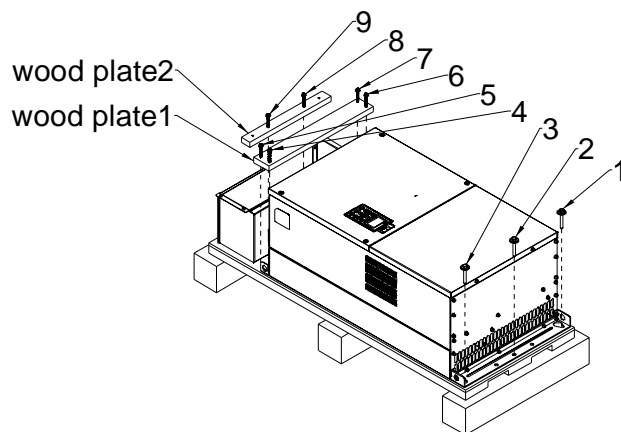

Lift the drive by hooking the lifting hole. It is now ready for installation

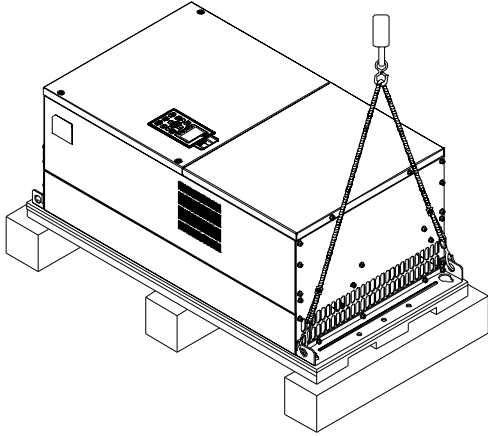


Lift the drive by hooking the lifting hole. It is now ready for installation.

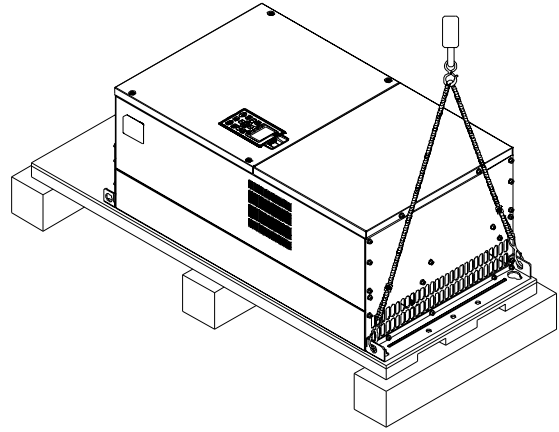

Frame G


Crate 1 (VFDXXXCXXA)

Remove the 6 clips on the side of the crate with a flathead screwdriver. (As shown in figure below.)

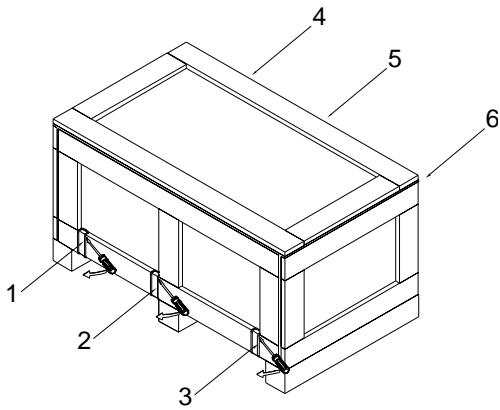


Crate 2 (VFDXXXCXXE)


Remove the 6 clips on the side of the crate with a flathead screwdriver. (As shown in figure below.)

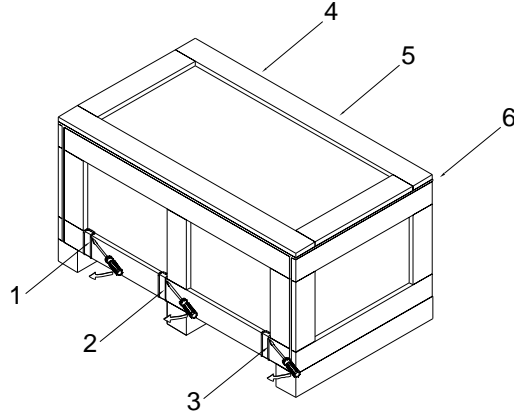


Remove the crate cover, EPEs and manual.

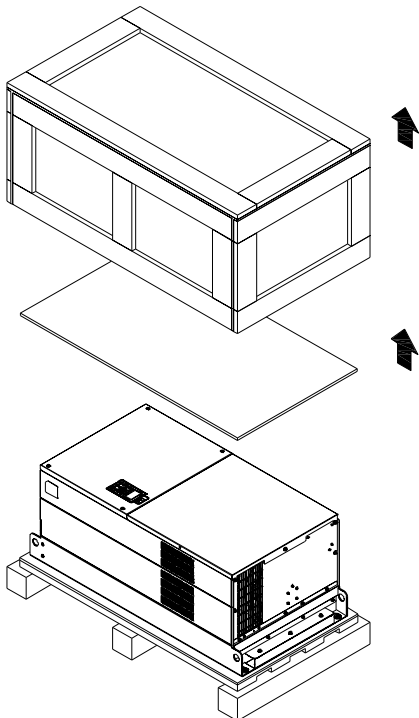


Remove the crate cover, EPEs, rubber and manual.

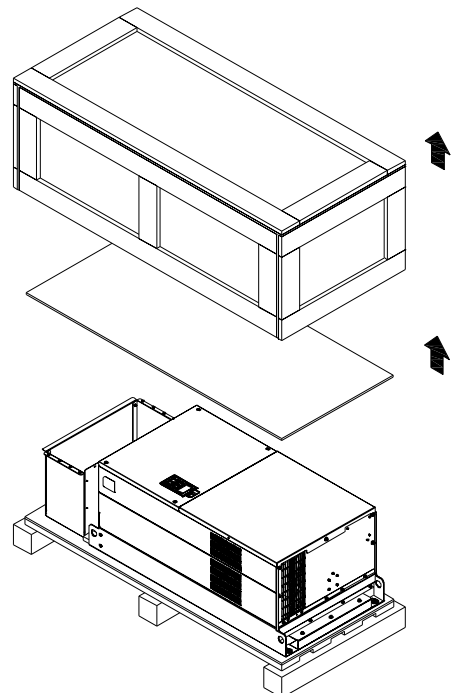


Loosen the 5 screws as shown in following figure:

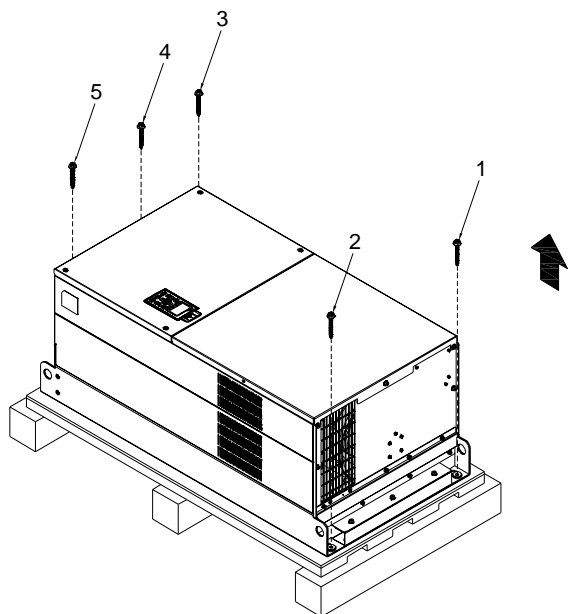


Loosen the 9 screws and remove the wooden plate.

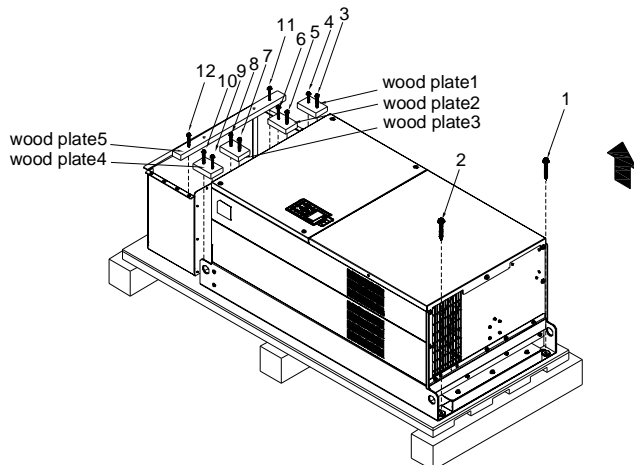

Lift the drive by hooking the lifting hole. It is now ready for installation.

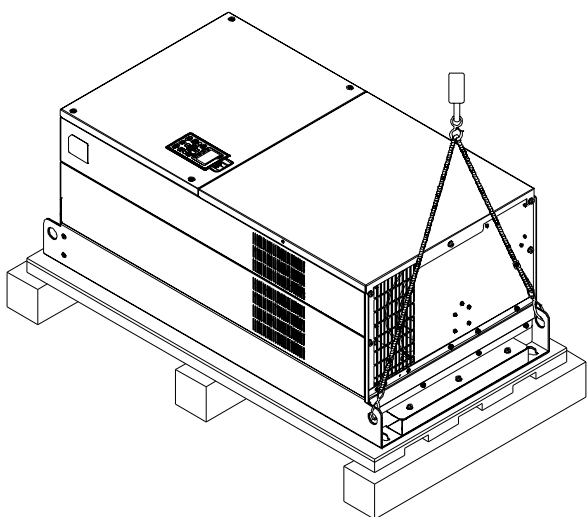


Lift the drive by hooking the lifting hole. It is now ready for installation.

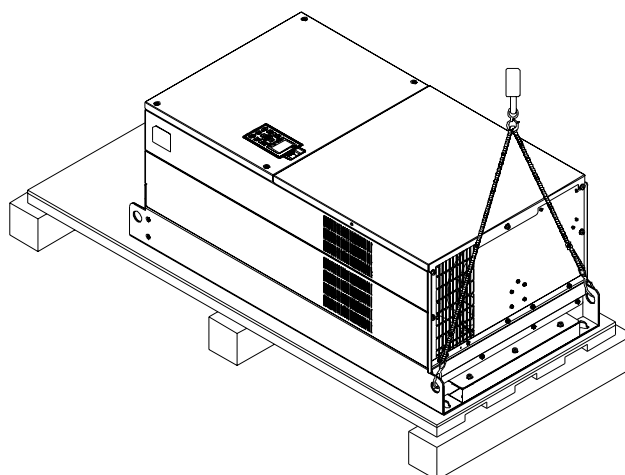

Frame H


Crate 1 (VFDXXXCXXA)

Remove the 8 clips on the side of the crate with a flathead screwdriver. (As shown in figure below.)

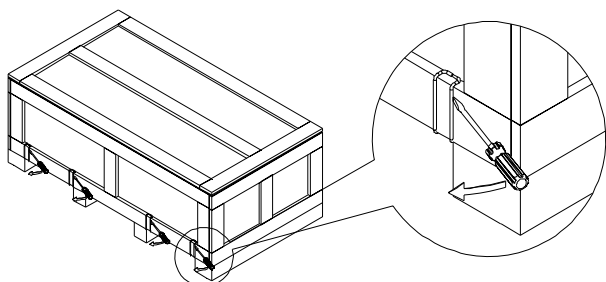


Crate 2 (VFDXXXCXXE-1)


Remove the 8 clips on the side of the crate with a flathead screwdriver. (As shown in figure below.)

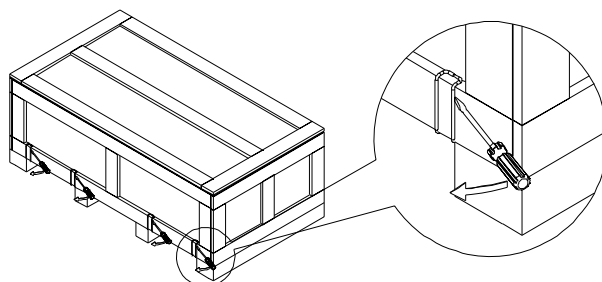


Remove the crate cover, EPEs and manual.

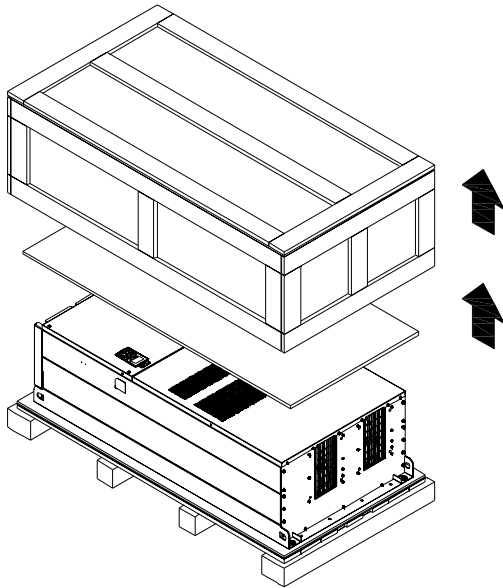


Remove the crate cover, EPEs, rubbers and manual.

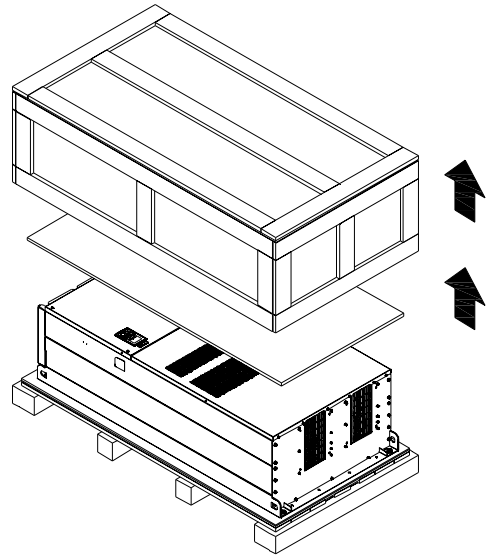


Loosen the 6 screws on the top then remove 6 metal washers and 6 plastic washers as shown in figure below.

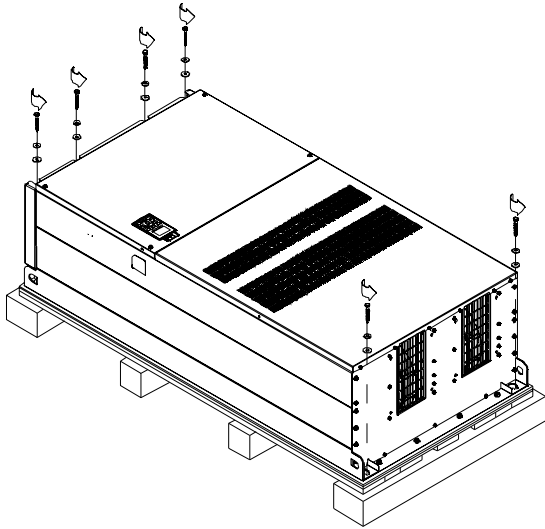


Loosen the 6 screws on the top then remove 6 metal washers and 6 plastic washers as shown in figure below.

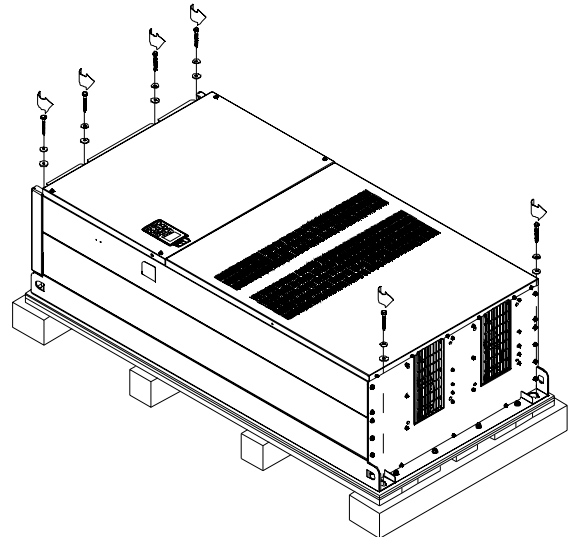


Lift the drive by hooking the lifting hole. It is now ready for installation.

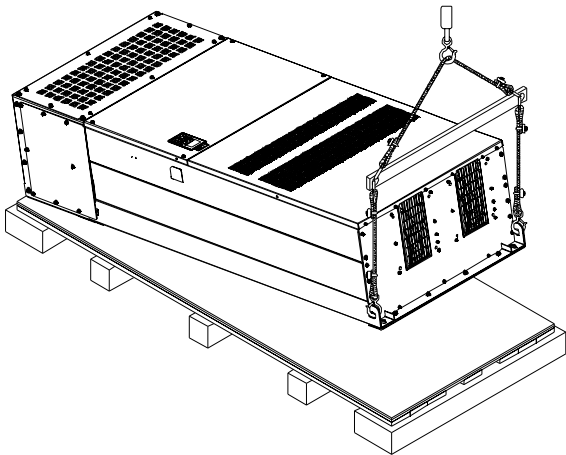


Loosen 6 of the M6 screws on the side and remove the 2 plates, as shown in below. The removed screws and plates can be used to secure the AC motor drive from the external.

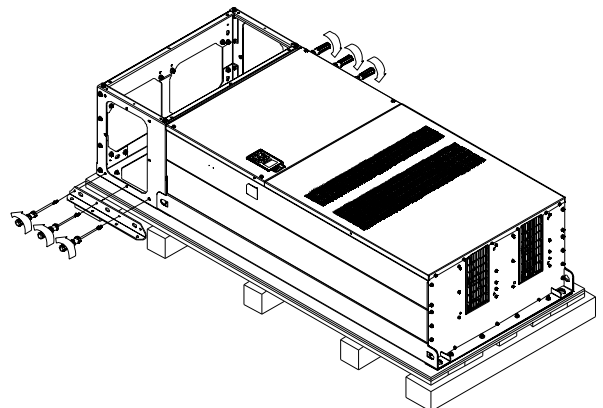

Secure the drive from the external. (Skip to the next step if this situation does not apply to you.) Loosen 8 of M8 screws on the both sides and place the 2 plates that were removed from the last step. Fix the plates to AC motor drive by fasten 8 of the M8 screws. (As shown in below)
Torque: 150~180kg-cm (130.20~156.24lb-in.)

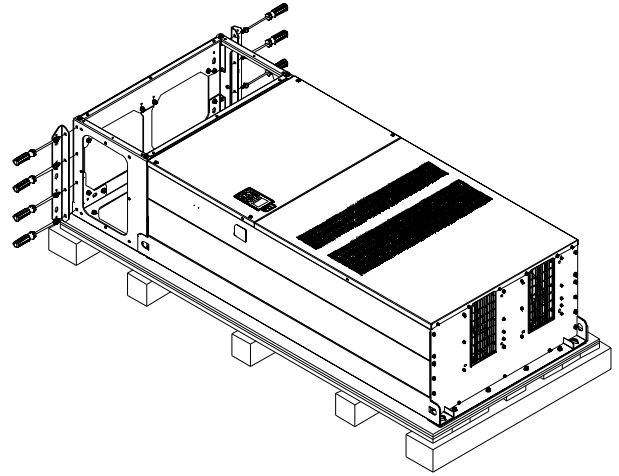


Lift the drive by hooking the lifting hole. It is now ready for installation.

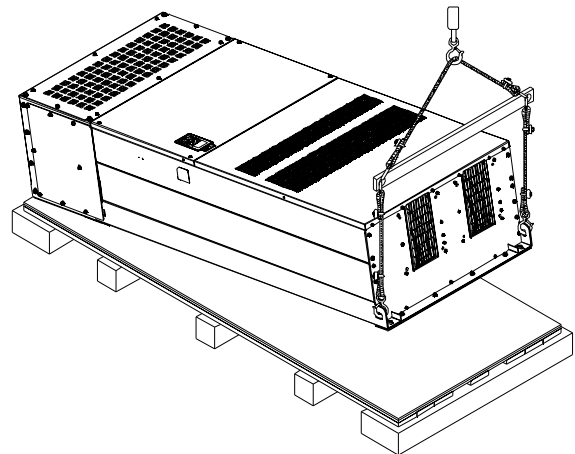


Frame H

Crate 3 (VFDXXCXXE)


Use flathead screwdriver to remove the clips on the side of the crate, 8 clips in total.

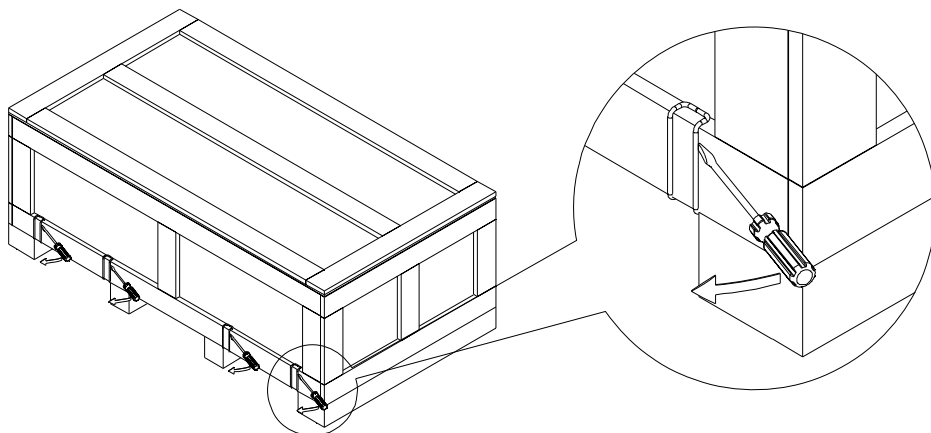


Remove the crate cover, EPEs, rubber and manual.

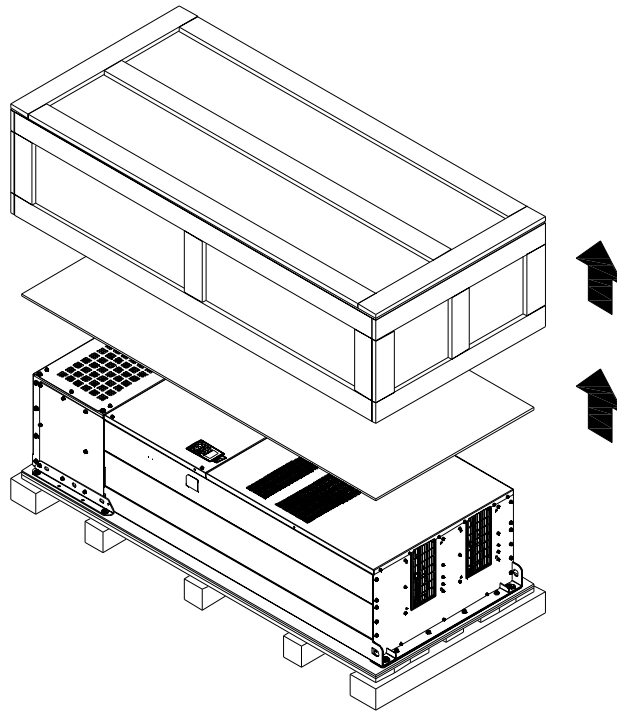

Loosen the 6 screws on the cover, remove 6 metal washers and 6 plastic washers as shown in below:

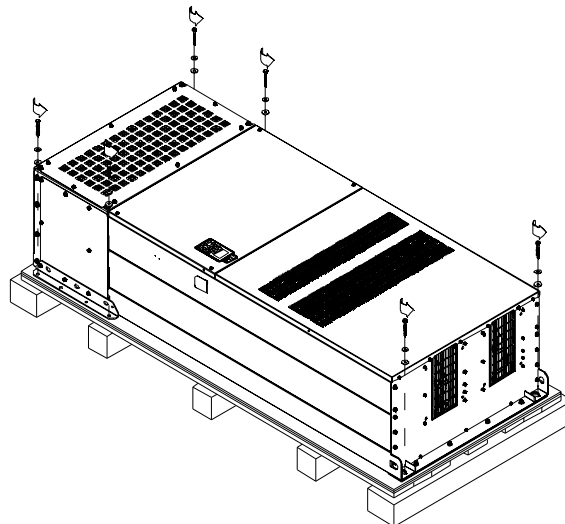

Loosen 6 of the M6 screws on the side and removes the 2 plates, as shown in following figure. The removed screws and plates can be used to secure AC motor drive from the external.

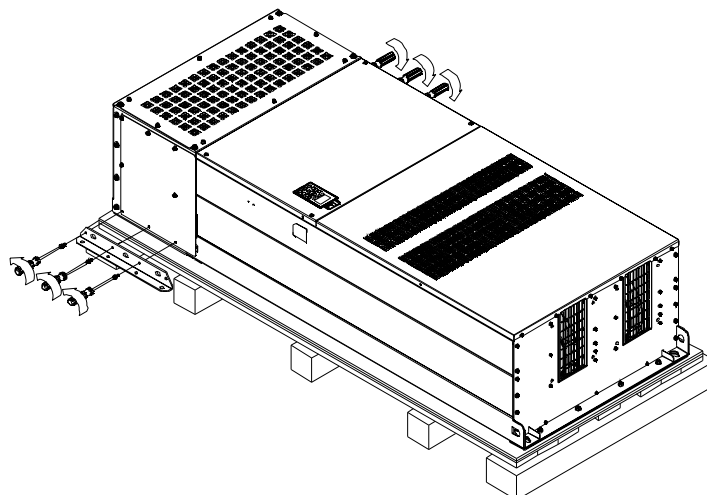

Secure the drive from the internal.

Loosen 18 of the M6 screws and remove the top cover as shown in figure 2. Mount the cover (figure 1) back to the drive by fasten the M6 screws to the two sides of the drive, as shown in figure 2. Torque: 35~45kg-cm (30.38~39.06lb-in.)

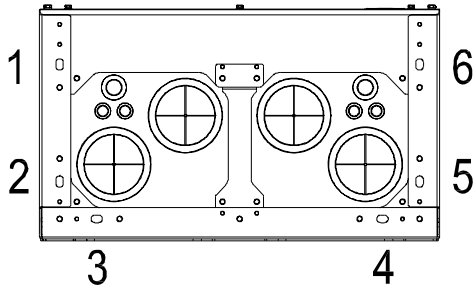


Figure 1
Top cover (Use M12 screws)

Secure the drive from the external.

Loosen 8 of the M8 screws on the both sides and place the 2 plates that were removed from the last step. Fix the plates to rive by fasten 8 of the M8 screws. (As shown in figure below).

Torque: 150~180kg-cm (130.20~156.24lb-in.)




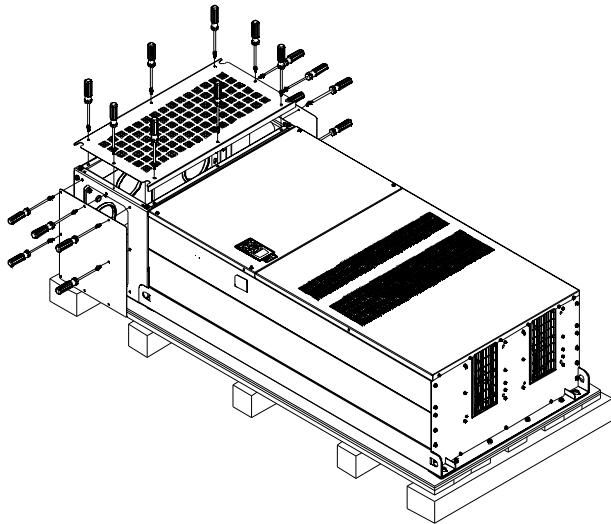


Figure 2

Fasten 6 of the M6 screws back to the original position where it was removed. As shown in the figure:

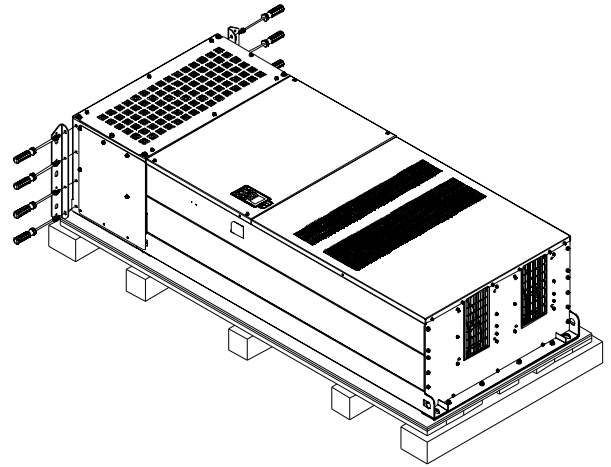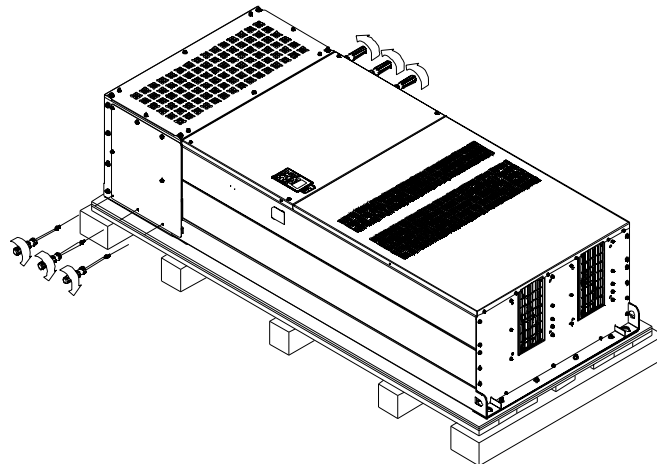

Lift the drive by hooking the lifting hole. It is now ready for installation.

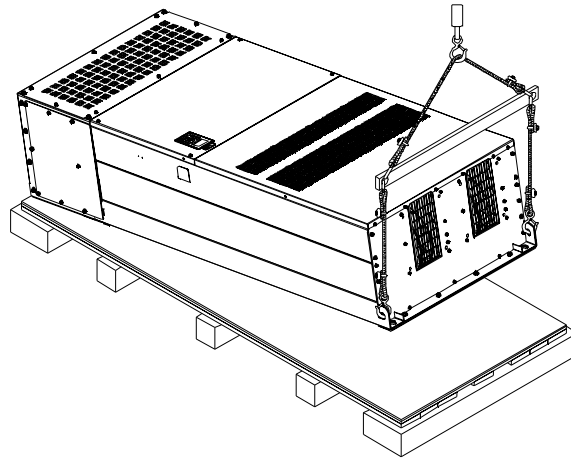


Frame H Secure the drive


(VFDXXXCXXA)

Screw: M12*6

Torque: 340-420kg-cm [295.1-364.6lb-in.]

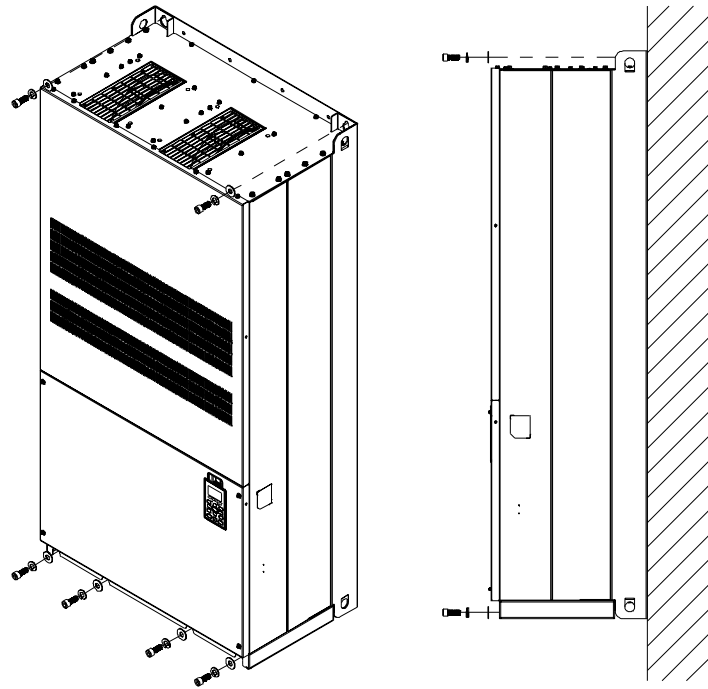



(VFDXXXCXXE) & (VFDXXXCXXE-1)

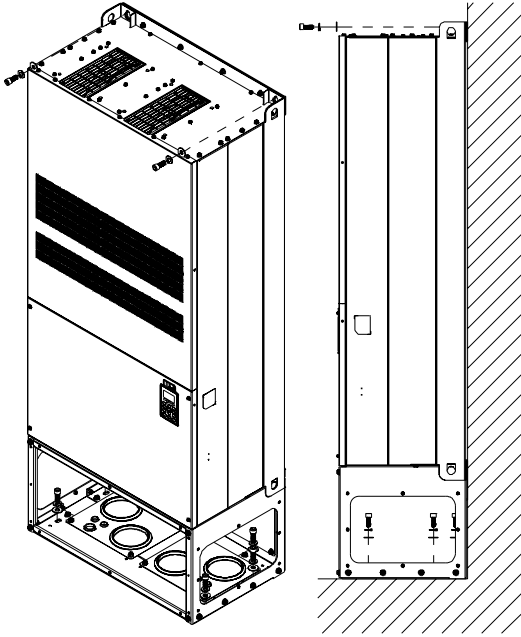

Secure the drive from the internal.

Screw: M12*8


Torque: 340-420kg-cm [295.1-364.6lb-in.]

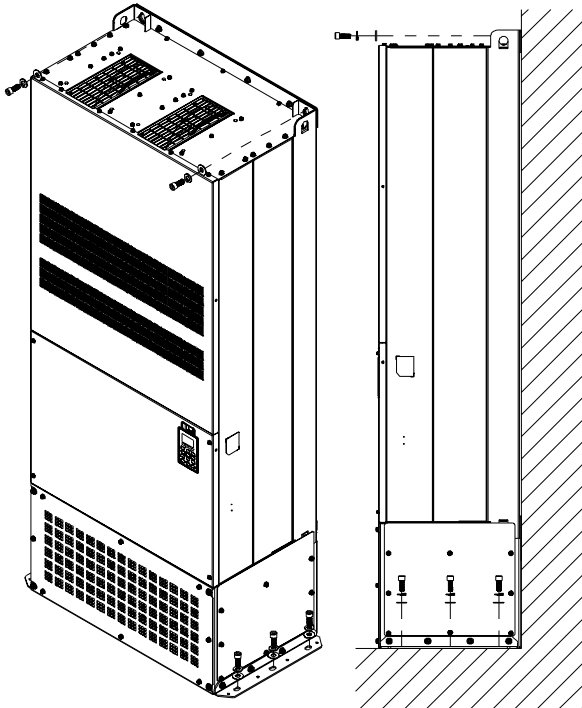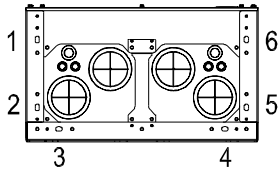

Secure the drive from the external.


Screw: M12*8

Torque: 340-420kg-cm [295.1-364.6lb-in.]

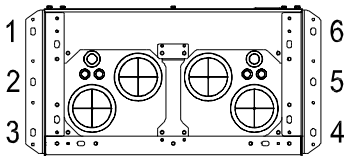


The Lifting Hook


The arrows indicate the location of the lifting holes of frame D to H, as shown in figure below:

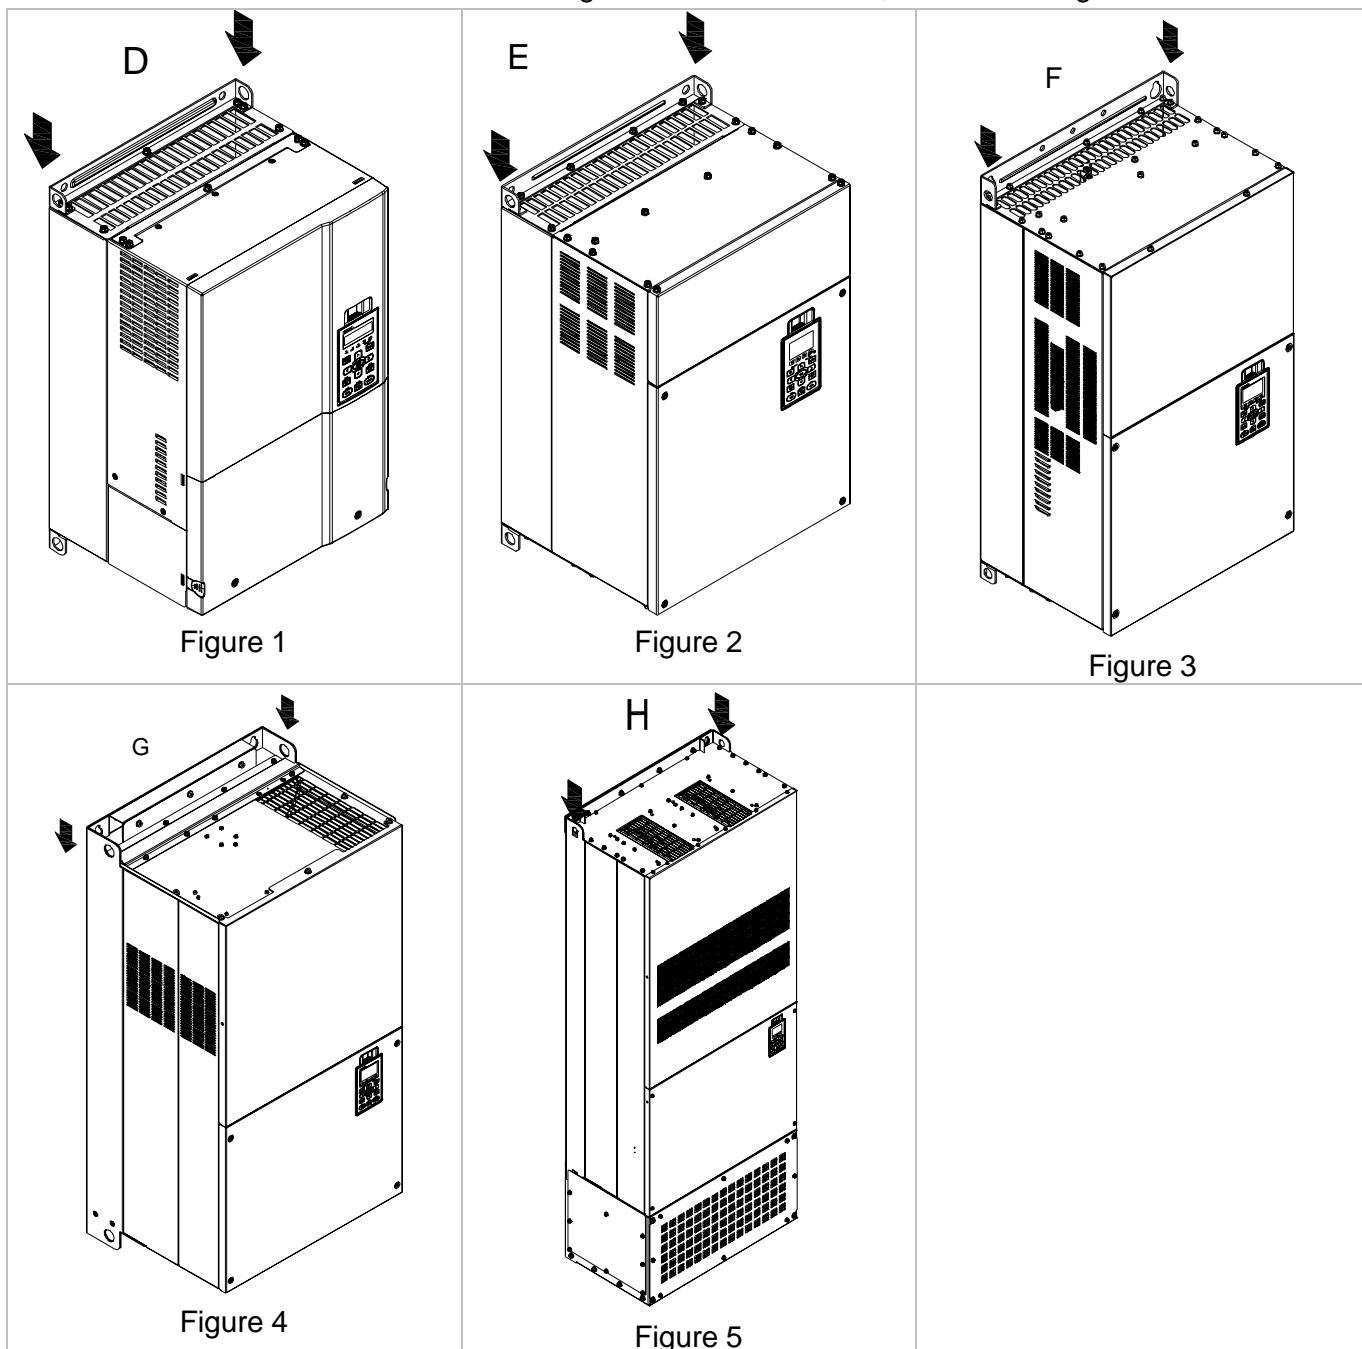



Ensure the lifting hook properly goes through the lifting hole, as shown in the following diagram. (Applicable to Frame D~E)

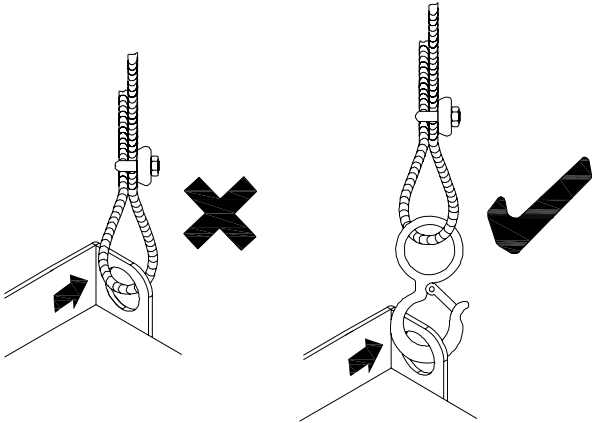


(Applicable to Frame F~H)

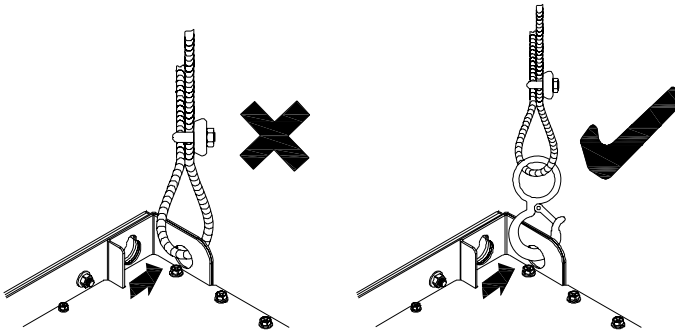

Ensure the angle between the lifting holes and the lifting device is within the specification, as shown in the following figure. (Applicable to Frame D~E)

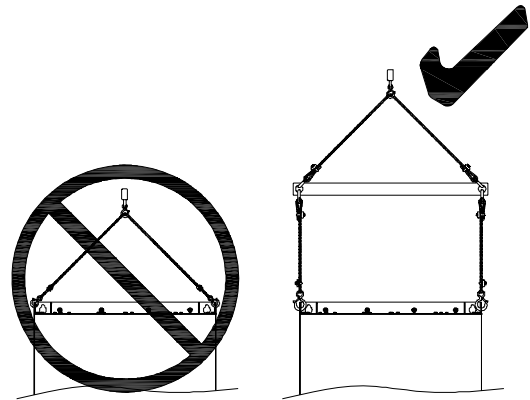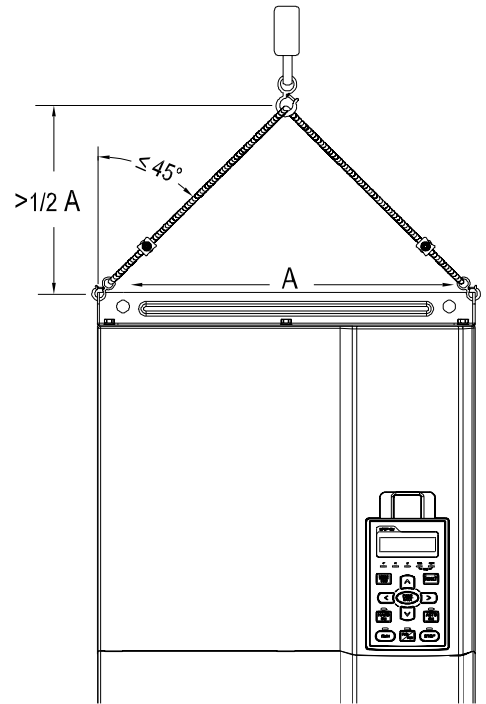


(Applicable to Frame F~H)

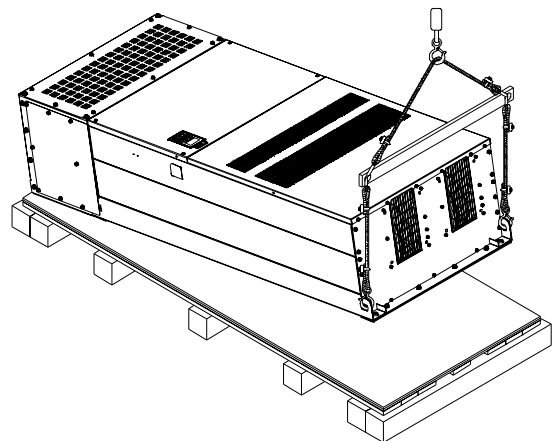


Weight


VFDXXXXCXXA **D** 37.6 kg(82.9 lbs.)

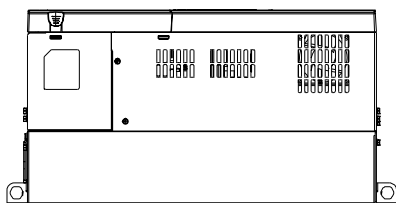


VFDXXXXCXXE **D** 40 kg(88.2 lbs.)

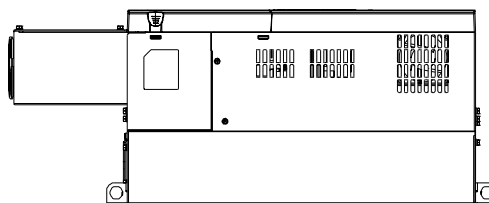


VFDXXXXCXXA **E** 63.6 kg(140.2 lbs.)

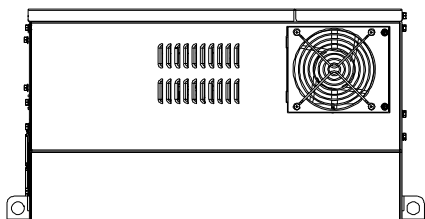


VFDXXXXCXXE **E** 66 kg(145.5 lbs.)

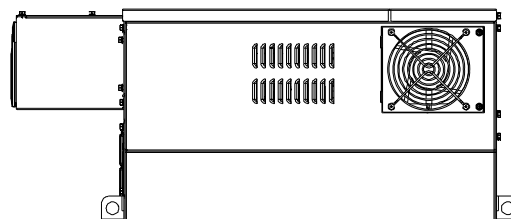


VFDXXXXCXXA **F** 85kg(187.2 lbs.)

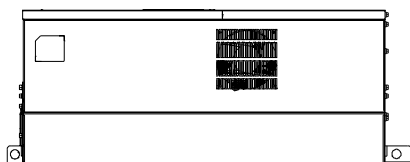


VFDXXXXCXXE **F** 88kg(193.8 lbs.)

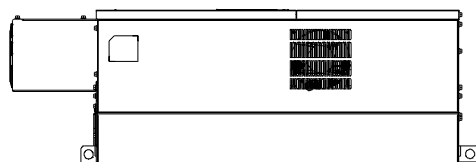


VFDXXXXCXXA **G** 130kg(286.5 lbs.)

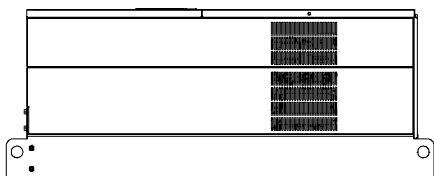


VFDXXXXCXXE **G** 138kg(303.9 lbs.)

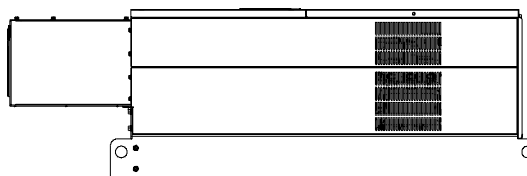


H1: VFD2800C43A; VFD3150C43A; VFD3550C43A 235kg (518.1lbs)

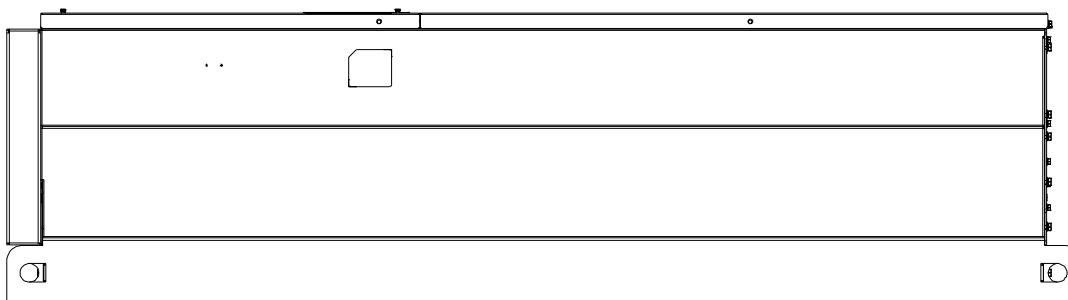

H2: VFD2800C43E-1; VFD3150C43E-1; VFD3550C43E-1 257kg (566.6lbs)

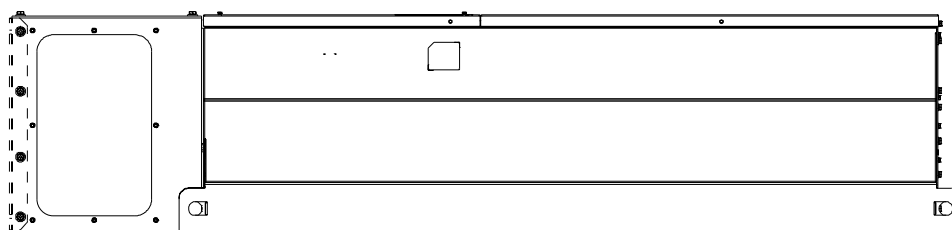

H3: VFD2800C43E; VFD3150C43E; VFD3550C43E 263kg (579.8lbs)

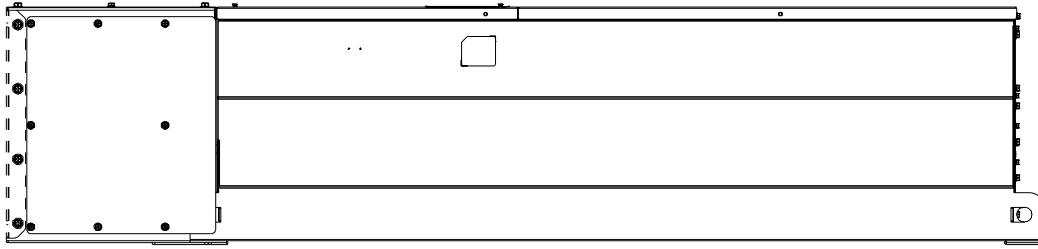

Chapter 4 Wiring

After removing the front cover, examine if the power and control terminals are clearly noted. Please read following precautions before wiring.

- ☑ Make sure that power is only applied to the R/L1, S/L2, T/L3 terminals. Failure to comply may result in damage to the equipments. The voltage and current should lie within the range as indicated on the nameplate (Chapter 1-1).
- ☑ All the units must be grounded directly to a common ground terminal to prevent lightning strike or electric shock.
- ☑ Please make sure to fasten the screw of the main circuit terminals to prevent sparks which is made by the loose screws due to vibration




- ☑ It is crucial to turn off the AC motor drive power before any wiring installation are made. A charge may still remain in the DC bus capacitors with hazardous voltages even if the power has been turned off therefore it is suggested for users to measure the remaining voltage before wiring. For your personnel saftery, please do not perform any wiring before the voltage drops to a safe level < 25 Vdc. Wiring installation with remaninig voltage condition may caus sparks and short circuit.
- ☑ Only qualified personnel familiar with AC motor drives is allowed to perform installation, wiring and commissioning. Make sure the power is turned off before wiring to prevent electric shock.



- ☑ When wiring, please choose the wires with specification that complys with local regulation for your personnel safety.
- ☑ Check following items after finishing the wiring:
 1. Are all connections correct?
 2. Any loosen wires?
 3. Any short-circuits between the terminals or to ground?

Wiring Diagram for Frame A~C

* It provides 3-phase power

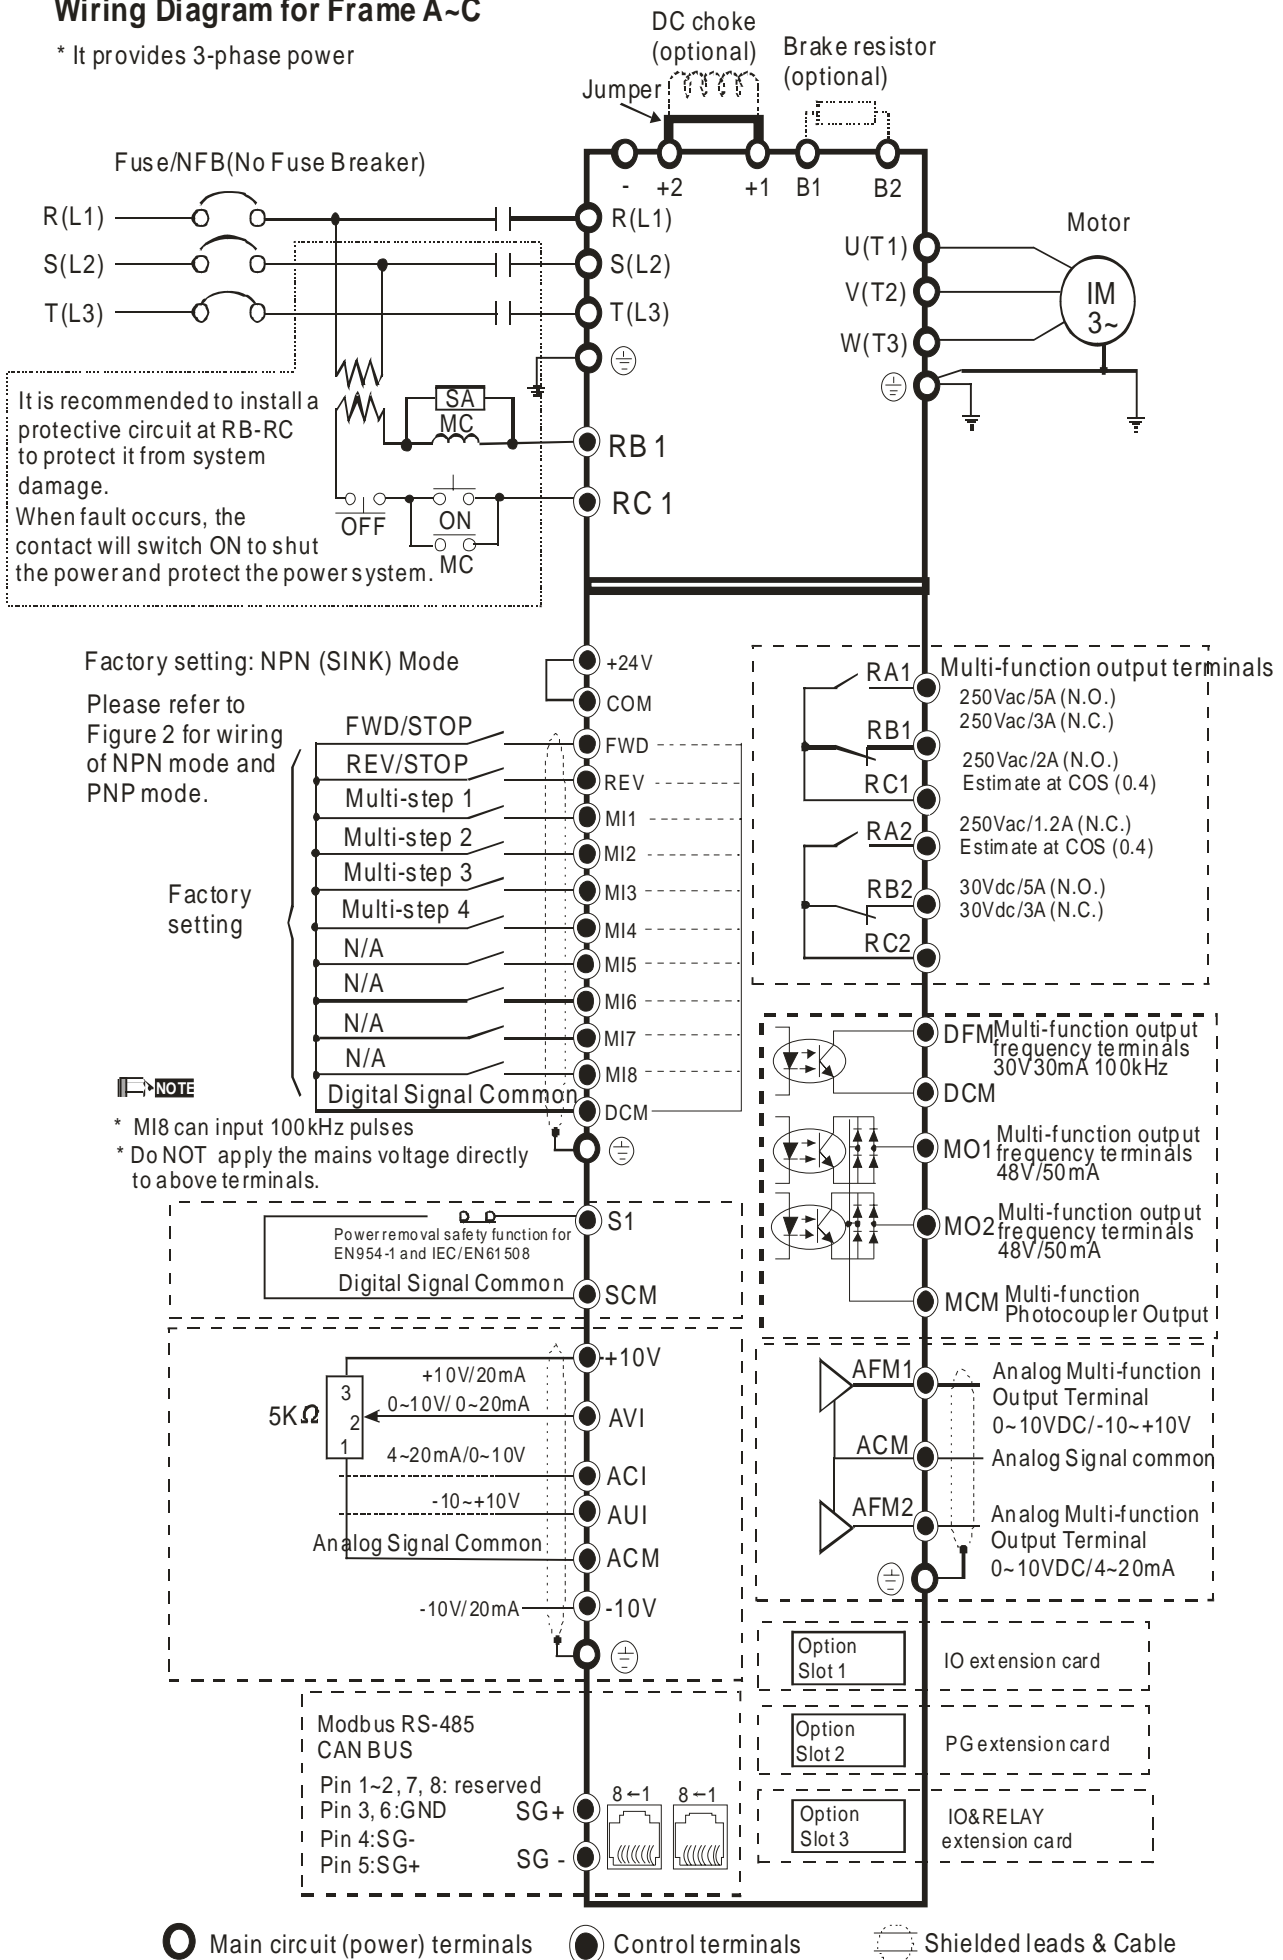

Wiring Diagram for Frame D and Frames Above

* It provides 3-phase power

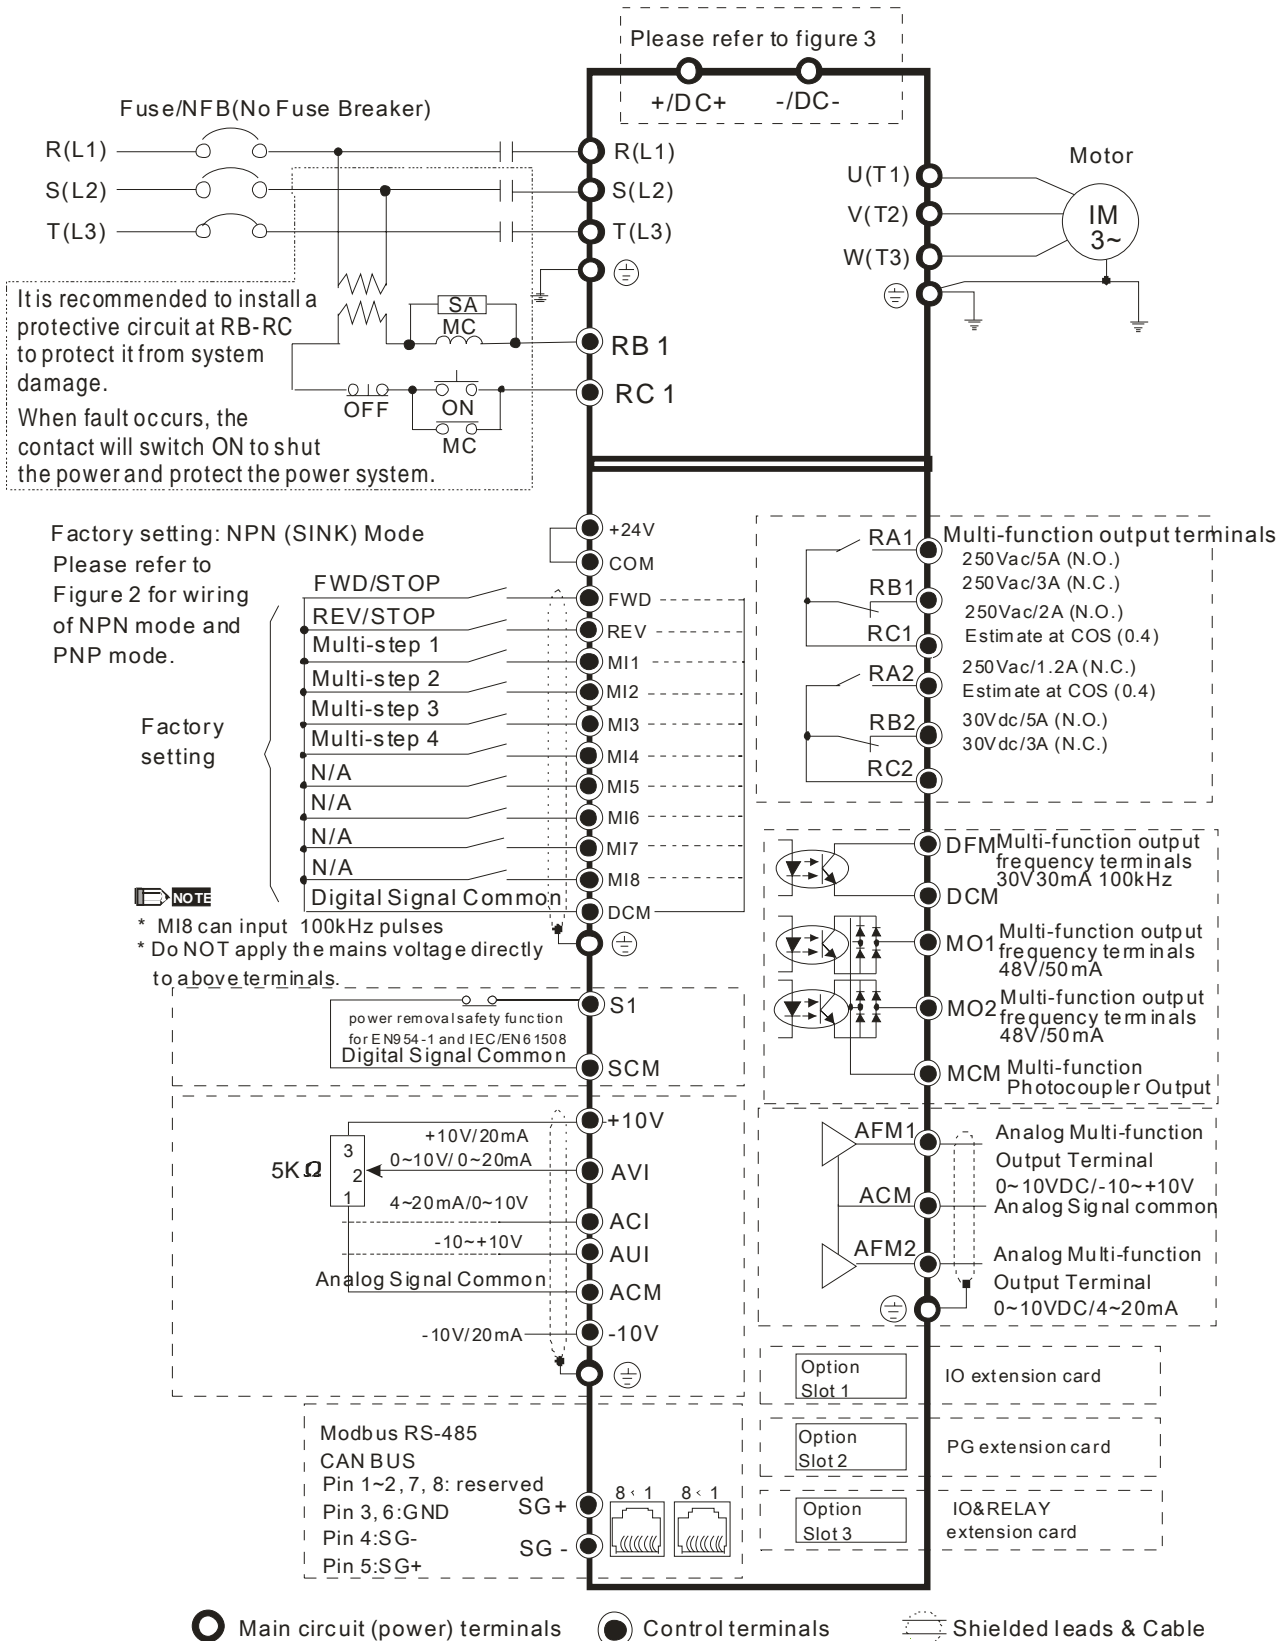


Figure 1

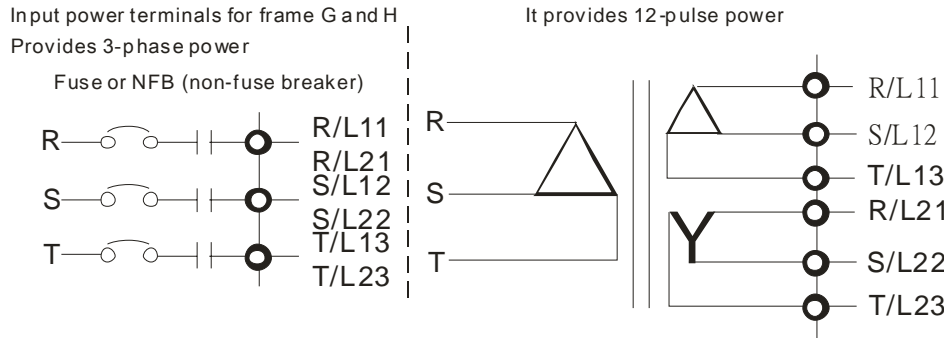


Figure 2

SINK (NPN) /SOURCE (PNP) Mode

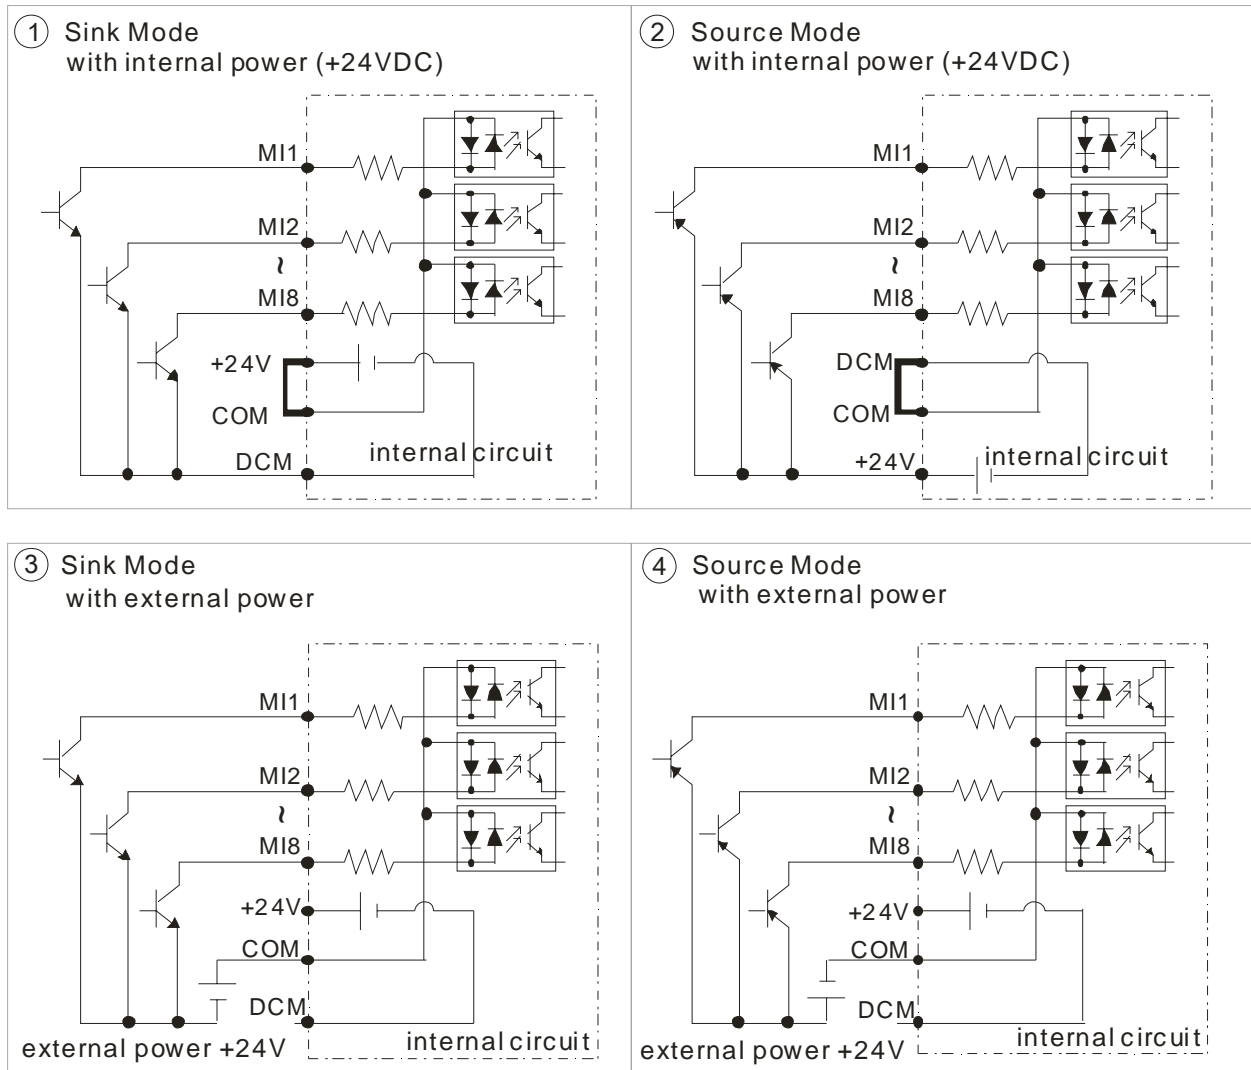


Figure 3

Function of DC Link

☑ Applicable to Frame E~H

☑ Operation Instruction

1. When RST power is off, please disconnect terminal r and terminal s. (As circled in dotted line, uninstall the gray section and properly store cable r and cable s. Cable r and cable s are not available in optional accessories, do not dispose them.)


After terminal r and terminal s are cleared, user may now connect new power source to terminal r and terminal s. Please connect 220Vac for 220V model and 440 Vac for 440V model.

When the drive power is on, if terminal r and terminal s are not connected to new power source (220 Vac for 220V model and 440Vac for 440 V model), the digital keypad will display an error message “ryF”.

2. When DC Link is used as a DC Bus connection (RST power is applied), it is not required to remove terminal r and terminal s.

 **NOTE**

Common DC Bus can only be applied to the drives with same power range. If in your case the drives are in different power range, please contact with us (Delta Industrial Automation Business Unit).

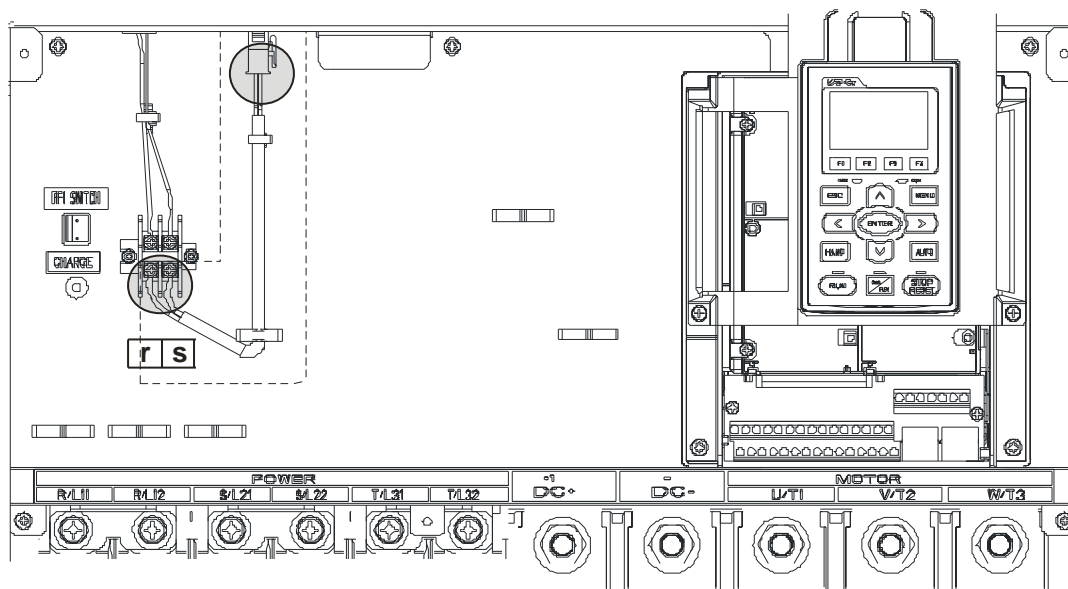


Chapter 5 Main Circuit Terminals

Main Circuit Diagram 1


For frame A~C

* Provide 3-phase input power

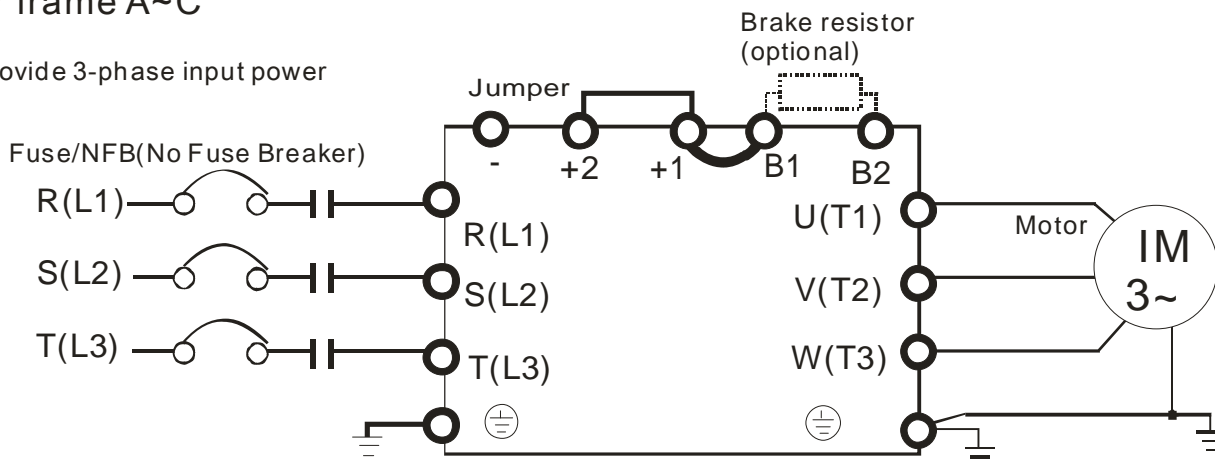

For frame A~C


* Provide 3-phase input power

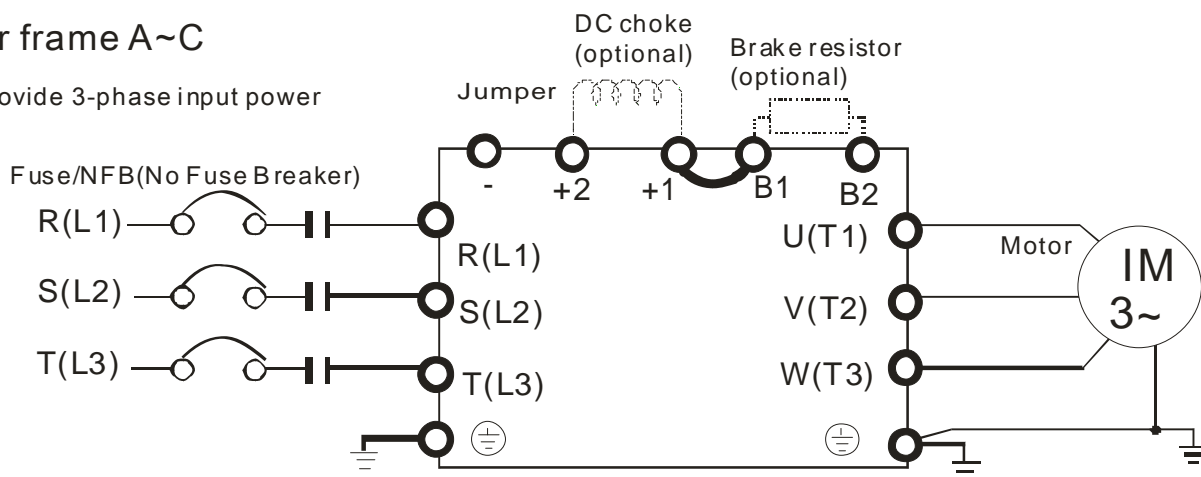


Main Circuit Diagram 2

For frame D and above D

* Provide 3-phase input power

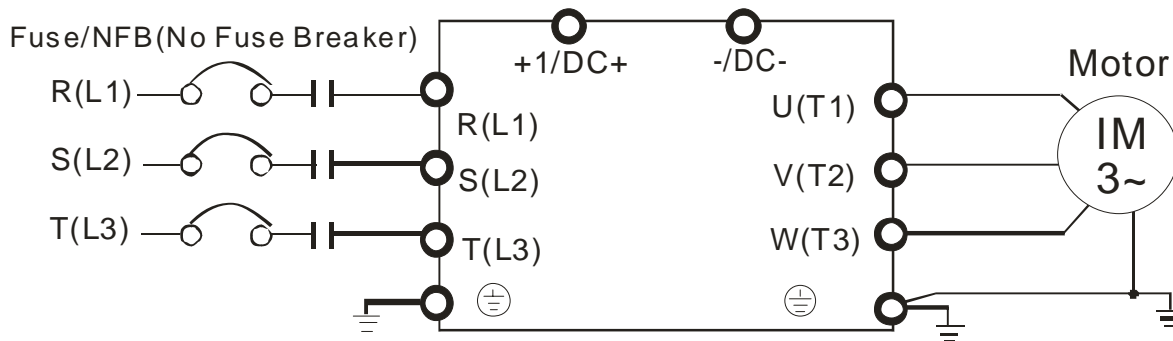

Main Circuit Diagram 3

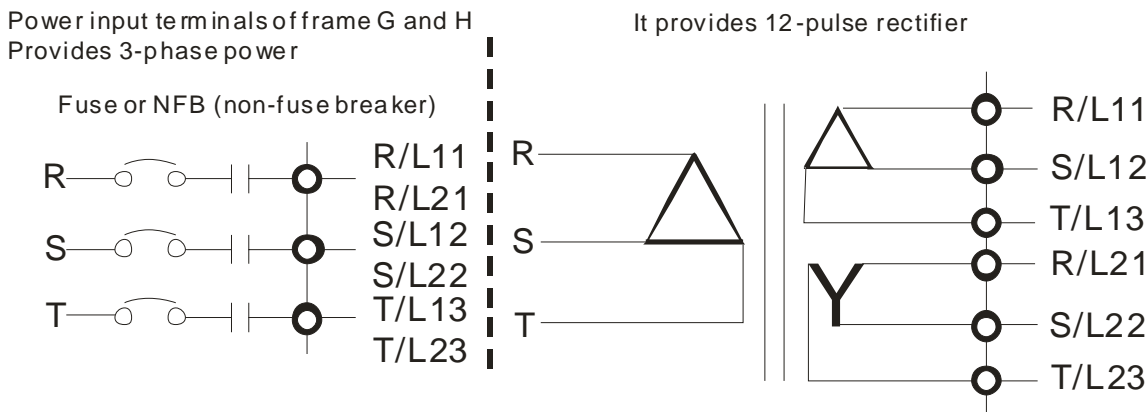

Terminals	Descriptions
R/L1, S/L2, T/L3	AC line input terminals 3-phase
U/T1, V/T2, W/T3	AC drive output terminals for connecting 3-phase induction motor
+1, +2	Applicable to frame A~C Connections for DC reactor to improve the power factor. It needs to remove the jumper for installation.
+1/DC+, -/DC-	Connections for brake unit (VFDB series) (for 230V models: $\leq 22\text{kW}$, built-in brake unit) (for 460V models: $\leq 30\text{kW}$, built-in brake unit) Common DC Bus
B1, B2	Connections for brake resistor (optional)
	Earth connection, please comply with local regulations.



Main power terminals

- ☑ Do not connect 3-phase model to one-phase power. R/L1, S/L2 and T/L3 has no phase-sequence requirement, it can be used upon random selection.
- ☑ It is recommend to add a magnetic contactor (MC) to the power input wiring to cut off power quickly and reduce malfunction when activating the protection function of the AC motor drive. Both ends of the MC should have an R-C surge absorber.
- ☑ Fasten the screws in the main circuit terminal to prevent sparks condition made by the loose screws due to vibration.
- ☑ Please use voltage and current within the specification.
- ☑ When using a general GFCI (Ground Fault Circuit Interrupter), select a current sensor with sensitivity of 200mA or above and not less than 0.1-second operation time to avoid nuisance tripping.
- ☑ Please use the shield wire or tube for the power wiring and ground the two ends of the shield wire or tube.
- ☑ Do NOT run/stop AC motor drives by turning the power ON/OFF.


Run/stop AC motor drives by RUN/STOP command via control terminals or keypad. If you still need to run/stop AC motor drives by turning power ON/OFF, it is recommended to do so only ONCE per hour.

Output terminals for main circuit


- ☑ When it needs to install the filter at the output side of terminals U/T1, V/T2, W/T3 on the AC motor drive. Please use inductance filter. Do not use phase-compensation capacitors or L-C (Inductance-Capacitance) or R-C (Resistance-Capacitance), unless approved by Delta.
- ☑ DO NOT connect phase-compensation capacitors or surge absorbers at the output terminals of AC motor drives.
- ☑ Use well-insulated motor, suitable for inverter operation.

Terminals for connecting DC reactor, external brake resistor, external brake resistor and DC circuit

- ☑ This is the terminals used to connect the DC reactor to improve the power factor. For the factory setting, it connects the short-circuit object. Please remove this short-circuit object before connecting to the DC reactor.

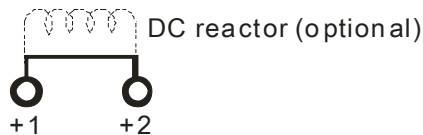

- ☑ When the AC Motor Drive is connected directly to a large-capacity power transformer (600kVA or above) or when a phase lead capacitor is switched, excess peak currents may occur in the power input circuit due to the load changes and the converter section may be damaged. To avoid this, it is recommend to use a serial connected AC input reactor(6%) at the AC Motor Drive mains input side to reduce the current and improve the input power efficiency.
- ☑ Connect a brake resistor or brake unit in applications with frequent deceleration ramps, short deceleration time, too low brake torque or requiring increased brake torque.

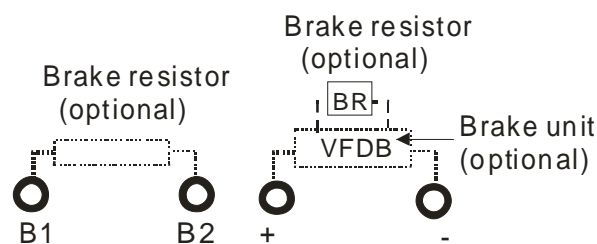


- ☑ The external brake resistor should connect to the terminals (B1, B2) of AC motor drives.
- ☑ For those models without built-in brake resistor, please connect external brake unit and brake resistor (both of them are optional) to increase

brake torque.

- ☑ When the terminals +1, +2 and - are not used, please leave the terminals open.
 - ☑ DO NOT connect [+1, -], [+2, -], [+1/DC+, -/DC-] or brake resistor directly to prevent drive damage.
 - ☑ DC+ and DC- are connected by common DC bus, please refer to Chapter 5-1(Main Circuit Terminal) for the wiring terminal specification and the wire gauge information.
 - ☑ Please refer to the VFDB manual for more information on wire gauge when installing the brake unit.
-

5-1 Main Circuit Terminals

Frame A

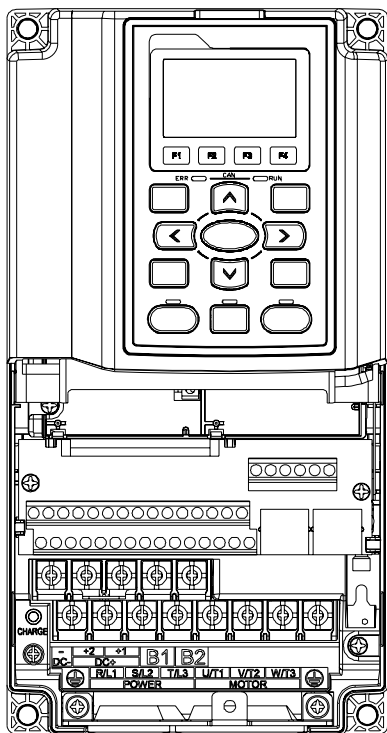

Main circuit terminals:

R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, ⊕, B1, B2, +1, +2, -

Models	Max. Wire Gauge	Min. Wire Gauge	Torque (±10%)
VFD007C23A	8 AWG (8.4mm ²)	14 AWG (2.1mm ²)	M4 20kg-cm (17.4 lb-in.) (1.962Nm)
VFD015C23A		12 AWG (3.3mm ²)	
VFD022C23A		10 AWG (5.3mm ²)	
VFD037C23A		8 AWG (8.4mm ²)	
VFD007C43A		14 AWG (2.1mm ²)	
VFD007C43E		14 AWG (2.1mm ²)	
VFD015C43A		14 AWG (2.1mm ²)	
VFD015C43E		14 AWG (2.1mm ²)	
VFD022C43A		14 AWG (2.1mm ²)	
VFD022C43E		14 AWG (2.1mm ²)	
VFD037C43A		10 AWG (5.3mm ²)	
VFD037C43E		10 AWG (5.3mm ²)	
VFD040C43A		10 AWG (5.3mm ²)	
VFD040C43E		10 AWG (5.3mm ²)	
VFD055C43A		10 AWG (5.3mm ²)	
VFD055C43E		10 AWG (5.3mm ²)	

UL installations must use 600V, 75°C or 90°C wire. Use copper wire only.

1. Figure 1 shows the terminal specification.
2. Figure 2 shows the specification of insulated heat shrink tubing that comply with UL (600V, YDPU2).

Figure 1



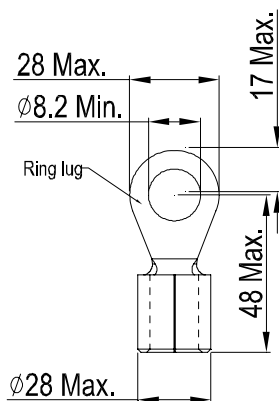


Figure 2

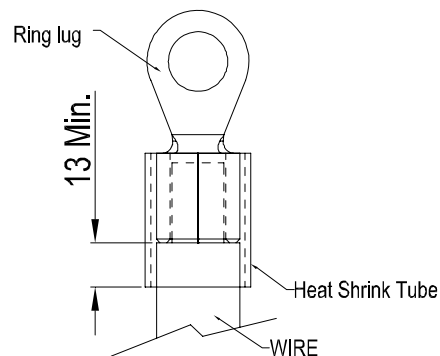

Frame B

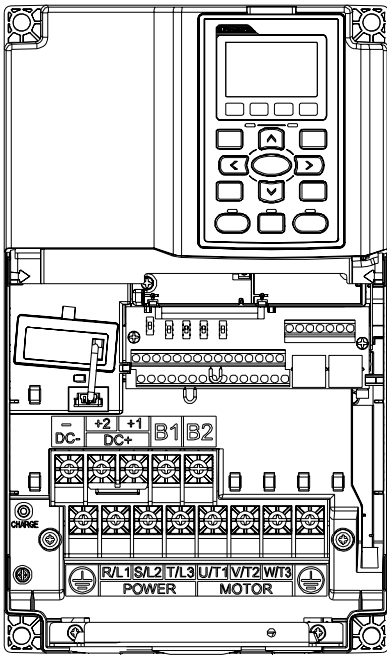

Main circuit terminals:

R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, ⊕, B1, B2, +1, +2, -

Models	Max. Wire Gauge	Min. Wire Gauge	Torque (±10%)
VFD055C23A	4 AWG (21.2mm ²)	8 AWG (8.4mm ²)	M5 35kg-cm (30.4 lb-in.) (3.434Nm)
VFD075C23A		6 AWG (13.3mm ²)	
VFD110C23A		4 AWG (21.2mm ²)	
VFD075C43A		8 AWG (8.4mm ²)	
VFD075C43E		10 AWG (5.3mm ²)	
VFD110C43A		8 AWG (8.4mm ²)	
VFD110C43E		8 AWG (8.4mm ²)	
VFD150C43A		6 AWG (13.3mm ²)	
VFD150C43E		8 AWG (8.4mm ²)	

UL installations must use 600V, 75°C or 90°C wire. Use copper wire only.

NOTE

Terminal D+ [+2 & +1]: Torque: 45 kg-cm [39.0lb-in.] (4.415Nm) (±10%)

1. VFD110C23A must use 600V, 90°C wire when surrounding temperature exceeds 45°C.
2. Figure 1 shows the terminal specification.
3. Figure 2 shows the specification of insulated heat shrink tubing that comply with UL (600V, YDPU2).

Figure 1



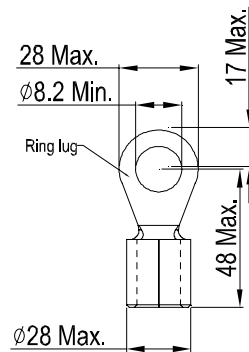


Figure 2

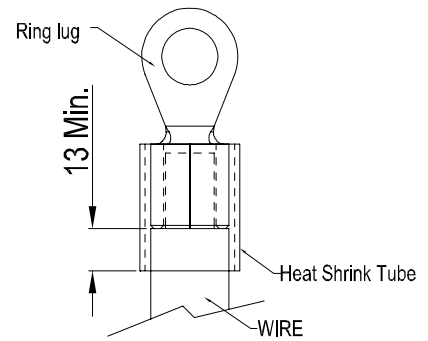

Frame C

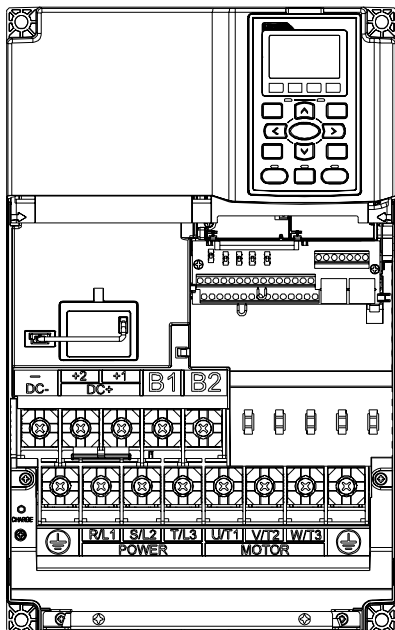

Main circuit terminals:

R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, ⊕, B1, B2, +1, +2, -

Models	Max. Wire Gauge	Min. Wire Gauge	Torque (±10%)
VFD150C23A	1/0 AWG (53.5mm ²)	1 AWG (42.4mm ²)	M8 80kg-cm (69.4 lb-in.) (7.85Nm)
VFD185C23A		1/0 AWG (53.5mm ²)	
VFD220C23A		1/0 AWG (53.5mm ²)	
VFD185C43A		4 AWG (21.2mm ²)	
VFD185C43E		6 AWG (13.3mm ²)	
VFD220C43A		4 AWG (21.2mm ²)	
VFD220C43E		4 AWG (21.2mm ²)	
VFD300C43A		2 AWG (33.6mm ²)	
VFD300C43E		3 AWG (26.7mm ²)	

UL installations must use 600V, 75°C or 90°C wire. Use copper wire only.

NOTE

Terminal D+ [+2 & +1]: Torque: 90 kg-cm [78.2lb-in.] (8.83Nm) (±10%)

1. VFD220C23A must use 600V, 90°C wire when surrounding temperature exceeds 40°C.
2. Figure 1 shows the terminal specification.
3. Figure 2 shows the specification of insulated heat shrink tubing that comply with UL (600V, YDPU2).

Figure 1


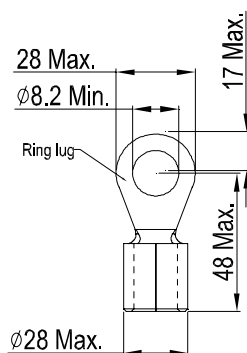



Figure 2

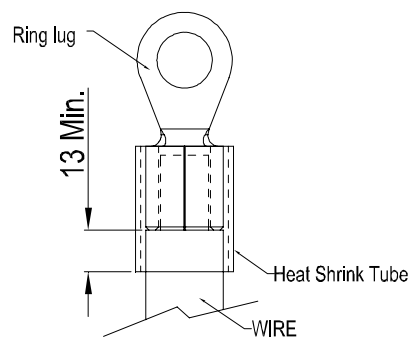

Frame D

Main circuit terminals:

R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, ⊕, +1/DC+, -/DC-

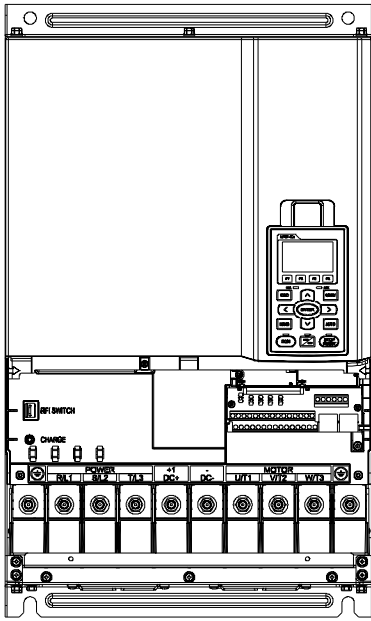

Models	Max. Wire Gauge	Min. Wire Gauge	Torque (±10%)
VFD300C23A	300MCM (152mm ²)	4/0 AWG (107mm ²)	M8 200kg-cm (173 lb-in.) (19.62Nm)
VFD370C23A		250MCM (127mm ²)	
VFD370C43A		1/0 AWG (53.5mm ²)	
VFD450C43A		2/0 AWG (67.4mm ²)	
VFD550C43A		3/0 AWG (85mm ²)	
VFD750C43A		300MCM (152mm ²)	
VFD300C23E	4/0 AWG (107mm ²)	3/0 AWG (85mm ²)	
VFD370C23E		4/0 AWG (107mm ²)	
VFD370C43E		1/0 AWG (53.5mm ²)	
VFD450C43E		1/0 AWG (53.5mm ²)	
VFD550C43E		2/0 AWG (67.4mm ²)	
VFD750C43E		4/0 AWG (107mm ²)	

1. UL installations must use 600V, 75°C or 90°C wires. Use copper wire only.
2. Figure 1 shows the terminal specification.
3. Figure 2 shows the specification of insulated heat shrink tubing that comply with UL (600V, YDPU2).

Figure 1



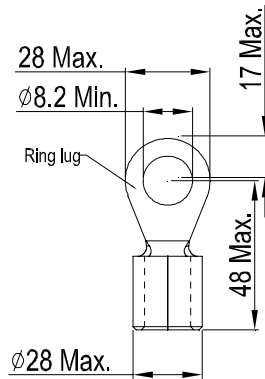


Figure 2

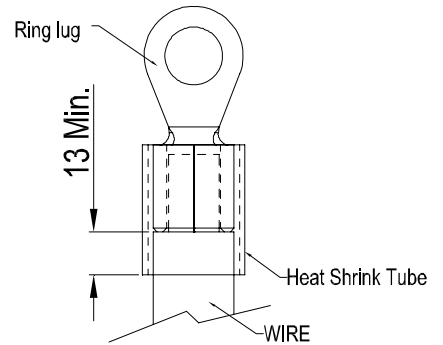

Frame E

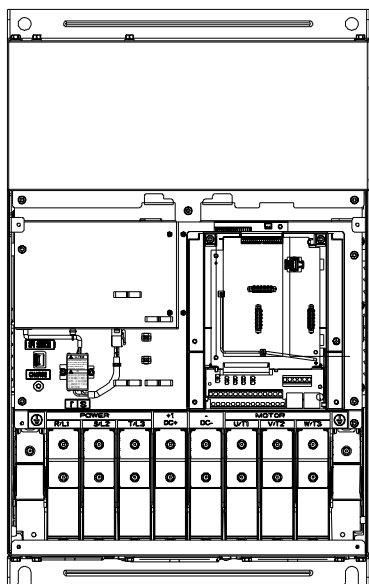

Main circuit terminals:

R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, ⊕, +1/DC+, -/DC-

Models	Max. Wire Gauge	Min. Wire Gauge	Torque (±10%)
VFD450C23A	300MCM*2 (152mm ² *2)	1/0AWG*2 (53.5mm ² *2)	M8 200kg-cm (173 lb-in.) (19.62Nm)
VFD550C23A		3/0AWG*2 (85mm ² *2)	
VFD750C23A		4/0 AWG*2 (107mm ² *2)	
VFD900C43A		1/0AWG*2 (53.5mm ² *2)	
VFD1100C43A		3/0AWG*2 (85mm ² *2)	
VFD450C23E	4/0 AWG*2 (107mm ² *2)	1/0AWG*2 (53.5mm ² *2)	
VFD550C23E		2/0AWG*2 (67.4mm ² *2)	
VFD750C23E		3/0AWG*2 (85mm ² *2)	
VFD900C43E		1/0AWG*2 (53.5mm ² *2)	
VFD1100C43E		2/0AWG*2 (67.4mm ² *2)	

1. UL installations must use 600V, 75°C or 90 °C wires. Use copper wire only.
2. Specification of grounding wire ⊕: 300MCM [152 mm²]
Torque: M8 180kg-cm (156 lb-in.) (17.64Nm) (±10%), as shown in Figure 2.
3. Figure 1 shows the specification for ring lug.
4. Figure 3 shows the specification of insulated heat shrink tubing that comply with UL (600C, YDPU2).

Figure 1

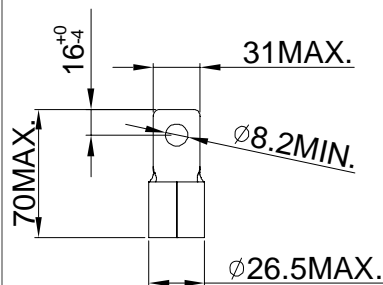


Figure 2 ⊕ E



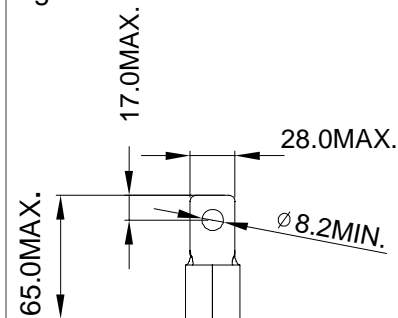


Figure 3

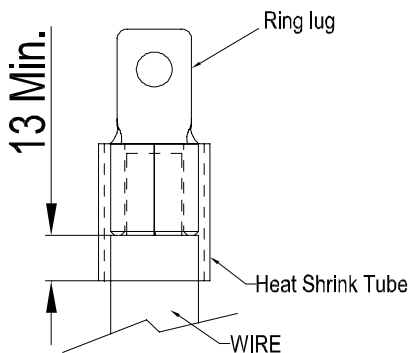

Frame F

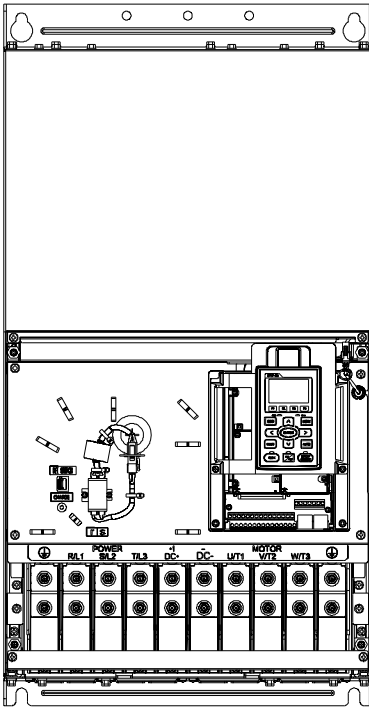

Main circuit terminals:
R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, +1/DC+, -/DC-

Models	Max. Wire Gauge	Min. Wire Gauge	Torque (±10%)
VFD900C23A	300MCM*2 (152mm ² *2)	300MCM*2 (152mm ² *2)	M8 200kg-cm (173 lb-in.) (19.62Nm)
VFD1320C43A		4/0 AWG*2 (107mm ² *2)	
VFD1600C43A		300MCM*2 (152mm ²)	
VFD900C23E	4/0 AWG*2 (107mm ² *2)	4/0 AWG*2 (107mm ² *2)	
VFD1320C43E		3/0AWG*2 (85mm ² *2)	
VFD1600C43E		4/0 AWG*2 (107mm ² *2)	

1. VFD900C23A/E installations must use 90°C wire.
2. For other model, UL installations must use 600V, 75°C or 90°C wire. Use copper wire only.
3. Specification of grounding wire \oplus : 300MCM*2 [152 mm²*2]
Torque: M8 200kg-cm (173 lb-in.) (19.62Nm) (±10%)
5. Figure 1 shows the specification for ring lug.
4. Figure 2 shows the specification of insulated heat shrink tubing that comply with UL (600C, YDPU2).

Figure 1



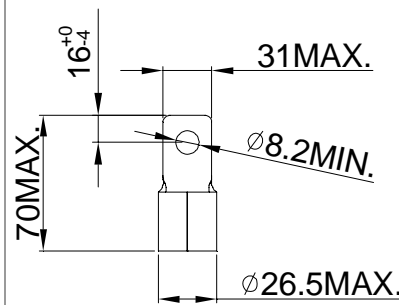


Figure 2

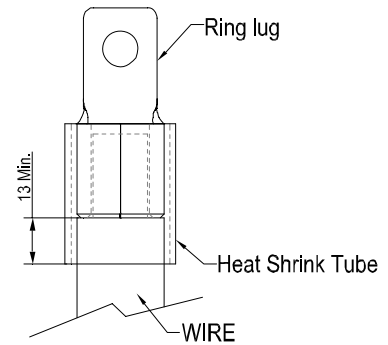

Frame G

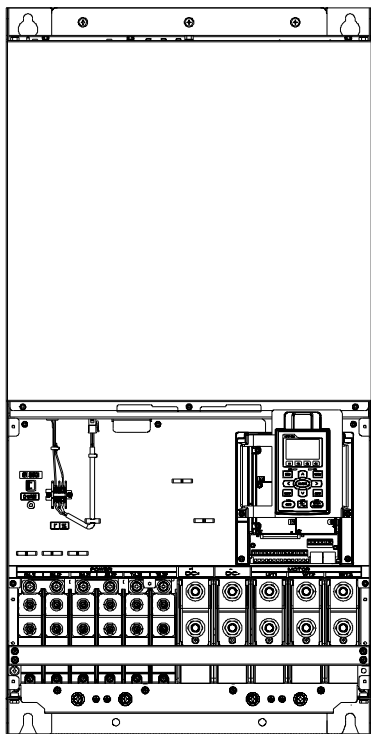

Main circuit terminals:

R/L11, R/L12, S/L21, S/L22, T/L31, T/L32

Models	Max. Wire Gauge	Min. Wire Gauge	Torque (±10%)
VFD1850C43A	300MCM*4 (152mm ² *4)	2/0AWG*4 (67.4mm ² *4)	M8 200kg-cm (173 lb-in.) (19.62Nm)
VFD2200C43A		3/0AWG*4 (85mm ² *4)	
VFD1850C43E		1/0AWG*4 (53.5mm ² *4)	
VFD2200C43E		2/0AWG*4 (67.4mm ² *4)	

Main circuit terminals:

U/T1, V/T2, W/T3, +1/DC+, -/DC-

Models	Max. Wire Gauge	Min. Wire Gauge	Torque (±10%)
VFD1850C43A	500MCM*2 (253mm ² *2)	400MCM*2 (203mm ² *2)	M12 408kg-cm (354lb-in.) (40Nm)
VFD2200C43A		500MCM*2 (253mm ² *2)	
VFD1850C43E		300MCM*2 (152mm ² *2)	
VFD2200C43E		400MCM*2 (203mm ² *2)	

1. UL installations must use 600V, 75°C or 90°C wire. Use copper wire only.
2. Use 600V, 90°C wire for VFD2200C43A when the surrounding temperature is over 45°C.
3. Figure 1 and Figure 2 show the specification for using ring lug.
4. Specification for grounding wire (⊕): 300MCM*4 [152 mm²*2]
Torque: M8 180kg-cm (156 lb-in.) (17.64Nm) (±10%), as shown in Figure 1
5. Figure 3 and Figure 4 shows the specification of insulated heat shrink tubing that comply with UL (600C, YDPU2).

Figure 1
R/L11, R/L12, S/L21, S/L22,
T/L31, T/L32,

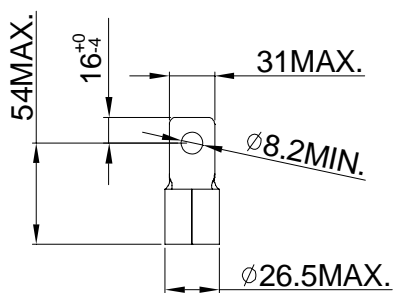


Figure2
U/T1, V/T2, W/T3, +1/DC+, -/DC-

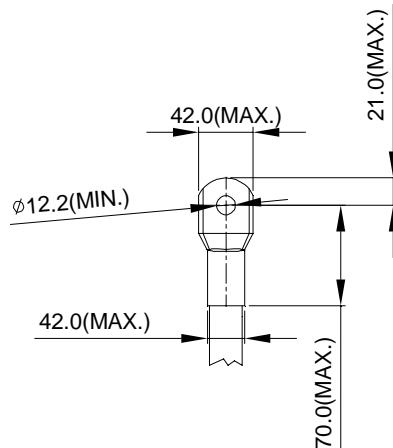


Figure 3



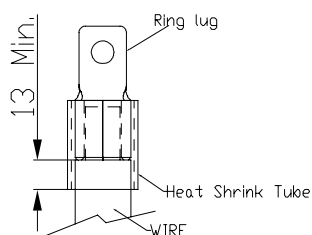


Figure 4

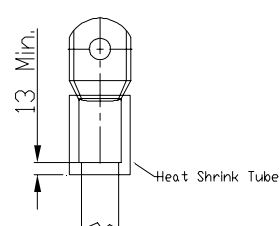

Frame H

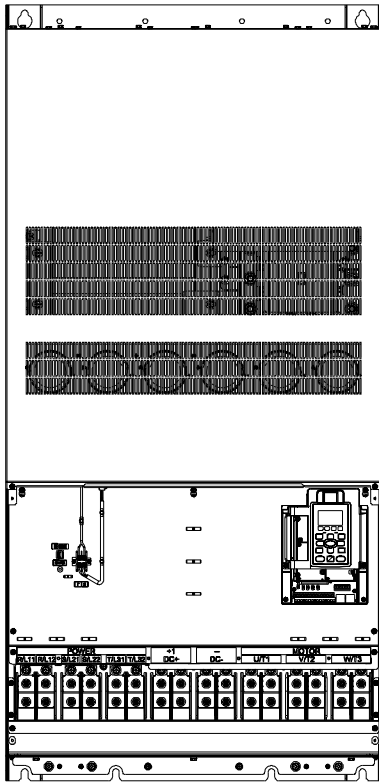

Main circuit terminals:

R/11,R12,S/21,S/22,T/31,T/32, U/T1,V/T2, W/T3, +1/DC+, -/DC-

Models	Max. Wire Gauge	Min. Wire Gauge	Torque (±10%)
VFD2800C43A	300MCM*4 (152mm ² *4)	4/0 AWG*4 (107mm ² *4)	M8 200kg-cm (173 lb-in.) (19.62Nm)
VFD3150C43A		300MCM*4 (152mm ² *4)	
VFD3550C43A		300MCM*4 (152mm ² *4)	
VFD2800C43E-1		3/0 AWG*4 (85mm ² *4)	
VFD3150C43E-1		4/0 AWG*4 (107mm ² *4)	
VFD3550C43E-1		250MCM*4 (127mm ² *4)	
VFD2800C43E		3/0 AWG*4 (85mm ² *4)	
VFD3150C43E		4/0 AWG*4 (107mm ² *4)	
VFD3550C43E		250MCM*4 (127mm ² *4)	

1. UL installations must use 600V, 75°C or 90°C wire. Use copper wire only.
2. Figure 1 shows the specification for using the ring lug.
3. Specification of grounding wire (⊕): 300MCM*4 [152 mm²*4], Torque: M8 180kg-cm (156 lb-in.) (17.64Nm) (±10%), as shown in figure 1.
4. Figure 2 shows the specification of heat shrink tubing that comply with UL (600C, YDPU2).

Figure 1


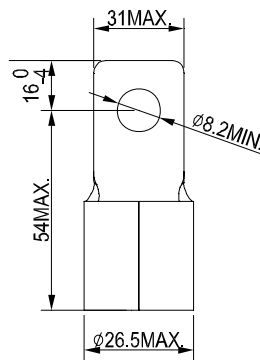


Figure 2

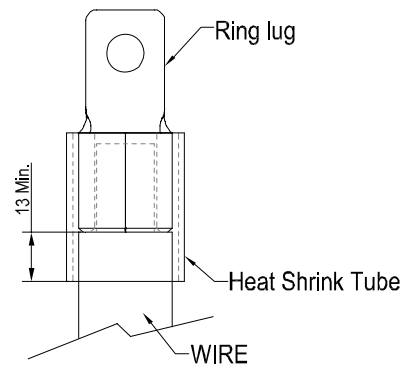

Chapter 6 Control Terminals

Please remove the top cover before wiring the multi-function input and output terminals,


The drive appearances shown in the figures are for reference only, a real drive may look different.

Remove the cover for wiring. Frame A~H

Frame A&B


Loosen the screws and press the tabs on both sides to remove the cover.

Screw torque: 12~15Kg-cm [10.4~13lb-in.]

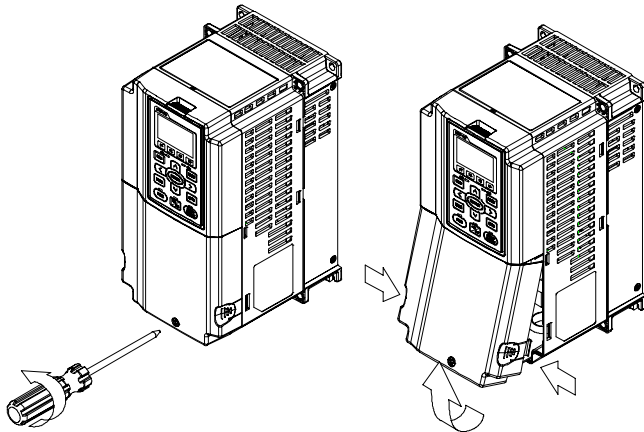


Frame C&D

Screw torque: 12~15Kg-cm [10.4~13lb-in.]

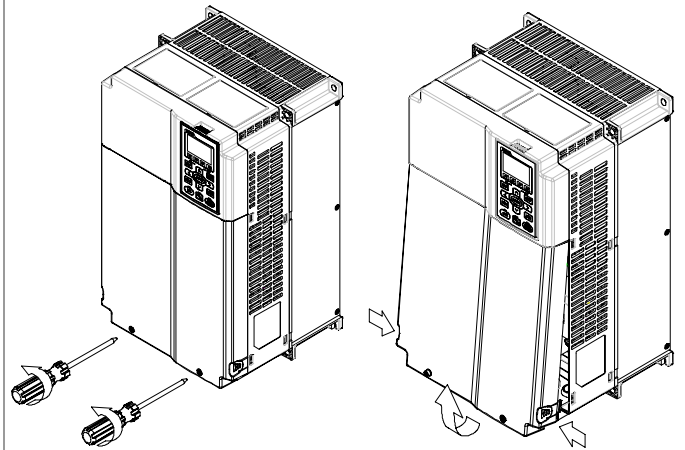


Frame E

Screw torque: 12~15Kg-cm [10.4~13lb-in.] To remove the cover, lift it slightly and pull outward.

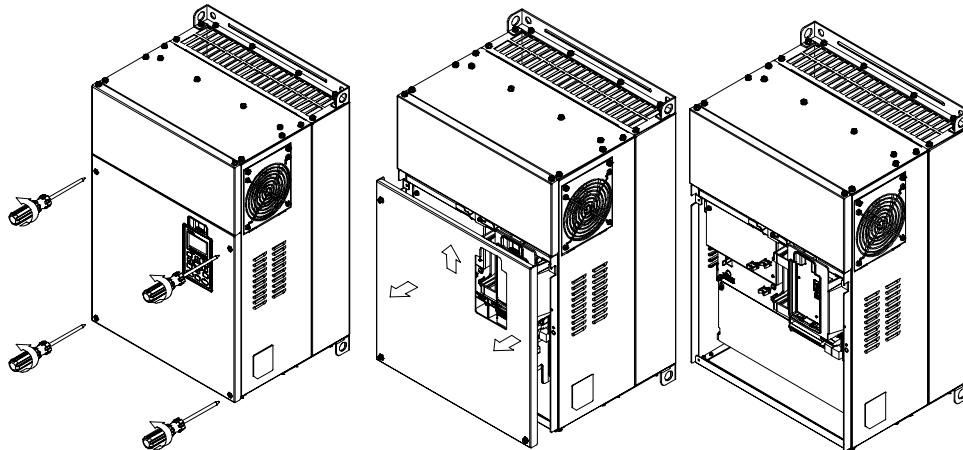


Frame F

Screw torque: 12~15Kg-cm [10.4~13lb-in.] To remove the cover, lift it slightly and pull outward

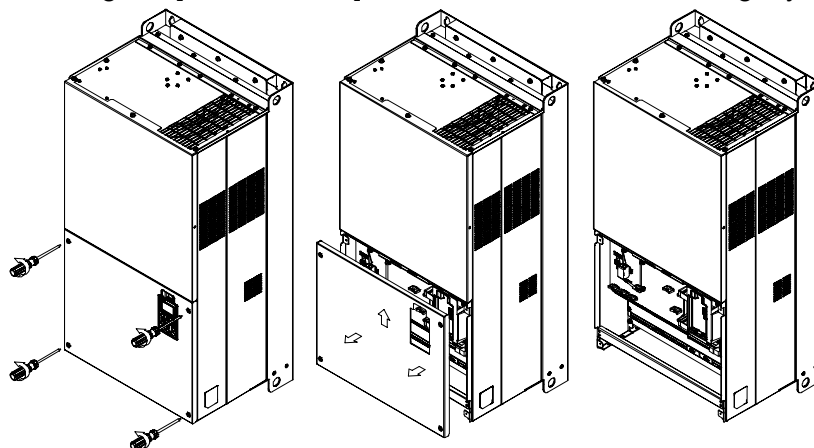



Frame G

Screw torque: 12~15Kg-cm [10.4~13lb-in.] To remove the cover, lift it slightly and pull outward

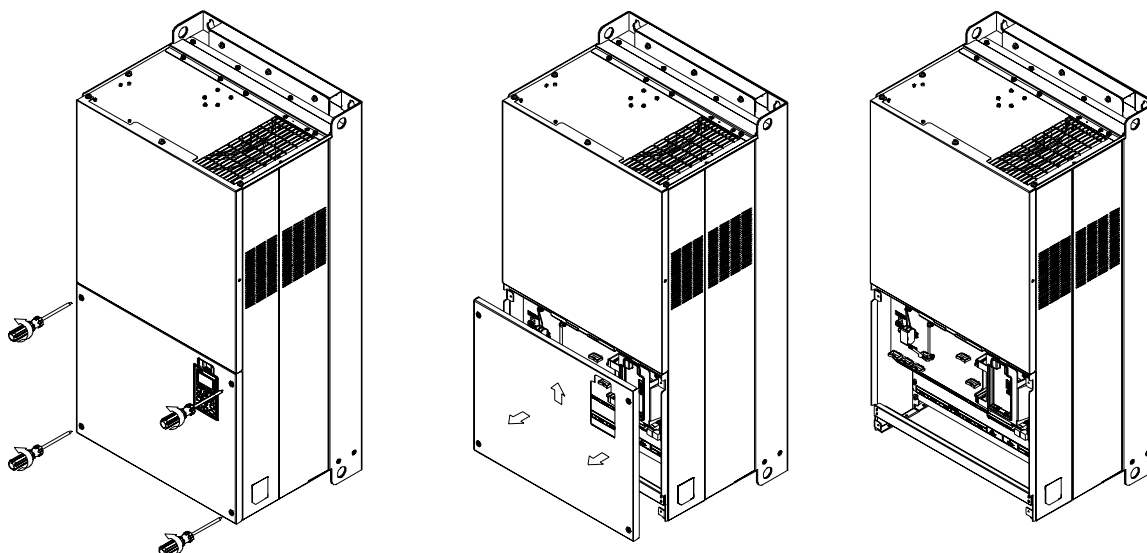

Frame H

Screw torque: 14~16Kg-cm [12.15~13.89lb-in.] To remove the cover, lift it slightly and pull outward

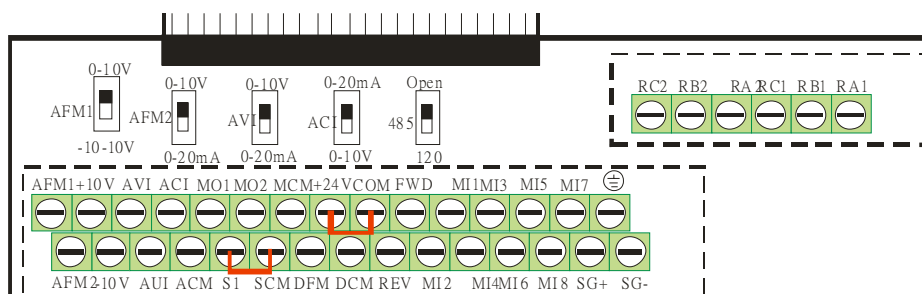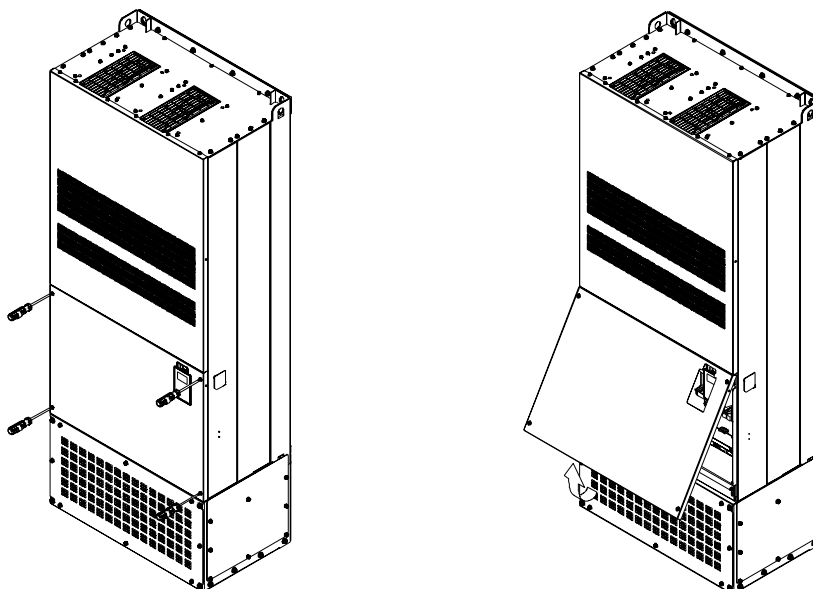



Removable Terminal Block





Specifications of Control Terminal

Wire Gauge: 26~16AWG (0.1281-1.318mm²) ,
 Torque: (A) 5kg-cm [4.31lb-in.] (0.49Nm) (As shown in figure above)
 (B) 8kg-cm [6.94lb-in.] (0.78Nm) (As shown in figure above)

Wiring precautions:

 - Reserves 5mm and properly install the wire into the terminal; fasten the installation by a slotted screwdriver. If the wire is stripped, sort the wire before install into the terminal.
- Flathead screwdriver: blade width 3.5mm, tip thickness 0.6mm
- In the figure above, the factory setting for S1-SCM is short circuit. The factory setting for +24V-COM is short circuit and SINK mode (NPN); please refer to Chapter 4 Wiring for more detail.

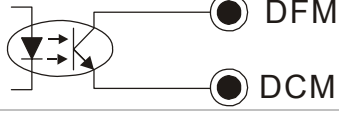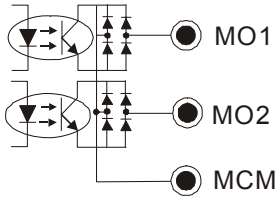
Terminals	Terminal Function	Factory Setting (NPN mode)
+24V	Digital control signal common (Source)	+24V±5% 200mA
COM	Digital control signal common (Sink)	Common for multi-function input terminals
FWD	Forward-Stop command	FWD-DCM: ON→ forward running OFF→ deceleration to stop
REV	Reverse-Stop command	REV-DCM: ON→ reverse running OFF→ deceleration to stop
MI1 ~ MI8	Multi-function input 1~8	Refer to parameters 02-01~02-08 to program the multi-function inputs MI1~MI8. ON: the activation current is $6.5\text{mA} \geq 11\text{Vdc}$ OFF: leakage current tolerance is $10\mu\text{A} \leq 11\text{Vdc}$
DFM	Digital frequency meter 	Regard the pulse voltage as the output monitor signal Duty-cycle: 50% Min. load impedance: 1kΩ/100pf Max. current: 30mA Max. voltage: 30Vdc
DCM	Digital frequency signal common	
MO1	Multi-function Output 1 (photocoupler)	The AC motor drive releases various monitor signals, such as drive in operation, frequency attained and overload indication, via transistor (open collector).
MO2	Multi-function Output 2 (photocoupler)	
MCM	Multi-function Output Common	Max 48Vdc 50mA
RA1	Multi-function relay output 1 (N.O.) a	Resistive Load: 5A(N.O.)/3A(N.C.) 250VAC
RB1	Multi-function relay output 1 (N.C.) b	5A(N.O.)/3A(N.C.) 30VDC
RC1	Multi-function relay common	Inductive Load (COS 0.4): 2.0A(N.O.)/1.2A(N.C.) 250VAC
RA2	Multi-function relay output 2 (N.O.) a	2.0A(N.O.)/1.2A(N.C.) 30VDC
RB2	Multi-function relay output 2 (N.C.) b	It is used to output each monitor signal, such as drive is in operation, frequency attained or overload indication.
RC2	Multi-function relay common	
+10V	Potentiometer power supply	Analog frequency setting: +10Vdc 20mA

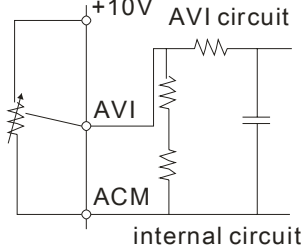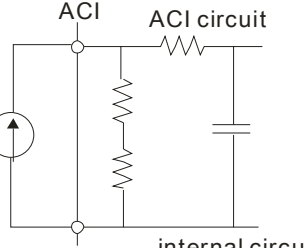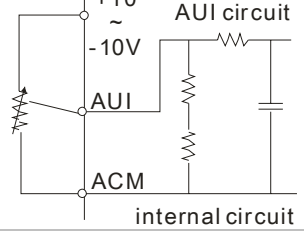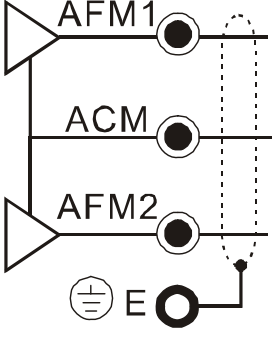Terminals	Terminal Function	Factory Setting (NPN mode)
-10V	Potentiometer power supply	Analog frequency setting: -10Vdc 20mA
AVI	Analog voltage input 	Impedance: 20kΩ Range: 4 ~ 20mA/0~10V =0~Max. Output Frequency (Pr.01-00) AVI switch, factory setting is 0~10V
ACI	Analog current input 	Impedance: 250Ω Range: 4 ~ 20mA/0~10V= 0 ~ Max. Output Frequency (Pr.01-00) ACI Switch, factory setting is 4~20mA
AUI	Auxiliary analog voltage input 	Impedance: 20kΩ Range: -10~+10VDC=0 ~ Max. Output Frequency(Pr.01-00)
AFM1		0~10V impedance 100kΩ (voltage output) -10~10V impedance 100kΩ (voltage output) Output current: 2mA max Resolution: 0~10V corresponds to Max. operation frequency Range: 0~10V → -10~+10V AFM Switch, factory setting is 0~10V
AFM2		0~10V impedance 100kΩ (voltage output) 0~20mA impedance100Ω (current output) Output current: 20mA max Resolution: 0~10V corresponds to Max. operation frequency Range: 0~10V → 4~20mA AFM Switch, factory setting is 0~10V
ACM	Analog Signal Common	Common for analog terminals
S1	Power removal safety function for EN954-1 and IEC/EN61508	
SCM		
SG+	Modbus RS-485	
SG-	PIN 1,2,7,8 :Reserved	PIN 3, 6: GND
	PIN 4: SG-	PIN 5: SG+

NOTE: Wire size of analog control signals: 18 AWG (0.75 mm²) with shielded wire

Analog input terminals (AVI, ACI, AUI, ACM)

- ☑ Analog input signals are easily affected by external noise. Use shielded wiring and keep it as short as possible (<20m) with proper grounding. If the noise is inductive, connecting the shield to terminal ACM can bring improvement.
- ☑ If the analog input signals are affected by noise from the AC motor drive, please connect a capacitor and ferrite core as indicated in the following diagram.

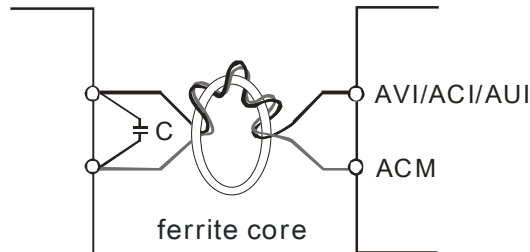

Wind each wires 3 times or more around the core

Digital inputs (FWD, REV, MI1~MI8, COM)


- ☑ When using contacts or switches to control the digital inputs, please use high quality components to avoid contact bounce.

Transistor outputs (MO1, MO2, MCM)


- ☑ Make sure to connect the digital outputs to the right polarity.
- ☑ When connecting a relay to the digital outputs connect a surge absorber across the coil and check the polarity.

Remove the Terminal Block

1. Loosen the screws by screwdriver. (As shown in figure below).

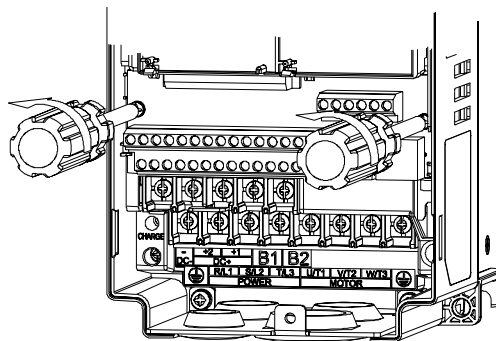

2. Remove the control board by pulling it out for a distance 6~8 cm (as 1 in the figure) then lift the control board upward (as 2 in the figure).

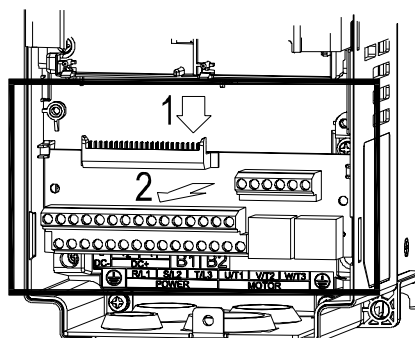

Chapter 7 Optional Accessories

The optional accessories listed in this chapter are available upon request. Installing additional accessories to your drive would substantially improve the drive's performance. Please select an applicable accessory according to your need or contact the local distributor for suggestion.

- All Brake Resistors and Brake Units Used in AC Motor Drives
- Non-fuse Circuit Breaker
- Fuse (Specification Chart)
- AC Reactor
- Zero Phase Reactor
- DC Reactor
- EMI Filter
- Digital Keypad
- Panel Mounting
- Conduit Box Kit
- Fan Kit
- Flange Mounting Kit
- USB/RS-485 Communication Interface IFD6530

All Brake Resistors and Brake Units Used in AC Motor Drives

230V

Applicable Motor		*1 125%Braking Torque 10%ED					*2 Max. Brake Torque			
HP	kW	Braking Torque (kg-m)	Brake Unit *4VFDB	*3Braking Resistor series for each Brake Unit	Resistor value spec. for each AC motor Drive	Total Braking Current (A)	Min. Resistor Value (Ω)	Max. Total Braking Current (A)	Peak Power (kW)	
										1
2	1.5	1.0	-	BR200W091*1	200W91Ω	4.2	47.5	8	3.0	
3	2.2	1.5	-	BR300W070*1	300W70Ω	5.4	38.0	10	3.8	
5	3.7	2.5	-	BR400W040*1	400W40Ω	9.5	19.0	20	7.6	
7.5	5.5	3.7	-	BR1K0W020*1	1000W20Ω	19	14.6	26	9.9	
10	7.5	5.1	-	BR1K0W020*1	1000W20Ω	19	14.6	26	9.9	
15	11	7.5	-	BR1K5W013*1	1500W13Ω	29	13.6	28	10.6	
20	15	10.2	-	BR1K0W4P3*2	2 series	2000W8.6Ω	44	8.3	46	17.5
25	18	12.2	-	BR1K0W4P3*2	2 series	2000W8.6Ω	44	8.3	46	17.5
30	22	14.9	-	BR1K5W3P3*2	2 series	3000W6.6Ω	58	5.8	66	25.1
40	30	20.3	2015*2	BR1K0W5P1*2	2 series	4000W5.1Ω	75	4.8	80	30.4
50	37	25.1	2022*2	BR1K2W3P9*2	2 series	4800W3.9Ω	97	3.2	120	45.6
60	45	30.5	2022*2	BR1K5W3P3*2	2 series	6000W3.3Ω	118	3.2	120	45.6
75	55	37.2	2022*3	BR1K2W3P9*2	2 series	7200W2.6Ω	145	2.1	180	68.4
100	75	50.8	2022*4	BR1K2W3P9*2	2 series	9600W2Ω	190	1.6	240	91.2
125	90	60.9	2022*4	BR1K5W3P3*2	2 series	12000W1.65Ω	230	1.6	240	91.2

460V

Applicable Motor		*1 125%Braking Torque 10%ED					*2 Max. Brake Torque			
HP	kW	Braking Torque (kg-m)	Brake Unit *4VFDB	*3Braking Resistor series for each Brake Unit	Resistor value spec. for each AC motor Drive	Total Braking Current (A)	Min. Resistor Value (Ω)	Max. Total Braking Current (A)	Peak Power (kW)	
										1
2	1.5	1.0	-	BR200W360*1	200W360Ω	2.1	126.7	6	4.6	
3	2.2	1.5	-	BR300W250*1	300W250Ω	3	108.6	7	5.3	
5	3.7	2.5	-	BR400W150*1	400W150Ω	5.1	84.4	9	6.8	
5.5	4.0	2.7	-	BR1K0W075*1	1000W75Ω	10.2	54.3	14	10.6	
7.5	5.5	3.7	-	BR1K0W075*1	1000W75Ω	10.2	47.5	16	12.2	
10	7.5	5.1	-	BR1K0W075*1	1000W75Ω	10.2	47.5	16	12.2	
15	11	7.5	-	BR1K5W043*1	1500W43Ω	17.6	42.2	18	13.7	
20	15	10.2	-	BR1K0W016*2	2 series	2000W32Ω	24	26.2	29	22.0
25	18	12.2	-	BR1K0W016*2	2 series	2000W32Ω	24	23.0	33	25.1
30	22	14.9	-	BR1K5W013*2	2 series	3000W26Ω	29	23.0	33	25.1
40	30	20.3	-	BR1K0W016*4	2 parallel, 2 series	4000W16Ω	47.5	14.1	54	41.0
50	40	25.1	4045*1	BR1K2W015*4	2 parallel, 2 series	4800W15Ω	50	12.7	60	45.6
60	45	30.5	4045*1	BR1K5W013*4	2 parallel, 2 series	6000W13Ω	59	12.7	60	45.6
75	55	37.2	4030*2	BR1K0W5P1*4	4 parallel	8000W10.2Ω	76	9.5	80	60.8
100	75	50.8	4045*2	BR1K2W015*4	2 parallel, 2 series	9600W7.5Ω	100	6.3	120	91.2
125	90	60.9	4045*2	BR1K5W013*4	2 parallel, 2 series	12000W6.5Ω	117	6.3	120	91.2
150	110	74.5	4110*1	BR1K2W015*10	5 parallel, 2 series	12000W6Ω	126	6.0	126	95.8
175	132	89.4	4160*1	BR1K5W012*12	6 parallel, 2 series	18000W4Ω	190	4.0	190	144.4


460V

Applicable Motor		*1 125%Braking Torque 10%ED					*2 Max. Brake Torque			
HP	kW	Braking Torque (kg-m)	Brake Unit	*3Braking Resistor series for each Brake Unit		Resistor value spec. for each AC motor Drive	Total Braking Current (A)	Min. Resistor Value (Ω)	Max. Total Braking Current (A)	Peak Power (kW)
215	160	108.3	4160*1	BR1K5W012*12	6 parallel, 2 series	18000W4Ω	190	4.0	190	144.4
250	185	125.3	4185*1	BR1K5W012*14	7 parallel, 2 series	21000W3.4Ω	225	3.4	225	172.1
300	220	148.9	4110*2	BR1K2W015*10	5 parallel, 2 series	24000W3Ω	252	3.0	252	190.5
375	280	189.6	4160*2	BR1K5W012*12	6 parallel, 2 series	36000W2Ω	380	2.0	380	288.8
425	315	213.3	4160*2	BR1K5W012*12	6 parallel, 2 series	36000W2Ω	380	2.0	380	288.8
475	355	240.3	4185*2	BR1K5W012*14	7 parallel, 2 series	42000W1.7Ω	450	1.7	450	344.2


- *1 Calculation for 125% brake torque: (kw)*125%*0.8; where 0.8 is motor efficiency. Because there is a resistor limit of power consumption, the longest operation time for 10%ED is 10sec (on: 10sec/ off: 90sec).
- *2 Please refer to the Brake Performance Curve for "Operation Duration & ED" vs. "Braking Current".
- *3 For heat dissipation, a resistor of 400W or lower should be fixed to the frame and maintain the surface temperature below 50°C; a resistor of 1000W and above should maintain the surface temperature below 350°C.
- *4 Please refer to VFDB series Braking Module Instruction for more detail on braking resistor.

NOTE

1. Definition for Brake Usage ED%
 Explanation: The definition of the brake usage ED (%) is for assurance of enough time for the brake unit and brake resistor to dissipate away heat generated by braking. When the brake resistor heats up, the resistance would increase with temperature, and brake torque would decrease accordingly. Recommended cycle time is one minute.

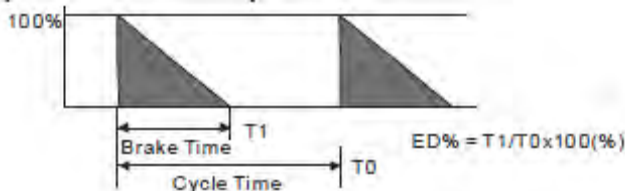


For safety concern, install an overload relay (O.L.) between the brake unit and the brake resistor in conjunction with the magnetic contactor (MC) prior to the drive for abnormal protection. The purpose of installing the thermal overload relay is to protect the brake resistor from damage due to frequent brake, or due to brake unit keeping operating resulted from unusual high input voltage. Under such circumstance, just turn off the power to prevent damaging the brake resistor.

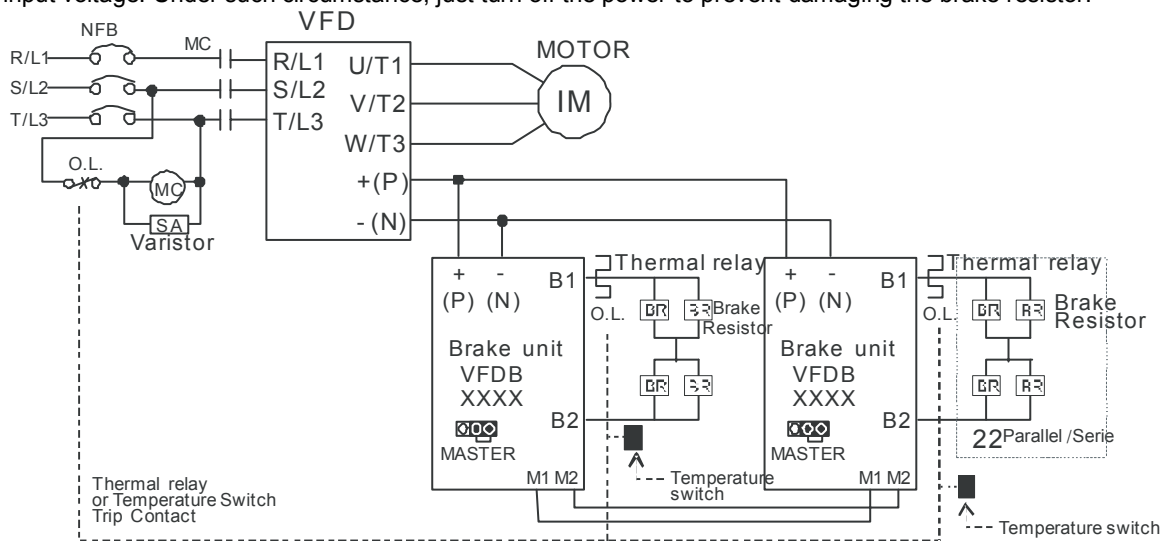

- When AC Drive is equipped with a DC reactor, please read user manual to know the wiring method of input circuit of brake unit +(P).
- Do Not connect input circuit -(N) to the neutral point of the power system.

2. If damage to the drive or other equipment is due to the fact that the brake resistors and brake modules in use are not provided by Delta, the warranty will be void.
3. Take into consideration the safety of the environment when installing the brake resistors. If the minimum resistance value is to be utilized, consult local dealers for the calculation of Watt figures.
4. When using more than 2 brake units, equivalent resistor value of parallel brake unit can't be less than the value in the column "Minimum Equivalent Resistor Value for Each AC Drive" (the right-most column in the table). Please read the wiring information in the user manual of brake unit thoroughly prior to operation
5. This chart is for normal usage; if the AC motor drive is applied for frequent braking, it is suggested to enlarge 2~3 times of the Watts.
6. Thermal Relay:

Thermal relay selection is basing on its overload capability. A standard braking capacity for C2000 is 10%ED (Tripping time=10s). The figure below is an example of 406V, 110kw AC motor drive. It requires the thermal relay to take 260% overload capacity in 10s (Host starting) and the braking current is 126A. In this case, user should select a rated 50A thermal relay. The property of each thermal relay may vary among different manufacturer, please carefully read specification.

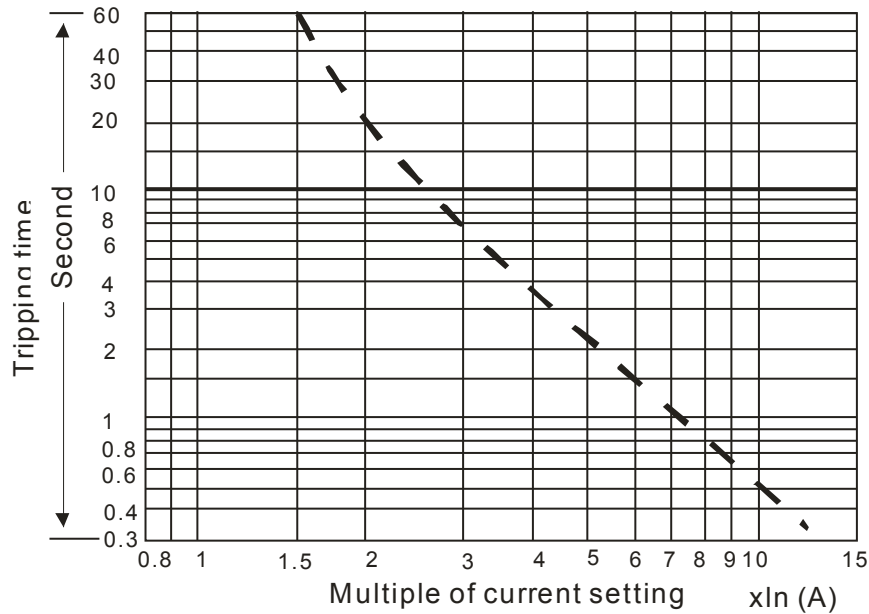

Non-fuse Circuit Breaker

Comply with UL standard: Per UL 508, paragraph 45.8.4, part a,

The rated current of the breaker shall be 2~4 times of the maximum rated input current of AC motor drive.

3-phase 230V	
Model	Recommended non-fuse breaker (A)
VFD007C23A	15
VFD015C23A	20
VFD022C23A	30
VFD037C23A	40
VFD055C23A	50
VFD075C23A	60
VFD110C23A	100
VFD150C23A	125
VFD185C23A	150
VFD220C23A	200
VFD300C23A/E	225
VFD370C23A/E	250
VFD450C23A/E	300
VFD550C23A/E	400
VFD750C23A/E	450
VFD900C23A/E	600

3-phase 460V	
Model	Recommended non-fuse breaker(A)
VFD007C43A/E	5
VFD015C43A/E	10
VFD022C43A/E	15
VFD040C43A/E	20
VFD037C43A/E	20
VFD055C43A/E	30
VFD075C43A/E	40
VFD110C43A/E	50
VFD150C43A/E	60
VFD185C43A/E	75
VFD220C43A/E	100
VFD300C43A/E	125
VFD370C43A/E	150
VFD450C43A/E	175
VFD550C43A/E	250
VFD750C43A/E	300
VFD900C43A/E	300
VFD1100C43A/E	400
VFD1320C43A/E	500
VFD1600C43A/E	600
VFD1850C43A/E	600
VFD2200C43A/E	800
VFD2800C43A/E	1000
VFD3150C43A/E	1200
VFD3550C43A/E	1350

Fuse Specification Chart

- Use only the fuses comply with UL certificated.
- Use only the fuses comply with local regulations.

230V Model	Input Current I(A)		Line Fuse	
	Heavy Duty	Normal Duty	I (A)	Bussmann P/N
VFD007C23A	6.1	6.4	15	JJN-15
VFD015C23A	11	12	20	JJN-20
VFD022C23A	15	16	30	JJN-30
VFD037C23A	18.5	20	80	JJN-80
VFD055C23A	26	28	50	JJN-50
VFD075C23A	34	36	60	JJN-60
VFD110C23A	50	52	175	JJN-175
VFD150C23A	68	72	125	JJN-125
VFD185C23A	78	83	150	JJN-150
VFD220C23A	95	99	350	JJN-350
VFD300C23A/E	118	124	225	JJN-225
VFD370C23A/E	136	143	500	DLS-R-500
VFD450C23A/E	162	171	300	JJN-300
VFD550C23A/E	196	206	400	JJN-400
VFD750C23A/E	233	245	1000	JJN-1000
VFD007C23A	6.1	6.4	15	JJN-15

460V Model	Input Current I(A)		Line Fuse	
	Heavy Duty	Normal Duty	I (A)	Bussmann P/N
VFD007C43A/E	4.1	4.3	10	JJS-10
VFD015C43A/E	5.6	5.9	10	JJS-10
VFD022C43A/E	8.3	8.7	15	JJS-15
VFD037C43A/E	13	14	20	JJS-20
VFD040C43A/E	14.5	15.5	20	JJS-20
VFD055C43A/E	16	17	45	JJS-45
VFD075C43A/E	19	20	40	JJS-40
VFD110C43A/E	25	26	50	JJS-50
VFD150C43A/E	33	35	125	JJS-125
VFD185C43A/E	38	40	75	JJS-75
VFD220C43A/E	45	47	100	JJS-100
VFD300C43A/E	60	63	200	JJS-200
VFD370C43A/E	70	74	150	JJS-150
VFD450C43A/E	96	101	175	JJS-175
VFD550C43A/E	108	114	250	JJS-250
VFD750C43A/E	149	157	600	DLS-R-600
VFD900C43A/E	159	167	300	JJS-300
VFD1100C43A/E	197	207	800	JJS-800
VFD1320C43A/E	228	240	500	JJS-500
VFD1600C43A/E	285	300	600	JJS-600
VFD1850C43A/E	361	380	600	JJS-600
VFD2200C43A/E	380	400	800	JJS-800
VFD2800C43A/E	469	494	1000	KTU-1000
VFD3150C43A/E	527	555	1200	KTU-1200
VFD3550C43A/E	594	625	1350	KTU-1350

AC Reactor

When the AC Motor Drive is connected directly to a large-capacity power transformer (600kVA or above) or when a phase lead capacitor is switched, excess peak currents may occur in the power input circuit due to the load changes and the converter section may be damaged. To avoid this, it is recommend to use a serial connected AC input reactor(6%) at the AC Motor Drive mains input side to reduce the current and improve the input power efficiency.

230V, 50/60Hz, 3-phase

kW	HP	Rated Amps of AC Reactor	Max. continuous Amps	Inductance (mh)	
				3% impedance	5% impedance
0.75	1	4	6	3	6.5
1.5	2	8	12	1.5	3
2.2	3	12	18	1.25	2.5
3.7	5	18	27	0.8	1.5
5.5	7.5	25	37.5	0.5	1.2
7.5	10	35	52.5	0.4	0.8
11	15	45	67.5	0.3	0.7
15	20	55	82.5	0.25	0.5
18.5	25	80	120	0.2	0.4
22	30	100	150	0.15	0.3
30	40	130	195	0.1	0.2
37	50	160	240	0.075	0.15
45	60	200	300	0.055	0.110
55	75	250	375	0.090	0.150
75	100	320	480	0.040	0.075
90	125	400	600	0.03	0.006

460V, 50/60Hz, 3-phase

kW	HP	Rated Amps of AC Reactor	Max. continuous Amps	Inductance (mh)	
				3% impedance	5% impedance
0.75	1	4	6	9	12
1.5	2	4	6	6.5	9
2.2	3	8	12	5	7.5
3.7	5	12	18	2.5	4.2
4	5	12	18	2.5	4.2
5.5	7.5	18	27	1.5	2.5
7.5	10	18	27	1.5	2.5
11	15	25	37.5	1.2	2
15	20	35	52.5	0.8	1.2
18.5	25	45	67.5	0.7	1.2
22	30	45	67.5	0.7	1.2
30	40	80	120	0.4	0.7
37	50	80	120	0.4	0.7
45	60	100	150	0.3	0.45
55	75	130	195	0.2	0.3
75	100	160	240	0.15	0.23
90	125	200	300	0.110	0.185
110	150	250	375	0.090	0.150
132	175	320	480	0.075	0.125
160	215	400	600	0.03	0.06
185	250	400	600	0.03	0.06
220	300	500	750	0.025	0.05
280	375	600	900	0.02	0.04
315	425	750	1125	0.029	0.048
355	475	750	1125	0.029	0.048

Applications for AC Reactor


Connected in input circuit

Application 1

When more than one AC motor drive is connected to the same mains power, and one of them is ON during operation.

Problem: When applying power to one of the AC motor drive, the charge current of the capacitors may cause voltage dip. The AC motor drive may be damaged when over current occurs during operation.

Correct wiring:

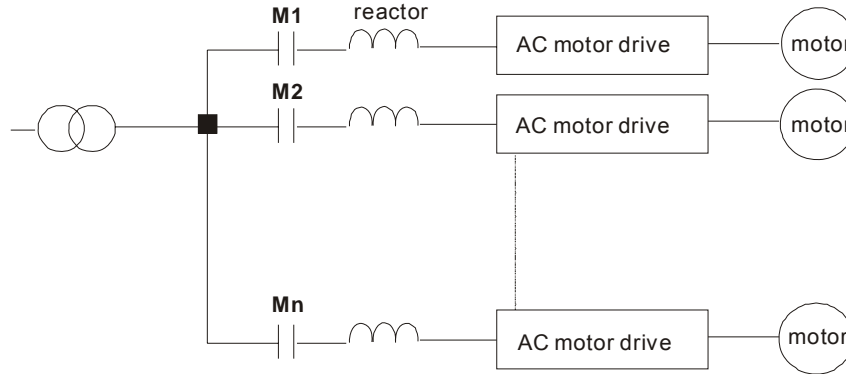


Application 2

Silicon rectifier and AC motor drive are connected to the same power.

Problem: Switching spikes will be generated when the silicon rectifier switches ON/OFF. These spikes may damage the mains circuit.

Correct wiring:

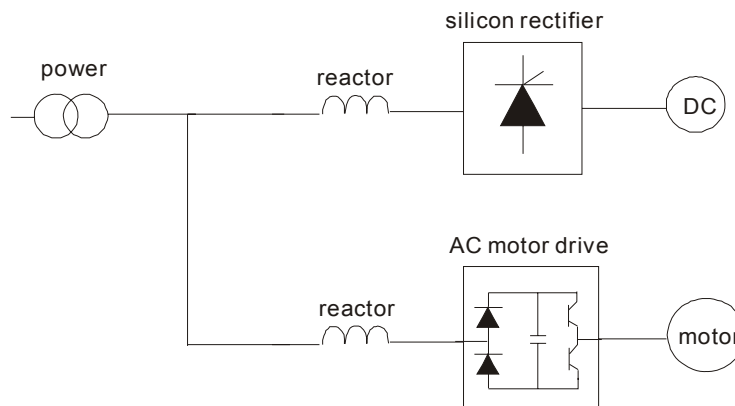

Application 3

When the power supply capacity exceeds 10 times of the inverter capacity.

Problem: When the mains power capacity is too large, line impedance will be small and the charge current will be too high. This may damage AC motor drive due to higher rectifier temperature.



Correct wiring



Zero Phase Reactors

RF220X00A


UNIT: mm (inch)

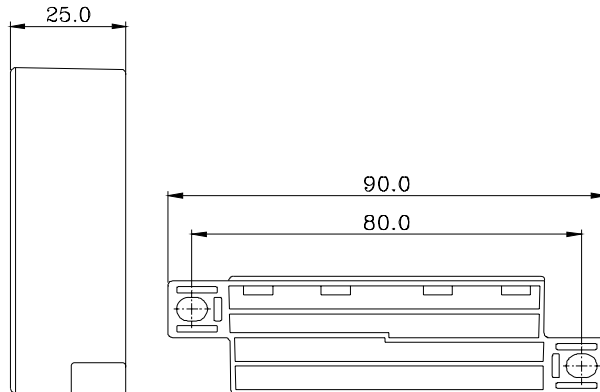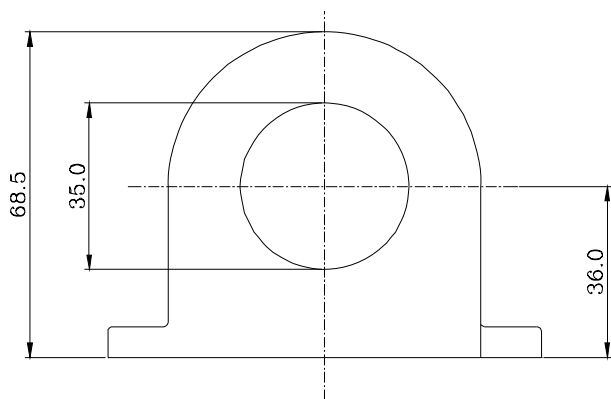

Cable type (Note)	Recommended Wire Size (mm ²)			Qty.	Wiring Method
	AWG	mm ²	Nominal (mm ²)		
Single-core	≤10	≤5.3	≤5.5	1	Diagram A
	≤2	≤33.6	≤38	4	Diagram B
Three-core	≤12	≤3.3	≤3.5	1	Diagram A
	≤1	≤42.4	≤50	4	Diagram B

Diagram A

Wind each wire around the core for 4 times. The reactor must be placed at the AC motor drive output side as close as possible.

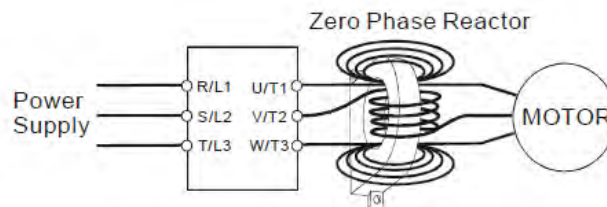


NOTE

600V insulated cable wire

1. The table above gives approximate wire size for the zero phase reactors but the selection is ultimately governed by the type and the diameter of the cable, i.e. the cable diameter must small enough to go through the center of the zero phase reactor.
2. When wiring, do not goes through the earth core. It only needs to pass through the motor cable or the power cable.
3. When a long motor cable for output is used, a zero phase reactor may be necessary to reduce the radiated emission.

Diagram B

Put the wires/cables through the middle of the 4 cores that lines in parallel.

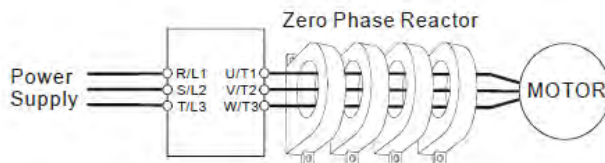

DC Reactor

230V DC Choke

Input Voltage	kW	HP	DC Amps	Inductance (mh)
230Vac 50/60Hz 3-Phase	0.75	1	9.4	3.43
	1.5	2	18	1.83
	2.2	3	24	1.37
	3.7	5	30	1.1
	5.5	7.5	42	0.78
	7.5	10	53	0.61
	11	15	76	0.42
	15	20	106	0.31
	18.5	25	122	0.26
	22	30	145	0.22

460V DC Choke

Input Voltage	kW	HP	DC Amps	Inductance (mh)
460Vac 50/60Hz 3-Phase	0.75	1	6	9.77
	1.5	2	9	7.12
	2.2	3	13	4.83
	3.7	5	23	2.7
	5.5	7.5	25	2.47
	7.5	10	30	2.1
	11	15	38	1.62
	15	20	52	1.2
	18.5	25	60	1.05
	22	30	70	0.89
	30	40	93	0.67

EMI Filter

Model	Applicable EMI Filter	Reference Website
VFD007C23A; VFD015C23A; VFD022C23A; VFD037C23A;	KMF325A	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_mains_filters_high_performance/ KMF325A Three Phase Industrial Mains Filters - High Performance 25 Amps
VFD055C23A; VFD075C23A; VFD110C23A;	KMF370A	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_mains_filters_high_performance/ KMF370A Three Phase Industrial Mains Filters - High Performance 70 Amps
VFD150C23A; VFD185C23A; VFD220C23A;	KMF3100A	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_mains_filters_high_performance/ KMF3100A Three Phase Industrial Mains Filters - High Performance 100 Amps
VFD300C23A; VFD370C23A;	MIF3150	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_multi_stage_drive_filters/ MIF3150 Three Phase Industrial Multi Stage Drive Filters - Very High Performance 150 Amps
VFD450C23A; VFD550C23A; VFD750C23A; VFD900C23A;	MIF3400B	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_multi_stage_drive_filters/ MIF3400 Three Phase Industrial Drive Filters - Very High Performance 340 Amps
VFD007C43A; VFD015C43A; VFD022C43A; VFD037C43A; VFD040C43A; VFD055C43A;	KMF318A	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_mains_filters_high_performance/ KMF318A Three Phase Industrial Mains Filters - High Performance 18 Amps
VFD075C43A; VFD110C43A; VFD150C43A;	KMF350A	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_mains_filters_high_performance/ KMF350A Three Phase Industrial Mains Filters - High Performance 50 Amps
VFD185C43A; VFD220C43A; VFD300C43A;	KMF370A	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_mains_filters_high_performance/ KMF370A Three Phase Industrial Mains Filters - High Performance 70 Amps
VFD370C43A; VFD450C43A; VFD550C43A; VFD750C43A;	MIF3150	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_multi_stage_drive_filters/ MIF3150 Three Phase Industrial Multi Stage Drive Filters - Very High Performance 150 Amps
VFD900C43A; VFD1100C43A; VFD1320C43A; VFD1600C43A;	MIF3400B	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_multi_stage_drive_filters/ MIF3400B Three Phase Industrial Multi Stage Drive Filters - Very High Performance 400 Amps

Model	Applicable EMI Filter	Reference Website
VFD1850C43A; VFD2200C43A;	MIF3800 & Ring Cores *3	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_drive_filters_very_high_performance/ MIF3800 Three Phase Industrial Drive Filters - Very High Performance 800 Amps Ring Core Part No. : T102-15
VFD2800C43A; VFD3150C43A; VFD3550C43A;	MIF3800 & Ring Cores *2	http://www.dem-uk.com/roxburgh/products/industrial_emc_filters/three_phase_industrial_drive_filters_very_high_performance/ MIF3800 Three Phase Industrial Drive Filters - Very High Performance 800 Amps Ring Core Part No. : T102-15

EMI Filter Installation

All electrical equipment, including AC motor drives, will generate high-frequency/low-frequency noise and will interfere with peripheral equipment by radiation or conduction when in operation. By using an EMI filter with correct installation, much interference can be eliminated. It is recommended to use DELTA EMI filter to have the best interference elimination performance.

We assure that it can comply with following rules when AC motor drive and EMI filter are installed and wired according to user manual:

- EN61000-6-4
- EN61800-3: 1996
- EN55011 (1991) Class A Group 1 (1st Environment, restricted distribution)

General precaution

1. EMI filter and AC motor drive should be installed on the same metal plate.
2. Please install AC motor drive on footprint EMI filter or install EMI filter as close as possible to the AC motor drive.
3. Please wire as short as possible.
4. Metal plate should be grounded.
5. The cover of EMI filter and AC motor drive or grounding should be fixed on the metal plate and the contact area should be as large as possible.

Choose suitable motor cable and precautions

Improper installation and choice of motor cable will affect the performance of EMI filter. Be sure to observe the following precautions when selecting motor cable.

1. Use the cable with shielding (double shielding is the best).
2. The shielding on both ends of the motor cable should be grounded with the minimum length and maximum contact area.
3. Remove any paint on metal saddle for good ground contact with the plate and shielding.

Remove any paint on metal saddle for good ground contact with the plate and shielding.

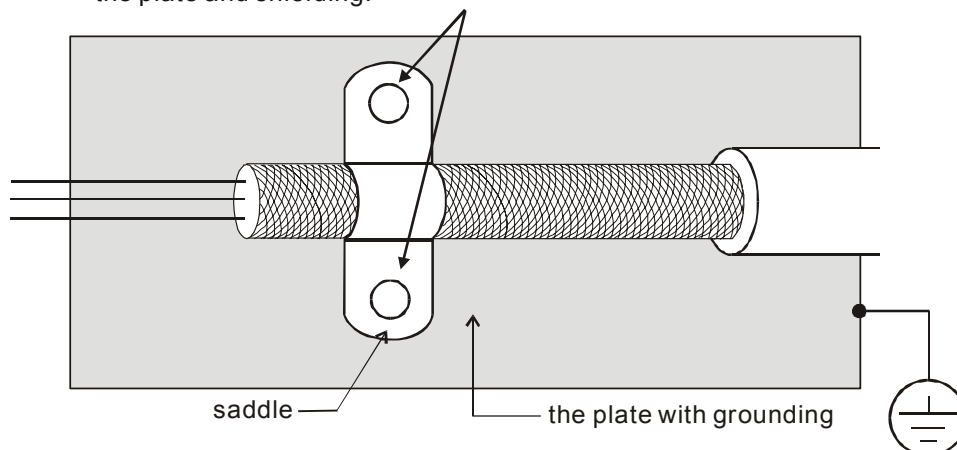


Figure 1

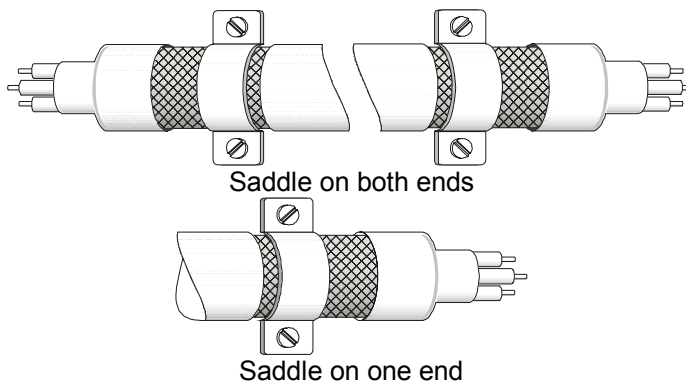


Figure 2

The length of motor cable

When motor is driven by an AC motor drive of PWM type, the motor terminals will experience surge voltages easily due to components conversion of AC motor drive and cable capacitance. When the motor cable is very long (especially for the 460V series), surge voltages may reduce insulation quality. To prevent this situation, please follow the rules below:

- Use a motor with enhanced insulation.
- Connect an output reactor (optional) to the output terminals of the AC motor drive
- The length of the cable between AC motor drive and motor should be as short as possible (10 to 20 m or less)
- For models 7.5hp and above:

Insulation level of motor	1000V	1300V	1600V
460VAC input voltage	66 ft (20m)	328 ft (100m)	1312 ft (400m)
230VAC input voltage	1312 ft (400m)	1312 ft (400m)	1312 ft (400m)

- For models 5hp and less:

Insulation level of motor	1000V	1300V	1600V
460VAC input voltage	66 ft (20m)	165 ft (50m)	165 ft (50m)
230VAC input voltage	328 ft (100m)	328 ft (100m)	328 ft (100m)

NOTE

Never connect phase lead capacitors or surge absorbers to the output terminals of the AC motor drive.

- If the length is too long, the stray capacitance between cables will increase and may cause leakage current. It will activate the protection of over current, increase leakage current or not insure the correction of current display. The worst case is that AC motor drive may damage.
- If more than one motor is connected to the AC motor drive, the total wiring length is the sum of the wiring length from AC motor drive to each motor.
- For the 460V series AC motor drive, when an overload relay is installed between the drive and the motor to protect motor over heating, the connecting cable must be shorter than 50m. However, an overload relay malfunction may still occur. To prevent the malfunction, install an output reactor (optional) to the drive or lower the carrier frequency setting (Pr.00-17).

NOTE

When a thermal O/L relay protected by motor is used between AC motor drive and motor, it may malfunction (especially for 460V series), even if the length of motor cable is only 165 ft (50m) or less. To prevent it, please use AC reactor and/or lower the carrier frequency (Pr. 00-17 PWM carrier frequency).

Digital Keypad


KPC-CE01



- A:** LED Display
Display frequency, current, voltage and error etc.
- B:** Status Indicator
F: Frequency Command
H: Output Frequency
U: User Defined Units
ERR: CAN Error Indicator
RUN: CAN Run Indicator
- C:** Function
(Refer to the chart follows for detail description)

Key	Description				
ESC	ESC Key Press ESC key to return to the previous page. It also functions as a return to last category key in the sub-menu.				
MENU	Menu Key Press MENU key under any condition will return to the main MENU. Menu content: <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">1. Parameter Detail</td> <td style="width: 50%;">3. Keypad locked</td> </tr> <tr> <td>2. Copy Parameter</td> <td>4. PLC Function</td> </tr> </table>	1. Parameter Detail	3. Keypad locked	2. Copy Parameter	4. PLC Function
1. Parameter Detail	3. Keypad locked				
2. Copy Parameter	4. PLC Function				
ENTER	ENTER Key Press ENTER and go to the next level. If it is the last level then press ENTER to execute the command.				
HAND	HAND ON Key <ol style="list-style-type: none"> HAND key will operates according to the parameter settings when the source of HAND master frequency command and the source of HAND operation command is properly set,. The factory setting of the source command for frequency and operation are from the digital keypad . Press HAND key in stop status, the drive setting switches to the parametr setting of HAND. Press HAND key in during operation, the drive will come to stop then switches to the parameter setting of HAND. When process complete: H/A LED ON. 				
AUTO	Auto Operation Key <ol style="list-style-type: none"> AUTO function executes according to the parameter settings of the source of AUTO frequency and AUTO operation. The factory setting is the external terminal (source of operation is 4-20mA). Press the ATUO key in stop status, the drivel switches to auto-setting. Press the auto key during operation statu, the drivel will come to stop and switch to auto-setting. When process complete: H/A LED is OFF 				
FWD/REV	Operation Direction Key <ol style="list-style-type: none"> FWD/REV key controls the operation direction but will NOT activate the drive. FWD: forward, REV: reverse. The drive operates in the direction as shown by the LED light. 				
RUN	Start Key <ol style="list-style-type: none"> It is only valid when the source of operation command is from the keypad. Press the RUN key, the drive will according to the start-up setting and the RUN LED will be ON. RUN key can be pressed for many times when the drive is in stop status. “HAND” mode is enabled only when the source of operation command is by keypad. 				
STOP	Stop Key. <ol style="list-style-type: none"> STOP key has the highest priority in command. Press STOP key, the drive will come to stop under any condition. The RESET key can be used to reset the drive when faults occur. If the RESET key is not responding, check MENU → Fault Records and checkk the most recent fault. 				

Dimension

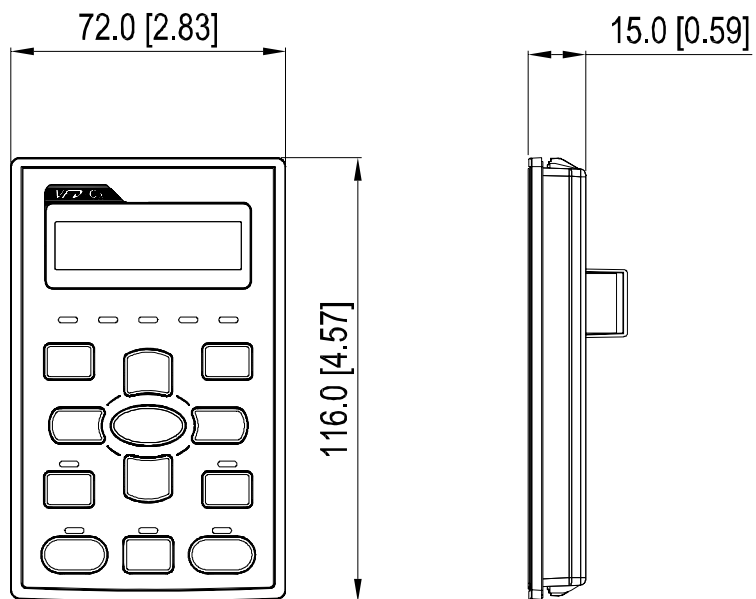





RJ45 Extension Lead for Digital Keypad


Part #	Description
CBC-K3FT	3 feet RJ45 extension lead (approximately 0.9m)
CBC-K5FT	5 feet RJ45 extension lead (approximately 1.5 m)
CBC-K7FT	7 feet RJ45 extension lead (approximately 2.1 m)
CBC-K10FT	10 feet RJ45 extension lead (approximately 3 m)
CBC-K16FT	16 feet RJ45 extension lead (approximately 4.9 m)

Panel Mounting (MKC-KPPK)

For MKC-KPPK model, user can choose wall mounting or embedded mounting, protection level is IP56.

Applicable to the digital keypads (KPC-CC01 & KPC-CE01).

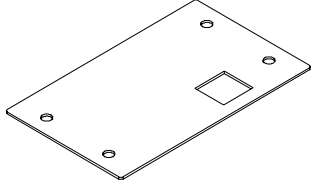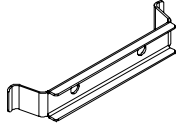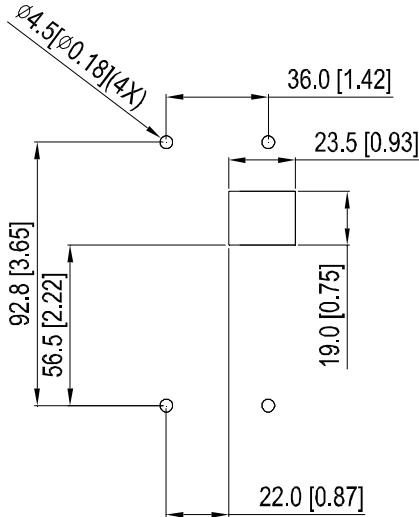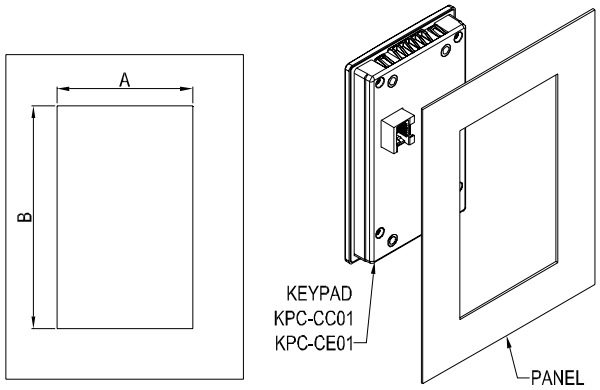Wall Mounting		Embedded Mounting													
accessories*1 		accessories*2 													
Screw *4 ~M4*p 0.7 *L8mm Torque: 10-12kg-cm (8.7-10.4lb-in.)		Screw *4 ~M4*p 0.7 *L8mm Torque: 10-12kg-cm (8.7-10.4lb-in.)													
Panel cutout dimension Unit: mm [inch]		Panel cutout dimension Unit: mm [inch]													
		Normal cutout dimension													
		<table border="1"> <thead> <tr> <th>Panel thickness</th> <th>1.2mm</th> <th>1.6mm</th> <th>2.0mm</th> </tr> </thead> <tbody> <tr> <td>A</td> <td colspan="3">66.4 [2.614]</td> </tr> <tr> <td>B</td> <td>110.2 [4.339]</td> <td>111.3 [4.382]</td> <td>112.5 [4.429]</td> </tr> </tbody> </table>		Panel thickness	1.2mm	1.6mm	2.0mm	A	66.4 [2.614]			B	110.2 [4.339]	111.3 [4.382]	112.5 [4.429]
Panel thickness	1.2mm	1.6mm	2.0mm												
A	66.4 [2.614]														
B	110.2 [4.339]	111.3 [4.382]	112.5 [4.429]												
		*Deviation: ±0.15mm /±0.0059inch													
		Cutout dimension (Waterproof level: IP56)													
		<table border="1"> <thead> <tr> <th>Panel thickness</th> <th>1.2mm</th> <th>1.6mm</th> <th>2.0mm</th> </tr> </thead> <tbody> <tr> <td>A</td> <td colspan="3">66.4 [2.614]</td> </tr> <tr> <td>B</td> <td colspan="3">110.8 [4.362]</td> </tr> </tbody> </table>		Panel thickness	1.2mm	1.6mm	2.0mm	A	66.4 [2.614]			B	110.8 [4.362]		
Panel thickness	1.2mm	1.6mm	2.0mm												
A	66.4 [2.614]														
B	110.8 [4.362]														
		*Deviation: ±0.15mm /±0.0059inch													

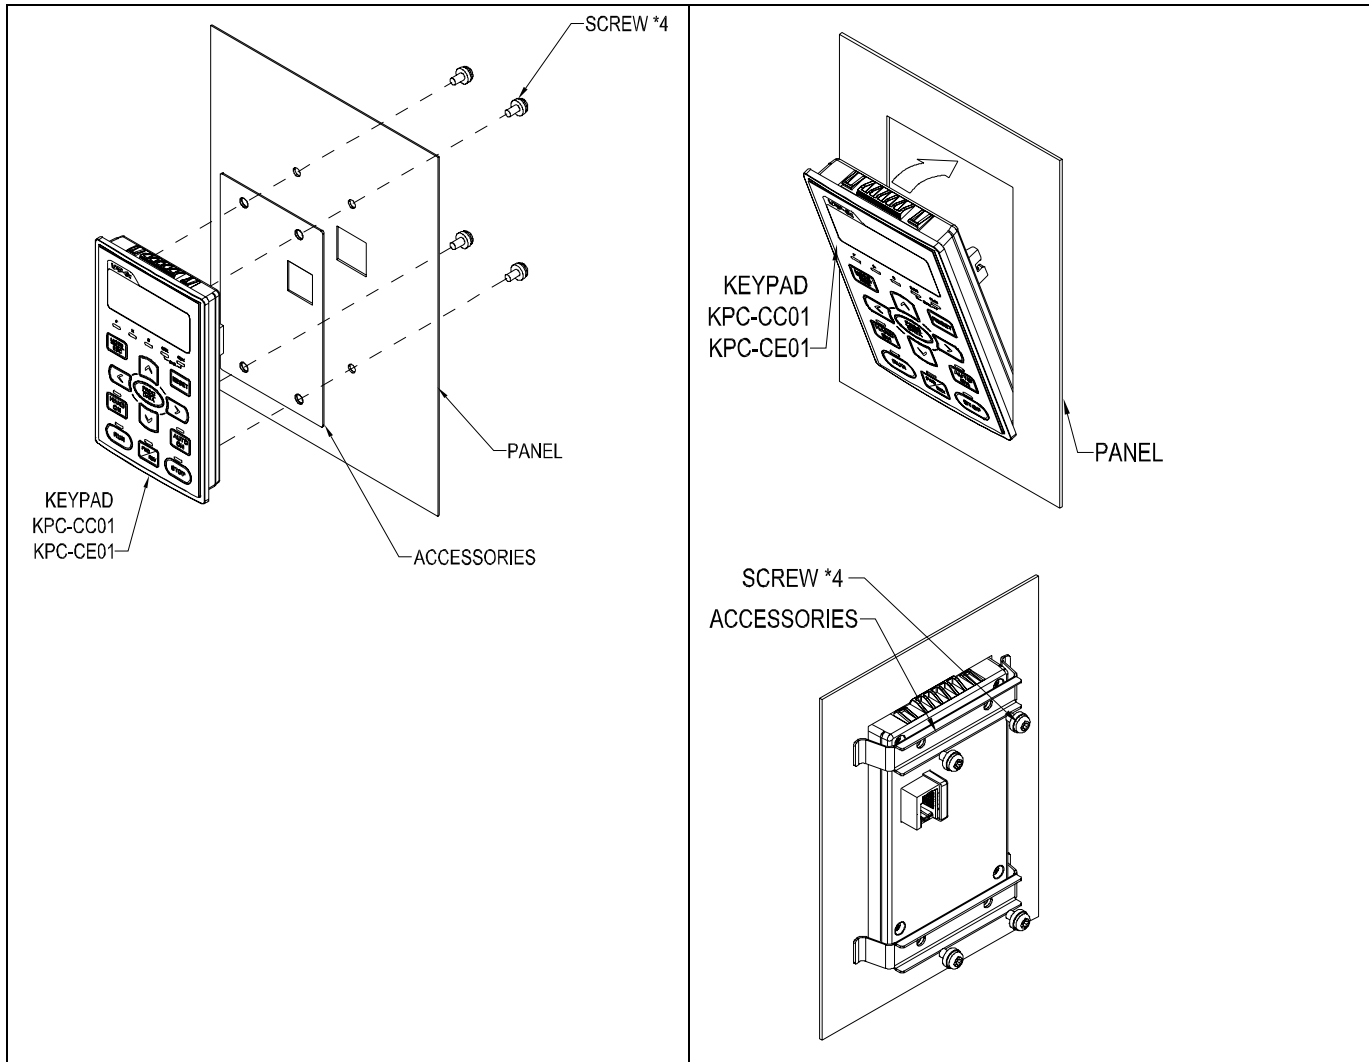

Conduit Box Kit

■ Appearance


Frame D

Applicable models

VFD300C23A/23E; VFD370C23A/23E; VFD370C43A/43E; VFD450C43A/43E; VFD550C43A/43E; VFD750C43A/43E

Model number 『MKC-DN1CB』

ITEM	Description	Qty.
1	Screw M5*0.8*10L	4
2	Rubber28	2
3	Rubber44	2
4	Rubber88	2
5	Conduit box cover	1
6	Conduit box base	1

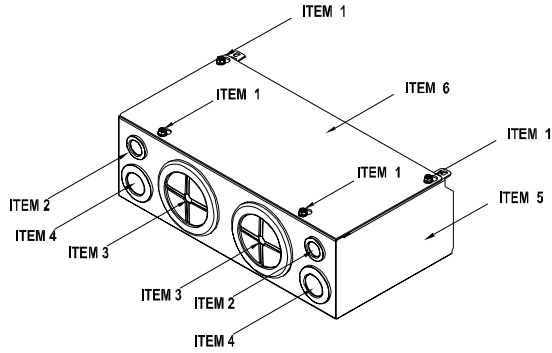


Frame E

Applicable models

VFD450C23A/23E; VFD550C23A/23E; VFD750C23A/23E; VFD900C43A/43E; VFD1100C43A/43E

Model number 『MKC-EN1CB』

ITEM	Description	Qty.
1	Screw M5*0.8*10L	6
2	Bushing Rubber 28	2
3	Bushing Rubber 44	4
4	Bushing Rubber 100	2
5	Conduit box cover	1
6	Conduit box base	1

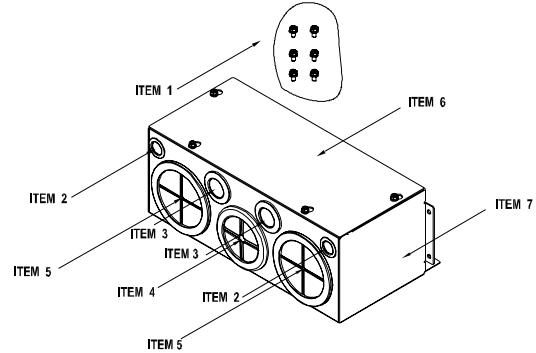


Frame F

Applicable models

VFD900C23A/23E; VFD1320C43A/43E; VFD1600C43A/43E

Model number 『MKC-FN1CB』

ITEM	Description	Qty.
1	Screw M5*0.8*10L	8
2	Bushing Rubber28	2
3	Bushing Rubber 44	4
4	Bushing Rubber 100	2
5	Conduit box cover	1
6	Conduit box base	1

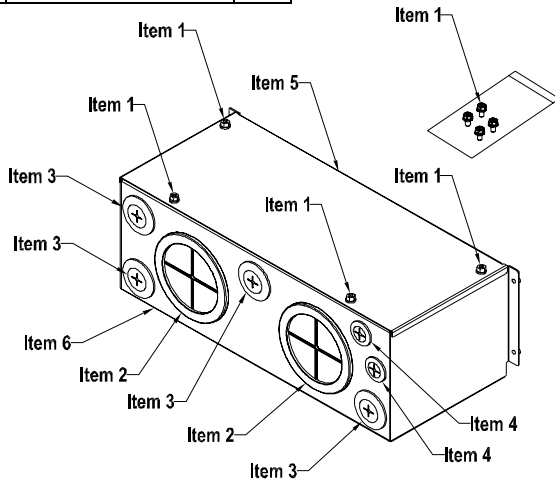


Frame G

Applicable models

VFD1850C23A/23E; VFD2200C43A/43E

Model number 『MKC-GN1CB』


ITEM	Description	Qty.
1	Screw M5*0.8*10L	12
2	Bushing Rubber 28	2
3	Bushing Rubber 44	2
4	Bushing Rubber 130	3
5	Conduit box base	1
6	Conduit box cover	1

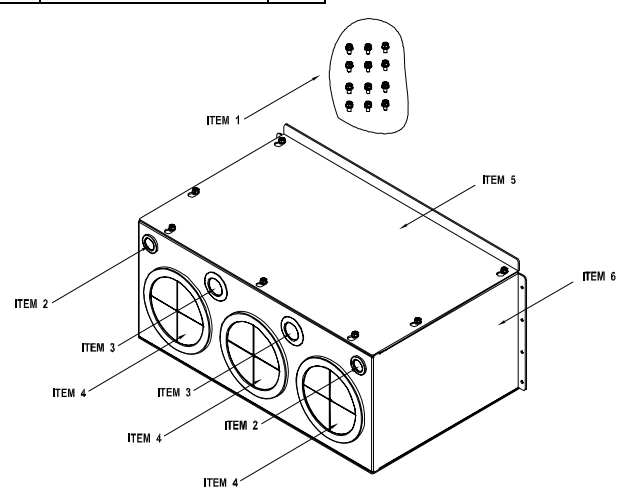


■ Conduit Box Installation

Frame D


1. Loosen the cover screws and press the tabs on each side of the cover to remove the cover, as shown in the following figure. Screw torque: 10~12kg-cm (8.66~10.39lb-in)

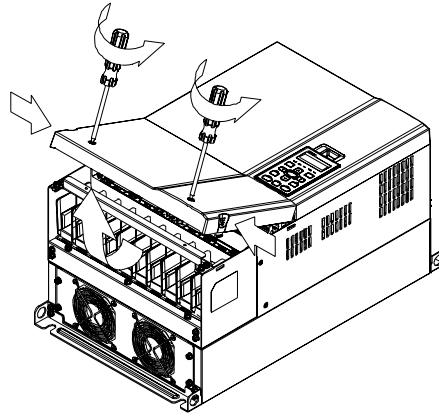


2. Remove the 5 screws shown in the following figure. Screw torque: 24~26kg-cm (20.8~22.6lb-in).

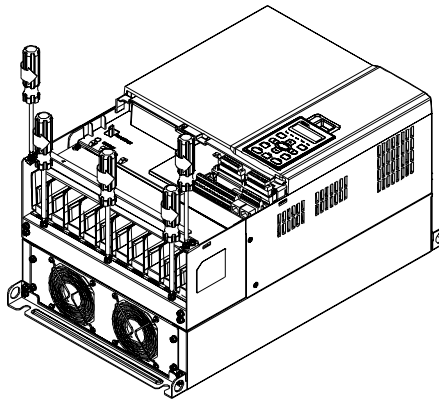

3. Install the conduit box by fasten the 5 screws shown in the following figure. Screw torque: 24~26kg-cm (20.8~22.6lb-in).

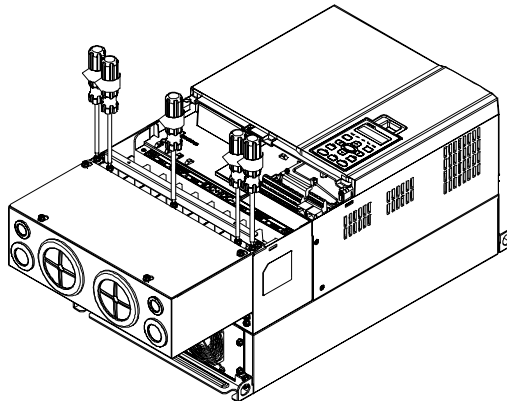


4. Fasten the 4 screws shown in the following figure. Screw torque: 10~12kg-cm (8.66~10.39lb-in).

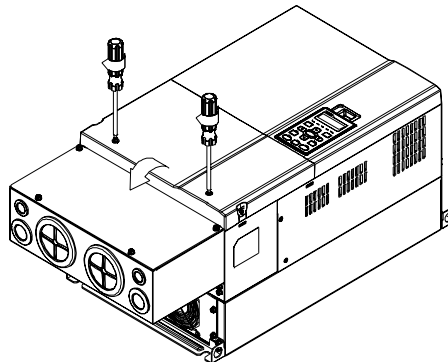


Frame E


1. Loosen the 4 cover screws and lift the cover; Screw torque: 12~ 15 kg-cm (10.4~13lb-in).

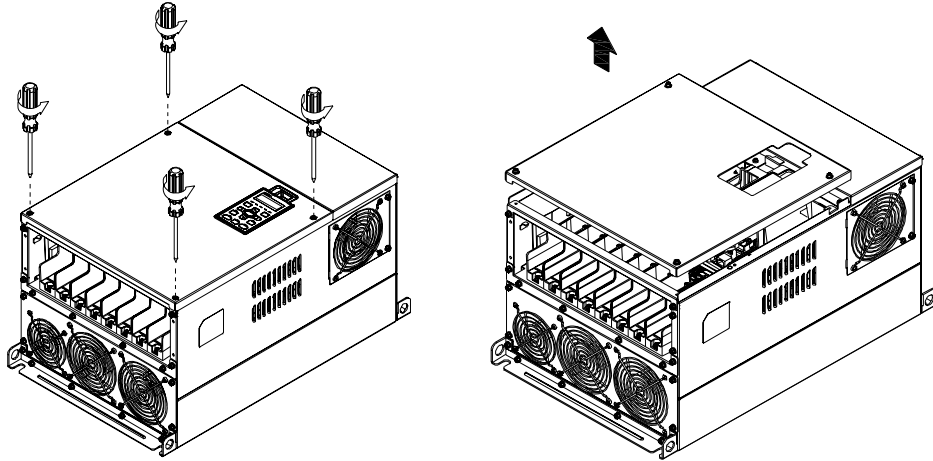

2. Fasten the 6 screws shown in the following figure and place the cover back to the original position. Screw torque: 24~26kg-cm (20.8~22.6lb-in).

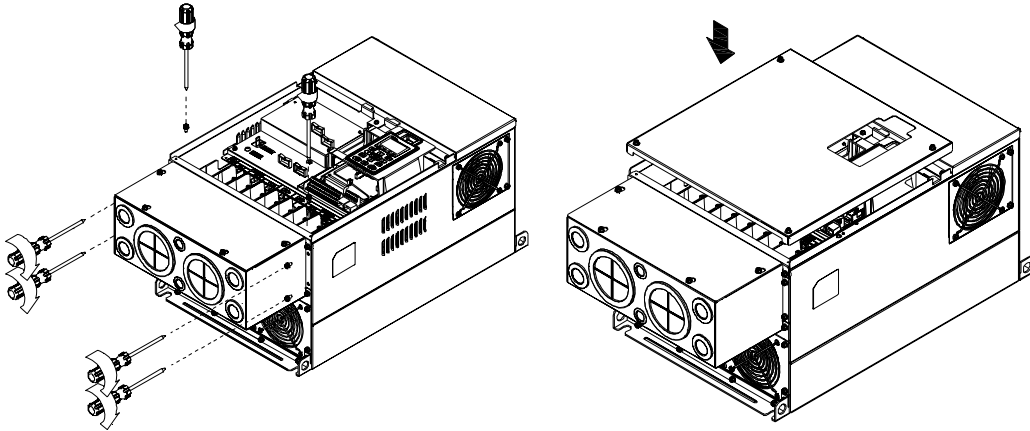


3. Fasten the 4 screws shown in the following figure. Screw torque: 12~15kg-cm (10.4~13lb-in)

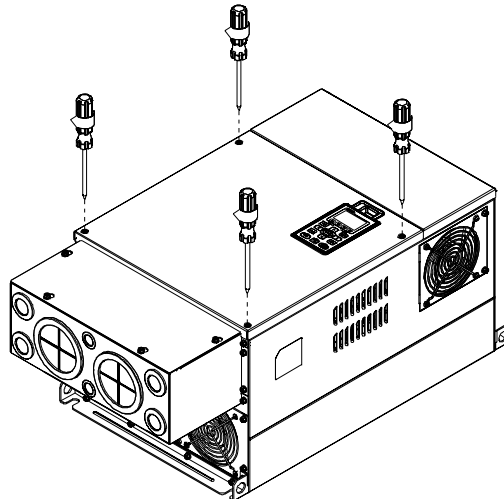


Frame F


1. Loosen the cover screws and press the tabs on each side of the cover to remove the cover, as shown in the following figure. Screw torque: 14~16kg-cm (12.2~13.9lb-in).

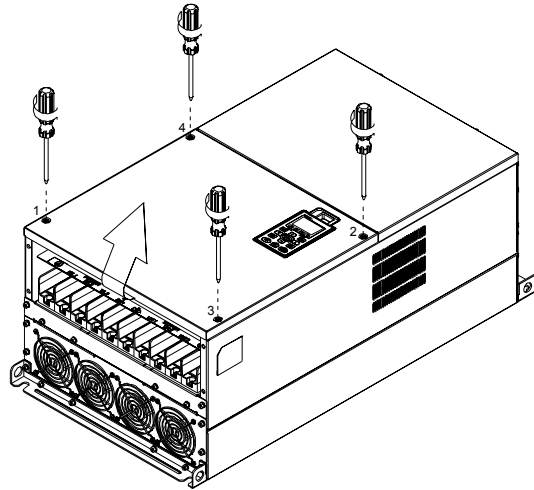

2. Install the conduit box by fastens the 4 screws, as shown in the following figure. Screw torque: 24~26kg-cm (20.8~22.6lb-in).

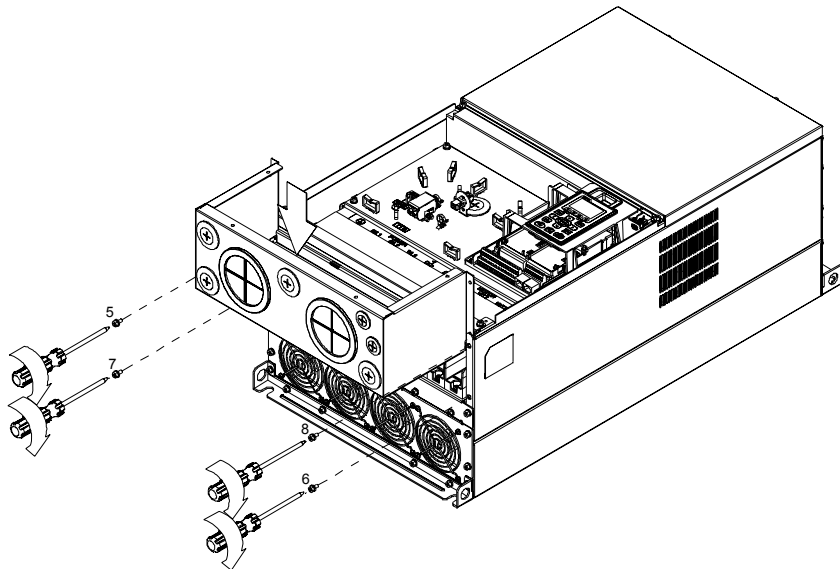


3. Install the conduit box by fasten all the screws shown in the following figure

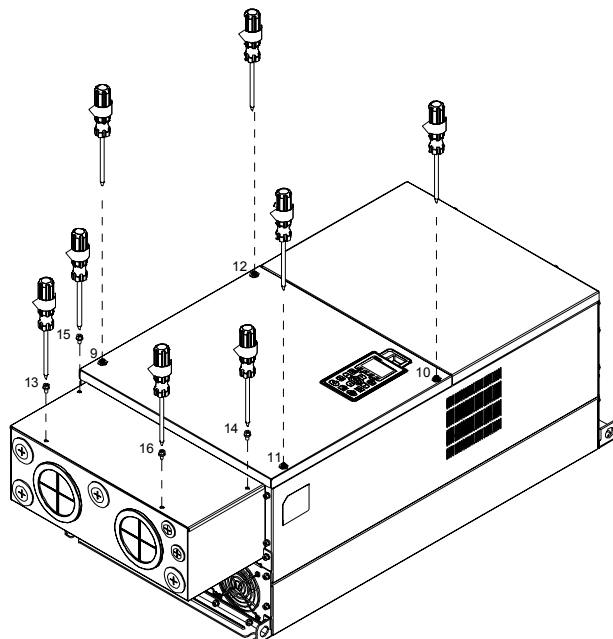


Frame G


1. On the conduit box, loosen 7 of the cover screws and remove the cover. On the drive, loosen 4 of the cover screws and press the tabs on each side of the cover to remove the cover, as shown in the following figure. Screw torque: 12~15kg-cm (10.4~13lb-in).

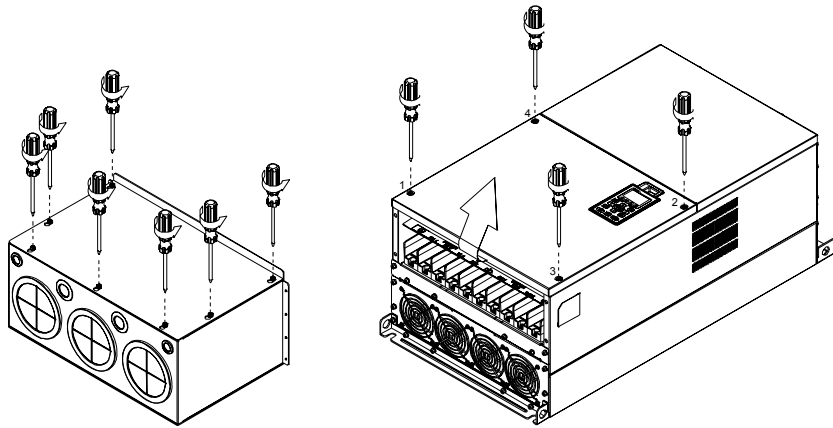


Remove the top cover and loosen the screws. Screw torque: 12~15kg-cm (10.4~13lb-in).

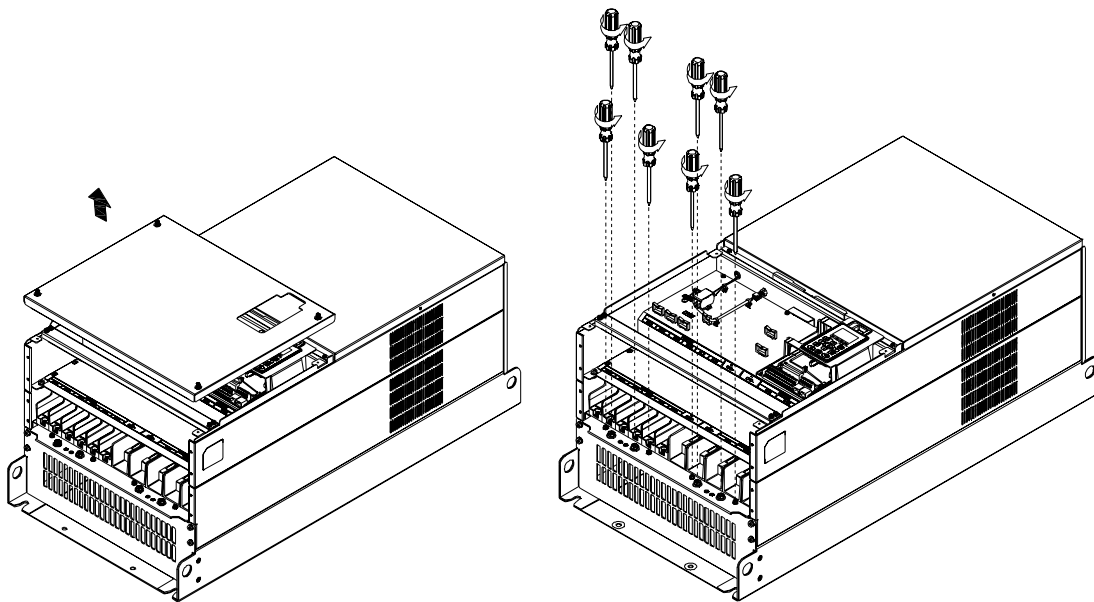


2. Install the conduit box by fastening all the screws shown in the following figure. Screw torque: 25~30kg-cm (20.8~30lb-in); Screw torque: 12~15kg-cm (10.4~13lb-in)

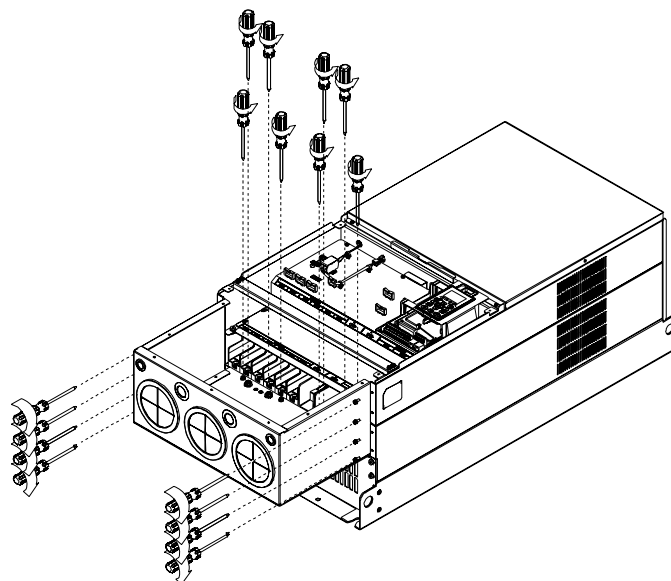

Fasten all the screws. Screw torque: 25~30kg-cm (20.8~30lb-in).





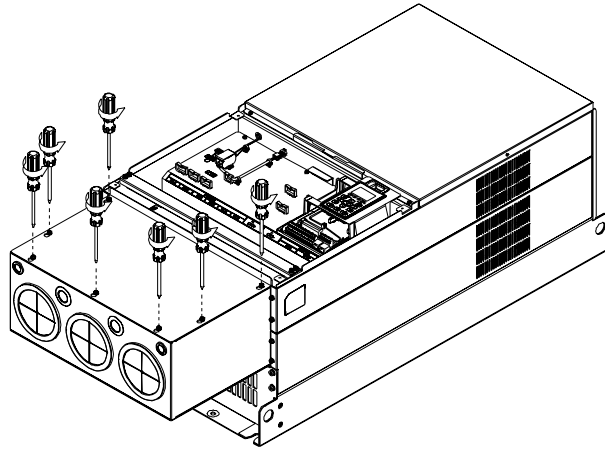








Place the cover back to the top and fasten the screws (as shown in the figure).
Screw torque: 12~15kg-cm (10.4~13lb-in).




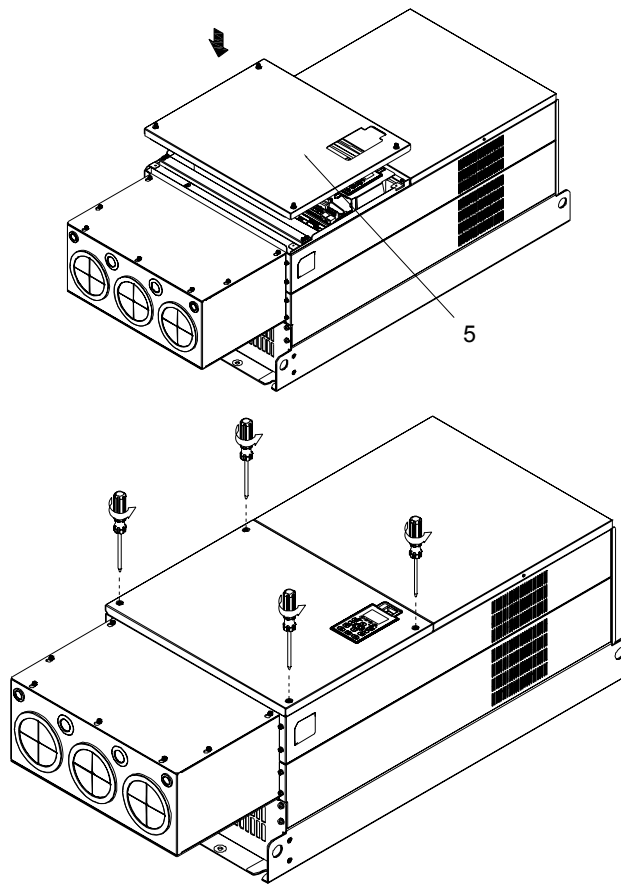


Fan Kit

■ Frames of the fan kit
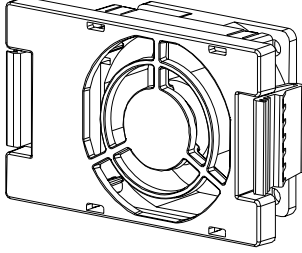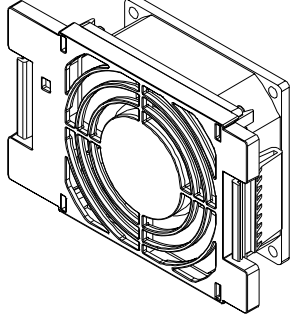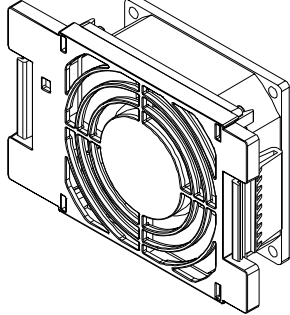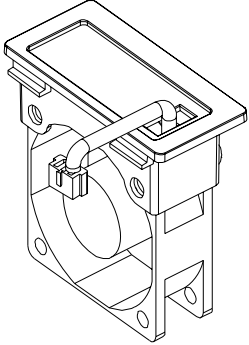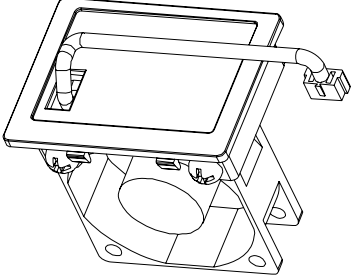
<p>Frame A</p> <p>Applicable Model VFD015C23A; VFD022C23A; VFD037C23A; VFD022C43A/43E; VFD037C43A/43E; VFD040C43A/43E; VFD055C43A/43E</p>	<p>Model 『MKC-AFKM』</p> 
<p>Frame B</p> <p>Applicable Model VFD055C23A; VFD075C43A/43E</p>	<p>Model 『MKC-BFKM1』</p> 
<p>Frame B</p> <p>Applicable Model VFD075C23A; VFD110C23A; VFD110C43A/43E; VFD150C43A/43E</p>	<p>Model 『MKC-BFKM2』</p> 
<p>Frame B</p> <p>Applicable Model VFD055C23A; VFD075C23A; VFD110C23A; VFD075C43A/43E; VFD110C43A/43E; VFD150C43A/43E</p>	<p>Model 『MKC-BFKB』</p> 
<p>Frame C</p> <p>Applicable Model VFD150C23A; VFD185C23A; VFD220C23A</p>	<p>Model 『MKC-CFKB1』</p> 
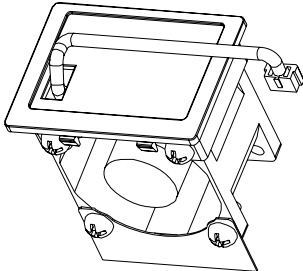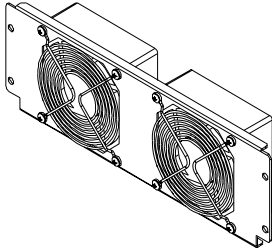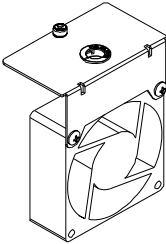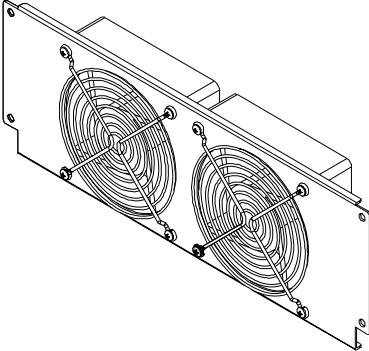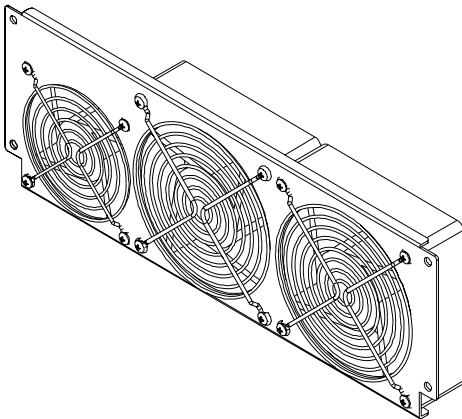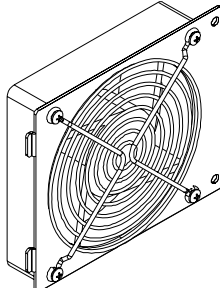
<p>Frame C</p> <p>Applicable Model VFD185C43A/43E; VFD220C43A/43E; VFD300C43A/43E</p>	<p>Model 『MKC-CFKB2』</p> 	
<p>Frame D</p> <p>Applicable Model VFD300C23A/23E; VFD370C23A/23E; VFD370C43A/43E; VFD450C43A/43E; VFD550C43A/43E; VFD750C43A/43E</p>	<p>Model 『MKC-DFKM』</p> 	<p>Model 『MKC-DFKB』</p> 
<p>Frame E</p> <p>Applicable Model VFD450C23A/23E; VFD550C23A/23E</p>	<p>Model 『MKC-EFKM1』</p> 	
<p>Frame E</p> <p>Applicable Model VFD750C23A/23E; VFD900C43A/43E; VFD1100C43A/43E</p>	<p>Model 『MKC-EFKM2』</p> 	
<p>Frame E</p> <p>Applicable Model VFD450C23A/23E; VFD550C23A/23E; VFD750C23A/23E; VFD900C43A/43E; VFD1100C43A/43E</p>	<p>Model 『MKC-EFKB』</p> 	
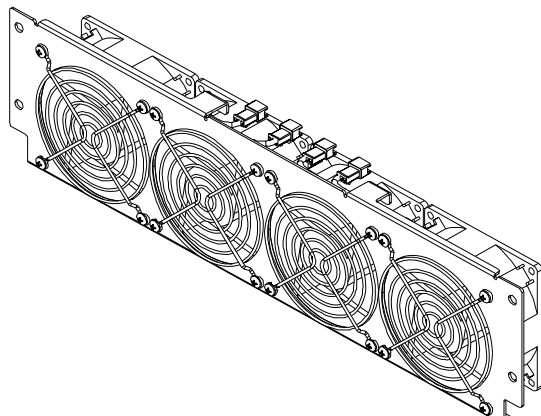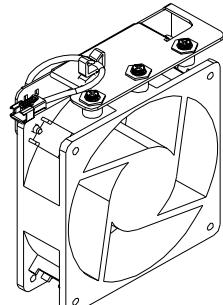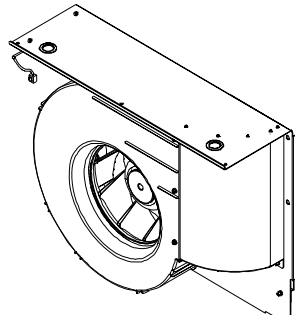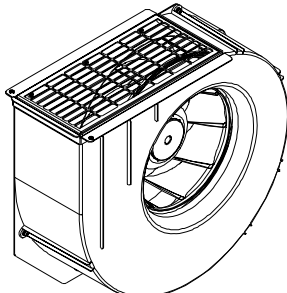
<p>Frame F</p> <p>Applicable Model VFD900C23A/23E; VFD1320C43A/43E; VFD1600C43A/43E</p>	<p>Model 『MKC-FFKM』</p> 
<p>Frame F</p> <p>Applicable Model VFD900C23A/23E; VFD1320C43A/43E; VFD1600C43A/43E</p>	<p>Model 『MKC-FFKB』</p> 
<p>Frame G</p> <p>Applicable Model VFD1850C43A/43E; VFD2200C43A/43E</p>	<p>Model 『MKC-GFKM』</p> 
<p>Frame H</p> <p>Applicable Model VFD2800C43A/43E; VFD3150C43A/43E; VFD3550C43A/43E; VFD2800C43E-1; VFD3150C43E-1; VFD3550C43E-1</p>	<p>Model 『MKC-HFKM』</p> 


■ Fan Removal

Frame A

Applicable model

VFD015C23A; VFD022C23A; VFD022C43A/43E; VFD037C23A; VFD037C43A/43E; VFD040C43A/43E; VFD055C43A/43E

1. Press the tabs on both side of the fan to successfully remove the fan. (The arrow)
2. Disconnect the power terminal before removing the fan. (As shown below.)

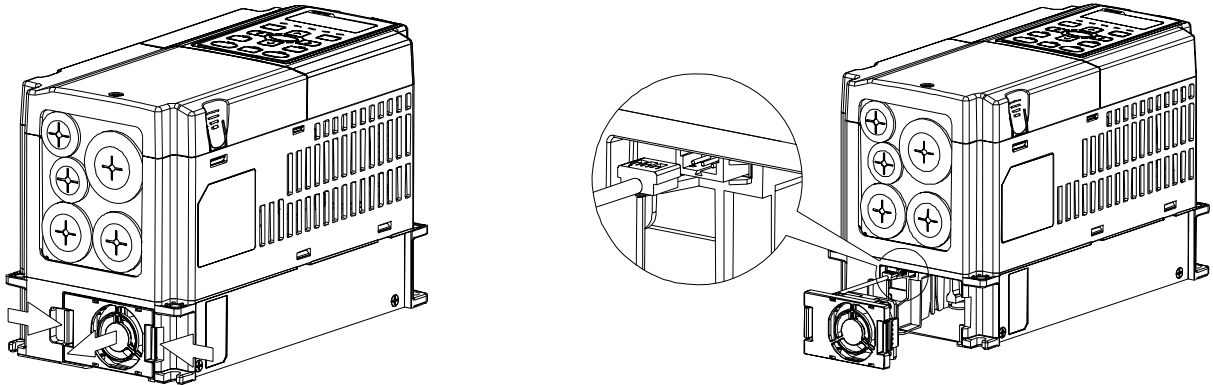


Frame B

Applicable model

VFD055C23A; VFD075C43A/43E; VFD075C23A; VFD110C23A; VFD110C43A/43E; VFD150C43A/43E

1. Press the tab on both side of the fan to successfully remove the fan.
2. Disconnect the power terminal before removing the fan.

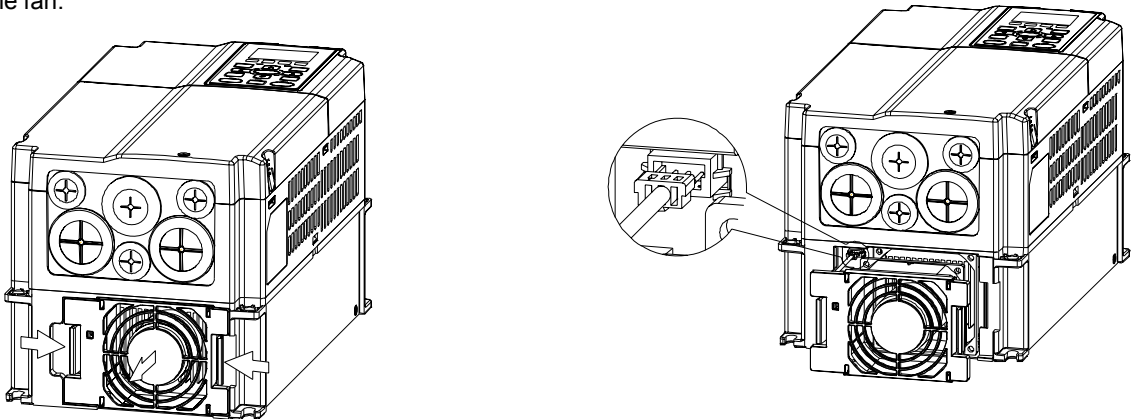


Frame B&C

Applicable model

VFD055C23A; VFD075C23A; VFD075C43A/43E; VFD110C23A; VFD110C43A/43E;
VFD150C43A/43E; VFD150C23A; VFD185C23A; VFD220C23A; VFD185C43A/43E;
VFD220C43A/43E; VFD300C43A/43E

Disconnect the power terminal by slotted screwdriver to remove the fan cover.

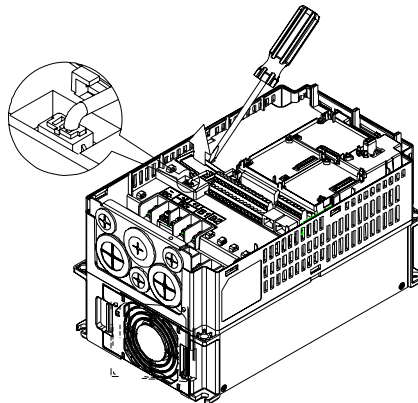

Frame D

Applicable model

VFD300C23A/23E; VFD370C23A/23E; VFD370C43A/43E; VFD450C43A/43E; VFD550C43A/43E; VFD750C43A/43E

1. (Figure 1) Loosen screw 1 and screw 2, press the on the right and the left to remove the cover, follow the direction the arrows indicate. Press on top of digital keypad KPC-CE01 to properly remove the keypad. Screw torque: 10~12kg-cm (8.6~10.4in-lbf).

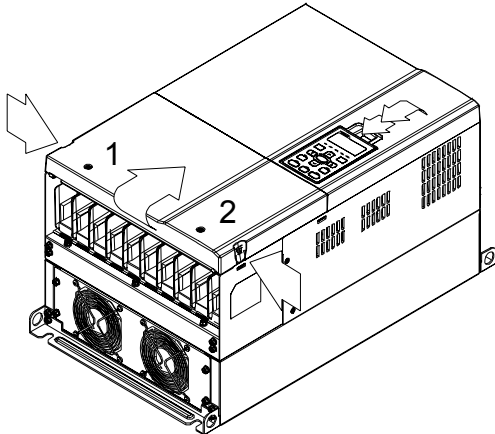


Figure 1

2. (Figure 2) Loosen screw 3 and screw 4, press the tab on the right and the left to remove the cover. Screw torque: 6~8kg-cm (5.2~6.9in-lbf).

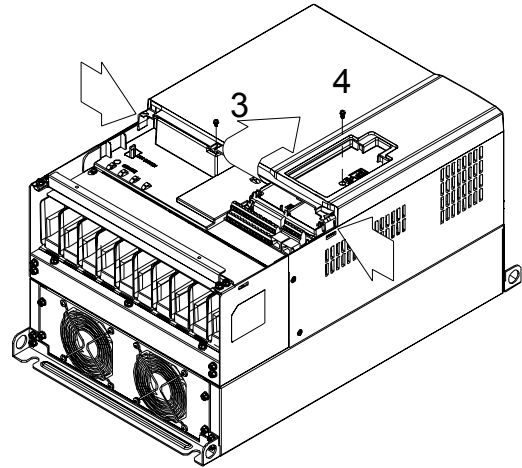


Figure 2

3. (Figure 3) Loosen screw 5 and disconnect the fan power. Screw torque: 10~12kg-cm (8.6~10.4in-lbf).

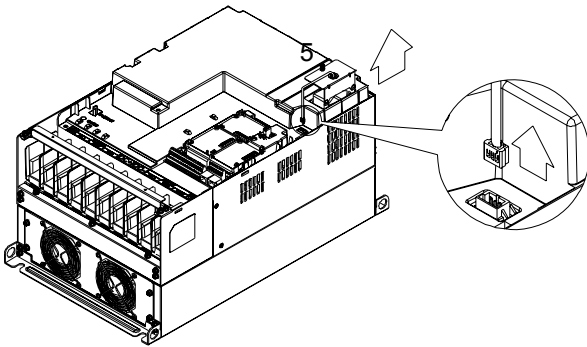


Figure 3

4. (Figure 4) Loosen the screws. Screw torque: 24~26kg-cm (20.8~25.6in-lbf).
5. Disconnect fan power and pull out the fan. (As shown in the larger picture)

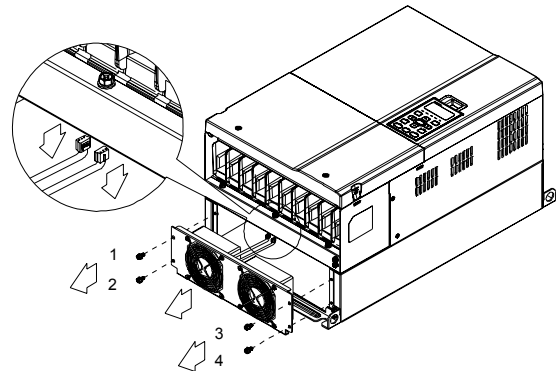



Figure 4

Frame E


Applicable model:

VFD450C23A/23E; VFD550C23A/23E; VFD750C23A/23E; VFD900C43A/43E; VFD1100C43A/43E


Loosen screw 1~4 (as shown in the figure below), and disconnect the fan power then remove the fan. Screw torque: 24~26kg-cm (20.8~25.6in-lbf).

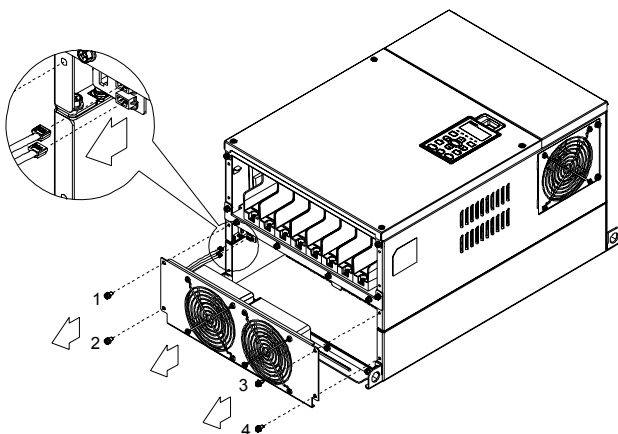

Loosen screw 1~4 (as shown in the figure below), and disconnect the fan power then remove the fan. Screw torque: 24~26kg-cm (20.8~25.6in-lbf).

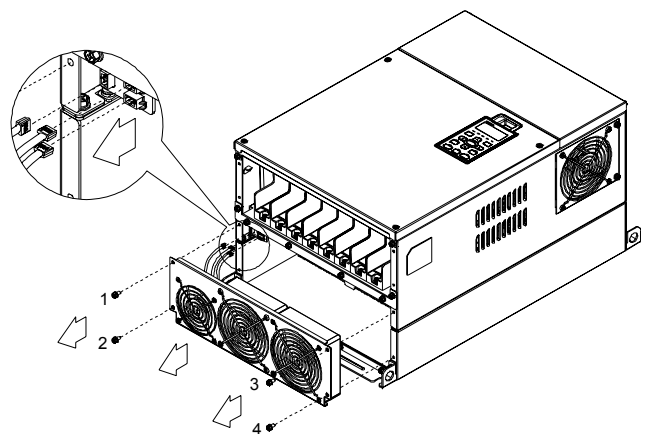

Loosen screw 1 and screw 2 (as shown in the figure below), and disconnect fan power before removing the fan. Screw torque: 24~26kg-cm (20.8~25.6in-lbf).

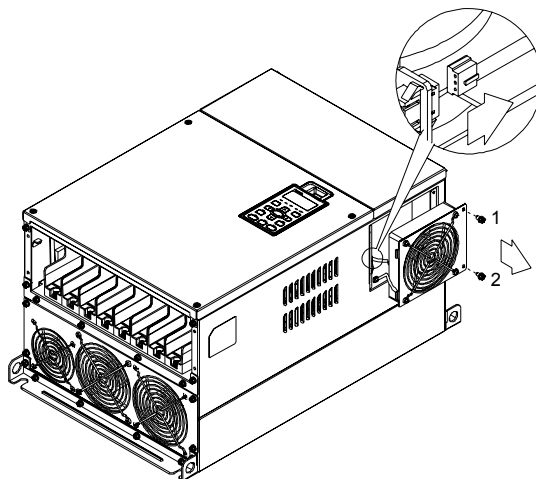


Frame F

Applicable model

VFD900C23A/23E; VFD1320C43A/43E; VFD1600C43A/43E;


Fan model 『MKC-FFKM』

Loosen the screws and removes the fan (as shown in figure below). Screw torque: 24~26kg-cm (20.8~22.6lb-in)』

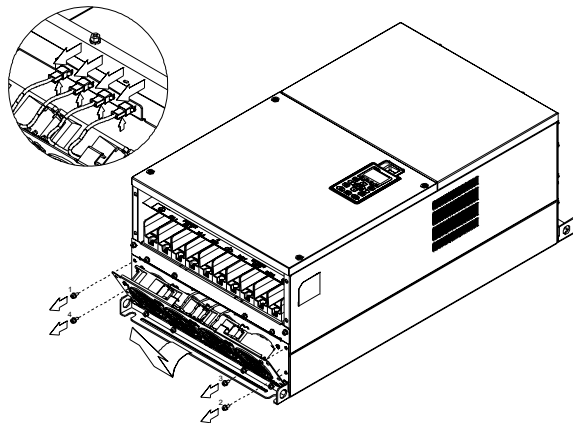


Fan model 『MKC-FFKB』


(1) Loosen the screw (as shown in figure below) and removes the cover. Screw torque: 14~16kg-cm (12.2~13.9lb-in).

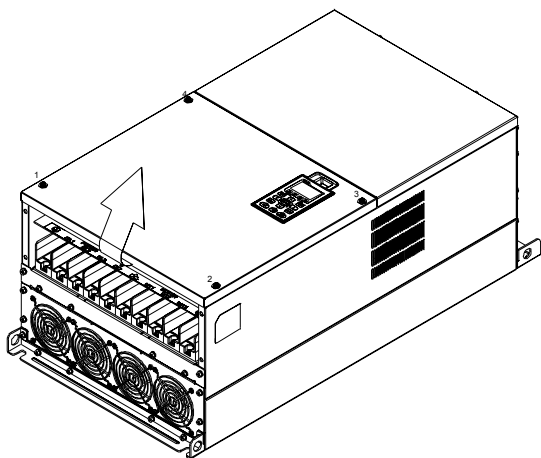

(2) Loosen the screw (as shown in figure below) and removes the cover. Screw torque: 24~26kg-cm (20.8~22.6lb-in).

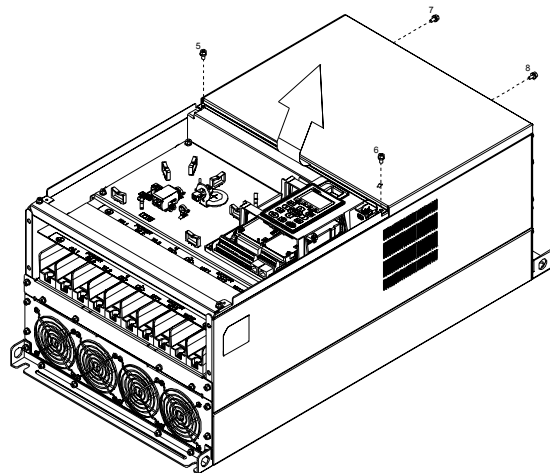

(3) Loosen the screws and remove the fan. (As shown in the figure below) Screw torque: 24~26kg-cm (20.8~22.6lb-in).

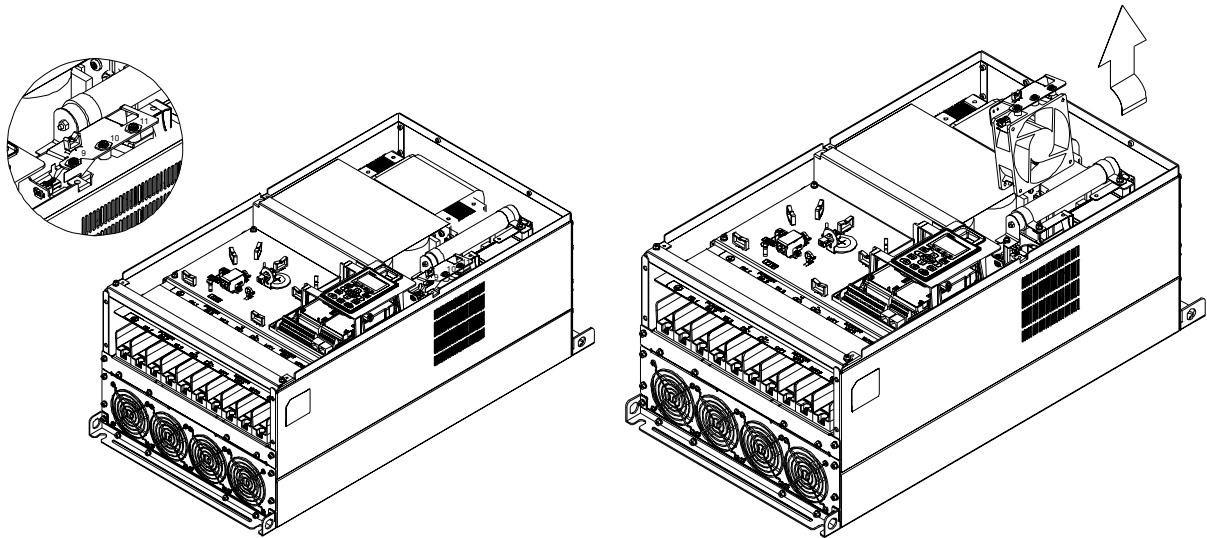


Frame G

Applicable model
VFD1800C43A/43E; VFD2200C43A/43E;


Fan model 『MKC-GFKM』

(1) Loosen the screw (as shown in figure below) and remove the cover. Screw torque: 24~26kg-cm (20.8~22.6lb-in).

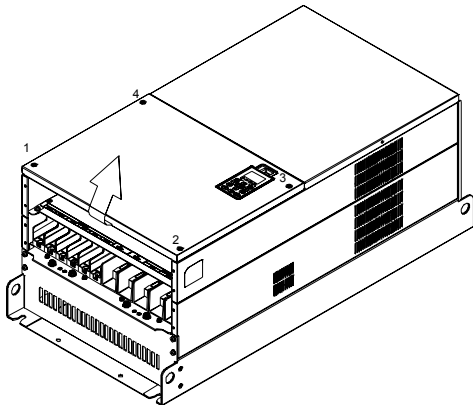


(2) For 1~8 shown in the figure: Loosen the screws
Screw torque: 35~40kg-cm (30.4~34.7lb-in)


For 9~10 shown in the figure: Loosen the screws and removes the cover.
Screw torque: 24~26kg-cm (20.8~22.6lb-in).

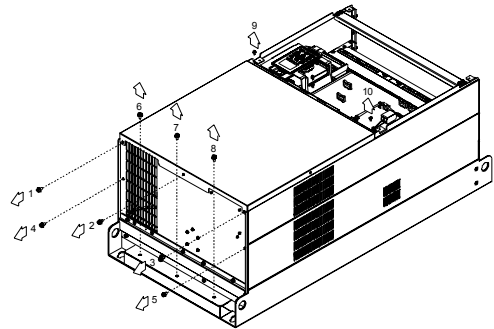

(3) Loosen screw 1,2,3 and remove the protective ring (as shown in figure below) Screw torque: 15~20kg-cm (12.2~13.9lb-in).

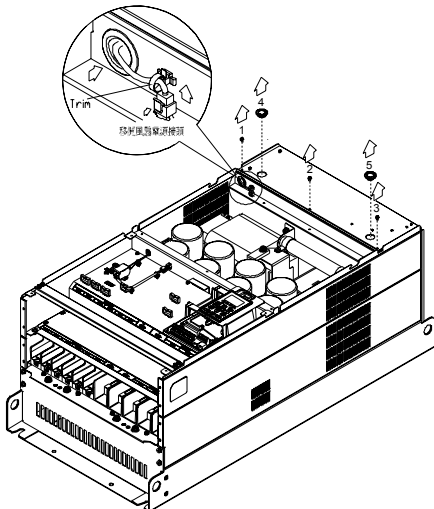

(4) Lift the fan by putting your finger through the protective holes, as indicates in 1 and 2 on the figure.

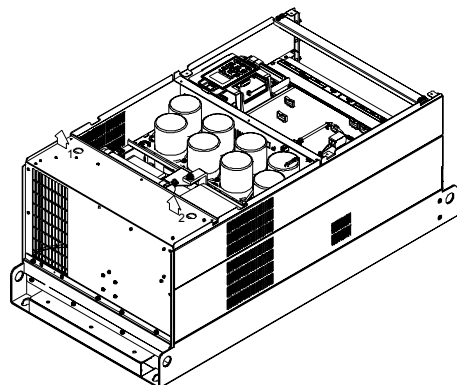


Frame H


Applicable model
 VFD2800C43A/43E; VFD3150C43A/43E; VFD3550C43A/43E

Fan model 『MKC-HFKM』


(1) Loosen the screw and remove the top cover.
 Screw torque: 14~16kg-cm (12.2~13.9lb-in)

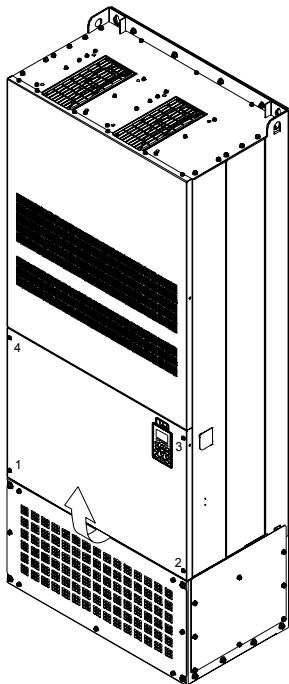


(2) Loosen the screw and remove the top cover.
 Screw torque: 24~26kg-cm (20.8~22.6lb-in).

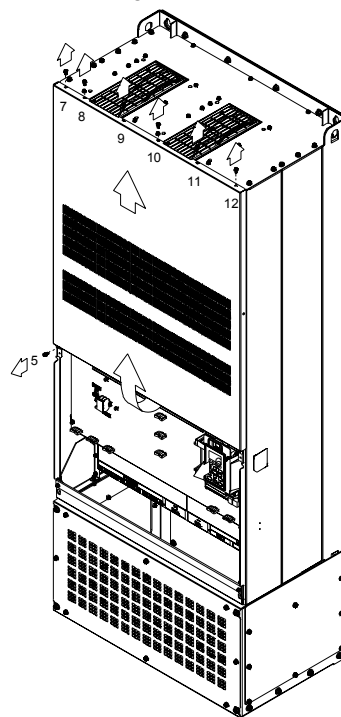

(3) Disconnect the fan.

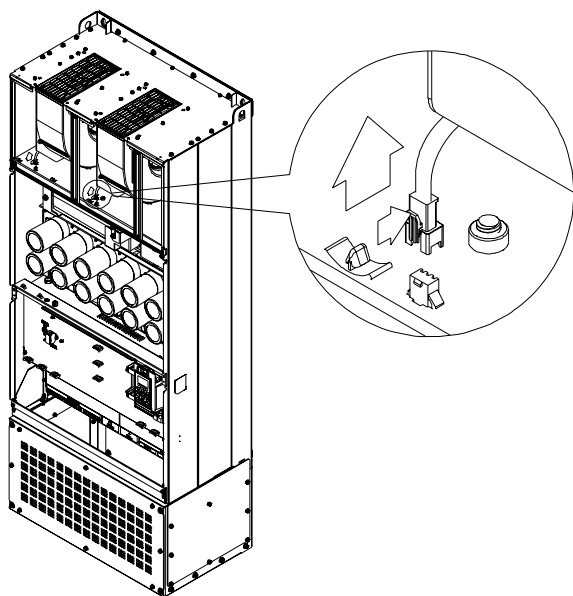

(4) Loosen the screw and remove the fan. Make sure fan power is properly disconnected before removal. Screw torque: 24~26kg-cm (20.8~22.6lb-in).

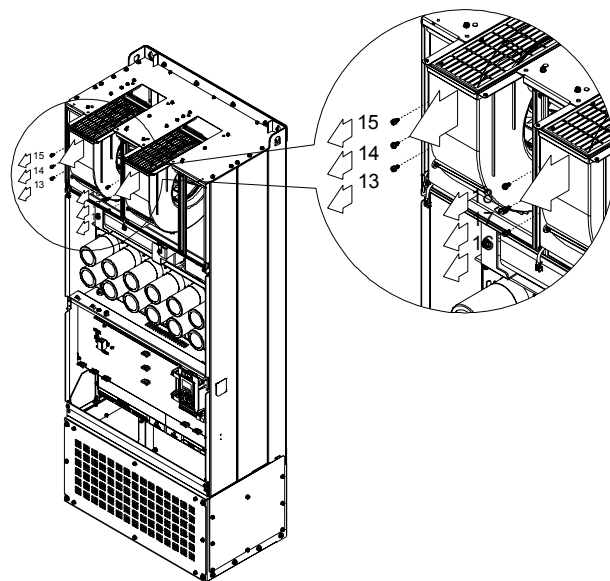

Flange Mounting Kit


Applicable Models, Frame A~F

Frame A


『MKC-AFM1』

Applicable model


VFD015C23A; VFD022C23A; VFD022C43A/43E

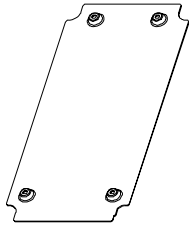

Accessories 1*1

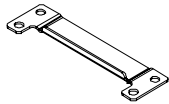 

Accessories 2*2

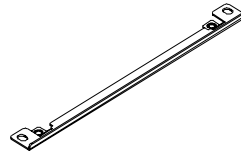

Accessories 3*2

 
Screw 1 *4
M3*P 0.5; L=6mm

Screw 2*8
M6*P 1.0; L=16mm


『MKC-AFM』

Applicable model

VFD007C23A; VFD007C43A/43E; VFD015C43A/43E; VFD037C23A; VFD037C43A/43E; VFD040C43A/43E;
VFD055C43A/43E

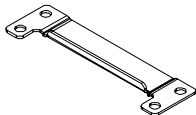

Accessories 2*2

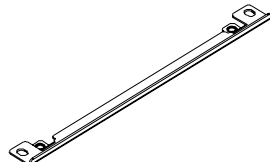


Accessories t 3*2

Screw *8
M6*P 1.0; L=16mm


Cutout dimension

Unit: mm [inch]

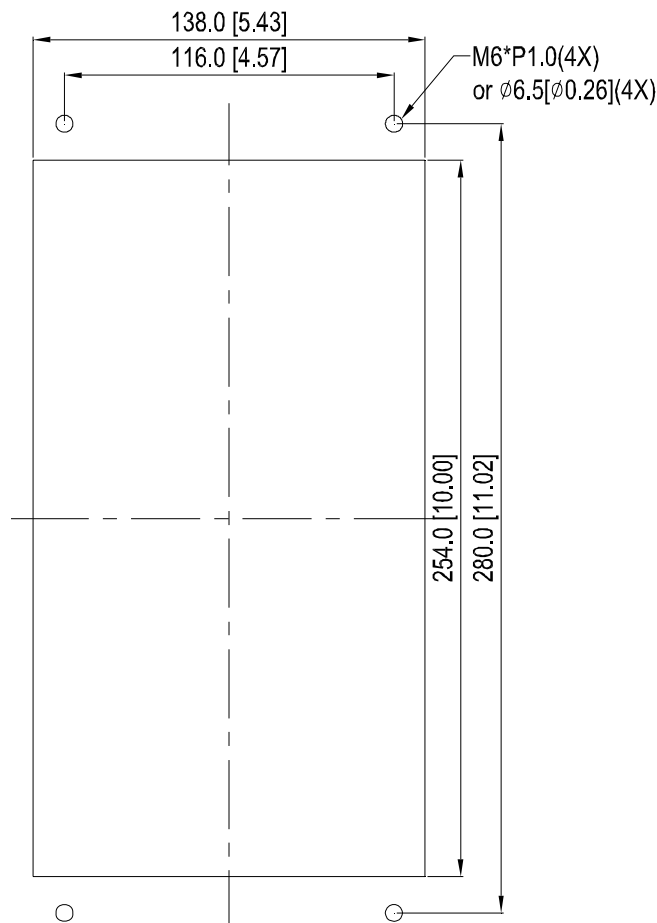


『MKC-AFM1』 Installation


1. Install accessory 1 by fastening 4 of the screw 1(M3). Screw torque: 6~8kg-cm (5.21~6.94lb-in).

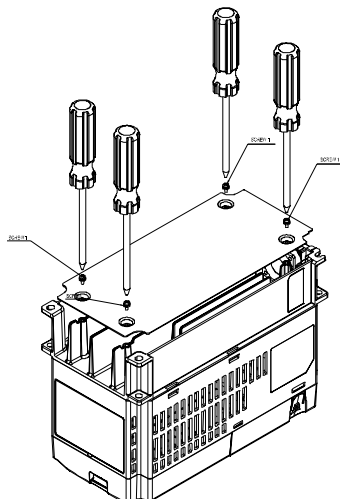


2. Install accessory 2&3 by fastening 2 of the screw 2(M6). Screw torque: 25~30kg-cm (5.21~6.94lb-in).

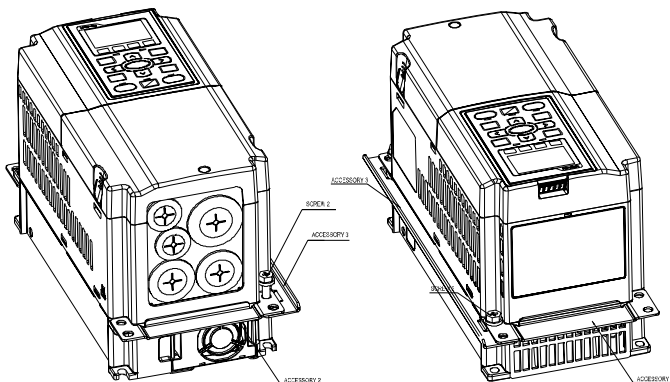

3. Install accessory 2&3 by fastening 2 of the screw 2(M6). Screw torque: 25~30kg-cm (5.21~6.94lb-in).

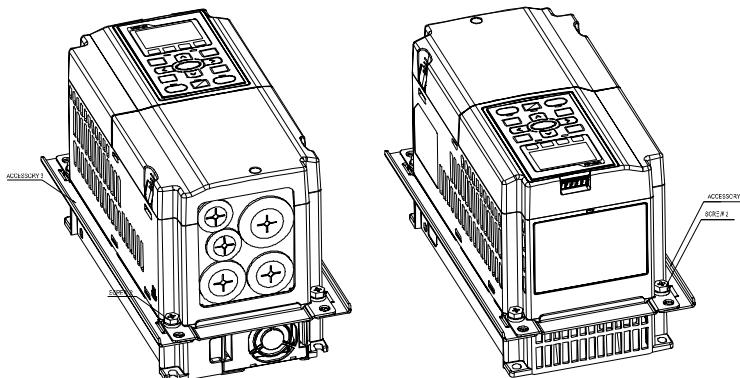


4. Plate installation, place 4 of the screw 2 (M6) through accessory 2&3 and the plate then fasten the screws. Screw torque: 25~30kg-cm (5.21~6.94lb-in).

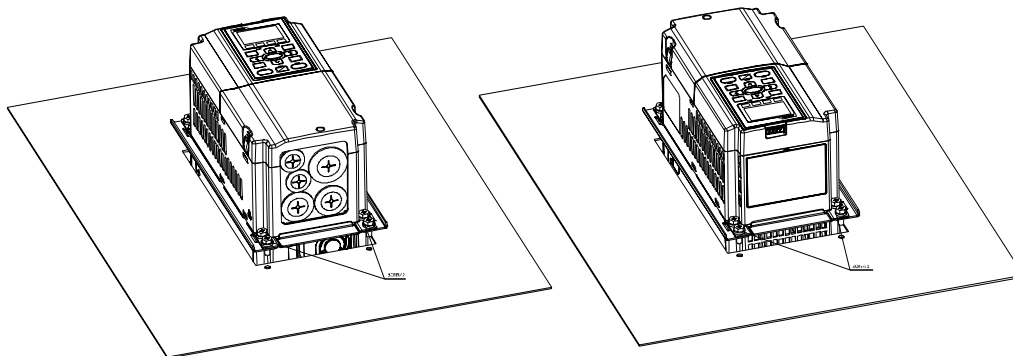


『MKC-AFM』 Installation


1. Install accessory 1 & 2 by fastening 2 of the screw 1(M3). Screw torque: 25~30kg-cm (5.21~6.94lb-in). (As shown in following figure)

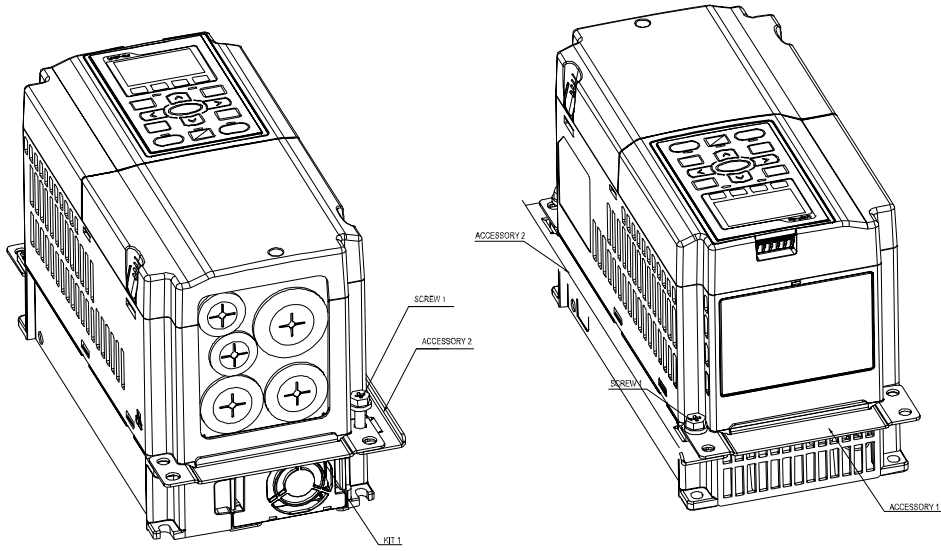

2. Install accessory 1 & 2 by fastening 2 of the screw 1(M3). Screw torque: 25~30kg-cm (5.21~6.94lb-in). (As shown in following figure)

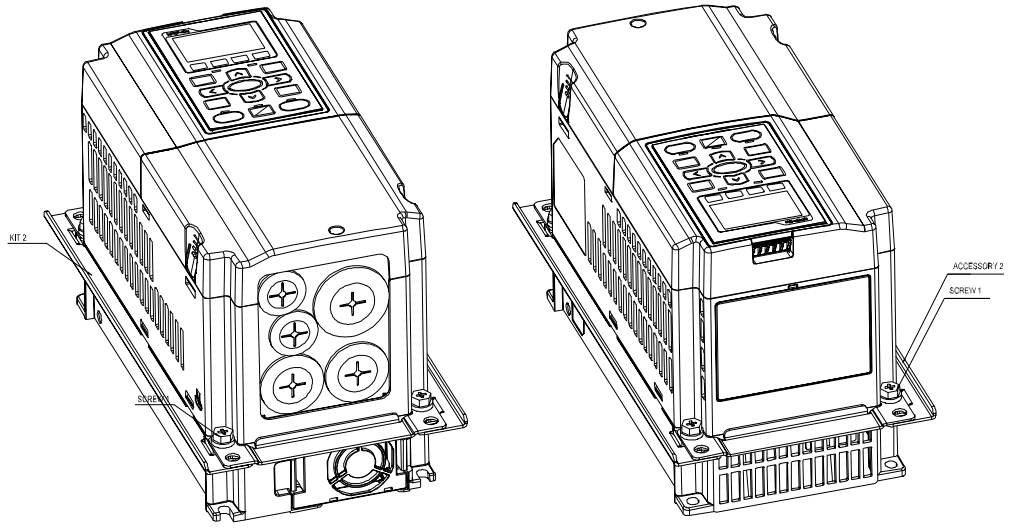

3. Plate installation, place 4 of the screw 2 (M6) through accessory 1&2 and the plate then fasten the screws. Screw torque: 25~30kg-cm (5.21~6.94lb-in). (As shown in following figure)

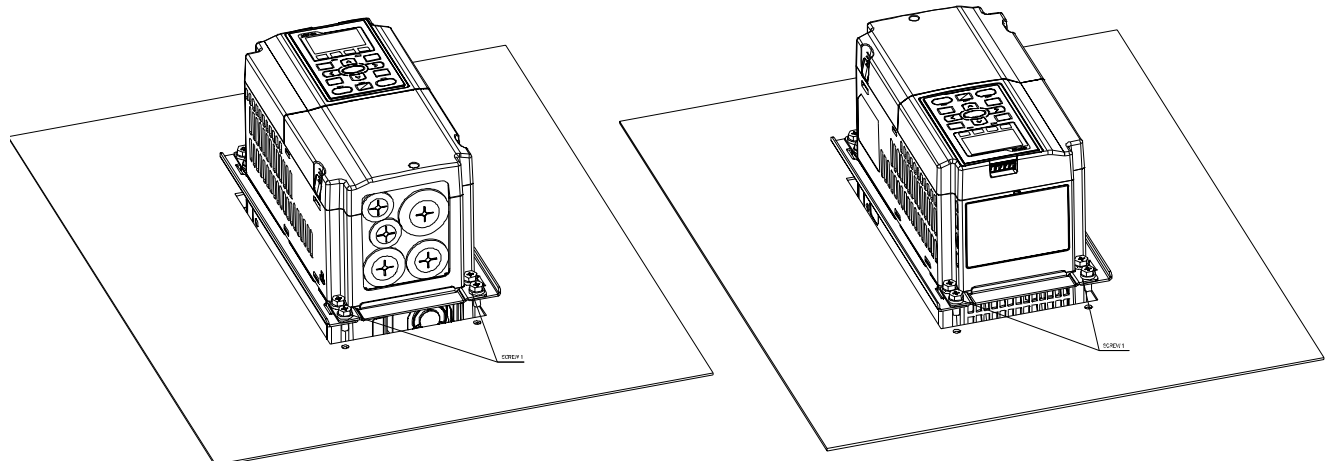


Frame B


『MKC-BFM』

Applicable model

VFD055C23A; VFD075C23A; VFD110C23A; VFD075C43A/43E; VFD110C43A/43E; VFD150C43A/43E

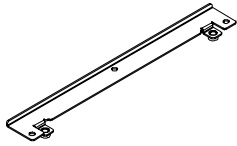

Accessories 1*2

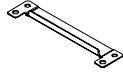 


Accessories 2*2

Screw 1 *4 ~ M8*P 1.25;

Screw 2*6 ~ M6*P 1.0;


Cutout dimension

Unit: mm [inch]

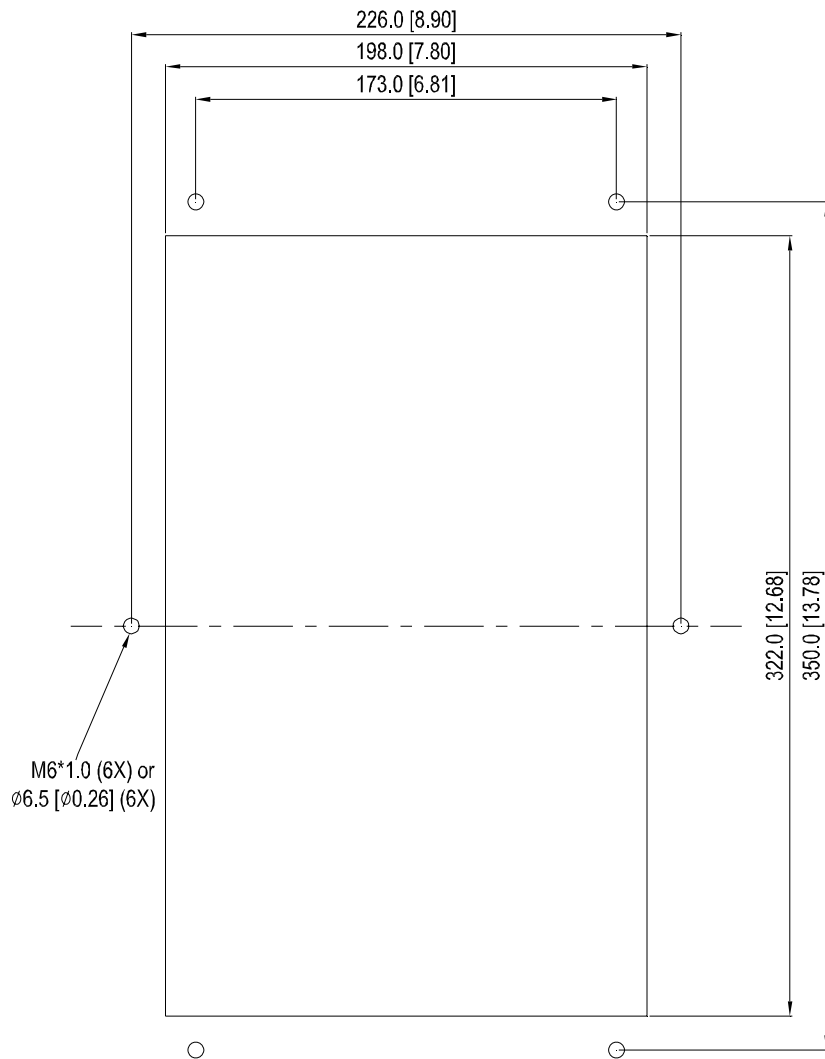


『MKC-BFM』 Installation

1. Install accessory 1 & 2 by fastening 4 of the screw 1 (M8). Screw torque: 40~45kg-cm (34.7~39.0lb-in). (As shown in the following figure)

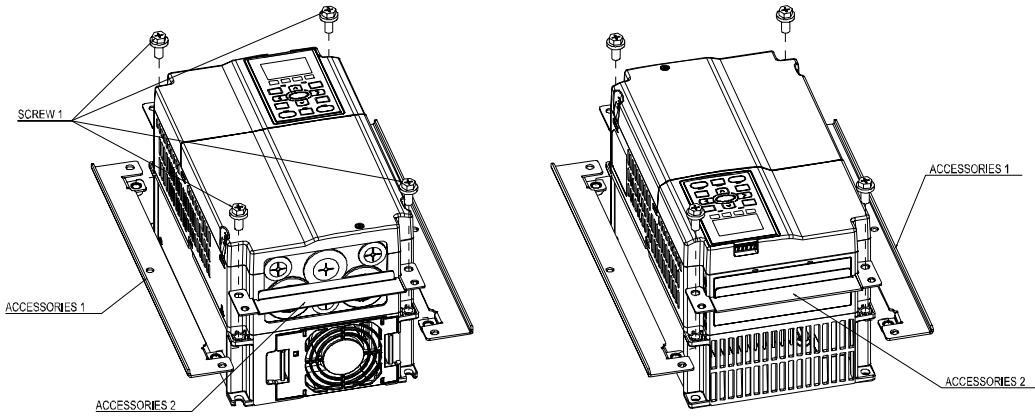

2. Plate installation, place 6 of the screw 2 (M6) through accessory 1&2 and the plate then fasten the screws. Screw torque: 25~30kg-cm (5.21~6.94lb-in). (As shown in the following figure)

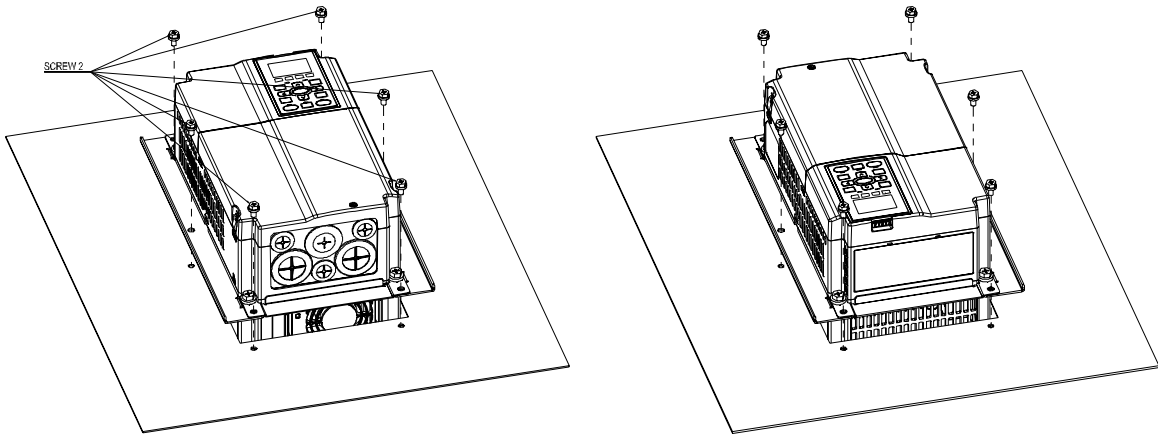


Frame C


『MKC-CFM』

Applicable model

 VFD150C23A; VFD185C23A; VFD220C23A; VFD185C43A/43E; VFD220C43A/43E; VFD300C43A/43E

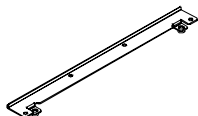

Accessories 1*2

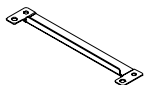 


Accessories 2*2

Screw 1*4 ~ M8*P 1.25;
Screw 2*8 ~ M6*P 1.0;


Cutout dimension

Unit: mm [inch]

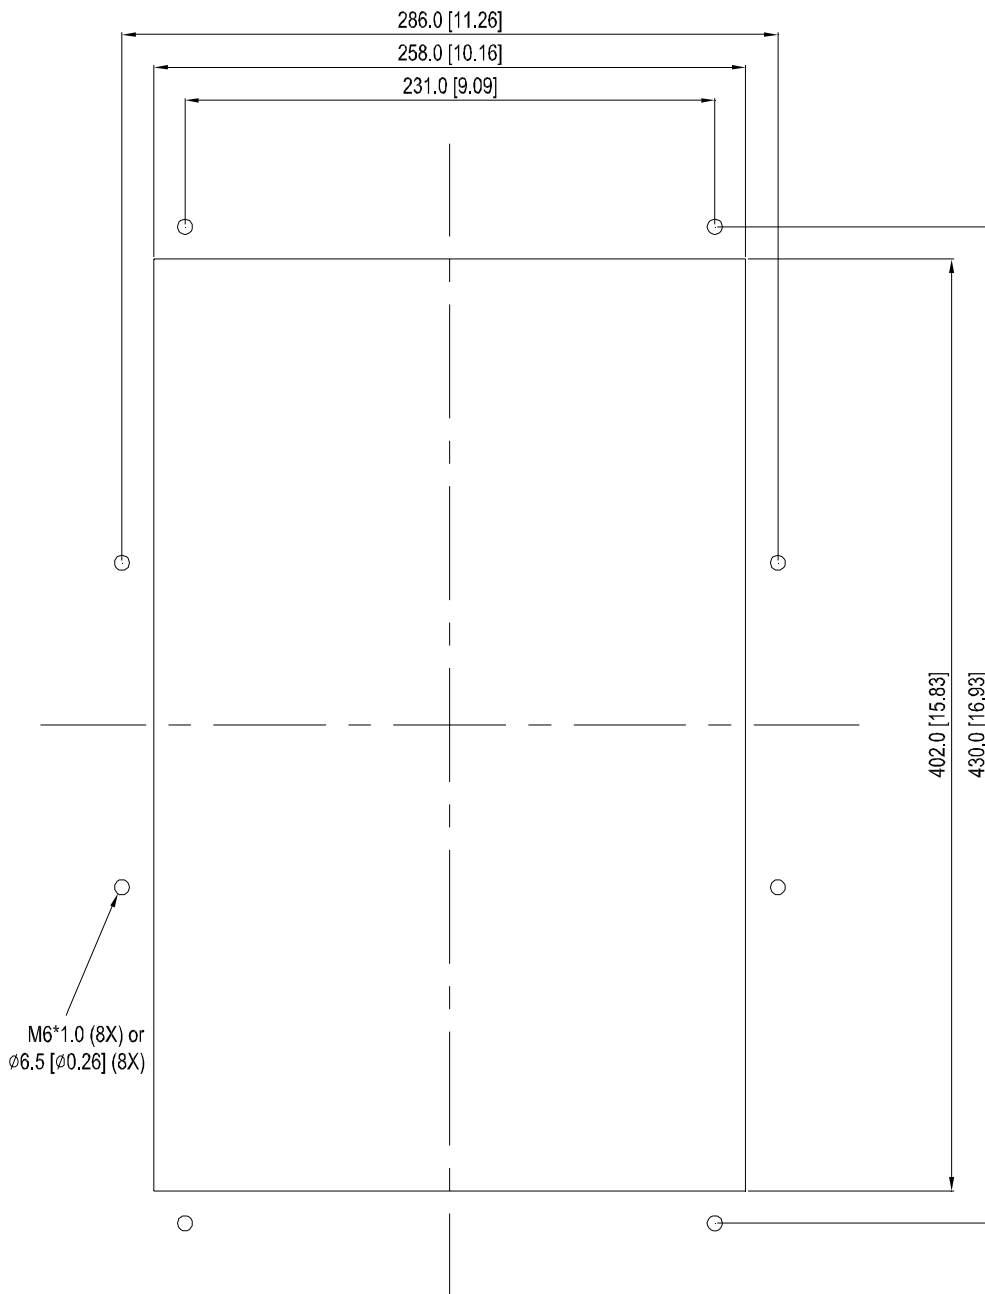


『MKC-CFM』 Installation

1. Install accessory 1 & 2 by fastening 4 of the screw 1 (M8). Screw torque: 50~55kg-cm (43.4~47.7lb-in). (As shown in the following figure)

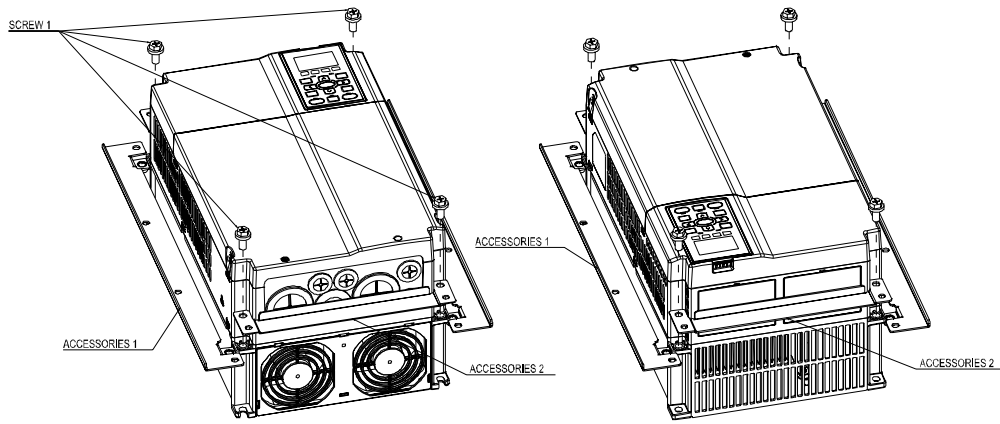

2. Plate installation, place 8 of the screw 2 (M6) through accessories 1&2 and the plate then fasten the screws. Screw torque: 25~30kg-cm (5.21~6.94lb-in). (As shown in the following figure)

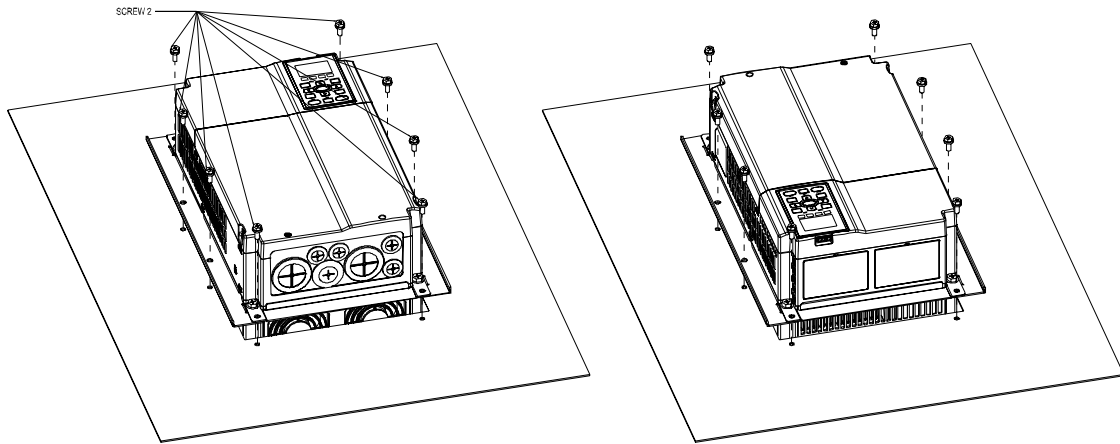


Frame D

Applicable model

VFD300C23A/23E; VFD370C23A/23E; VFD370C43A/43E; VFD450C43A/43E; VFD550C43A/43E;
VFD750C43A/43E


Cutout dimension

Unit: mm [inch]

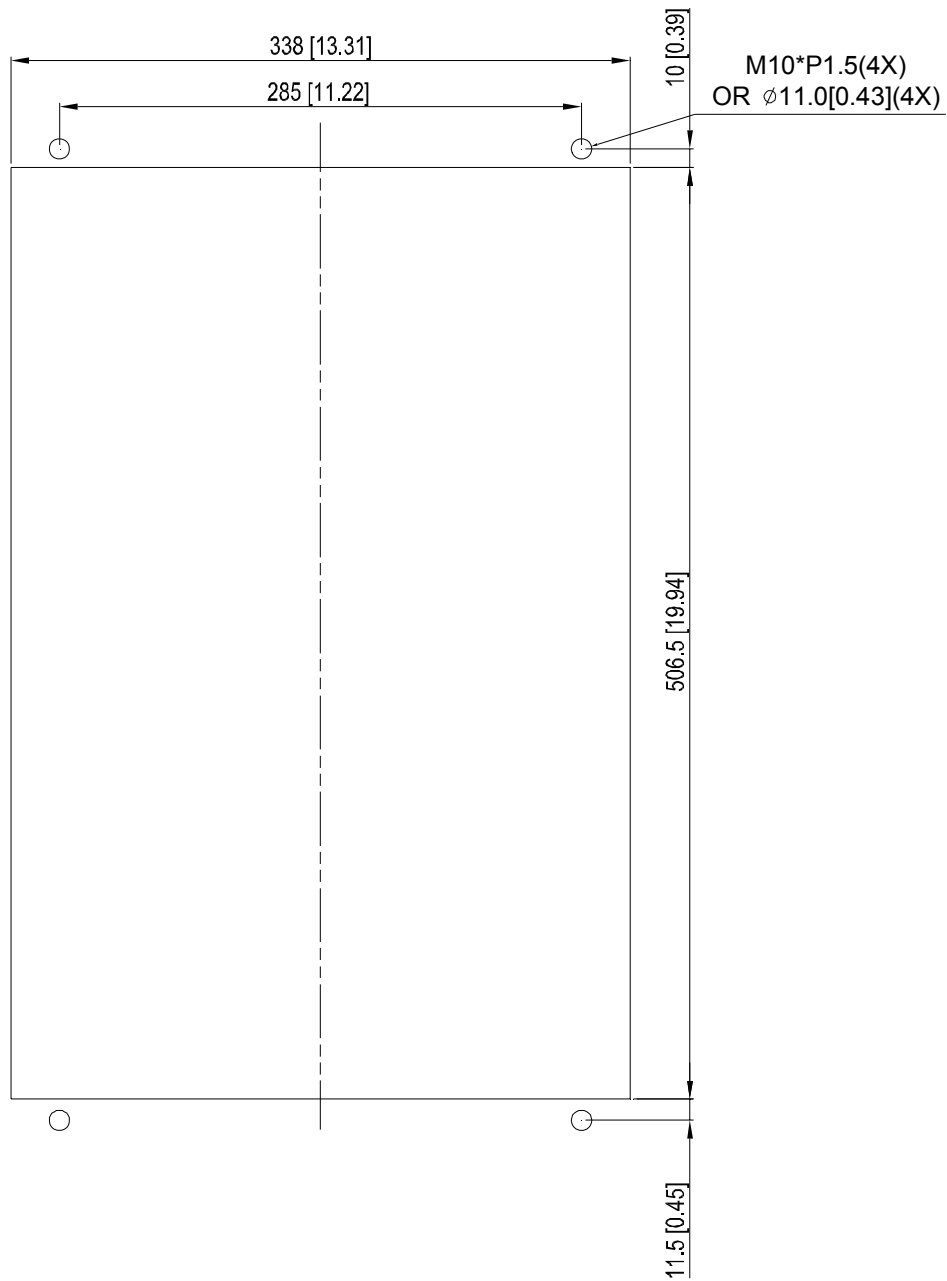


Frame D&E


1. Loosen 8 screws and remove Fixture 2 (as shown in the following figure).

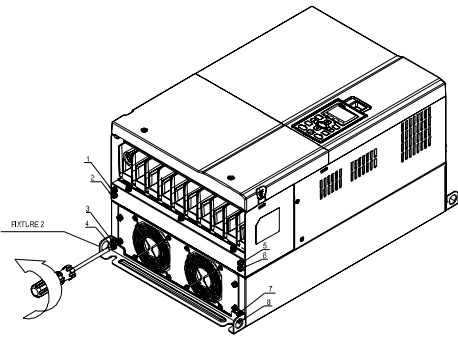


2. Loosen 10 screws and remove Fixture 1 (as shown in the following figure).

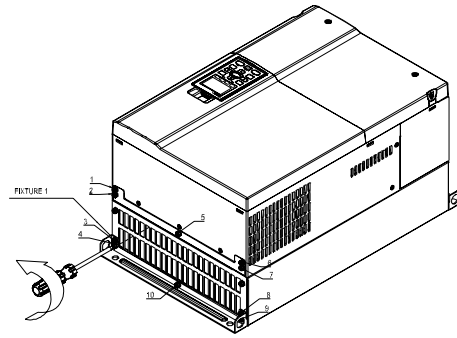


3. Fasten 4 screws (as shown in the following figure). Screw torque: 30~32kg-cm (26.0~27.8lb-in).

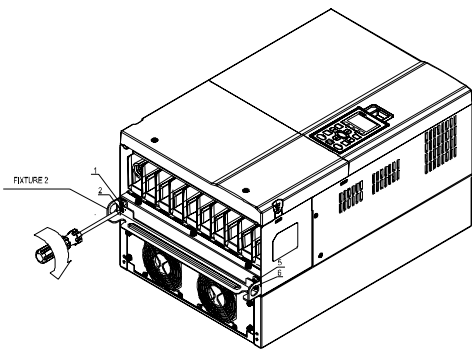


4. Fasten 5 screws (as shown in the following figure). Screw torque: 30~32kg-cm (26.0~27.8lb-in).

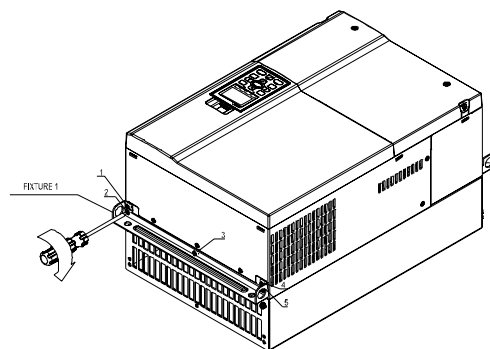


5. Fasten 4 screws (as shown in the following figure). Screw torque: 24~26kg-cm (20.8~22.6lb-in).

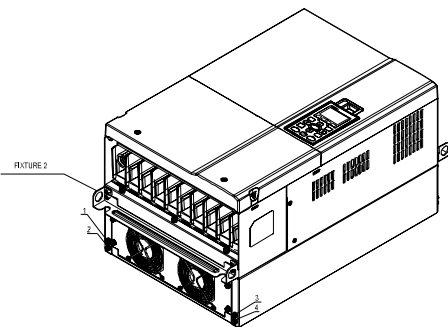

6. Fasten 5 screws (as shown in the following figure). Screw torque: 24~26kg-cm (20.8~22.6lb-in).

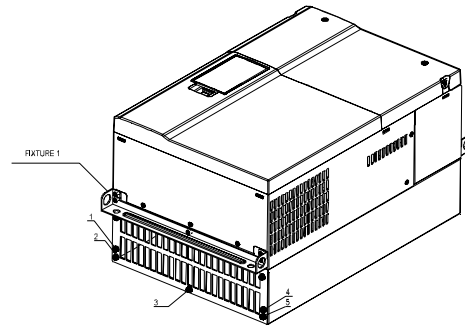

7. Place 4 screws (M10) through Fixture 1&2 and the plate then fasten the screws. (as shown in the following figure) Screw torque: 200~240kg-cm (173.6~208.3lb-in).

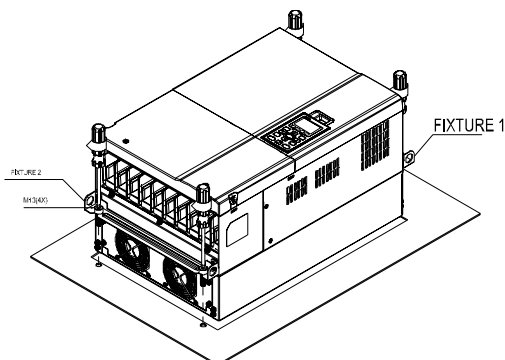


Frame E

Applicable model

VFD450C23A/23E; VFD550C23A/23E; VFD750C23A/23E; VFD900C43A/43E; VFD1100C43A/43E

Cutout dimension

Unit: mm [inch]

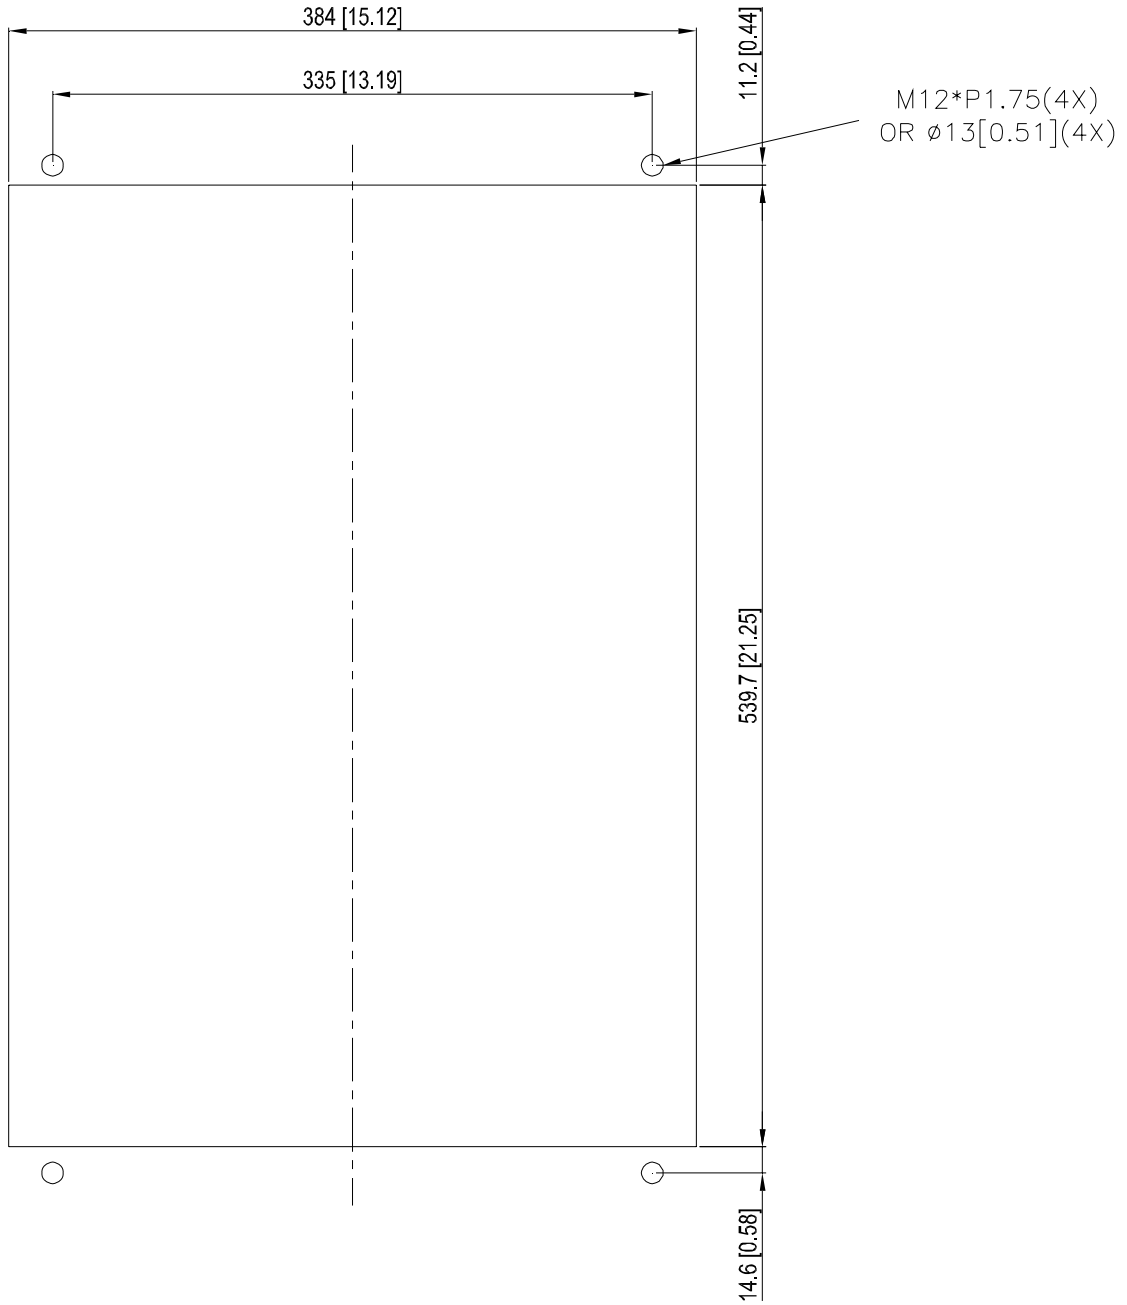


Frame F

Applicable model

VFD900C23A/23E; VFD1320C43A/43E; VFD1600C43A/43E


Cutout dimension

Unit: mm [inch]

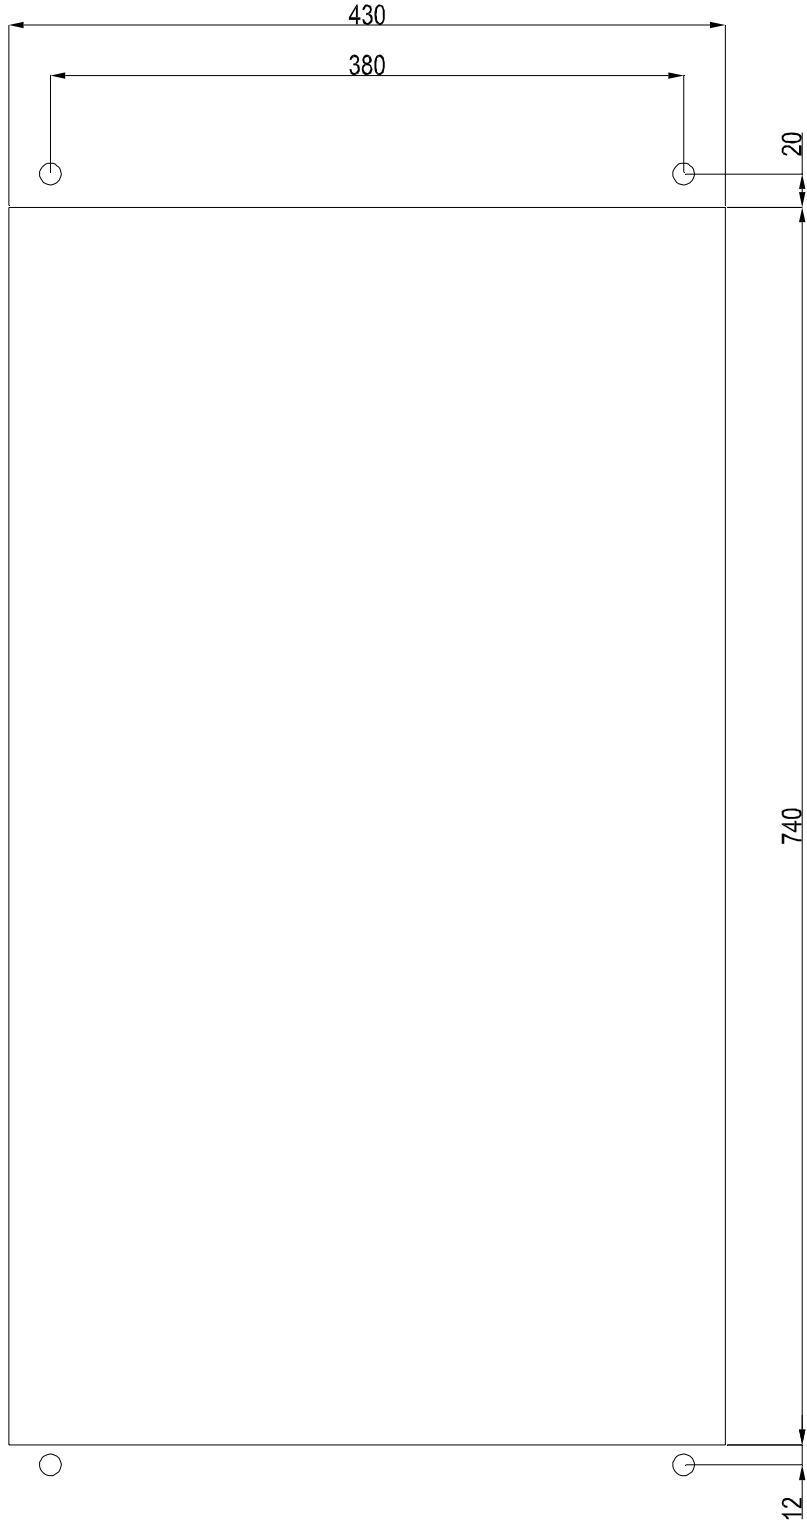


Frame F


1. Loosen 12 screws and remove Fixture 2.

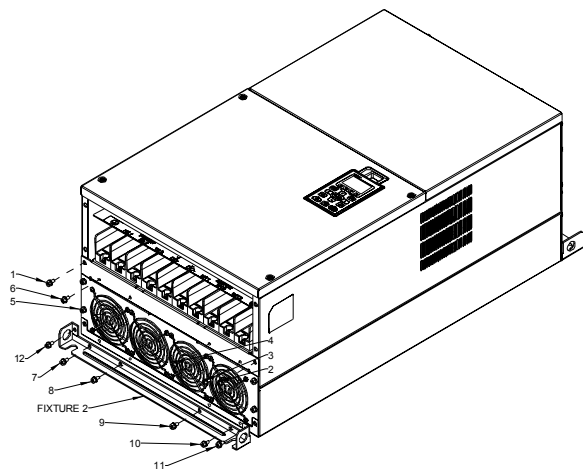


2. Loosen 12 screws and remove Fixture 2.
Screw torque: 24~26kg-cm (20.8~22.6lb-in).

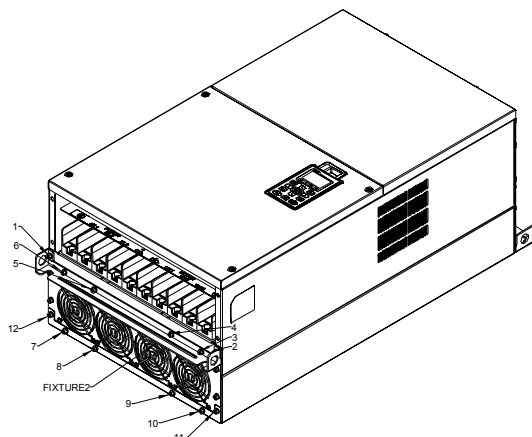


3. Loosen screw 13 ~26 and remove Fixture 1.

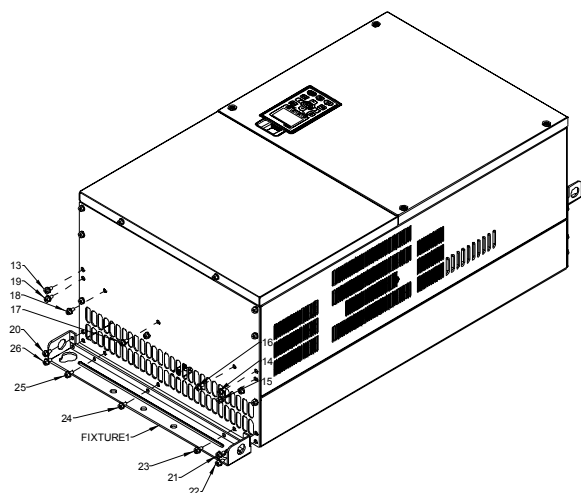

4. Install Fixture 1 by fasten screw 13 ~26
Screw torque: 24~26kg-cm (20.8~22.6lb-in).

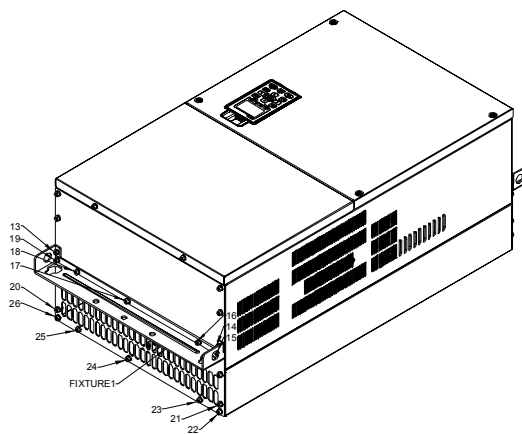

5. Place 4 of the M12 screws through Fixture 1&2 and plate then fasten the screws.
Screw torque: 300~400kg-cm (260~347lb-in).

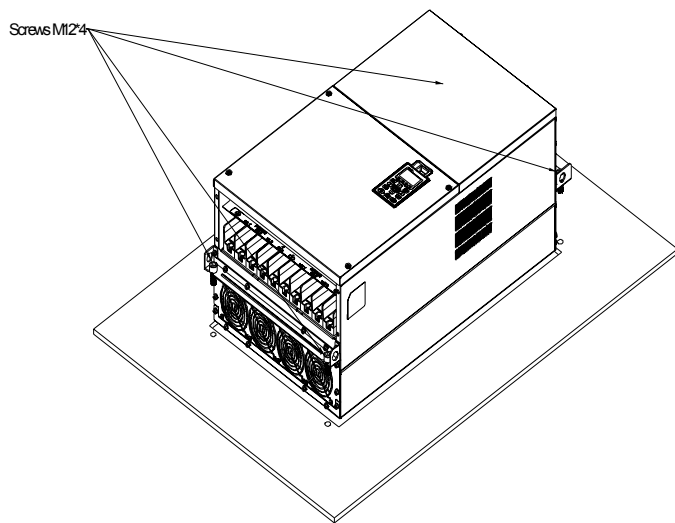

USB/RS-485 Communication Interface IFD6530

⚠ Warning


- ✓ Please thoroughly read this instruction sheet before installation and putting it into use.
- ✓ The content of this instruction sheet and the driver file may be revised without prior notice. Please consult our distributors or download the most updated instruction/driver version at http://www.delta.com.tw/product/em/control/cm/control_cm_main.asp

1. Introduction

IFD6530 is a convenient RS-485-to-USB converter, which does not require external power-supply and complex setting process. It supports baud rate from 75 to 115.2kbps and auto switching direction of data transmission. In addition, it adopts RJ-45 in RS-485 connector for users to wire conveniently. And its tiny dimension, handy use of plug-and-play and hot-swap provide more conveniences for connecting all DELTA IABU products to your PC.

Applicable Models: All DELTA IABU products.


(Application & Dimension)

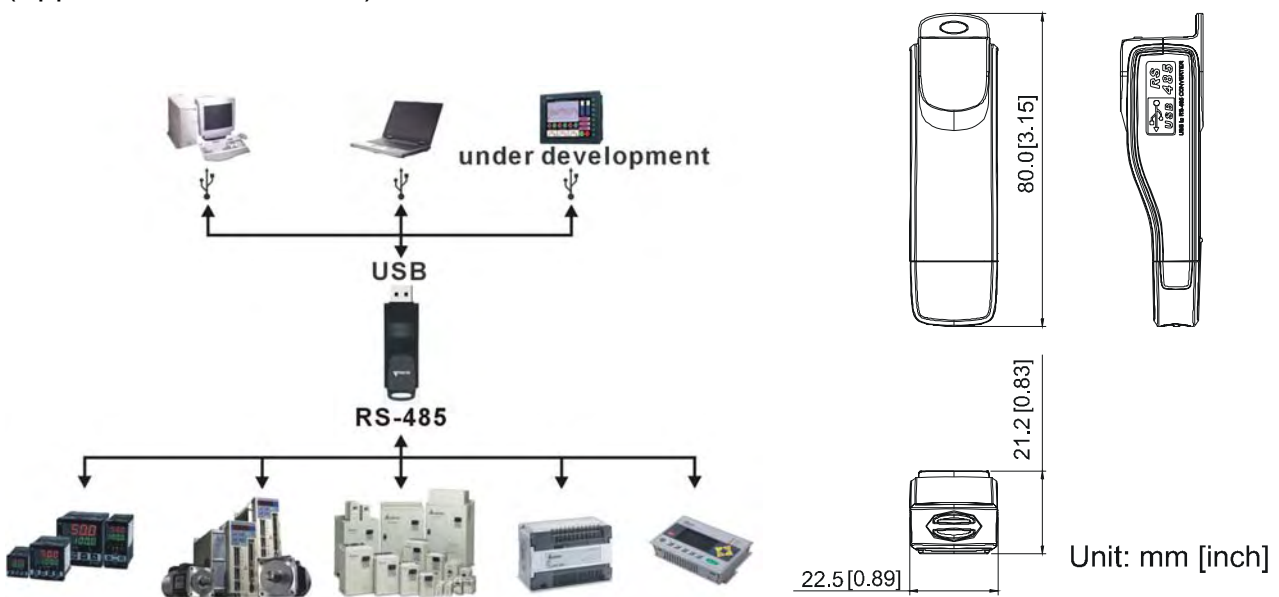

2. Specifications

Power supply	No external power is needed
Power consumption	1.5W
Isolated voltage	2,500VDC
Baud rate	75, 150, 300, 600, 1,200, 2,400, 4,800, 9,600, 19,200, 38,400, 57,600, 115,200 bps
RS-485 connector	RJ-45
USB connector	A type (plug)
Compatibility	Full compliance with USB V2.0 specification
Max. cable length	RS-485 Communication Port: 100 m
Support RS-485 half-duplex transmission	

■ RJ-45

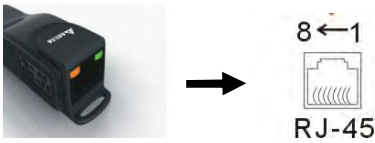

PIN	Description
1	Reserved
2	Reserved
3	GND
4	SG-


PIN	Description
5	SG+
6	GND
7	Reserved
8	+9V

3. Preparations before Driver Installation

Please extract the driver file (IFD6530_Drivers.exe) by following steps. You could find driver file (IFD6530_Drivers.exe) in the CD supplied with IFD6530.

Note: DO NOT connect IFD6530 to PC before extracting the driver file.


STEP 1

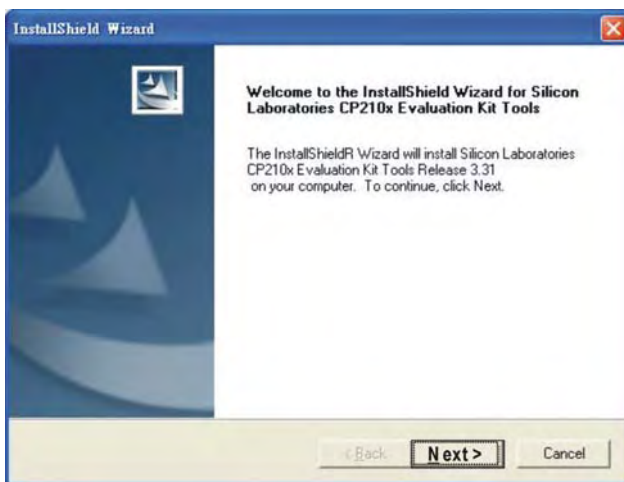

STEP 2



STEP 3

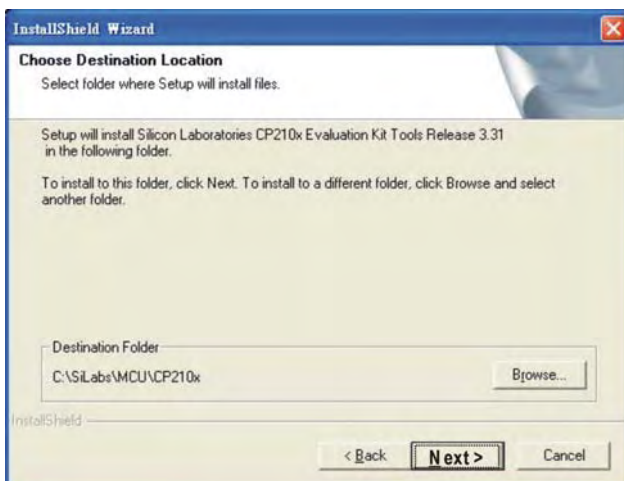

STEP 4



STEP 5

You should have a folder marked SiLabs under drive C. c:\ SiLabs


4. Driver Installation

After connecting IFD6530 to PC, please install driver by following steps.



STEP 1




STEP 2

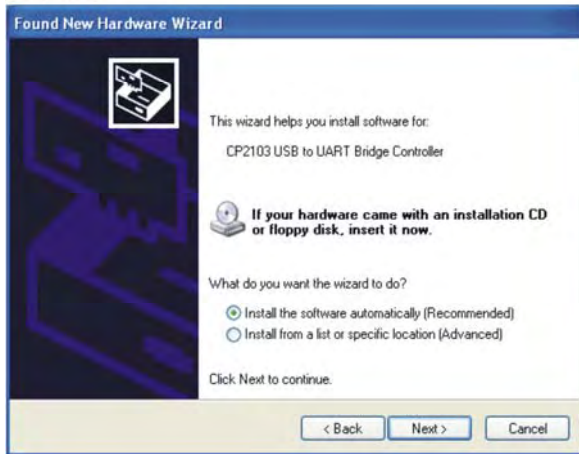

OR

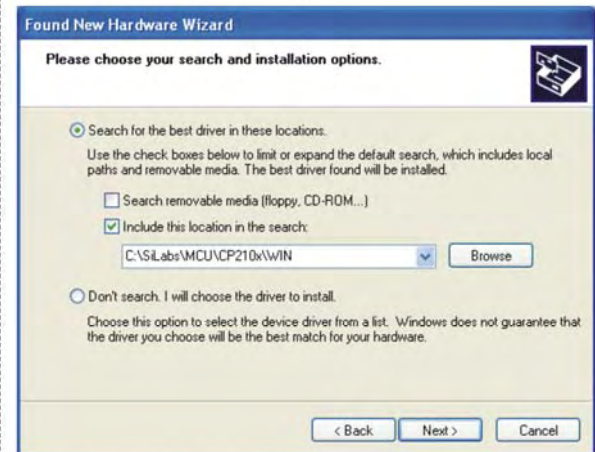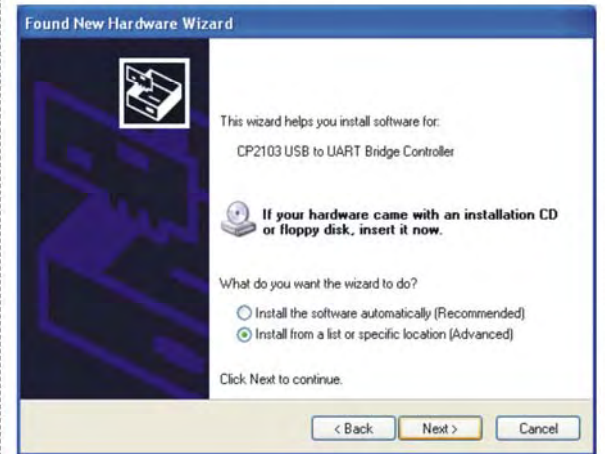

Browse and select directory, or enter
C:\SiLabs\MCU\CP210x\WIN

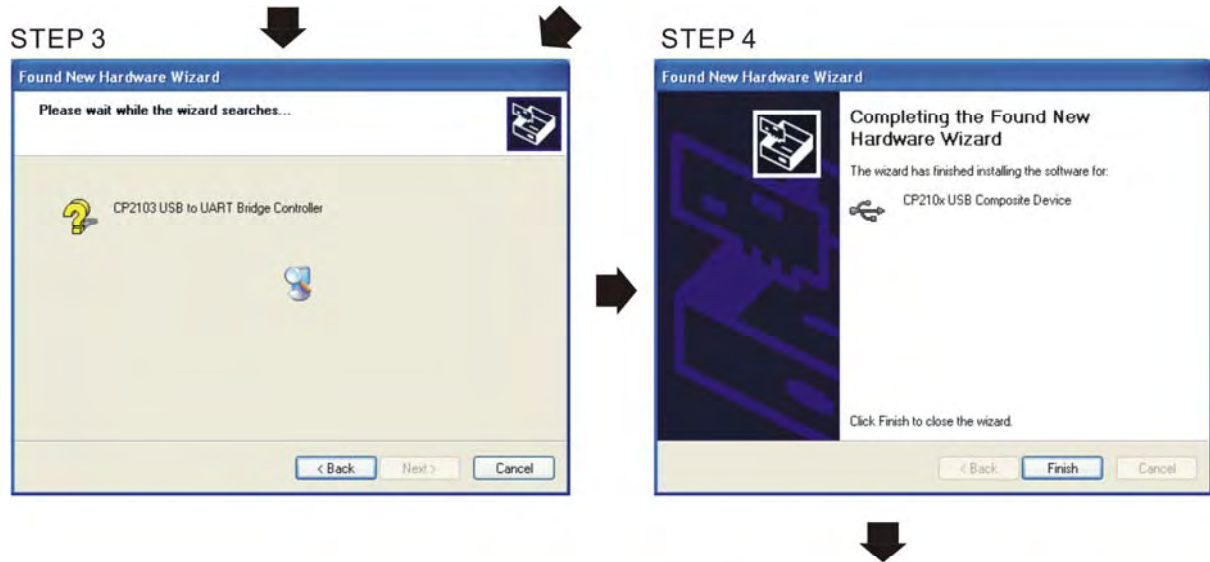

STEP 5
Repeat Step 1 to Step 4 to complete COM PORT setting.

5. LED Display


1. Steady Green LED ON: power is ON.
2. Blinking orange LED: data is transmitting.

Chapter 8 Option Cards


Please select applicable option cards for your drive or contact local distributor for suggestion.
 To prevent drive damage during installation, please removes the digital keypad and the cover before wiring. Refer to the following instruction.

Removed key cover


Frame A&B&C
 Screw Torque: 8~10Kg-cm [6.9~8.7lb-in.]

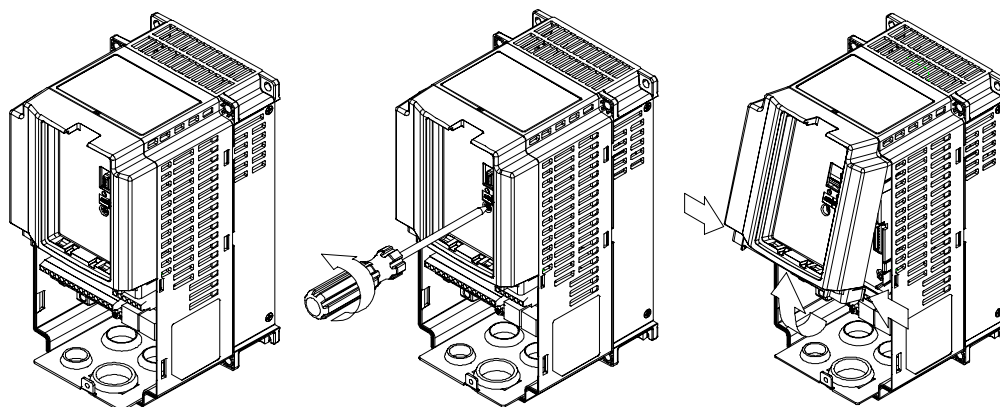

Frame D
 Screw Torque: 8~10Kg-cm [6.9~8.7lb-in.]

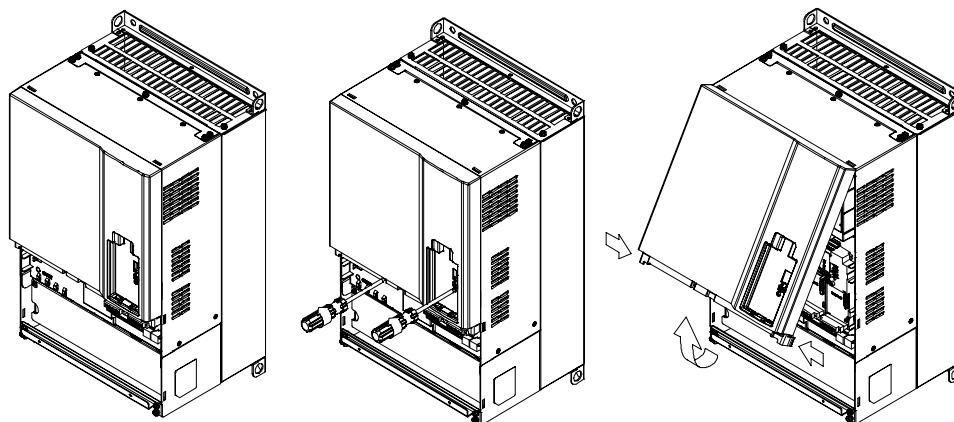


Frame E
 Slightly lift the cover then pull to remove. Screw Torque: 12~15Kg-cm [10.4~13lb-in.]

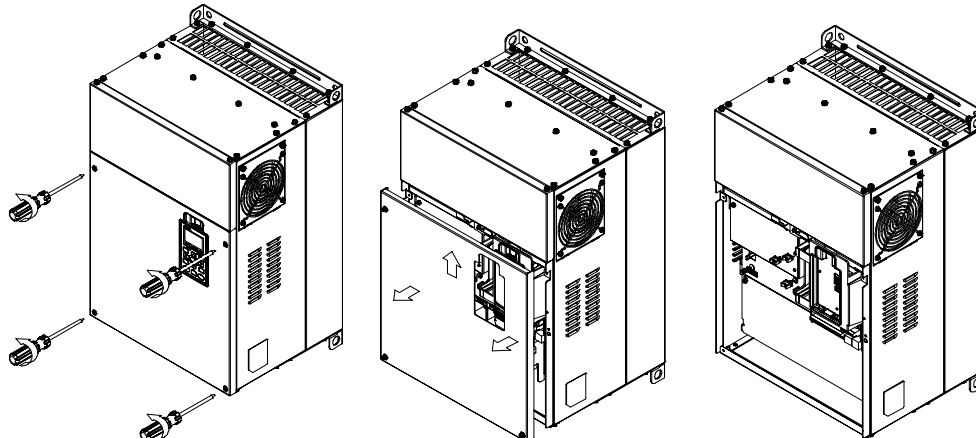


Frame F

Screw Torque: 12~ 15 Kg-cm [10.4~13lb-in.]

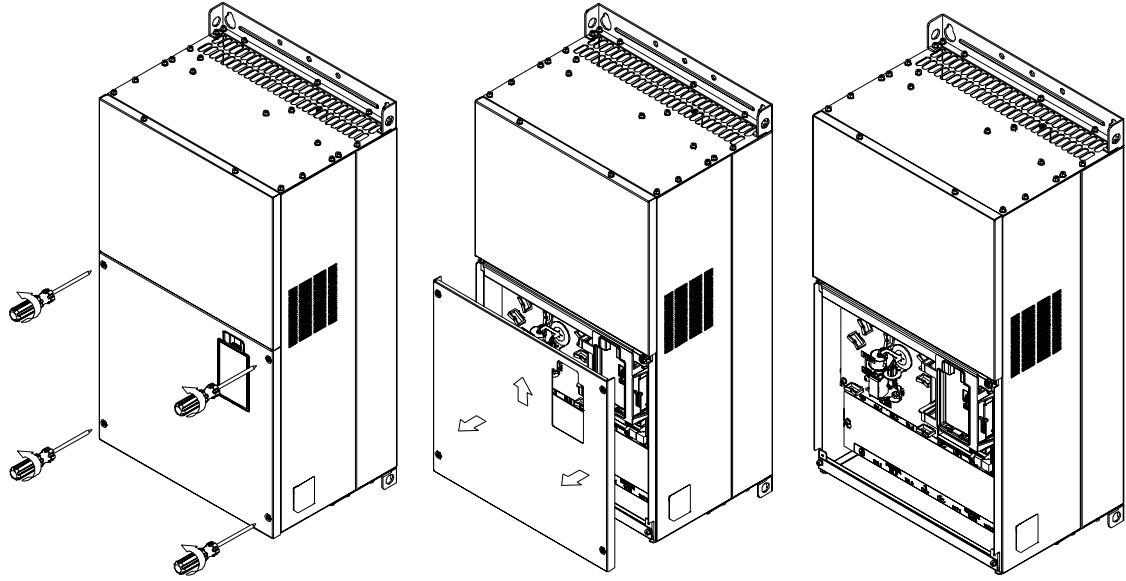


Frame G


Screw Torque: 12~15Kg-cm [10.4~13lb-in.]

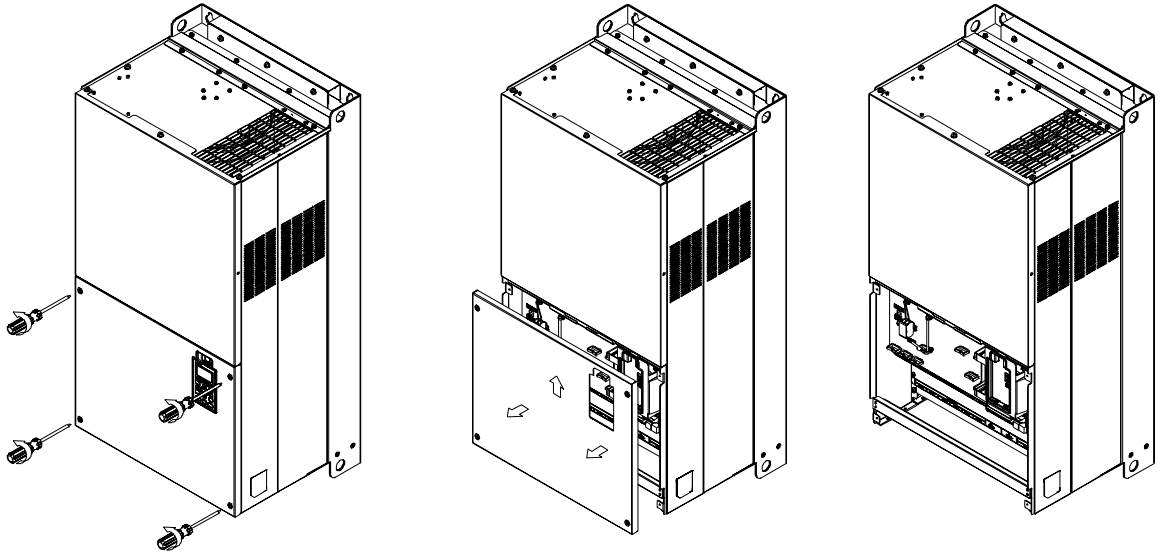

Frame H

Screw Torque: 14~16Kg-cm [12.15~13.89lb-in.]

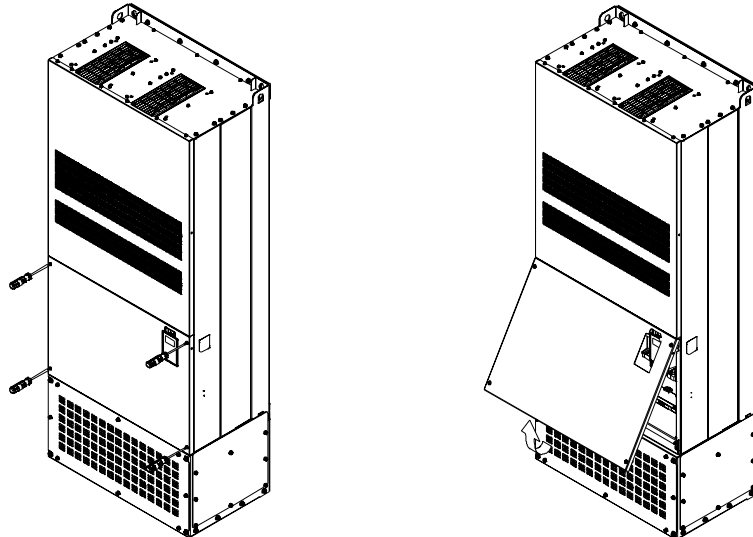

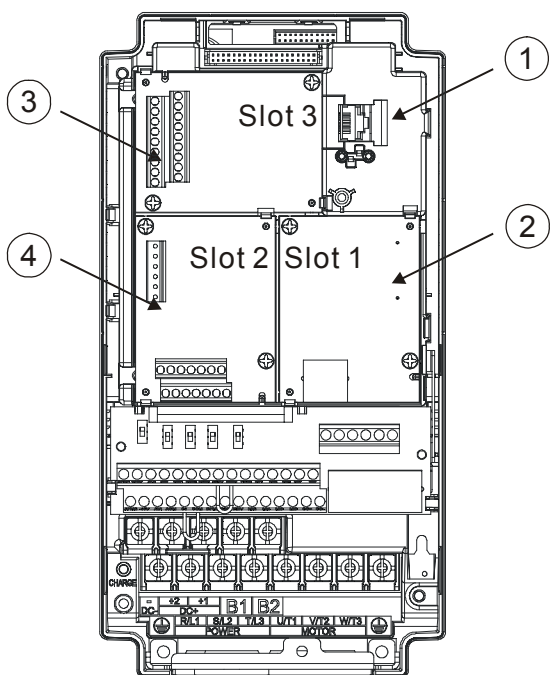

1	<p>RJ45 (Socket) for digital keypad KPC-CC01; KPC-CE01</p> <p><u>Please refer to CH10 Digital Keypad for more details on KPC-CE01.</u></p> <p><u>Please refer to CH10 Digital Keypad for more details on optional accessory RJ45 extension cable.</u></p>
2	<p>Communication extension card (Slot 1)</p> <p><u>CMC-MOD01;</u> <u>CMC-PD01;</u> <u>CMC-DN01;</u> <u>CMC-EIP01;</u> <u>EMC-COP01;</u></p>
3	<p>I/O & Relay extension card (Slot 3)</p> <p><u>EMC-D42A;</u> <u>EMC-D611A;</u> <u>EMC-R6AA;</u> <u>EMC-BPS01;</u></p>
4	<p>PG Card (Slot 2)</p> <p><u>EMC-PG01L;</u> <u>EMC-PG01O;</u> <u>EMC-PG01U;</u> <u>EMC-PG01R;</u></p>

Screws Speciation for option card terminals:

EMC-D42A <u>EMC-D611A</u> <u>EMC-BPS01</u>	Wire gauge	24~12AWG (0.205~3.31mm ²)
	Torque	4Kg-cm [3.47lb-in]
EMC-R6AA	Wire gauge	24~16AWG (0.205~1.31mm ²)
	Torque	6Kg-cm [5.21lb-in]
EMC-PG01L EMC-PG01O EMC-PG01R EMC-PG01U	Wire gauge	30~16AWG (0.0509~1.31mm ²)
	Torque	2Kg-cm [1.74lb-in]

EMC-D42A

	Terminals	Descriptions
I/O Extension Card	COM	Common for Multi-function input terminals Select SINK(NPN)/SOURCE(PNP) in J1 jumper / external power supply
	MI10~ MI13	Refer to parameters 02-26~02-29 to program the multi-function inputs MI10~MI13. Internal power is applied from terminal E24: +24Vdc±5% 200mA, 5W External power +24VDC: max. voltage 30VDC, min. voltage 19VDC, 30W ON: the activation current is 6.5mA OFF: leakage current tolerance is 10µA
	MO10~MO11	Multi-function output terminals (photocoupler) Duty-cycle: 50% Max. output frequency: 100Hz Max. current: 50mA Max. voltage: 48Vdc
	MXM	Common for multi-function output terminals MO10, MO11(photocoupler) Max 48VDC 50mA

EMC-D611A

	Terminals	Descriptions
I/O Extension Card	AC	AC power Common for multi-function input terminal (Neutral)
	MI10~ MI15	Refer to Pr. 02.26~ Pr. 02.31 for multi-function input selection Input voltage: 100~130VAC Input frequency: 57~63Hz Input impedance: 27Kohm Terminal response time: ON: 10ms OFF: 20ms

EMC-R6AA

	Terminals	Descriptions
Relay Extension Card	R10A~R15A R10C~R15C	Refer to Pr. 02.36~ Pr. 02.41 for multi-function input selection Resistive load: 5A(N.O.)/3A 250VAC 5A(N.O.)/3A 30VDC Inductive load (COS 0.4) 2.0A(N.O.)/1.2A 250VAC 2.0A(N.O.)/1.2A 30VDC It is used to output each monitor signal, such as drive is in operation, frequency attained or overload indication.

EMC-BPS01

	Terminals	Descriptions
External Power Supply	24V GND	Input power: 24V±5% Maximum input current:0.5A Note: 1) Do not connect control terminal +24V (Digital control signal common: SOURCE) directly to the EMC-BPS01input terminal 24V. 2) Do not connect control terminal GND directly to the EMC-BPS01 input termina GND.

EMC-PG01L

Terminal description


Set by Pr.10-00~10-02

Terminals		Descriptions
PG1	VP	Output voltage for power: +5V/+12V±5% (use FSW3 to switch +5V/+12V) Max. output current: 200mA
	DCM	Common for power and signal
	A1, /A1, B1, /B1, Z1, /Z1	Encoder input signal (Line Driver) It can be 1-phase or 2-phase input. Max. output frequency: 300kP/sec
PG2	A2, /A2, B2, /B2	Pulse Input signal (Line Driver or Open Collector) Open Collector input voltage: +5~+24V (Note1) It can be 1-phase or 2-phase input. Max. output frequency: 300kP/sec.
PG OUT	AO, /AO, BO, /BO, ZO, /ZO, SG,	PG Card Output signals. It has division frequency function: 1~255 times Max. output voltage for Line driver: 5VDC Max. output current: 50mA Max. output frequency: 300kP/sec SG is the GND of PG card. It is also the GND of position machine or PLC to make the output signal to be the common pivot point.

Note 1: Open Collector application, input current 5~15mA to each set then each set needs one pull-up resistor.


5V	Recommended pull-up resistor: above 100~220Ω, 1/2W
12V	Recommended pull-up resistor: above 510~1.35kΩ, 1/2W
24V	Recommended pull-up resistor, above 1.8k~3.3kΩ, 1/2W

PG2 Wiring Diagram

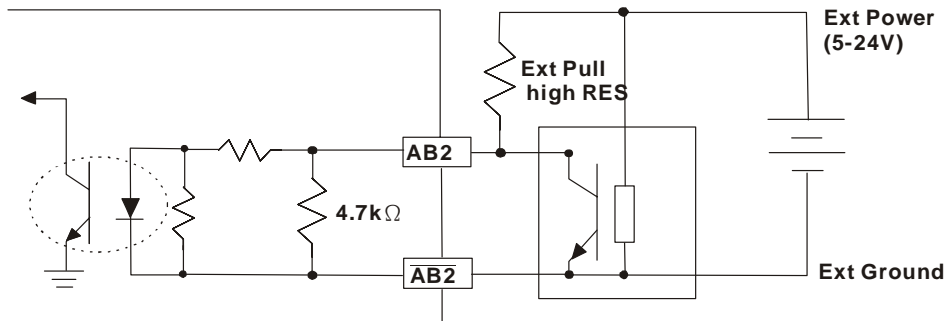

■ **Wiring Diagram**

- ☑ Please use a shielded cable to prevent interference. Do not run control wires parallel to any high voltage AC power line (200 V and above).
- ☑ Recommended wire size 0.21 to 0.81mm² (AWG24 to AWG18).
- ☑ Cable length: Less than 100m

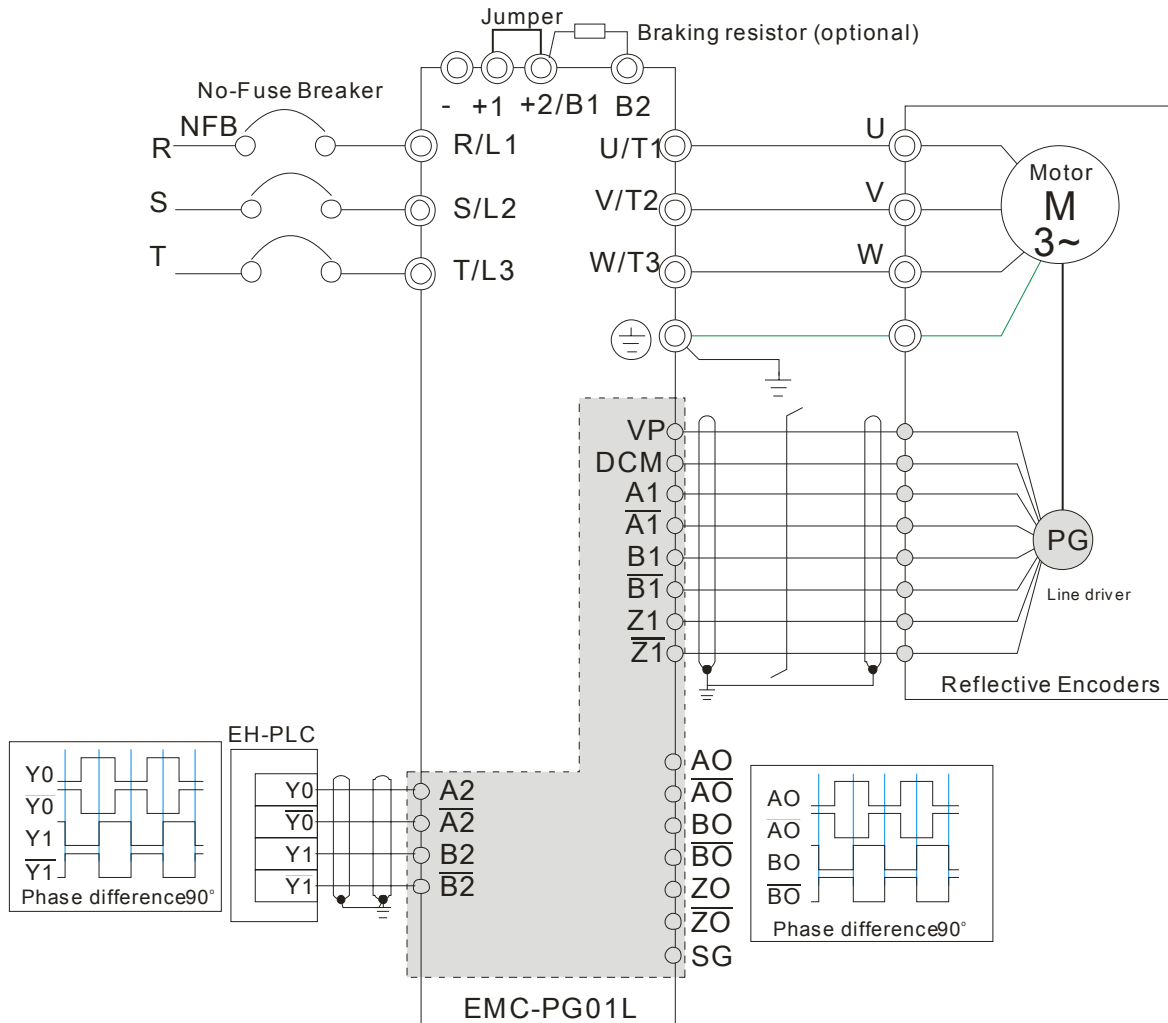

EMC-PG010

Terminal descriptions


Set by Pr.10-00~10-02

Terminals		Descriptions
PG1	VP	Output voltage for power: +5V/+12V±5% (use FSW3 to switch +5V/+12V) Max. output current: 200mA
	DCM	Common for power and signal
	A1, /A1, B1, /B1, Z1, /Z1	Encoder Input signal (Line Driver or Open Collector) Open Collector Input Voltage: +5V/+12V It can be 1-phase or 2-phase input. Max. output frequency: 300kP/sec
PG2	A2, /A2, B2, /B2	Pulse Input Signal (Line Driver or Open Collector) Open Collector Input Voltage: +5~+24V It can be 1-phase or 2-phase input. Max. output frequency: 300kP/sec.
PG OUT	V+, V+	Needs external power source for PG OUT circuit. Input voltage of power: +12V ~ +24V
	V-	Input voltage for the negative side
	A/O, B/O, Z/O	PG Card Output signals has division frequency function: 1~255 times. On the open collector's output signal, add a high-pull resistor on the external power V+ ~ V- (e.g. power of PLC) to prevent the interference of the receiving signal. Max. ◦ [Three pull-up resistor are included in the package (1.8kW/1W)] Max. output frequency: 300KP/Sec

Note 1: Open Collector application, input current 5~15mA to each set then each set needs one pull-up resistor.


5V	Recommended pull-up resistor: above 100~220Ω, 1/2W
12V	Recommended pull-up resistor: above 510~1.35kΩ, 1/2W
24V	Recommended pull-up resistor, above 1.8k~3.3kΩ, 1/2W

PG1 Wiring Diagram

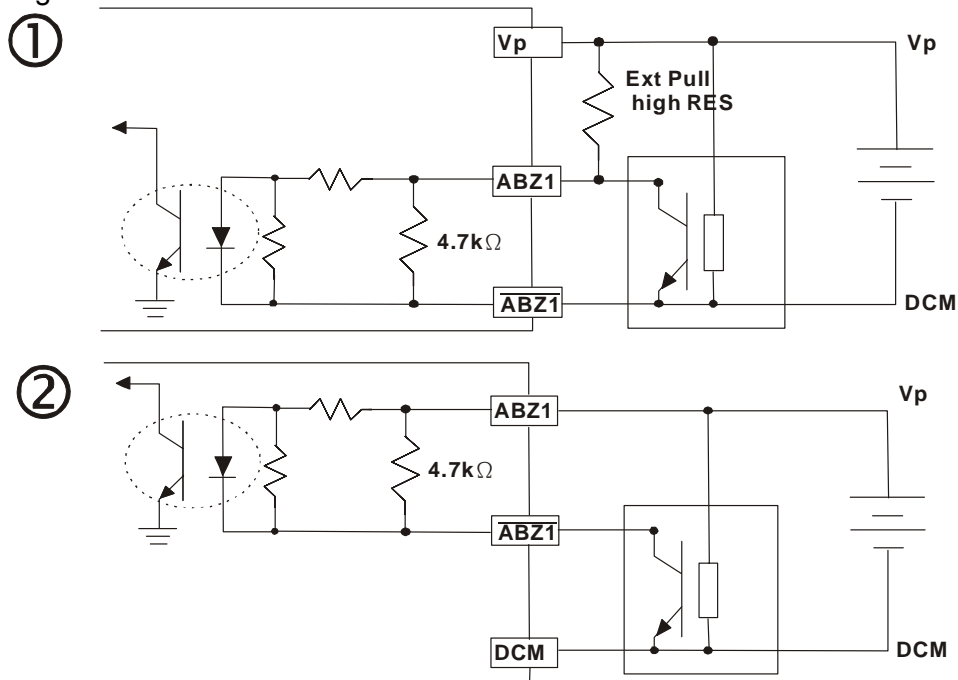


When wiring in this way, if there a signal on EMC-PG01's A1, B1 and Z1, LED lights is OFF.
if A1, B1 and Z1 have no signals, LED lights is ON.

PG2 Wiring Diagram

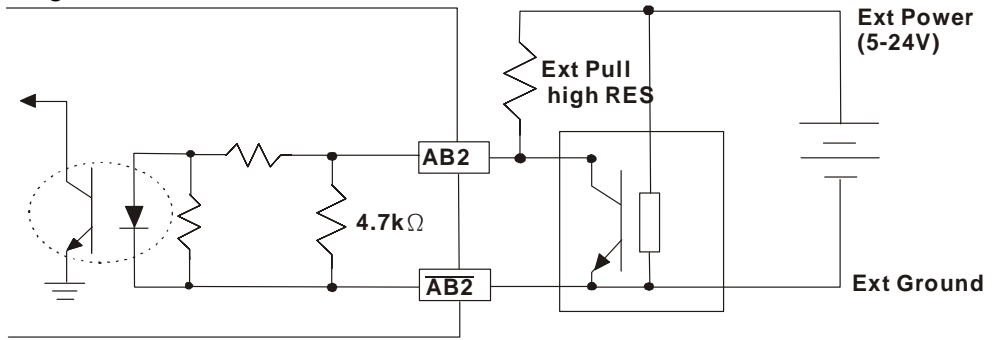

■ Wiring Diagram

- ☑ Please use a shielded cable to prevent interference. Do not run control wires parallel to any high voltage AC power line (200 V and above).
- ☑ Recommended wire size 0.21 to 0.81mm² (AWG24 to AWG18).
- ☑ Cable length: Less than 100m

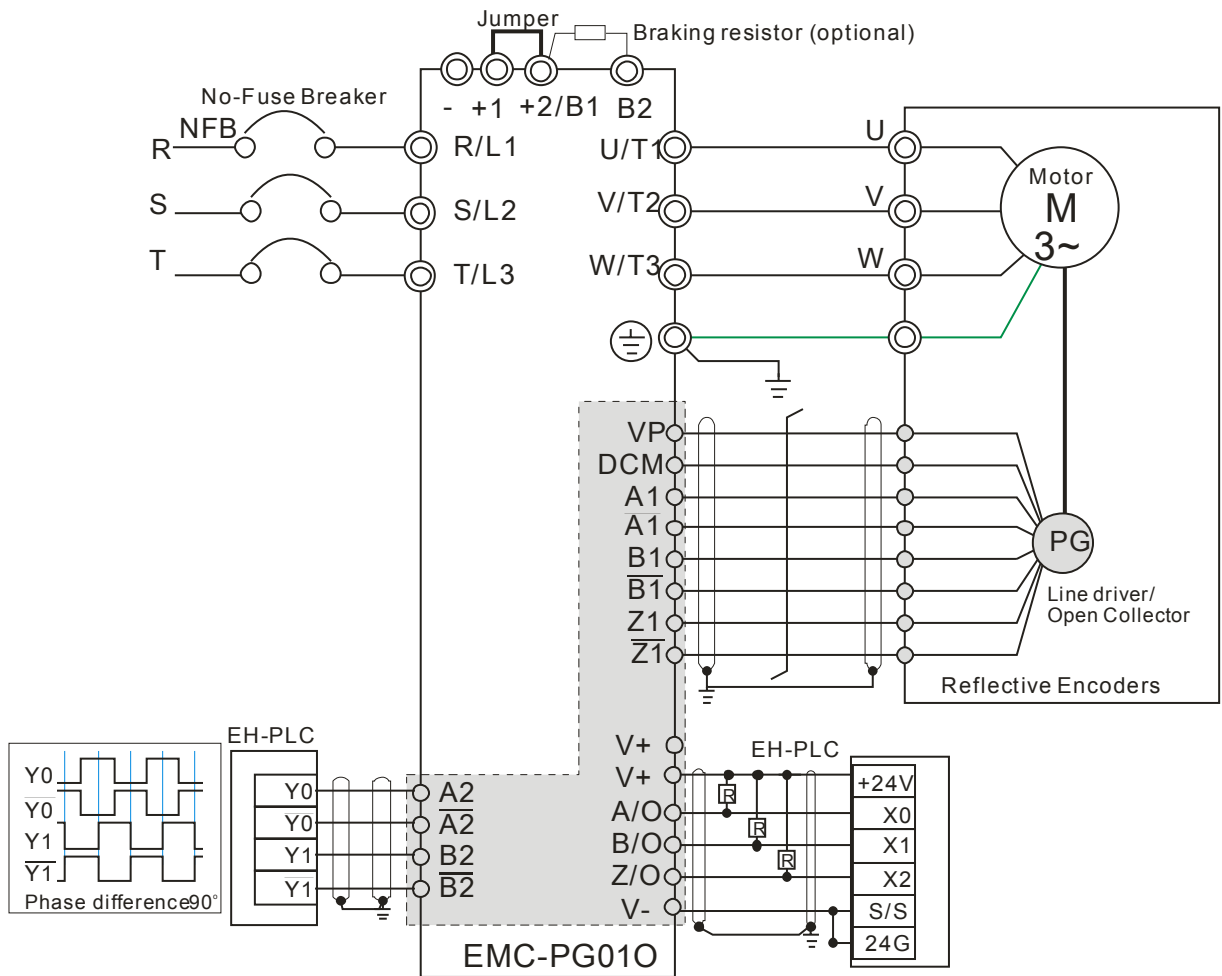

EMC-PG01U


- FJMP1 \boxed{S} : Standard UVW Output Encoder; \boxed{D} : Delta Encoder
- Set by Pr.10-00~10-02

Terminals		Descriptions
PG1	VP	Output voltage for power: +5V/+12V±5% (use FSW3 to switch +5V/+12V) Max. output current: 200mA
	DCM	Common for power and signal
	A1, /A1, B1, /B1, Z1, /Z1	Encoder input signal (Line Driver) It can be 1-phase or 2-phase input. Max. output frequency: 300kP/sec
	U1, /U1, V1, /V1, W1, /W1	Encoder input signal
PG2	A2, /A2, B2, /B2	Pulse Input signal (Line Driver or Open Collector) Open Collector Input Voltage: +5~+24V (Note1) It can be 1-phase or 2-phase input. Max. output frequency: 300kP/sec.
PG OUT	AO, /AO, BO, /BO, ZO, /ZO, SG	PG Card Output signals. It has division frequency function: 1~255 times Max. output voltage for Line driver: 5Vdc Max. output current: 50mA Max. output frequency: 300kP/sec SG is the GND of PG card. It is also the GND of position machine or PLC to make the output signal to be the common pivot point.

Note 1: Open Collector application, input current 5~15mA to each set then each set needs one pull-up resistor.


5V	Recommended pull-up resistor: above 100~220Ω, 1/2W
12V	Recommended pull-up resistor: above 510~1.35kΩ, 1/2W
24V	Recommended pull-up resistor, above 1.8k~3.3kΩ, 1/2W

PG2 Wiring Diagram

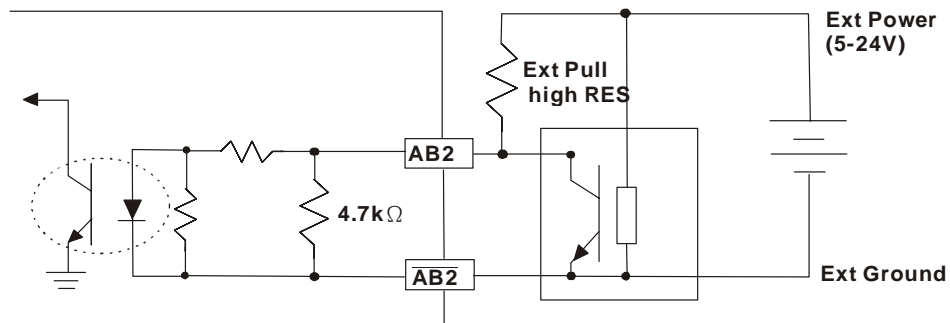

■ **Wiring Diagram**

- ☑ Please use a shielded cable to prevent interference. Do not run control wires parallel to any high voltage AC power line (200 V and above).
- ☑ Recommended wire size 0.21 to 0.81mm² (AWG24 to AWG18).
- ☑ Cable length: Less than 100m

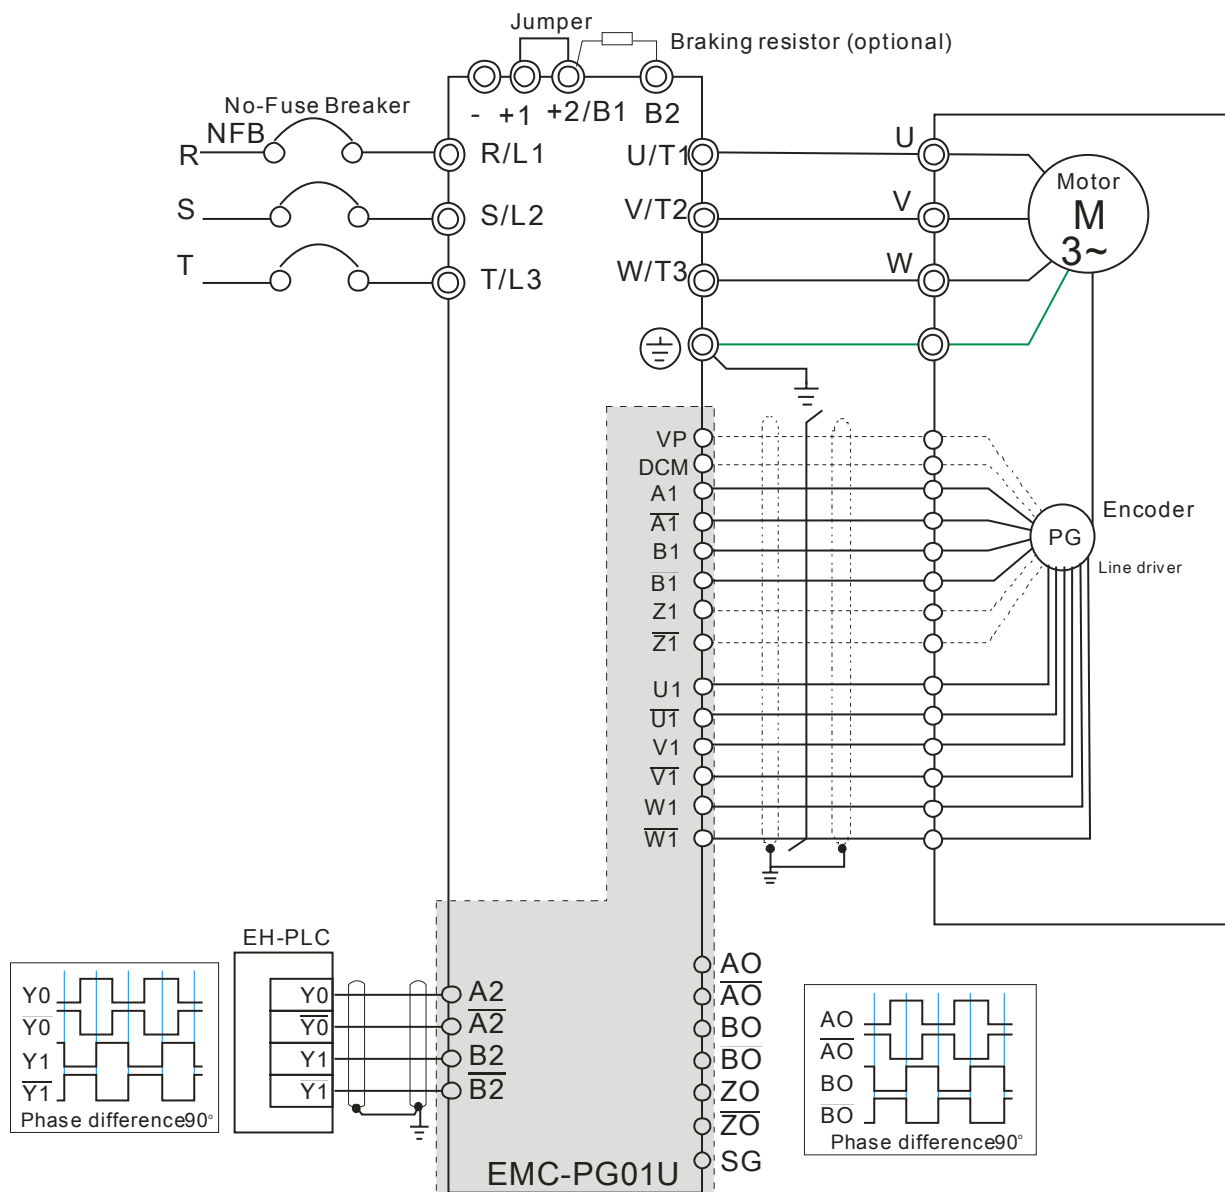

EMC-PG01R

Terminal Descriptions


Set by Pr.10-00~10-02

Terminals		Descriptions
PG1	R1- R2	Resolver Output Power 7Vrms, 10kHz
	S1,S2, S3, S4,	Resolver Input Signal 3.5±0.175Vrms, 10kHz
PG2	A2, /A2, B2, /B2	Pulse Input signal (Line Driver or Open Collector) Open Collector Input Voltage: +5~+24V (Note1) It can be 1-phase or 2-phase input. Max. output frequency: 300kP/sec.
PG OUT	AO, /AO, BO, /BO, ZO, /ZO, SG,	PG Card Output signals. It has division frequency function: 1~255 times Max. output voltage for Line driver: 5VDC Max. output current: 50mA Max. output frequency: 300kP/sec SG is the GND of PG card. It is also the GND of position machine or PLC to make the output signal to be the common pivot point.

Note 1: Open Collector application, input current 5~15mA to each set then each set needs one pull-up resistor.


5V	Recommended pull-up resistor: above100~220Ω, 1/2W
12V	Recommended pull-up resistor: above 510~1.35kΩ, 1/2W
24V	Recommended pull-up resistor, above1.8k~3.3kΩ, 1/2W

PG2 Wiring Diagram

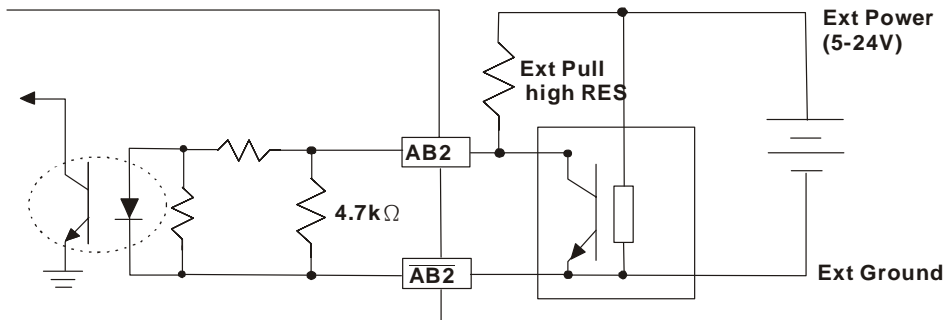

■ **Wiring Diagram**

- ☑ Please use a shielded cable to prevent interference. Do not run control wires parallel to any high voltage AC power line (200 V and above).
- ☑ Recommended wire size 0.21 to 0.81mm² (AWG24 to AWG18).
- ☑ Cable length: Less than 100m

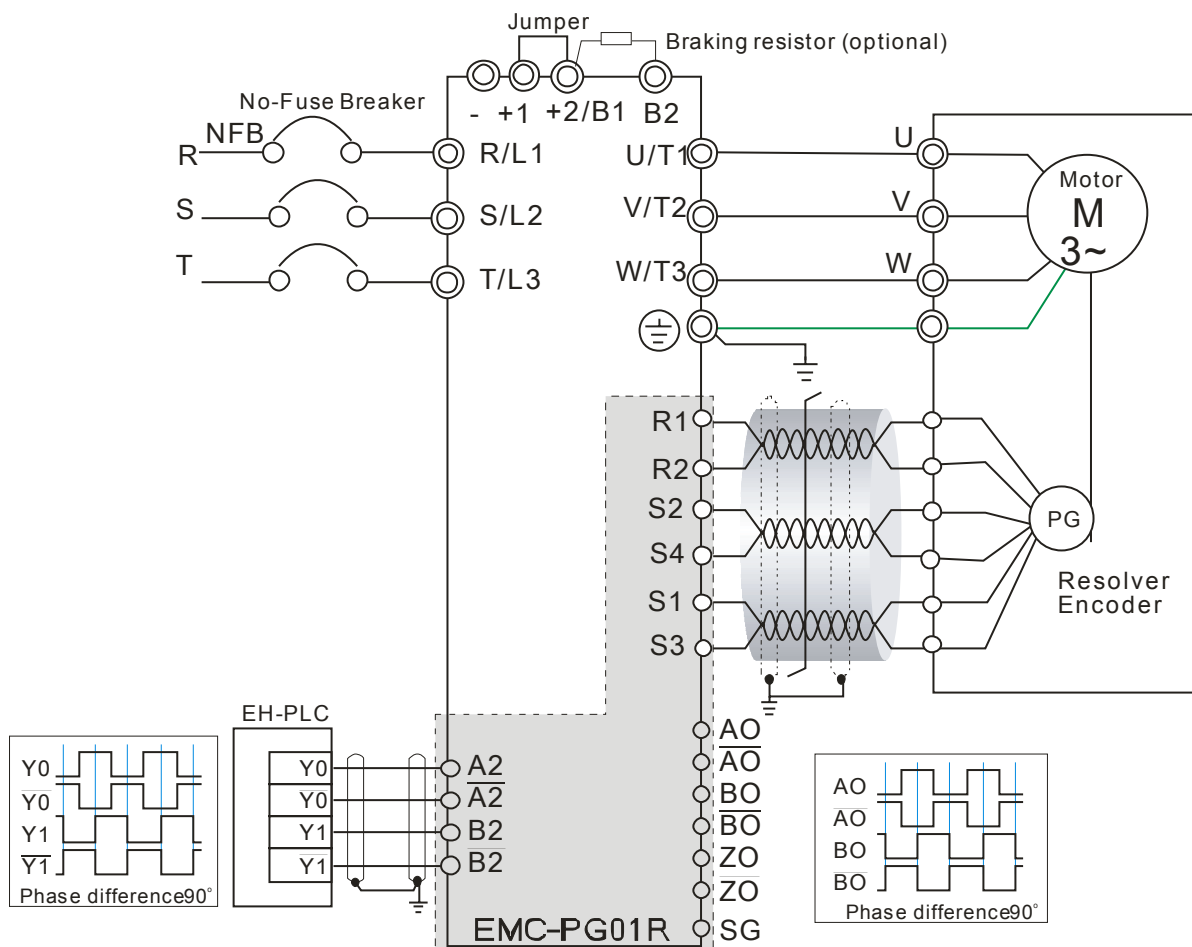


CMC-MOD01

■ Features

1. Supports Modbus TCP protocol
2. MDI/MDI-X auto-detect
3. Baud rate: 10/100Mbps auto-detect
4. E-mail alarm
5. AC motor drive keypad/Ethernet configuration
6. Virtual serial port.

■ Product File

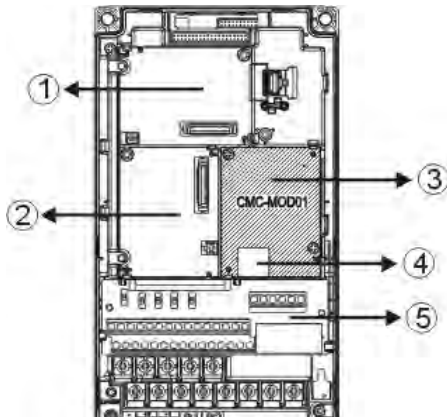

①	I/O CARD & Relay Card
②	PG Card
③	Comm. Card
④	RJ-45 connection port
⑤	Removable control circuit terminal

■ Specifications

Network Interface

Interface	RJ-45 with Auto MDI/MDIX
Number of ports	1 Port
Transmission method	IEEE 802.3, IEEE 802.3u
Transmission cable	Category 5e shielding 100M
Transmission speed	10/100 Mbps Auto-Detect
Network protocol	ICMP, IP, TCP, UDP, DHCP, HTTP, SMTP, MODBUS OVER TCP/IP, Delta Configuration

Electrical Specification


Power supply voltage	5VDC (supply by the AC motor drive)
Insulation voltage	2KV
Power consumption	0.8W
Weight	25g

Environment

Noise immunity	ESD (IEC 61800-5-1, IEC 61000-4-2) EFT (IEC 61800-5-1, IEC 61000-4-4) Surge Test (IEC 61800-5-1, IEC 61000-4-5) Conducted Susceptibility Test (IEC 61800-5-1, IEC 61000-4-6)
Operation/storage	Operation: -10°C ~ 50°C (temperature), 90% (humidity) Storage: -25°C ~ 70°C (temperature), 95% (humidity)
Vibration/shock immunity	International standard: IEC 61800-5-1, IEC 60068-2-6/IEC 61800-5-1, IEC 60068-2-27

■ Install CMC-MOD01 to VFD-C2000

1. Switch off the power supply of VFD-C2000.
2. Open the front cover of VFD-C2000.
3. Place the insulation spacer into the positioning pin at Slot 1 (shown in Figure 3), and aim the two holes on the PCB at the positioning pin. Press the pin to clip the holes with the PCB (shown in Figure 4).
4. Screw up at torque 6 ~ 8 kg-cm (5.21 ~ 6.94 in-lbs) after the PCB is clipped with the holes (shown in Figure 5).

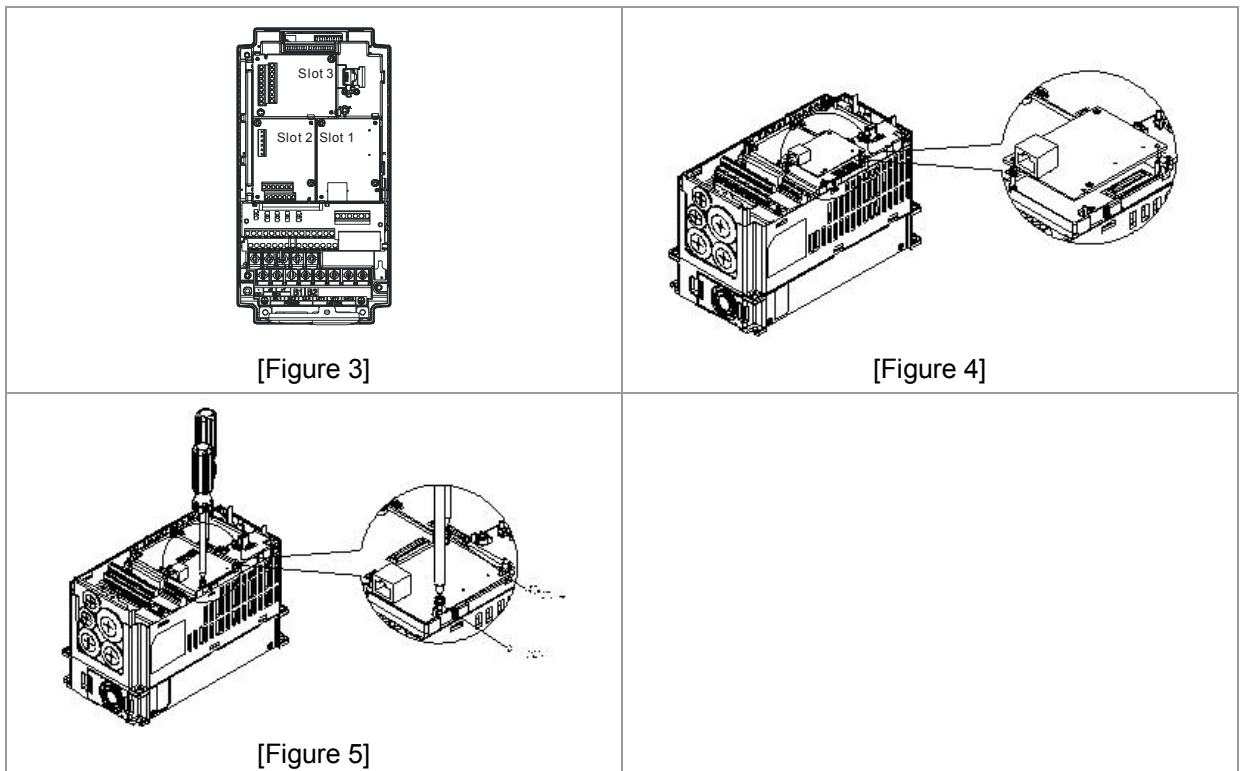

■ Communication Parameters for VFD-C2000 Connected to Ethernet


When VFD-C2000 is link to Ethernet, please set up the communication parameters base on the table below. Ethernet master will be able to read/write the frequency word and control word of VFD-C2000 after communication parameters setup.

Parameter	Function	Set value (Dec)	Explanation
P00-20	Source of frequency command setting	8	The frequency command is controlled by communication card.
P00-21	Source of operation command setting	5	The operation command is controlled by communication card.

P09-30	Decoding method for communication	0	Decoding method for Delta AC motor drive
P09-75	IP setting	0	Static IP(0) / Dynamic distribution IP(1)
P09-76	IP address -1	192	IP address 192.168.1.5
P09-77	IP address -2	168	IP address 192.168.1.5
P09-78	IP address -3	1	IP address 192.168.1.5
P09-79	IP address -4	5	IP address 192.168.1.5
P09-80	Netmask -1	255	Netmask 255.255.255.0
P09-81	Netmask -2	255	Netmask 255.255.255.0
P09-82	Netmask -3	255	Netmask 255.255.255.0
P09-83	Netmask -4	0	Netmask 255.255.255.0
P09-84	Default gateway -1	192	Default gateway 192.168.1.1
P09-85	Default gateway -2	168	Default gateway 192.168.1.1
P09-86	Default gateway -3	1	Default gateway 192.168.1.1
P09-87	Default gateway -4	1	Default gateway 192.168.1.1

■ **Disconnecting CMC- MOD01 from VFD-C2000**

1. Switch off the power supply of VFD-C2000.
2. Remove the two screws (shown in Figure 6).
3. Twist opens the card clip and inserts the slot type screwdriver to the hollow to prize the PCB off the card clip (shown in Figure 7).
4. Twist opens the other card clip to remove the PCB (shown in Figure 8).

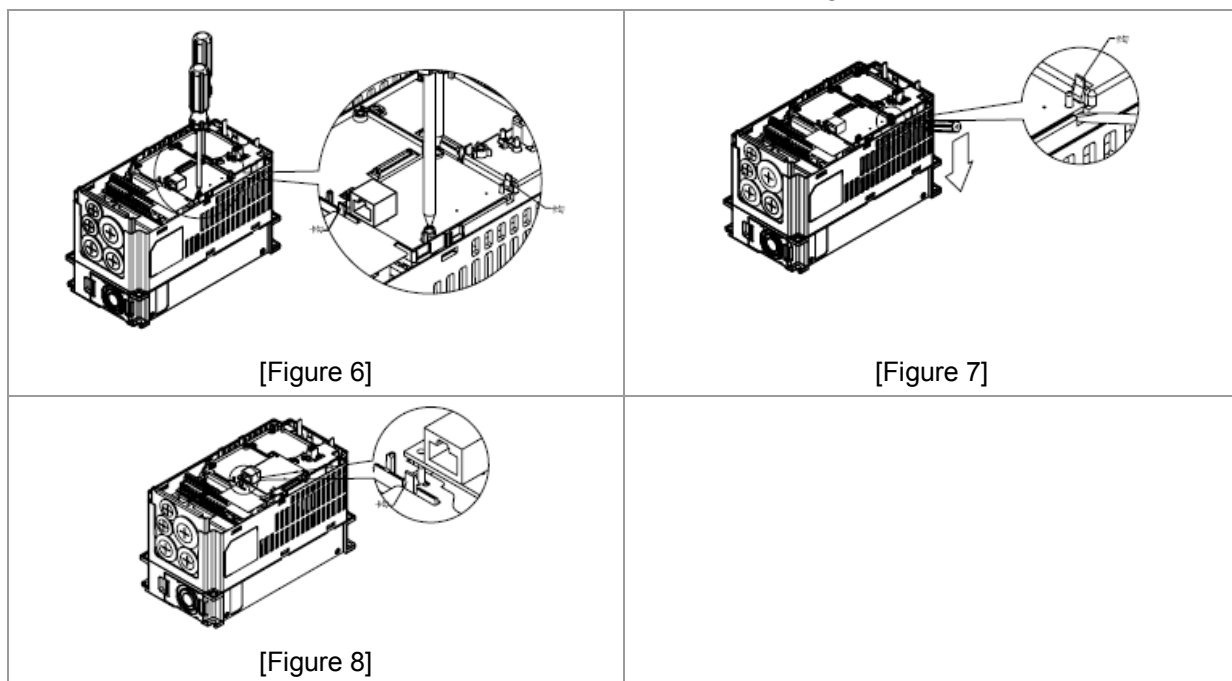

■ **Basic Registers**

BR#	R/W	Content	Explanation
#0	R	Model name	Set up by the system; read only. The model code of CMC-MOD01=H'0203
#1	R	Firmware version	Displaying the current firmware version in hex, e.g. H'0100 indicates the firmware version V1.00.
#2	R	Release date of the version	Displaying the data in decimal form. 10,000s digit and 1,000s digit are for "month"; 100s digit and 10s digit are for "day". For 1 digit: 0 = morning; 1 = afternoon.
#11	R/W	Modbus Timeout	Pre-defined setting: 500 (ms)
#13	R/W	Keep Alive Time	Pre-defined setting: 30 (s)

■ LED Indicator & Troubleshooting

LED Indicators

LED	Status	Indication	How to correct it?	
POWER	Green	On	Power supply in normal status	--
		Off	No power supply	Check the power supply
LINK	Green	On	Network connection in normal status	--
		Flashes	Network in operation	--
		Off	Network not connected	Check if the network cable is connected

Troubleshooting


Abnormality	Cause	How to correct it?
POWER LED off	AC motor drive not powered	Check if AC motor drive is powered, and if the power supply is normal.
	CMC-MOD01 not connected to AC motor drive	Make sure CMC-MOD01 is connected to AC motor drive.
LINK LED off	CMC-MOD01 not connected to network	Make sure the network cable is correctly connected to network.
	Poor contact to RJ-45 connector	Make sure RJ-45 connector is connected to Ethernet port.
No module found	CMC-MOD01 not connected to network	Make sure CMC-MOD01 is connected to network.
	PC and CMC-MOD01 in different networks and blocked by network firewall.	Search by IP or set up relevant settings by AC motor drive keypad.
Fail to open CMC-MOD01 setup page	CMC-MOD01 not connected to network	Make sure CMC-MOD01 is connected to the network.
	Incorrect communication setting in DCISoft	Make sure the communication setting in DCISoft is set to Ethernet.
	PC and CMC-MOD01 in different networks and blocked by network firewall.	Conduct the setup by AC motor drive keypad.
Able to open CMC-MOD01 setup page but fail to utilize webpage monitoring	Incorrect network setting in CMC-MOD01	Check if the network setting for CMC-MOD01 is correct. For the Intranet setting in your company, please consult your IT staff. For the Internet setting in your home, please refer to the network setting instruction provided by your ISP.
Fail to send e-mail	Incorrect network setting in CMC-MOD01	Check if the network setting for CMC-MOD01 is correct.
	Incorrect mail server setting	Please confirm the IP address for SMTP-Server.

CMC-PD01

■ Features

1. Supports PZD control data exchange.
2. Supports PKW polling AC motor drive parameters.
3. Supports user diagnosis function.
4. Auto-detects baud rates; supports Max. 12Mbps.

■ Product Profile

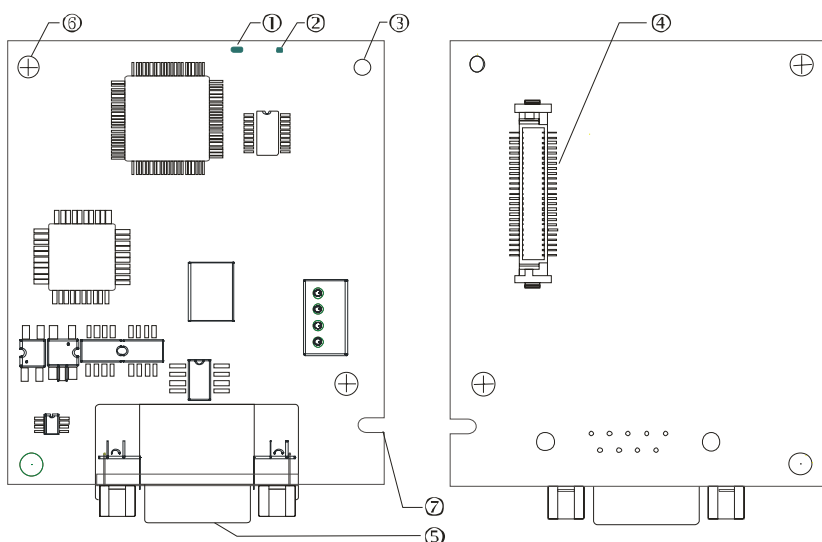

1. NET indicator
2. POWER indicator
3. Positioning hole
4. AC motor drive connection port
5. PROFIBUS DP connection port
6. Screw fixing hole
7. Fool-proof groove

■ Specifications

PROFIBUS DP Connector

Interface	DB9 connector
Transmission method	High-speed RS-485
Transmission cable	Shielded twisted pair cable
Electrical isolation	500VDC

Communication

Message type	Cyclic data exchange
Module name	CMC-PD01
GSD document	DELA08DB.GSD
Company ID	08DB (HEX)
Serial transmission speed supported (auto-detection)	9.6kbps; 19.2kbps; 93.75kbps; 187.5kbps; 125kbps; 250kbps; 500kbps; 1.5Mbps; 3Mbps; 6Mbps; 12Mbps (bit per second)

Electrical Specification

Power supply	5VDC (supplied by AC motor drive)
Insulation voltage	500VDC
Power consumption	1W
Weight	28g


Environment

Noise immunity	ESD(IEC 61800-5-1,IEC 6100-4-2) EFT(IEC 61800-5-1,IEC 6100-4-4) Surge Teat(IEC 61800-5-1,IEC 6100-4-5) Conducted Susceptibility Test(IEC 61800-5-1,IEC 6100-4-6)
Operation /storage	Operation: -10°C ~ 50°C (temperature), 90% (humidity) Storage: -25°C ~ 70°C (temperature), 95% (humidity)
Shock / vibration resistance	International standards: IEC61131-2, IEC68-2-6 (TEST Fc)/IEC61131-2 & IEC 68-2-27 (TEST Ea)

- Installation

PROFIBUS DP Connector

PIN	PIN name	Definition
1	-	Not defined
2	-	Not defined
3	Rxd/Txd-P	Sending/receiving data P(B)
4	-	Not defined
5	DGND	Data reference ground
6	VP	Power voltage – positive
7	-	Not defined
8	Rxd/Txd-N	Sending/receiving data N(A)
9	-	Not defined

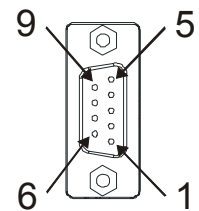

- LED Indicator & Troubleshooting

There are 2 LED indicators on CMC-PD01. POWER LED displays the status of the working power. NET LED displays the connection status of the communication.

POWER LED

LED status	Indication	How to correct it?
Green light on	Power supply in normal status.	--
Off	No power	Check if the connection between CMC-PD01 and AC motor drive is normal.

NET LED


LED status	Indication	How to correct it?
Green light on	Normal status	--
Red light on	CMC-PD01 is not connected to PROFIBUS DP bus.	Connect CMC-PD01 to PROFIBUS DP bus.
Red light flashes	Invalid PROFIBUS communication address	Set the PROFIBUS address of CMC-PD01 between 1 ~ 125 (decimal)
Orange light flashes	CMC-PD01 fails to communication with AC motor drive.	Switch off the power and check whether CMC-PD01 is correctly and normally connected to AC motor drive.

CMC-DN01

■ Functions

1. Based on the high-speed communication interface of Delta HSSP protocol, able to conduct immediate control to AC motor drive.
2. Supports Group 2 only connection and polling I/O data exchange.
3. For I/O mapping, supports Max. 32 words of input and 32 words of output.
4. Supports EDS file configuration in DeviceNet configuration software.
5. Supports all baud rates on DeviceNet bus: 125kbps, 250kbps, 500kbps and extendable serial transmission speed mode.
6. Node address and serial transmission speed can be set up on AC motor drive.
7. Power supplied from AC motor drive.

■ Product Profile

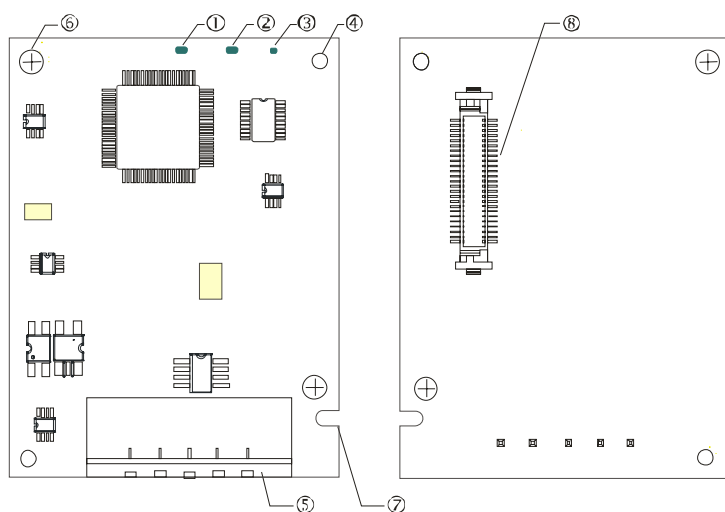

- 1. NS indicator
- 2. MS indicator
- 3. POWER indicator
- 4. Positioning hole
- 5. DeviceNet connection port
- 6. Screw fixing hole
- 7. Fool-proof groove
- 8. AC motor drive connection port

■ Specifications

DeviceNet Connector

Interface	5-PIN open removable connector. Of 5.08mm PIN interval
Transmission	CAN
Transmission cable	Shielded twisted pair cable (with 2 power cables)
Transmission speed	125kbps, 250kbps, 500kbps and extendable serial transmission speed
Network protocol	DeviceNet protocol

AC Motor Drive Connection Port

Interface	50 PIN communication terminal
Transmission method	SPI communication
Terminal function	1. Communicating with AC motor drive 2. Transmitting power supply from AC motor drive
Communication	Delta HSSP protocol

Electrical Specification


Power supply voltage	5VDC (supplied by AC motor drive)
Insulation voltage	500VDC
Communication wire power consumption	0.85W
Power consumption	1W
Weight	23g

Environment

Noise immunity	ESD (IEC 61800-5-1, IEC 6100-4-2) EFT (IEC 61800-5-1, IEC 6100-4-4) Surge Teat (IEC 61800-5-1, IEC 6100-4-5) Conducted Susceptibility Test (IEC 61800-5-1, IEC 6100-4-6)
Operation /storage	Operation: -10°C ~ 50°C (temperature), 90% (humidity) Storage: -25°C ~ 70°C (temperature), 95% (humidity)
Shock / vibration resistance	International standards: IEC61131-2, IEC68-2-6 (TEST Fc)/IEC61131-2 & IEC 68-2-27 (TEST Ea)

DeviceNet Connector

PIN	Signal	Color	Definition
1	V+	Red	DC24V
2	H	White	Signal+
3	S	-	Earth
4	L	Blue	Signal-
5	V-	Black	0V

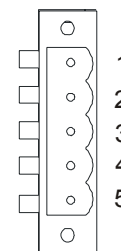

■ LED Indicator & Troubleshooting

There are 3 LED indicators on CMC-DN01. POWER LED displays the status of power supply. MS LED and NS LED are dual-color LED, displaying the connection status of the communication and error messages.

POWER LED

LED status	Indication	How to correct it?
On	Power supply in abnormal status.	Check the power supply of CMC-DN01.
Off	Power supply in normal status	--

NS LED

LED status	Indication	How to correct it?
Off	No power supply or CMC-DN01 has not completed MAC ID test yet.	<ol style="list-style-type: none"> 1. Check the power of CMC-DN01 and see if the connection is normal. 2. Make sure at least one or more nodes are on the bus. 3. Check if the serial transmission speed of CMC-DN01 is the same as that of other nodes.
Green light flashes	CMC-DN01 is on-line but has not established connection to the master.	<ol style="list-style-type: none"> 1. Configure CMC-DN01 to the scan list of the master. 2. Re-download the configured data to the master.
Green light on	CMC-DN01 is on-line and is normally connected to the master	--
Red light flashes	CMC-DN01 is on-line, but I/O connection is timed-out.	<ol style="list-style-type: none"> 1. Check if the network connection is normal. 2. Check if the master operates normally.
Red light on	<ol style="list-style-type: none"> 1. The communication is down. 2. MAC ID test failure. 3. No network power supply. 4. CMC-DN01 is off-line. 	<ol style="list-style-type: none"> 1. Make sure all the MAC IDs on the network are not repeated. 2. Check if the network installation is normal. 3. Check if the baud rate of CMC-DN01 is consistent with that of other nodes. 4. Check if the node address of CMC-DN01 is illegal. 5. Check if the network power supply is normal.

MS LED


LED status	Indication	How to correct it?
Off	No power supply or being off-line	Check the power supply of CMC-DN01 and see if the connection is normal.
Green light flashes	Waiting for I/O data	Switch the master PLC to RUN status
Green light on	I/O data are normal	--
Red light flashes	Mapping error	<ol style="list-style-type: none"> 1. Reconfigure CMC-DN01 2. Re-power AC motor drive
Red light on	Hardware error	<ol style="list-style-type: none"> 1. See the error code displayed on AC motor drive. 2. Send back to the factory for repair if necessary.
Orange light flashes	CMC-DN01 is establishing connection with AC motor drive.	If the flashing lasts for a long time, check if CMC-DN01 and AC motor drive are correctly installed and normally connected to each other.

CMC-EIP01

■ Features

1. Supports Modbus TCP and Ethernet/IP protocol
2. MDI/MDI-X auto-detect
3. Baud rate: 10/100Mbps auto-detect
4. AC motor drive keypad/Ethernet configuration
5. Virtual serial port

■ Product Profile

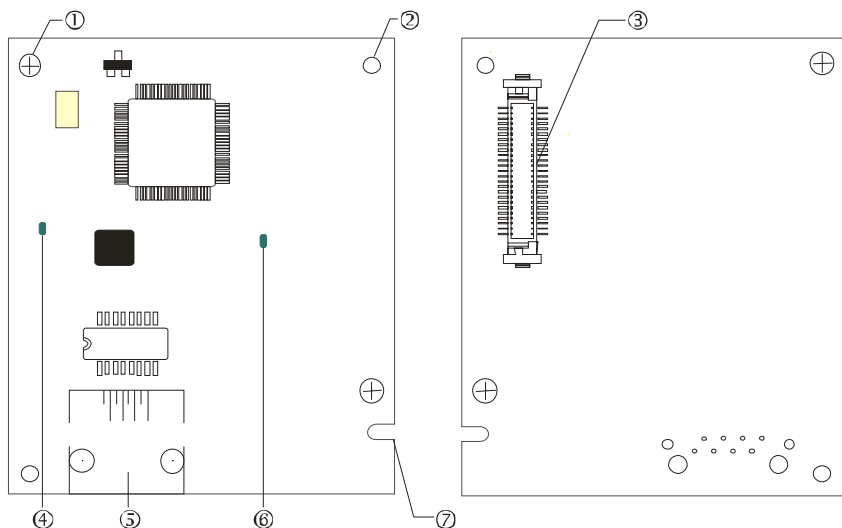

[Figure1]

1. Screw fixing hole
2. Positioning hole
3. AC motor drive connection port
4. LINK indicator
5. RJ-45 connection port
6. POWER indicator
7. Fool-proof groove

■ Specifications

Network Interface

Interface	RJ-45 with Auto MDI/MDIX
Number of ports	1 Port
Transmission method	IEEE 802.3, IEEE 802.3u
Transmission cable	Category 5e shielding 100M
Transmission speed	10/100 Mbps Auto-Detect
Network protocol	ICMP, IP, TCP, UDP, DHCP, HTTP, SMTP, MODBUS OVER TCP/IP, EtherNet/IP, Delta Configuration

Electrical Specification

Weight	25g
Insulation voltage	500VDC
Power consumption	0.8W
Power supply voltage	5VDC


Environment

Noise immunity	ESD (IEC 61800-5-1, IEC 61000-4-2) EFT (IEC 61800-5-1, IEC 61000-4-4) Surge Test (IEC 61800-5-1, IEC 61000-4-5) Conducted Susceptibility Test (IEC 61800-5-1, IEC 61000-4-6)
Operation/storage	Operation: -10°C ~ 50°C (temperature), 90% (humidity) Storage: -25°C ~ 70°C (temperature), 95% (humidity)
Vibration/shock immunity	International standard: IEC 61800-5-1, IEC 60068-2-6/IEC 61800-5-1, IEC 60068-2-27

■ Installation

Connecting CMC-EIP01 to Network


1. Turn off the power of AC motor drive.
2. Open the cover of AC motor drive.
3. Connect CAT-5e network cable to RJ-45 port on CMC-EIP01 (See Figure 2).

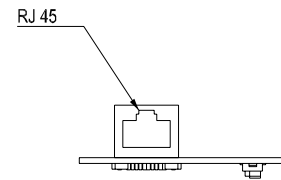

[Figure 2]


RJ-45 PIN Definition

PIN	Signal	Definition	PIN	Signal	Definition
1	Tx+	Positive pole for data transmission	5	--	N/C
2	Tx-	Negative pole for data transmission	6	Rx-	Negative pole for data receiving
3	Rx+	Positive pole for data receiving	7	--	N/C
4	--	N/C	8	--	N/C

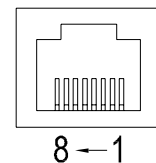


■ Connecting CMC-EIP01 to VFD-C2000


1. Switch off the power of AC motor drive.
2. Open the front cover of AC motor drive.
3. Place the insulation spacer into the positioning pin at Slot 1 (shown in Figure 3), and aim the two holes on the PCB at the positioning pin. Press the pin to clip the holes with the PCB (see Figure 4).
4. Screw up at torque 6 ~ 8 kg-cm (5.21 ~ 6.94 in-lbs) after the PCB is clipped with the holes (see Figure 5).

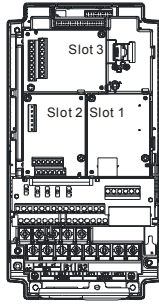

[Figure 3]

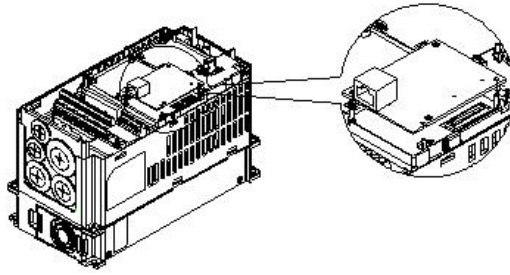

[Figure 4]

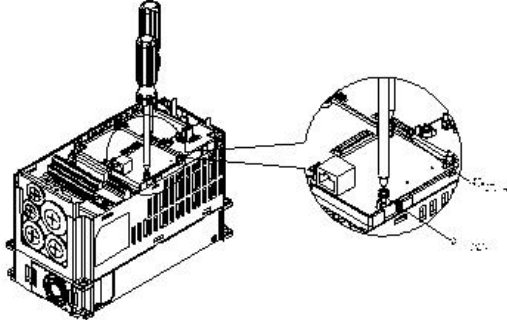

[Figure 5]


■ Communication Parameters for VFD-C2000 Connected to Ethernet

When VFD-C2000 is connected to Ethernet network, please set up the communication parameters for it according to the table below. The Ethernet master is only able to read/write the frequency word and control word of VFD-C2000 after the communication parameters are set.


Parameter (Dec)	Function	Set value (Dec)	Explanation
P00-20	Source of frequency command setting	8	The frequency command is controlled by communication card.
P00-21	Source of operation command setting	5	The operation command is controlled by communication card.
P09-30	Decoding method for communication	0	The decoding method for Delta AC motor drive
P09-75	IP setting	0	Static IP(0) / Dynamic distribution IP(1)
P09-76	IP address -1	192	IP address 192.168.1.5
P09-77	IP address -2	168	IP address 192.168.1.5
P09-78	IP address -3	1	IP address 192.168.1.5
P09-79	IP address -4	5	IP address 192.168.1.5
P09-80	Netmask -1	255	Netmask 255.255.255.0
P09-81	Netmask -2	255	Netmask 255.255.255.0
P09-82	Netmask -3	255	Netmask 255.255.255.0
P09-83	Netmask -4	0	Netmask 255.255.255.0
P09-84	Default gateway -1	192	Default gateway 192.168.1.1
P09-85	Default gateway -2	168	Default gateway 192.168.1.1
P09-86	Default gateway -3	1	Default gateway 192.168.1.1
P09-87	Default gateway -4	1	Default gateway 192.168.1.1

■ **Disconnecting CMC- EIP01 from VFD-C2000**


1. Switch off the power supply of VFD-C2000.
2. Remove the two screws (see Figure 6).
3. Twist opens the card clip and inserts the slot type screwdriver to the hollow to prize the PCB off the card clip (see Figure 7).
4. Twist opens the other card clip to remove the PCB (see Figure 8).

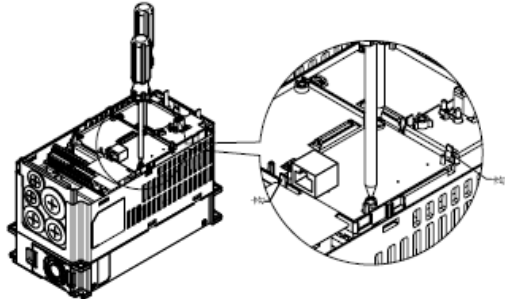

[Figure 6]

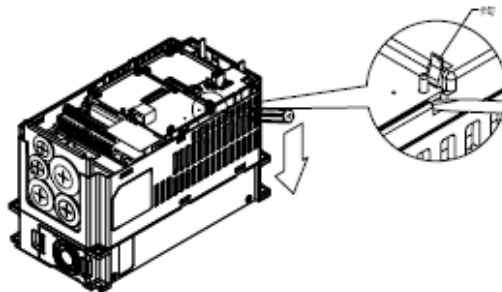

[Figure 7]

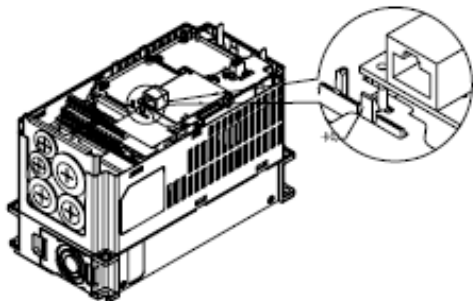

[Figure 8]

■ **LED Indicator & Troubleshooting**

There are 2 LED indicators on CMC-EIP01. The POWER LED displays the status of power supply, and the LINK LED displays the connection status of the communication.

LED Indicators

LED	Status	Indication	How to correct it?	
POWER	Green	On	Power supply in normal status	--
		Off	No power supply	Check the power supply.
LINK	Green	On	Network connection in normal status	--
		Flashes	Network in operation	--
		Off	Network not connected	Check if the network cable is connected.

Troubleshooting

Abnormality	Cause	How to correct it?
POWER LED off	AC motor drive not powered	Check if AC motor drive is powered, and if the power supply is normal.
	CMC-EIP01 not connected to AC motor drive	Make sure CMC-EIP01 is connected to AC motor drive.
LINK LED off	CMC-EIP01 not connected to network	Make sure the network cable is correctly connected to network.


Abnormality	Cause	How to correct it?
	Poor contact to RJ-45 connector	Make sure RJ-45 connector is connected to Ethernet port.
No communication card found	CMC-EIP01 not connected to network	Make sure CMC-EIP01 is connected to network.
	PC and CMC-EIP01 in different networks and blocked by network firewall.	Search by IP or set up relevant settings by AC motor drive keypad.
Fail to open CMC-EIP01 setup page	CMC-EIP01 not connected to network	Make sure CMC-EIP01 is connected to the network.
	Incorrect communication setting in DCISoft	Make sure the communication setting in DCISoft is set to Ethernet.
	PC and CMC-EIP01 in different networks and blocked by network firewall.	Conduct the setup by AC motor drive keypad.
Able to open CMC-EIP01 setup page but fail to utilize webpage monitoring	Incorrect network setting in CMC-EIP01	Check if the network setting for CMC-EIP01 is correct. For the Intranet setting in your company, please consult your IT staff. For the Internet setting in your home, please refer to the network setting instruction provided by your ISP.
Fail to send e-mail	Incorrect network setting in CMC-EIP01	Check if the network setting for CMC-EIP01 is correct.
	Incorrect mail server setting	Please confirm the IP address for SMTP-Server.

EMC-COP01

Built-in EMC-COP01 card are available in VFDXXXC23E/VFDXXXC43E series.

RJ-45 Pin definition

■

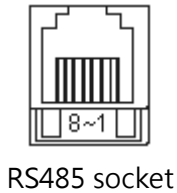


Pin	Pin name	Definition
1	CAN_H	CAN_H bus line (dominant high)
2	CAN_L	CAN_L bus line (dominant low)
3	CAN_GND	Ground/0V/V-
7	CAN_GND	Ground/0V/V-

Specifications

Interface	RJ-45
Number of ports	1 Port
Transmission method	CAN
Transmission cable	CAN standard cable
Transmission speed	1M 500k 250k 125k 100k 50k
Communication protocol	CANopen

CANopen Communication Cable


Model: TAP-CB03, TAP-CB04

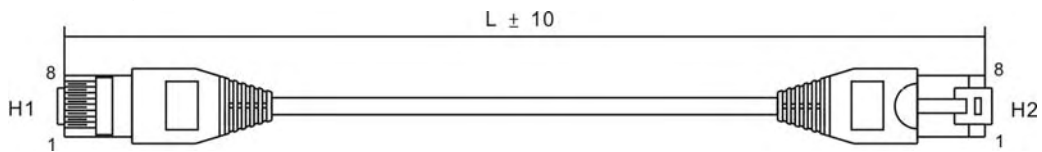

Title	Part No.	L	
		mm	inch
1	TAP-CB03	500 ± 10	19 ± 0.4
2	TAP-CB04	1000 ± 10	39 ± 0.4

CANopen Dimension

Model: TAP-CN03

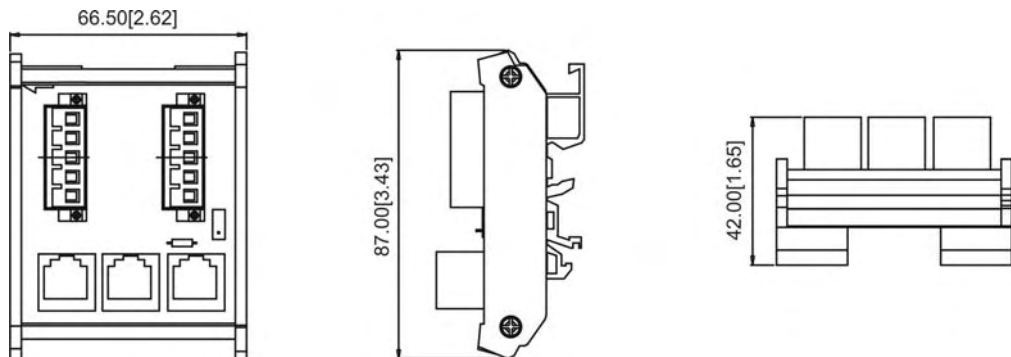

NOTE

For more information on CANopen, please refer to Chapter 15 CANopen Overview or CANopen user manual can also be downloaded on Delta website: <http://www.delta.com.tw/industrialautomation/>.

Chapter 9 Specification

230V Series

Frame Size			A				B			C		
Model VFD-___C__			007	015	022	037	055	075	110	150	185	220
Power of corresponding heavy duty motor (kW)			0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5
Power of corresponding normal duty motor (kW)			0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22
Output Rating	HEAVY DUTY	Rated Output Capacity (kVA)	1.9	2.8	4.0	6.4	9.6	12	19	25	28	34
		Rated Output Current (A)	4.8	7.1	10	16	24	31	47	62	71	86
		Carrier Frequency (kHz)	2~6kHz									
	NORMAL DUTY	Rate Output Capacity (kVA)	2.0	3.2	4.4	6.8	10	13	20	26	30	36
		Rated Output Current (A)	5	8	11	17	25	33	49	65	75	90
		Carrier Frequency (kHz)	2~15kHz						2~10kHz			
Input Rating	Input Current (A) Heavy Duty		6.1	11	15	18.5	26	34	50	68	78	95
	Input Current (A) Normal Duty		6.4	12	16	20	28	36	52	72	83	99
	Rated Voltage/Frequency		3-phase AC 200V~240V (-15% ~ +10%), 50/60Hz									
	Operating Voltage Range		170~265Vac									
	Frequency Tolerance		47~63Hz									
AC Drive Weight			2.6± 0.3Kg			5.4± 1Kg			9.8± 1.5Kg			
Cooling method			Natural cooling			Fan cooling						
Braking Chopper			Frame A to C (built-in); Frame D and above (optional)									
DC reactor			Frame A to C (optional); Frame D and above (built-in)									
EMC Filter			Frame A to C (optional); Frame D and above (optional)									
EMC-COP01			VFDXXC23A (optional); VFDXXC23E (built-in)									

Frame Size			D		E			F
Model VFD-___C__			300	370	450	550	750	900
Power of corresponding heavy duty motor (kW)			22	30	37	45	55	75
Power of corresponding normal duty motor (kW)			30	37	45	55	75	90
Output Rating	HEAVY DUTY	Rated Output Capacity (kVA)	45	55	68	81	96	131
		Rated Output Current (A)	114	139	171	204	242	329
		Carrier Frequency (kHz)	2~6kHz					
	NORMAL DUTY	Rate Output Capacity (kVA)	48	58	72	86	102	138
		Rated Output Current (A)	120	146	180	215	255	346
		Carrier Frequency (kHz)	2~10kHz		2~9 kHz			
Input Rating	Input Current (A) Heavy Duty		118	136	162	196	233	315
	Input Current (A) Normal Duty		124	143	171	206	245	331
	Rated Voltage/Frequency		3-phase AC 200V~240V (-15% ~ +10%), 50/60Hz					
	Operating Voltage Range		170~265Vac					
	Frequency Tolerance		47~63Hz					
AC Drive Weight			38.5± 1.5Kg		64.8± 1.5Kg		86.5± 1.5Kg	
Cooling method			Fan Cooling					
Braking Chopper			Frame A to C (built-in); Frame D and above (optional)					

DC reactor	Frame A to C (optional); Frame D and above (built-in)
EMI Filter	Frame A to C (optional); Frame D and above (optional)
EMC-COP01	VFDXXC23A (optional); VFDXXC23E (built-in)

460V Series

Frame Size			A					B			C			
Model VFD-___C___			007	015	022	037	040	055	075	110	150	185	220	300
Power of corresponding heavy duty motor (kW)			0.4	0.75	1.5	2.2	2.2	4.0	5.5	7.5	11	15	18.5	22
Power of corresponding normal duty motor (kW)			0.75	1.5	2.2	3.7	4.0	5.5	7.5	11	15	18.5	22	30
Output Rating	HEAVY DUTY	Rated Output Capacity (kVA)	2.3	3.0	4.5	6.5	7.6	9.6	14	18	24	29	34	45
		Rated Output Current (A)	2.9	3.8	5.7	8.1	9.5	11	17	23	30	36	43	57
		Carrier Frequency (kHz)	2~6kHz											
	NORMAL DUTY	Rate Output Capacity (kVA)	2.4	3.2	4.8	7.2	8.4	10	14	19	25	30	36	48
		Rated Output Current (A)	3.0	4.0	6.0	9.0	10.5	12	18	24	32	38	45	60
		Carrier Frequency (kHz)	2~15kHz									2~10kHz		
Input Rating	Input Current (A) Heavy Duty		4.1	5.6	8.3	13	14.5	16	19	25	33	38	45	60
	Input Current (A) Normal Duty		4.3	5.9	8.7	14	15.5	17	20	26	35	40	47	63
	Rated Voltage/Frequency		3-Phase AC 380V~480V (-15%~+10%), 50/60Hz											
	Operating Voltage Range		323~528Vac											
	Frequency Tolerance		47~63Hz											
AC Drive Weight			2.6± 0.3Kg					5.4± 1Kg			9.8± 1.5Kg			
Cooling method			Natural cooling					Fan cooling						
Braking Chopper			Frame A to C (built-in); Frame D and above (optional)											
DC reactor			Frame A to C (optional); Frame D and above (built-in)											
EMI Filter			VFDXXC43A Frame A to C: No EMI Filter; VFDXXC43E: Built-in EMI Filter VFDXXC43A/43E Frame D and above: EMI Filter is optional											
EMC-COP01			VFDXXC43A (optional); VFDXXC43E (built-in)											

Frame Size			D				E		*F		*G		*H			
Model VFD-___C___			370	450	550	750	900	1100	1320	1600	1850	2200	2800	3150	3550	
Power of corresponding heavy duty motor (kW)			30	37	45	55	75	90	110	132	160	185	220	280	315	
Power of corresponding normal duty motor (kW)			37	45	55	75	90	110	132	160	185	220	280	315	355	
Output Rating	HEAVY DUTY	Rated Output Capacity (kVA)	55	69	84	114	136	167	197	235	280	348	417	466	517	
		Rated Output Current (A)	69	86	105	143	171	209	247	295	352	437	523	585	649	
		Carrier Frequency (kHz)	2~6kHz													
	NORMAL DUTY	Rate Output Capacity (kVA)	58	73	88	120	143	175	207	247	295	367	438	491	544	
		Rated Output Current (A)	73	91	110	150	180	220	260	310	370	460	550	616	683	
		Carrier Frequency (kHz)	2~10kHz						2~9kHz							
Input Rating	Input Current (A) Heavy Duty		70	96	108	149	159	197	228	285	361	380	469	527	594	
	Input Current (A) Normal Duty		74	101	114	157	167	207	240	300	380	400	494	555	625	
	Rated Voltage/Frequency		3-Phase AC 380V~480V (-15%~+10%), 50/60Hz													
	Operating Voltage Range		323~528Vac													
	Frequency Tolerance		47~63Hz													
AC Drive Weight			38.5± 1.5Kg				64.8± 1.5Kg		86.5± 1.5Kg		134± 4Kg		228			
Cooling method			Fan cooling													
Braking Chopper			Frame A to C (built-in); Frame D and above (optional)													
DC reactor			Frame A to C (optional); Frame D and above (built-in)													

EMI Filter	VFDXXXC43A: No EMI Filter; VFDXXXC43E: Built-in EMI Filter
EMC-COP01	VFDXXXC43A/43E Frame D and above: EMI Filter is optional VFDXXXC43A (optional); VFDXXXC43E (built-in)


 **NOTE**

 - For FRAME A, B and C, Model VFDXXXC43A the enclosure type is IP20/NEMA1/UL TYPE1.
- For FRAME D and above, if the last character of the model is A then the enclosure type is IP20 but the wiring terminal is IP00; if the last character of the model is E, the enclosure type is IP20/NEMA1/UL TYPE1.


General Specifications

Control Characteristics	Control Method	1: V/F, 2: SVC, 3: VF+PG, 4: FOC+PG, 5: TQC+PG,
	Starting Torque	Reach up to 150% or above at 0.5Hz. Under FOC+PG mode, starting torque can reach 150% at 0Hz.
	V/F Curve	4 point adjustable V/F curve and square curve
	Speed Response Ability	5Hz (vector control can reach up to 40Hz)
	Torque Limit	Max. 200% torque current
	Torque Accuracy	±5%
	Max. Output Frequency (Hz)	Light duty and normal duty: 0.01~600.00Hz; Heavy duty: 0.00 ~ 300.00 Hz
	Frequency Output Accuracy	Digital command:±0.01%, -10°C ~+40°C, Analog command: ±0.1%, 25±10°C
	Output Frequency Resolution	Digital command:0.01Hz, Analog command: 0.03 X max. output frequency/60 Hz (±11 bit)
	Overload Tolerance	Light duty: rated output current is 110 % for 60 seconds Normal duty: rated output current is 120% for 60 seconds Heavy duty: rated output current is 150% for 60 seconds
	Frequency Setting Signal	+10V~-10, 0~+10V, 4~20mA, 0~20mA, Pulse input
	Accel./decel. Time	0.00~600.00/0.0~6000.0 seconds
Protection Characteristics	Main control function	Torque control, Droop control, Speed/torque control switching, Feed forward control, Zero-servo control, Momentary power loss ride thru, Speed search, Over-torque detection, Torque limit, 17-step speed (max), Accel/decel time switch, S-curve accel/decel, 3-wire sequence, Auto-Tuning (rotational, stationary), Dwell, Cooling fan on/off switch, Slip compensation, Torque compensation, JOG frequency, Frequency upper/lower limit settings, DC injection braking at start/stop, High slip braking, PID control (with sleep function), Energy saving control, MODOBUS communication (RS-485 RJ45, max. 115.2 kbps), Fault restart, Parameter copy
	Fan Control	230V model VFD150C23A(include) and series above: PMW control; VFD150C23A and series below: on/off switch control 460V model VFD150C23A(include) and series above: PMW control; VFD150C23A and series below: on/off switch control
	Motor Protection	Electronic thermal relay protection
	Over-current Protection	For drive model 230V and 440V Over-current protection for 220% rated current current clamp 『Normal duty: 170~175%』 ; 『Heavy duty: 180~185%』
	Over-voltage Protection	230: drive will stop when DC-BUS voltage exceeds 410V 460: drive will stop when DC-BUS voltage exceeds 820V
	Over-temperature Protection	Built-in temperature sensor
	Stall Prevention	Stall prevention during acceleration, deceleration and running independently
Certifications	Restart After Instantaneous Power Failure	Parameter setting up to 20 seconds
	Grounding Leakage Current Protection	Leakage current is higher than 50% of rated current of the AC motor drive
Certifications		   GB/T12668-2, (certification in progress)

Environment for Operation, Storage and Transportation

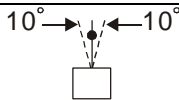DO NOT expose the AC motor drive in the bad environment, such as dust, direct sunlight, corrosive/inflammable gasses, humidity, liquid and vibration environment. The salt in the air must be less than 0.01mg/cm ² every year.			
Environment	Installation location	IEC60364-1/IEC60664-1 Pollution degree 2, Indoor use only	
	Surrounding Temperature	Storage	-25 °C ~ +70 °C
		Transportation	-25 °C ~ +70 °C
		Non-condensation, non-frozen	
	Rated Humidity	Operation	Max. 90%
		Storage/ Transportation	Max. 95%
		No condense water	
	Air Pressure	Operation/ Storage	86 to 106 kPa
		Transportation	70 to 106 kPa
	Pollution Level	IEC721-3-3	
		Operation	Class 3C2; Class 3S2
Storage		Class 2C2; Class 2S2	
Transportation		Class 1C2; Class 1S2	
Altitude	Operation	If AC motor drive is installed at altitude 0~1000m, follow normal operation restriction. If it is install at altitude 1000~3000m, decrease 2% of rated current or lower 0.5°C of temeperature for every 100m increase in altitude. Maximum altitude for Corner Grounded is 2000m.	
Package Drop	Storage	ISTA procedure 1A(according to weight) IEC60068-2-31	
	Transportation		
Vibration	1.0mm, peak to peak value range from 2Hz to 13.2 Hz; 0.7G~1.0G range from 13.2Hz to 55Hz; 1.0G range from 55Hz to 512 Hz. Comply with IEC 60068-2-6		
Impact	IEC/EN 60068-2-27		
Operation Position	Max. allowed offset angle $\pm 10^\circ$ (under normal installation position)		

Specification for Operation Temperature and Protection Level

Model	Frame	Top cover	Conduit Box	Protection Level	Operation Temperature
VFDxxxCxxA	Frame A~C 230V: 0.75~22kW 460V: 0.75~30kW	Top cover Removed	Standard conduit plate	IP20/UL Open Type	-10~50°C
		Standard with top cover		IP20/UL Type1/NEMA1	-10~40°C
	Frame D~H 230V: >22kW 460V: >30kW	N/A	No conduit box	IP00/IP20/UL Open Type Only the circled area is IP00, other are IP20. 	-10~50°C
VFDxxxCxxE	Frame A~C 460V: 0.75~30kW	Top cover Removed	Standard conduit plate	IP20/UL Open Type	-10~50°C
		Standard with top cover		IP20/UL Type1/NEMA1	-10~40°C
	Frame D~H 230V: >22kW 460V: >30kW	N/A	Standard conduit box	IP20/UL Type1/NEMA1	-10~40°C

Chapter 10 Digital Keypad

10-1 Descriptions of Digital Keypad

10-2 Function of Digital Keypad KPC-CC01

10-3 TPEditor Installation Instruction

10-4 Fault Code Description of Digital Keypad KPC-CC01

10-1 Descriptions of Digital Keypad

KPC-CC01






KPC-CE01(Option)


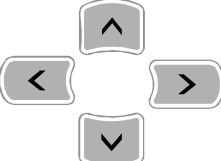





Communication Interface
RJ-45 (socket) \ RS-485 interface;






Installation Method
Embedded type and can be put flat on the surface of the control box. The front cover is water proof.






Descriptions of Keypad Functions

Key	Descriptions
	<p>Start Operation Key</p> <ol style="list-style-type: none"> 1. It is only valid when the source of operation command is from the keypad. 2. It can operate the AC motor drive by the function setting and the RUN LED will be ON. 3. It can be pressed again and again at stop process. 4. When enabling "HAND" mode, it is only valid when the source of operation command is from the keypad.
	<p>Stop Command Key. This key has the highest processing priority in any situation.</p> <ol style="list-style-type: none"> 1. When it receives STOP command, no matter the AC motor drive is in operation or stop status, the AC motor drive needs to execute "STOP" command. 2. The RESET key can be used to reset the drive after the fault occurs. For those faults that can't be reset by the RESET key, see the fault records after pressing MENU key for details.
	<p>Operation Direction Key</p> <ol style="list-style-type: none"> 1. This key is only control the operation direction NOT for activate the drive. FWD: forward, REV: reverse. 2. Refer to the LED descriptions for more details.
	<p>ENTER Key</p> <p>Press ENTER and go to the next level. If it is the last level then press ENTER to execute the command.</p>
	<p>ESC Key</p> <p>ESC key function is to leave current menu and return to the last menu. It is also functioned as a return key in the sub-menu.</p>

	<p>Press menu to return to main menu. Menu content: KPC-CE01 does not support function 5 ~13.</p> <table border="0"> <tr> <td>1. Detail Parameter</td> <td>7. Quick/Simple Setup</td> <td>13. PC Link</td> </tr> <tr> <td>2. Copy Parameter</td> <td>8. Display Setup</td> <td></td> </tr> <tr> <td>3. Keypad Locked</td> <td>9. Time Setup</td> <td></td> </tr> <tr> <td>4. PLC Function</td> <td>10. Language Setup</td> <td></td> </tr> <tr> <td>5. Copy PLC</td> <td>11. Startup Menu</td> <td></td> </tr> <tr> <td>6. Fault Record</td> <td>12. Main Page</td> <td></td> </tr> </table>	1. Detail Parameter	7. Quick/Simple Setup	13. PC Link	2. Copy Parameter	8. Display Setup		3. Keypad Locked	9. Time Setup		4. PLC Function	10. Language Setup		5. Copy PLC	11. Startup Menu		6. Fault Record	12. Main Page	
1. Detail Parameter	7. Quick/Simple Setup	13. PC Link																	
2. Copy Parameter	8. Display Setup																		
3. Keypad Locked	9. Time Setup																		
4. PLC Function	10. Language Setup																		
5. Copy PLC	11. Startup Menu																		
6. Fault Record	12. Main Page																		
	<p>Direction: Left/Right/Up/Down</p> <ol style="list-style-type: none"> In the numeric value setting mode, it is used to move the cursor and change the numeric value. In the menu/text selection mode, it is used for item selection. 																		
	<p>Function Key</p> <ol style="list-style-type: none"> It has the factory setting function and the function can be set by the user. The present factory setting: F1 is JOG function. Other functions must be defined by TPEditor first. TPEditor software V1.30.6 is available for download at: http://www.delta.com.tw/ch/product/em/download/download_main.asp?act=3&pid=1&cid=1&tpid=3 Installation Instruction for TPEditor is on page 10-15 of this chapter. 																		
	<p>HAND ON Key</p> <ol style="list-style-type: none"> This key is executed by the parameter settings of the source of Hand frequency and hand operation. The factory settings of both source of Hand frequency and hand operation are the digital keypad. Press HAND ON key at stop status, the setting will switch to hand frequency source and hand operation source. Press HAND ON key at operation status, it stops the AC motor drive first (display AHSP warning), and switch to hand frequency source and hand operation source. Successful mode switching for KPC-CE01, "H/A" LED will be on; for KPC-CC01, it will display HAND mode/ AUTO mode on the screen. 																		
	<ol style="list-style-type: none"> This key is executed by the parameter settings of the source of AUTO frequency and AUTO operation. The factory setting is the external terminal (source of operation is 4-20mA). Press Auto key at stop status, the setting will switch to hand frequency source and hand operation source. Press Auto key at operation status, it stops the AC motor drive first (display AHSP warning), and switch to hand frequency source and hand operation source. Successful mode switching for KPC-CE01, "H/A" LED will be off; for KPC-CC01, it will display HAND mode/ AUTO mode on the screen 																		

Descriptions of LED Functions

LED	Descriptions
	<p>Steady ON: operation indicator of the AC motor drive, including DC brake, zero speed, standby, restart after fault and speed search. Blinking: drive is decelerating to stop or in the status of base block. Steady OFF: drive doesn't execute the operation command</p>
	<p>Steady ON: stop indicator of the AC motor drive. Blinking: drive is in the standby status. Steady OFF: drive doesn't execute "STOP" command.</p>
	<p>Operation Direction LED</p> <ol style="list-style-type: none"> Green light is on, the drive is running forward. Red light is on, the drive is running backward. Twinkling light: the drive is changing direction.
	<p>(Only KPC-CE01 support this function) Setting can be done during operation. HAND LED: When HAND LED is on (HAND mode); when HAND LED is off (AUTO mode).</p>
	<p>(Only KPC-CE01 Support this function) Setting can be done during operation. AUTO LED: when AUTO LED is on (AUTO mode); when AUTO LED is off (HAND mode).</p>

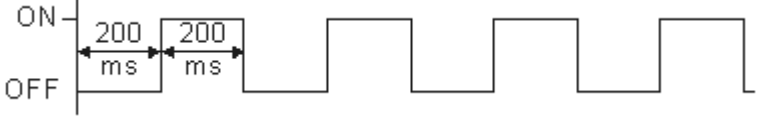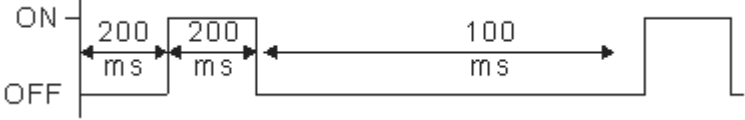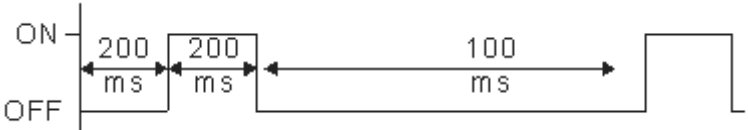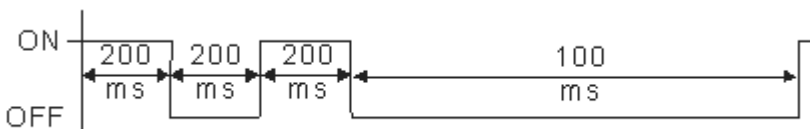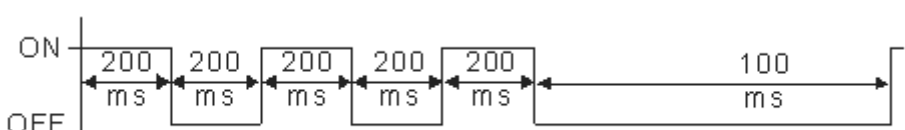 CANopen ~"RUN"	RUN LED:	
	LED status	Condition/State
	OFF	CANopen at initial No LED
	Blinking	CANopen at pre-operation 
	Single flash	CANopen at stopped 
ON	CANopen at operation status No LED	
CANopen ~"ERR"	ERR LED:	
	LED status	Condition/ State
	OFF	No Error
	Single flash	One message fail 
	Double flash	Guarding fail or heartbeat fail 
Triple flash	SYNC fail 	
ON	Bus off	

10-2 Function of Digital Keypad KPC-CC01

POWER ON



Start-up

Skip to main page
after 3sec.

- 1) The default Start-up page is Delta Logo. (Default 1 and 2)
- 2) User can customize their start-up page through the edited function. (Need to purchase the optional accessories)



AUTO

◆ F 60.00Hz

H 0.00Hz

A 0.00

JOG 14:35:36

→ The top line of LCD displays the status of drive.

After main menu is selected, the start-up page will display in the format user defined. The page shown on the left is display as Delta default setting.

→ The bottom line of LCD displays time and JOG.



Press MENU

MENU

▼ 1.Detail Parameter
2.Copy Parameter
3.Keypad Locked

MENU

- | | |
|---|---|
| <ol style="list-style-type: none"> 1.Detail Parameter 2.Copy Parameter 3.Keypad Locked 4.PLC Function | <ol style="list-style-type: none"> 5. Copy PLC 6. Fault Record 7. Quick/Simple Setup 8. Display Setup 9. Time Setup 10. Language Setup 11. Start-up 12. Main page |
|---|---|

Item 1~4 are the common items for KPC-CC01 &KPC-CE01

Press ▽ once

AUTO

◆ F 60.00Hz

H 0.00Hz

A 0.00

JOG 14:35:36

Press ▽ again

AUTO

F 60.00Hz

H 0.00Hz

◆ A 0.00

JOG 14:35:36

Press ▽ again

AUTO

H 0.00Hz

A 0.00


◆ A 0.00 Amp

JOG 14:35:36


NOTE

1. Startup page can only display pictures, no flash.
2. When Power ON, it will display startup page then the main page. The main page displays Delta's default setting F/H/A/U, the display order can be set by Pr.00.03 (Startup display). When the selected item is U page, use left key and right key to switch between the items, the display order of U page is set by Pr.00.04 (User display).

Display Icon

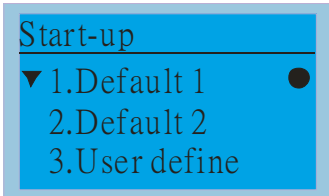


● : present setting
 ▼ : roll down the page for more options

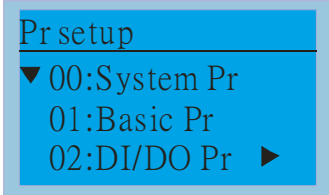

▶ : show complete sentence
 Press < > for complete information



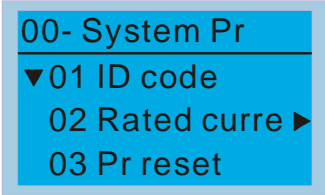
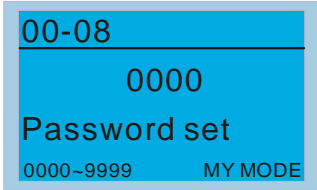
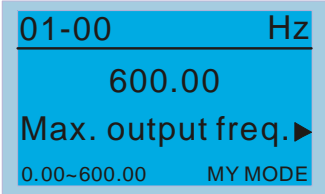
Display item

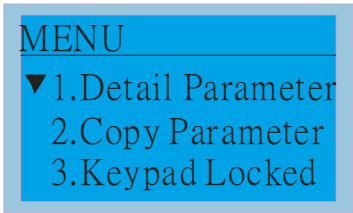




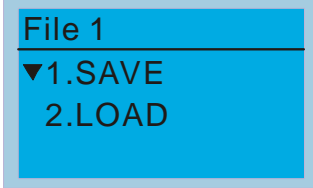

- MENU
- 1.Detail Parameter
 - 2.Copy Parameter
 - 3.Keypad Locked
 - 4.PLC Function
 - 5. Copy PLC
 - 6. Fault Record
 - 7. Quick/Simple Setup
 - 8. Display Setup
 - 9. Time Setup
 - 10. Language Setup
 - 11. Start-up
 - 12. Main page
 - 13. PC Link

Item 1~4 are the common items for KPC-CC01 &KPC-CE01



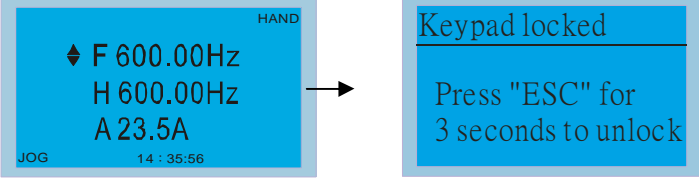
1. Detail Parameter

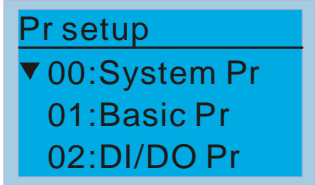 <p>Press  to select.</p>	<p>00 System Pr Content</p>  <p>00-08 Password Set</p>  <p>01-00 The maximum output freq.</p> 
---	--



2. Copy Parameter

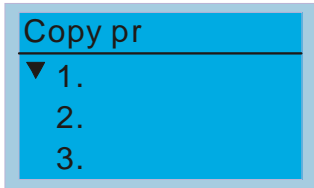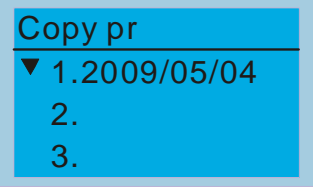	<p>Copy parameters (Pr)</p> <ol style="list-style-type: none"> 4 sets of parameters duplication. When the setting is complete, the date will be written to the copy parameters (Pr) page.
	 <p>Press </p>
	 <p>Press  to save or load</p>
	<p>After selecting save and pressing "ENTER", the parameter setting will be saved in the keypad.</p>

3. Keypad locked

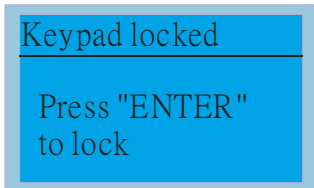	<p>Keypad Locked</p> <p>This function is used to lock the keypad. The main page would not display "keypad locked" when the keypad is locked, however it will display the message "please press ESC and then ENTER to unlock the keypad" when any key is pressed.</p>
<p>Press  to lock</p>	 <p>Press any key.</p>

4. PLC Function

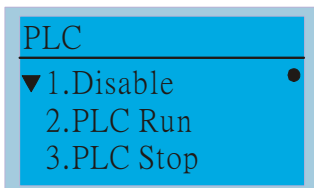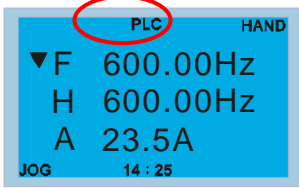	<p>When activate and stop PLC function, the PLC status will be displayed on main page of Delta default setting.</p>
<p>PLC function</p> <ol style="list-style-type: none"> Disable PLC run PLC stop 	
	<p>The PLC function of KPC-CE01 can only displays:</p> <ol style="list-style-type: none"> PLC0 PLC1 PLC2

5. Copy PLC

Copy PLC


▼ 1.
2.
3.

Copy PLC

- Duplicate 4 sets of parameters.
- When the setting is complete, the date will be written to the Copy PLC page.


Copy PLC


▼ 1.2010/03/14
2.
3.


Press  to setting menu.

File 1

 
▼ 1. Save to the drive
2. Save to the digital display

Press  to select where to save the file

Press  to select where to save the file

Press  execute filesaving process.

If select save to the drive and press enter, the file will be saved to the drive.

 **NOTE**

If password protection for WPLSoft editor was set, it is required to enter the password before the file can successfully be saved onto the digital display.

File 1

Password 0000

Input Times 0

6. Fault record

Fault record


▼ 1:GFF
2:ocA
3:oH

Fault Record

It can accumulate 6 sets of recent fault records.
The first fault code displays in the record is the latest fault. Select the fault code for details on time, date, frequency, current, voltage and DC BUS Volt..


Fault record

▼ 1:GFF
2:ocA
3:oH

Press  to view the current and voltage of the fault

2: ocA

▲▼ Time: 19:47:00
Frequency: 0.00
Current: 0.00


 **NOTE**

Fault actions of AC motor drive are record and save to KPC-CC01. When KPC-CC01 is removed and apply to another AC motor drive, the previous fault records will not be deleted. The new fault records of the present AC motor drive will accumulate to KPC-CC01.

7. Quick/Simple Setting

Quick setting

▼ 1: V/F mode
2: VFPG mode
3: SVC mode

Press  to select.

Quick Setting:

1. VF Mode
2. VFPG Mode
3. SVC Mode
4. FOCPG Mode
5. TQCPG Mode
6. My Mode

Quick Setting:

1. V/F Mode

V/F mode P00-07

▲ 01. Password Input
▼ 02. Password Setting
03. Control Mode

→

00-07

0

Password Input

0~ 65535

Items

1. Parameter Protection Password Input (P00-07)
2. Parameter Protection Password Setting (P00-08)
3. Control Mode (P00-10)
4. Control of Speed Mode (P00-11)
5. Load Selection (P00-16)
6. Carrier Frequency (P00-17)
7. Source of the Master Frequency Command (AUTO) (P00-20)
8. Source of the Operation Command (AUTO) (P00-21)
9. Stop Method (P00-22)
10. Digital Keypad STOP function (P00-32)
11. Max. Operation Frequency (P01-00)
12. Base Frequency of Motor 1 (P01-01)
13. Max. Output Voltage Setting of Motor 1 (P01-02)
14. Mid-point Frequency 1 of Motor 1 (P01-03)
15. Mid-point Voltage 1 of Motor 1 (P01-04)
16. Mid-point Frequency 2 of Motor 1 (P01-05)
17. Mid-point Voltage 2 of Motor 1 (P01-06)
18. Min. Output Frequency of Motor 1 (P01-07)
19. Min. Output Voltage of Motor 1 (P01-08)
20. Output Frequency Upper Limit (P01-10)
21. Output Frequency Lower Limit (P01-11)
22. Accel. Time 1 (P01-12)
23. Decel Time 1 (P01-13)
24. Over-voltage Stall Prevention (P06-01)
25. Derating Protection (P06-55)
26. Software Brake Level (P07-00)
27. Speed Search during Start-up (P07-12)
28. Emergency Stop (EF) & Force to Stop Selection (P07-20)
29. Filter Time of Torque Command (P07-24)
30. Filter Time of Slip Compensation (P07-25)
31. Torque Compensation Gain (P07-26)
32. Slip Compensation Gain (P07-27)

2. VFPG Mode

V/F mode P00-07

▲ 01. Password Input
▼ 02. Password Setting
03. Control Mode

→

00-07

0

Password Input


0~ 65535

Items

1. Parameter Protection Password Input (P00-07)
2. Parameter Protection Password Setting (P00-08)
3. Control Mode (P00-10)
4. Control of Speed Mode (P00-11)
5. Load Selection (P00-16)
6. Source of the Master Frequency Command (AUTO) (P00-20)
7. Source of the Operation Command (AUTO) (P00-21)

8. Stop Method (P00-22)
9. Digital Keypad STOP function (P00-32)
10. Max. Operation Frequency (P01-00)
11. Base Frequency of Motor 1 (P01-01)
12. Max. Output Voltage Setting of Motor 1 (P01-02)
13. Min. Output Frequency of Motor 1 (P01-07)
14. Min. Output Voltage of Motor 1 (P01-08)
15. Output Frequency Upper Limit (P01-10)
16. Output Frequency Lower Limit (P01-11)
17. Accel. Time 1 (P01-12)
18. Decel Time 1 (P01-13)
19. Over-voltage Stall Prevention (P06-01)
20. Software Brake Level (P07-00)
21. Filter Time of Torque Command (P07-24)
22. Filter Time of Slip Compensation (P07-25)
23. Slip Compensation Gain (P07-27)
24. Encoder Type Selection (P10-00)
25. Encoder Pulse (P10-01)
26. Encoder Input Type Setting (P10-02)
27. ASR Control (P) 1 (P11-06)
28. ASR Control (I) 1 (P11-07)
29. ASR Control (P) 2 (P11-08)
30. ASR Control (I) 2 (P11-09)
31. P Gain of Zero Speed (P11-10)
32. I Gain of Zero Speed (P11-11)

3. SVCPG Mode

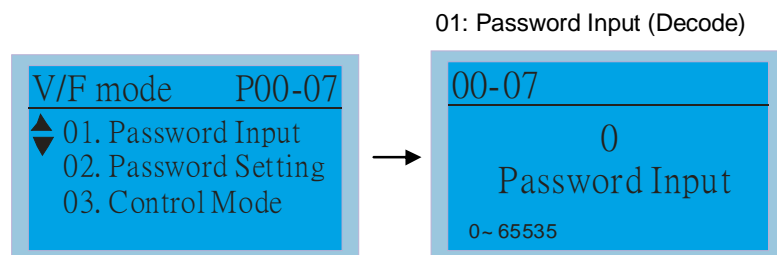


Items

1. Parameter Protection Password Input (P00-07)
2. Parameter Protection Password Setting (P00-08)
3. Control Mode (P00-10)
4. Control of Speed Mode (P00-11)
5. Load Selection (P00-16)
6. Carrier Frequency (P00-17)
7. Source of the Master Frequency Command (AUTO) (P00-20)
8. Source of the Operation Command (AUTO) (P00-21)
9. Stop Method (P00-22)
10. Digital Keypad STOP function (P00-32)
11. Max. Operation Frequency (P01-00)
12. Base Frequency of Motor 1 (P01-01)
13. Max. Output Voltage Setting of Motor 1 (P01-02)
14. Min. Output Frequency of Motor 1 (P01-07)
15. Min. Output Voltage of Motor 1 (P01-08)
16. Output Frequency Upper Limit (P01-10)
17. Output Frequency Lower Limit (P01-11)
18. Accel. Time 1 (P01-12)
19. Decel Time 1 (P01-13)
20. Full-load Current of Induction Motor 1 (P05-01)
21. Rated Power of Induction Motor 1 (P05-02)
22. Rated Speed of Induction Motor 1 (P05-03)
23. Pole Number of Induction Motor 1 (P05-04)
24. No-load Current of Induction Motor 1 (P05-05)
25. Over-voltage Stall Prevention (P06-01)
26. Over-current Stall Prevention during Acceleration (P06-03)
27. Derating Protection (P06-55)
28. Software Brake Level (P07-00)

- 29. Emergency Stop (EF) & Force to Stop Selection (P07-20)
- 30. Filter Time of Torque Command (P07-24)
- 31. Filter Time of Slip Compensation (P07-25)
- 32. Slip Compensation Gain (P07-27)


4. FOC PG Mode

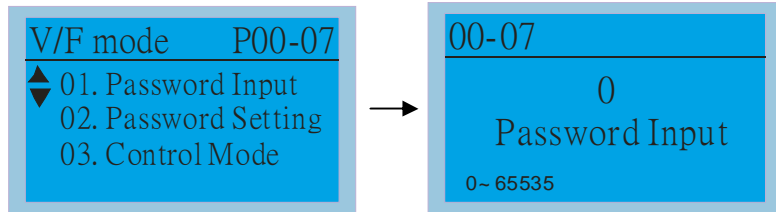

Items

- 1. Parameter Protection Password Input (P00-07)
- 2. Parameter Protection Password Setting (P00-08)
- 3. Control Mode (P00-10)
- 4. Control of Speed Mode (P00-11)
- 5. Source of the Master Frequency Command (AUTO) (P00-20)
- 6. Source of the Operation Command (AUTO) (P00-21)
- 7. Stop Method (P00-22)
- 8. Max. Operation Frequency (P01-00)
- 9. Base Frequency of Motor 1 (P01-01)
- 10. Max. Output Voltage Setting of Motor 1 (P01-02)
- 11. Output Frequency Upper Limit (P01-10)
- 12. Output Frequency Lower Limit (P01-11)
- 13. Accel. Time 1 (P01-12)
- 14. Decel Time 1 (P01-13)
- 15. Full-load Current of Induction Motor 1 (P05-01)
- 16. Rated Power of Induction Motor 1 (P05-02)
- 17. Rated Speed of Induction Motor 1 (P05-03)
- 18. Pole Number of Induction Motor 1 (P05-04)
- 19. No-load Current of Induction Motor 1 (P05-05)
- 20. Over-voltage Stall Prevention (P06-01)
- 21. Over-current Stall Prevention during Acceleration (P06-03)
- 22. Derating Protection (P06-55)
- 23. Software Brake Level (P07-00)
- 24. Emergency Stop (EF) & Force to Stop Selection (P07-20)
- 25. Encoder Type Selection (P10-00)
- 26. Encoder Pulse (P10-01)
- 27. Encoder Input Type Setting (P10-02)
- 28. System Control (P11-00)
- 29. Per Unit of System Inertia (P11-01)
- 30. ASR1 Low-speed Bandwidth (P11-03)
- 31. ASR2 High-speed Bandwidth (P11-04)
- 32. Zero-speed Bandwidth (P11-05)

5. TQCPG Mode

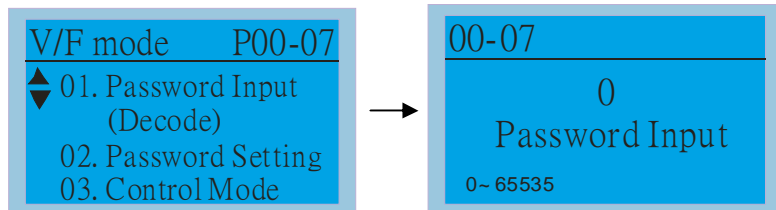


Items

- 1. Password Input (Decode) (P00-07)
- 2. Password Setting (P00-08)
- 3. Control Mode (P00-10)
- 4. Control of Speed Mode (P00-11)
- 5. Source of the Master Frequency Command (P00-20)


- 6. Source of the Operation Command (P00-21)
- 7. Max. Operation Frequency (P01-00)
- 8. Base Frequency of Motor 1 (P01-01)
- 9. Max. Output Voltage Setting of Motor 1 (P01-02)
- 10. Full-load Current of Induction Motor 1 (P05-01)
- 11. Rated Power of Induction Motor 1 (P05-02)
- 12. Rated Speed of Induction Motor 1 (P05-03)
- 13. Pole Number of Induction Motor 1 (P05-04)
- 14. No-load Current of Induction Motor 1 (P05-05)
- 15. Over-voltage Stall Prevention (P06-01)
- 16. Software Brake Level (P07-00)
- 17. Encoder Type Selection (P10-00)
- 18. Encoder Pulse (P10-01)
- 19. Encoder Input Type Setting (P10-02)
- 20. System Control (P11-00)
- 21. Per Unit of System Inertia (P11-01)
- 22. ASR1 Low-speed Bandwidth (P11-03)
- 23. ASR2 High-speed Bandwidth (P11-04)
- 24. Zero-speed Bandwidth (P11-05)
- 25. Max. Torque Command (P11-27)
- 26. Source of Torque Offset (P11-28)
- 27. Torque Offset Setting (P11-29)
- 28. Source of Torque Command (P11-33)
- 29. Torque Command (P11-34)
- 30. Speed Limit Selection (P11-36)
- 31. Forward Speed Limit (torque mode) (P11-37)
- 32. Reverse Speed Limit (torque mode) (P11-38)

6.My Mode

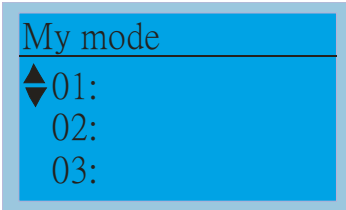


My mode:
It can save 01~32 sets of parameters (Pr).


Click F4 in parameter setting page, the parameter will save to My Mode. To delete or correct the parameter, enter this parameter and click the "DEL" on the bottom right corner.

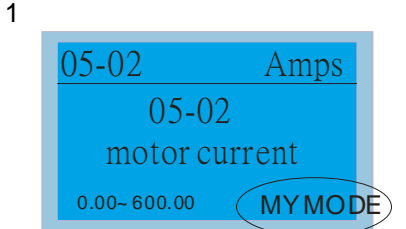

1 Press F4 and save to my mode.

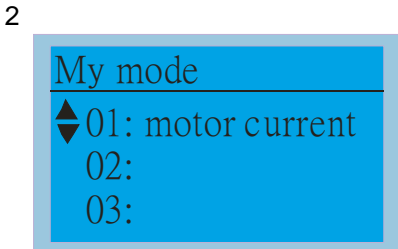

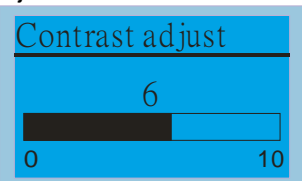
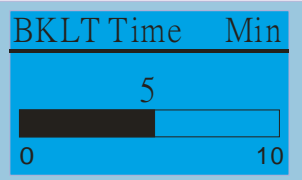


2 The parameter (Pr) will be displayed in My mode if it is properly saved. To correct or to delete this Pr. clicks DEL.

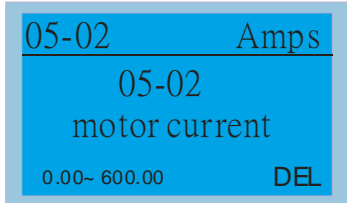






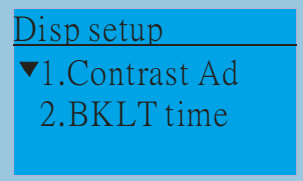

Press F4 to delete this Pr. setting in My Mode.

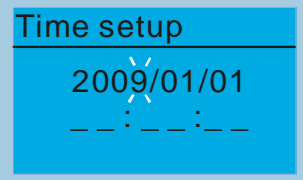
8. Display setup

 <p>Press  to enter the setting menu.</p>	<p>1. Contrast Adjustment</p>  <p>Adjust setting value</p> <p>2. Back-lighted Time</p>  <p>Adjust setting value</p>
---	---


9. Time setting

	<p>Enter time setup page, "9" will continue to blink</p> <p>  move to left / right</p> <p>  increase / decrease the value</p> <p>Press  to confirm.</p> <p> NOTE When the digital keypad is removed, the time setting will be in standby status for 7 days. After this period, the time needs to be reset.</p>
---	--



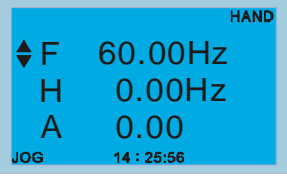
10. Language setup

	<p>Language selection.</p>
---	----------------------------





11. Startup Page Setting

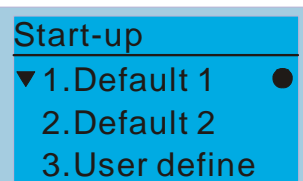	<ol style="list-style-type: none"> Default picture 1 DELTA LOGO Default picture 2 DELTA Text User defined: optional accessory is require (TPEditor & USB/RS-485 Communication Interface-IFD6530) Install an editing accessory would allow users to design their own start-up page. If editor accessory is not installed, "user defined" option will display a blank page. <p><u>USB/RS-485 Communication Interface-IFD6530</u> Please refer to Chapter 07 Optional Accessories for more detail.</p> <p><u>TPEditor</u> TPEditor Installation Instruction is on page 10-15 and TPEditor V1.03.6 is available for download at: http://www.delta.com.tw/ch/product/em/download/download_main.asp?act=3&pid=1&cid=1&tpid=3</p>
---	---

12. Main page

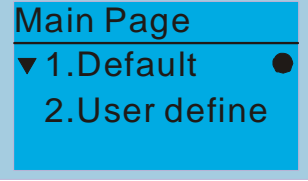
 <p>Press  to select.</p>	<p>1. Default page Default picture and editable picture are available upon selection.</p>  <p>F 600.00Hz >>> H >>> A >>> U (circulate)</p> <p>2. User defined: optional accessory is require (TPEditor & USB/RS-485 Communication Interface-IFD6530) Install an editing accessory would allow users to design their own start-up page.If editor accessory is not installed, "user defined" option will display a blank page.</p> <p><u>USB/RS-485 Communication Interface-IFD6530</u> Please refer to Chapter 07 Optional Aecessories for more detail.</p> <p><u>TPEditor</u> TPEditor Installation Instruction is on page 10-15 and TPEditor V1.30.6 is available for download at: http://www.delta.com.tw/ch/product/em/download/download_main.asp?act=3&pid=1&cid=1&tpid=3</p>
---	---

13. PC Link

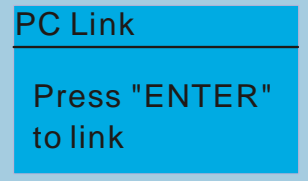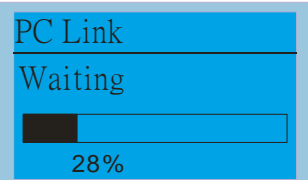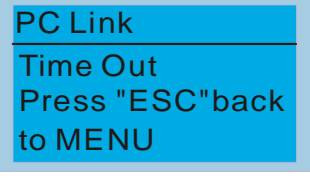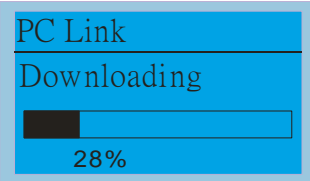 <p>Select 1 and press ENTER</p>  <p>Select 2 and press ENTER</p>	<p>The function of PC Link is to establish a connection with computer to download the page for user defined editing. After enter to PC Link page, check if the connection of KPC-CC01 and computer is successfully establish, then press enter to go to next page and wait for communication response.</p> <ol style="list-style-type: none"> If the connection failed, the screen will show "Time Out".  <ol style="list-style-type: none"> If the connection succeeds, the screen page will show "Downloading". When the download is done, it returns to MENU page.  <ol style="list-style-type: none"> In order to set the start-up page and main page in the format user defined, user must check the user define option for start-up page and main page. If the user define page for editing has not yet downloaded to KPC-CC01, the start-up page and main page will display as blank.
--	---

Other display

When fault occur, the menu will display:

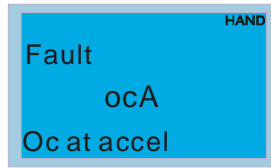

1. Press ENTER and start RESET. If still no response, please contact local distributor or return to the factory. To view the fault DC BUS voltage, output current and output voltage, press "MENU"→"Fault Record".
2. Press ENTER again, if the screen returns to main page, the fault is clear.
3. When fault or warning message appears, backlight LED will blinks until the fault or the warning is cleared.

Optional accessory: RJ45 Extension Lead for Digital Keypad

Part No.	Description
CBC-K3FT	RJ45 extension lead, 3 feet (approximately 0.9m)
CBC-K5FT	RJ45 extension lead, 5 feet (approximately 1.5 m)
CBC-K7FT	RJ45 extension lead, 7 feet (approximately 2.1 m)
CBC-K10FT	RJ45 extension lead, 10 feet (approximately 3 m)
CBC-K16FT	RJ45 extension lead, 16 feet (approximately 4.9 m)


10-3 TPEditor Installation Instruction

1) TPEditor: Setup & Basic Functions


1. Run TPEditor version 1.30



2. Go to File(F)→Click on New. The Window below will pop up. At the device type, click on the drop down menu and choose DELTA VFD-C Inverter. At the TP type, click on the drop down menu and choose VFD-C KeyPad. As for File Name, enter TPE0. Now click on OK.

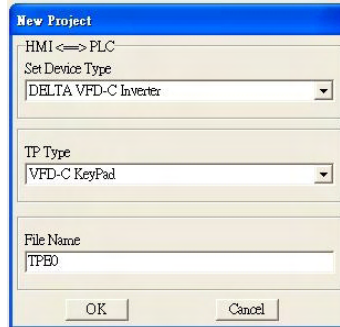

3. You are now at the designing page. Go to Edit (E)→Click on Add a New Page (A) or go to the TP page on the upper right side, right click once on TP page and choose Add to increase one more page for editing. The current firmware of Keypad is version1.00 and can support up to 4 pages.

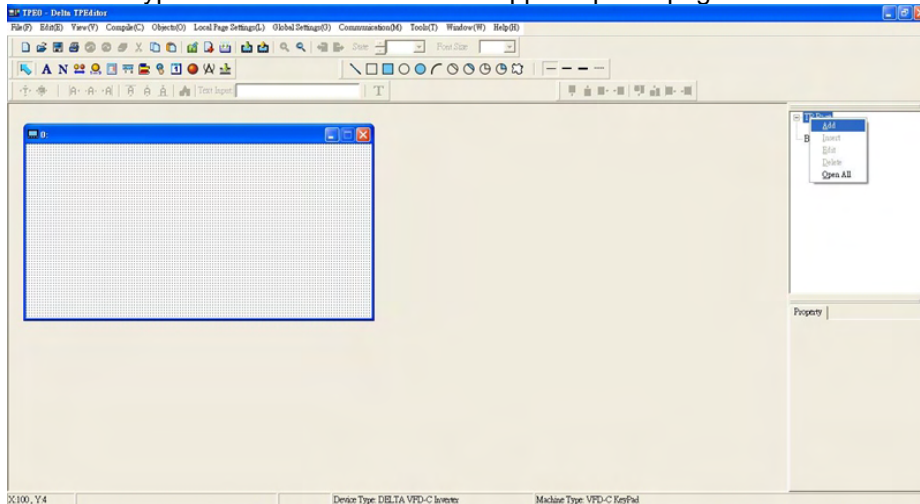




4. Download setting, Go to Tool →Communication settings (C) to set up the PC Com Port and Baud Rate. The supporting speeds of Baud rate are 9600bps, 19200bps and 38400bps. The default setting of TP address is 1, please do not modify.




2) Edit Startup Page

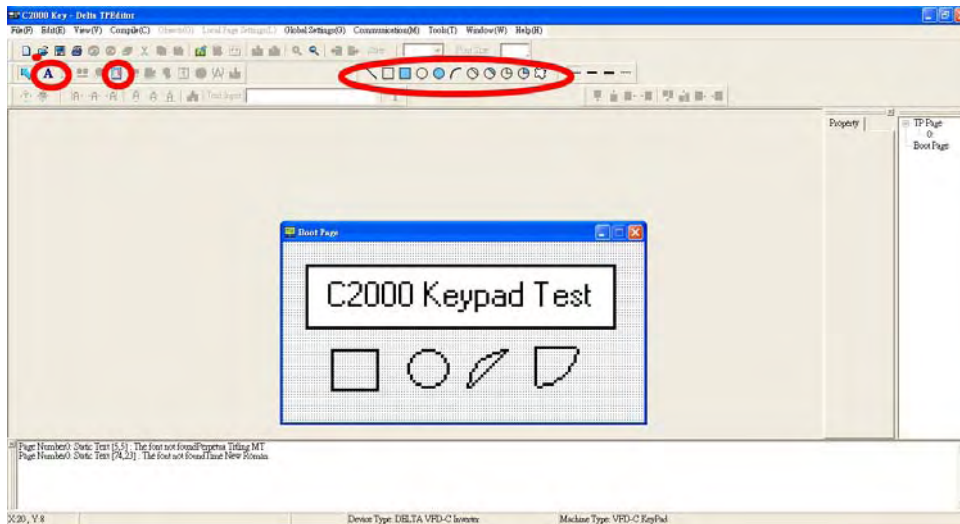

1. Click once on the Boot Page on the right hand side of your computer screen or click on View (V) →click on Boot Page (B). Then a blank Boot Page window will pop up. Use the circled items to design your Startup page.

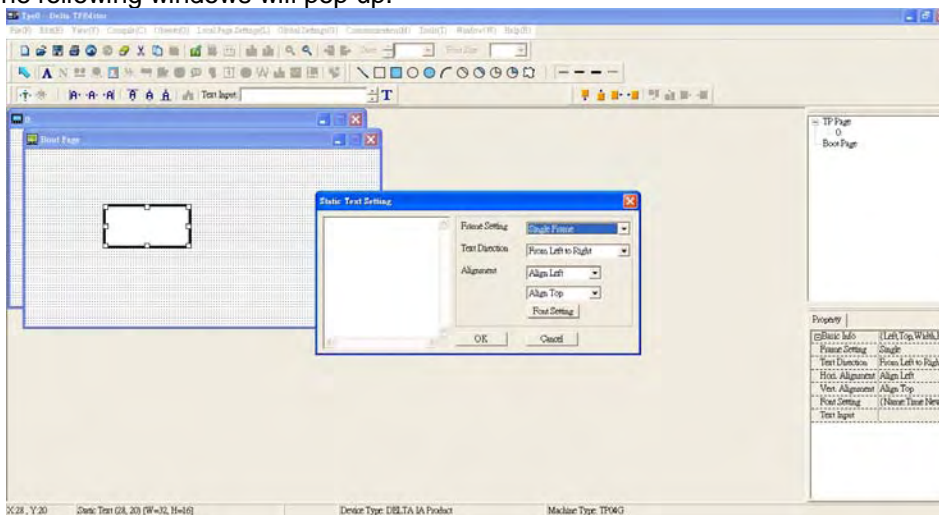


2. Static Text . Open a blank page, click once on this button , and then double click on that blank page. The following windows will pop up.





On the right hand side of the Static Text Setting, you can adjust the frame setting, the text direction, the alignment and the font setting. Once you finish all the adjustments that you need. You can continue to input your text in the blank space of Static Text Setting window. When you finish inputting your text, click on OK to continue your next step or click cancel to abort the current step.


3. Static Bitmap  → Open a blank page, then click once on this button  and then double click on that blank page. The following window will pop up.

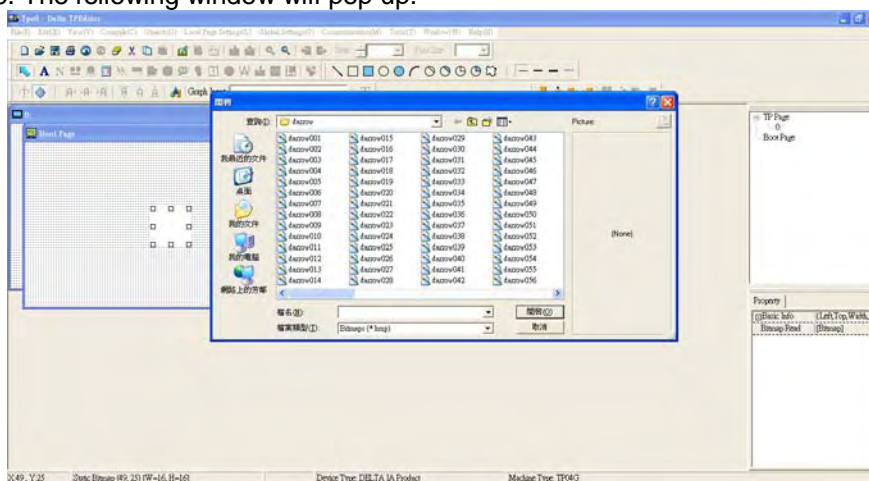

 
Please note that Static Bitmap setting support only images in BMP format. Now choose a image that you need and click open, then that image will appear in the Static Bitmap window.

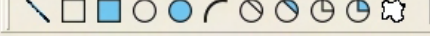4. Geometric Bitmap  → As shown in the picture on the left side, there are 11 kinds of geometric bitmap to choose. Open a new blank page then click once on a geometric bitmap


icon that you need. Then drag that icon and enlarge it to the size that you need on that blank page. For example, if you drag this icon  to a blank page, you will see the following window.

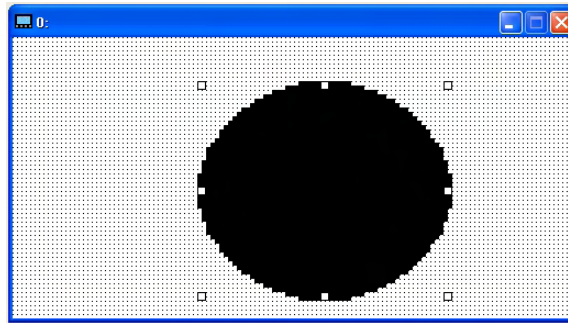

- Download---Take the image below as an example. The sentence "Boot page" is static text, the 11 images below are geometric bitmaps. The image on the right hand side is a Static Bitmap. To upload a start up page, double click to activate "Boot page. Make sure that you have followed the instruction on page 3 to choose the right com port. Then go to "Communication (M)" →Click on "Write Boot Page TP (B)." When you see the pop up message below

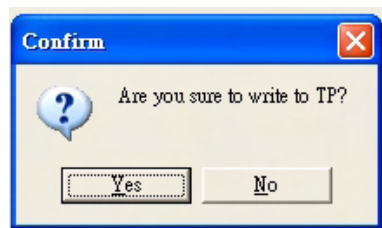


Go to the C2000 Keypad, press Menu then keep on pressing the Upward key until you see "PC Link," then press ENTER once, when you see "Press Enter to PC Link" on the keypad, press the ENTER again. Then click the YES button to begin the upload.

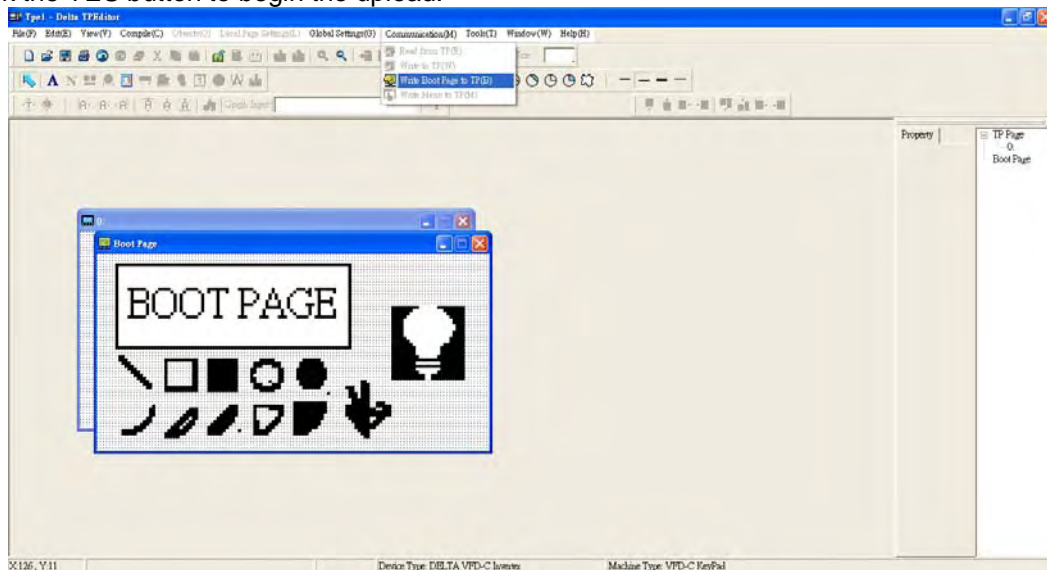

3) Edit Main Page

1. Click on a page under the TP Page to edit or go to View → click on Boot Page to begin to edit main page. The objects available for you to use are in the red circles below.

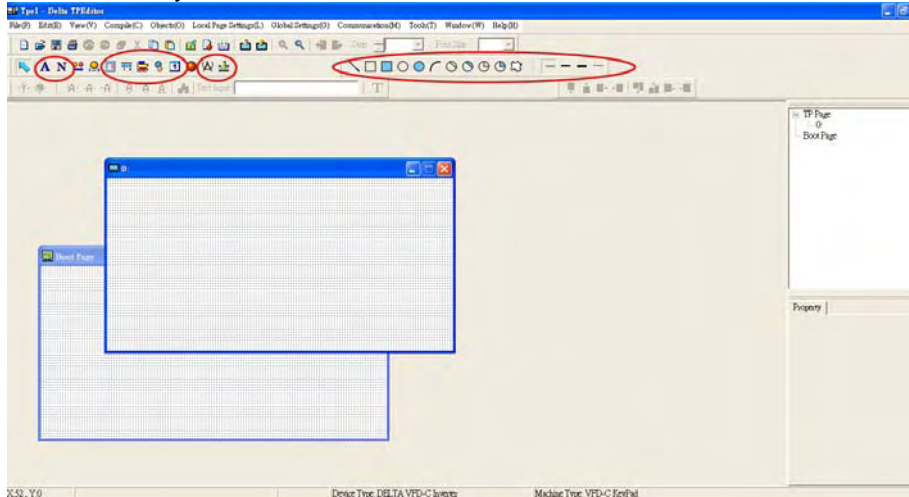


From left to right: Static Text, ASCII Display, Static Bitmap, Scale, Bar Graph, Button, Clock Display, Units, Numeric Input, 11 geometric bitmaps and different width of lines. The application of Static Text, Static Bitmap, and geometric bitmap is the same as the editing startup page.


2. Numeric/ASCII Display A): Go to Objects (O)→Click once on the Numeric/ASCII Display(A)





→Drag to enlarge to reach the size that you need to add objects in the screen where you want to create an object →Double click on the object to set up Related Devices, Frame Setting , Fonts and Alignment.

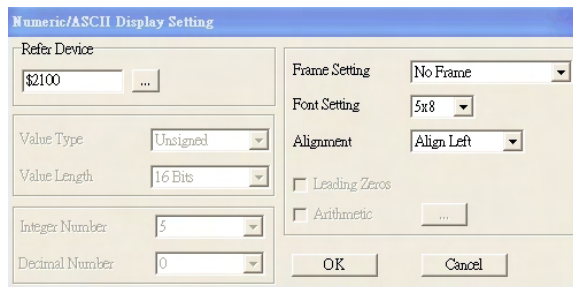


Related Device: Choose the VFD Communication Port that you need, if you want to read output frequency (H), set the VFD Communication Port to \$2202. For other values, please refer to ACMD ModBus Comm Address List.

3. Scale Setting  : On the Tool Bar, click on this  for Scale Setting. You can also edit Scale Setting in the Property Window on the right hand side of your computer screen.

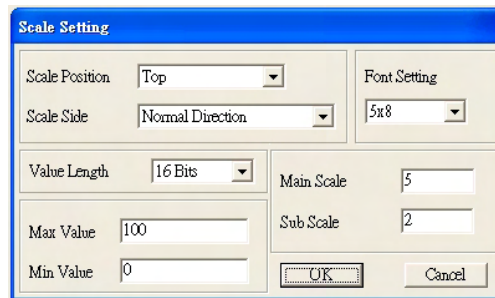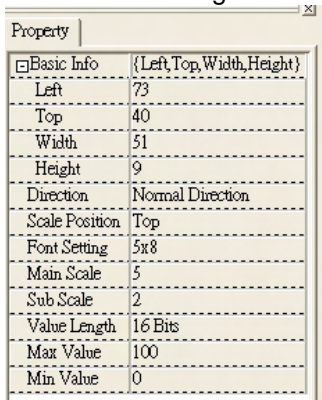

- a. Scale Position: Click on the drop down list to choose which position that you need to place a scale.
- b. Scale Side: Click on the drop down list to choose if you want to number your scale from smaller number to bigger number or from big to small. Click OK to accept this setting or click Cancel to abort.
- c. Font Setting: Click on the drop down list to choose the Font setting that you need then click OK to accept the setting or click Cancel to abort.


- d. Value Length: Click on the drop down to choose 16bits or 32 bits. Then click OK to accept the setting or click Cancel to abort.
- e. Main Scale & Sub Scale: In order to divide the whole scale into equal parts, key in the numbers of your choices for main scale and sub scale.
- f. Maximum value & Minimum Value are the numbers on the two ends of a scale. They can be negative numbers but the input numbers are limited by value.
- g. Follow the Scale setting mentioned above; you will have a scale as shown below.

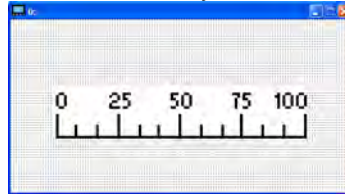


4. Bar Graph setting :

- a. Related Device: Choose the VFD Communication Port that you need.
- b. Direction Setting: Click on the drop down menu to choose one of the following directions: From Bottom to Top, From Top to Bottom, From Left to Right or From Right to Left.
- c. Maximum Value & Minimum Value: They define the range covered by the maximum value and minimum value. If a value is smaller than or equal to the minimum value, then the bar graph will be blank. If a value is bigger or equal to the maximum value, then the bar graph will be full. If a value is between minimum and maximum value, then the bar graph will be filled proportionally.



5. Button : Currently this function only allows the Keypad to switch pages, other functions are not yet available. Text input function and Image inserted functions are not yet supported.


Double click on  to open set up window.

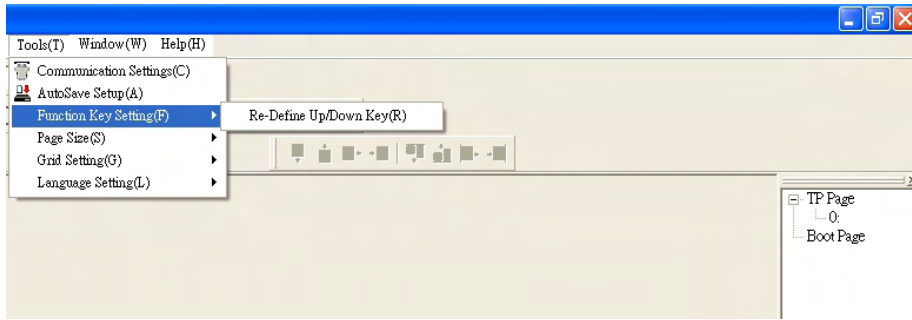- a. <Button Type> allows you set up buttons' functions. But Page Jump is the only supported function currently.
- b. Page Jump setting: After you choose the Page Jump function in the drop down list, you will see this Page Jump Setting Menu
- c. <Function Key> allows you to assign functions to the following keys on the KPC-CC01 keypad: F1, F2, F3, F4, Up, Down, Left and Right. Please note that the Up and Down keys are locked by TPEditor. These two keys cannot be programmed. If you want to program Up and Down keys, go to Tool→Function Key Settings (F)→Re-Define Up/Down Key(R).





d. There are no supported functions other than the setting mentioned above.

6. Clock Display Setting  : Click once on this button  .
Open a new file and click once in that window, you will see the following

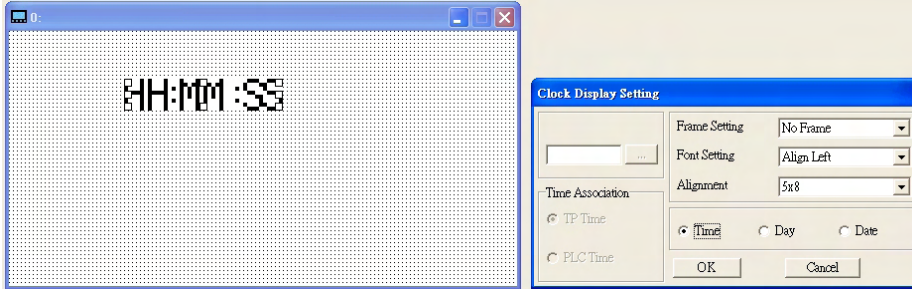

 
In the clock display setting, you can choose to display Time, Day or Date on the Keypad. To adjust time, go to #9 on the Keypad's menu. You can also adjust Frame Setting, Font Setting and Alignment.


7. Unit Measurement  : Click once on this Button:
Open a new file and double click on that window, you will see the following

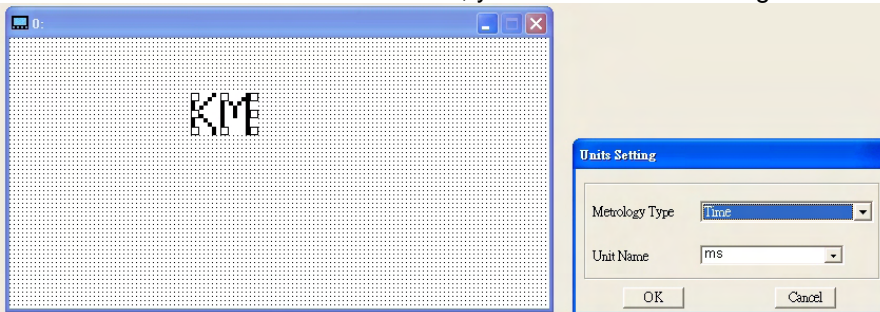


Choose from the drop down list the Metrology and the Unity Name that you need. As for Metrology, you have the following choices Length, Square Measure, Volume/Solid Measure, Weight, Speed, Time and Temperature. The unit name changes automatically when you change metrology type.


8. Numeric Input Setting  :

This menu allows you to provide parameters or communication ports and to input numbers.

Click once on this button  .
Open a new file and double click on that window, you will see the following:

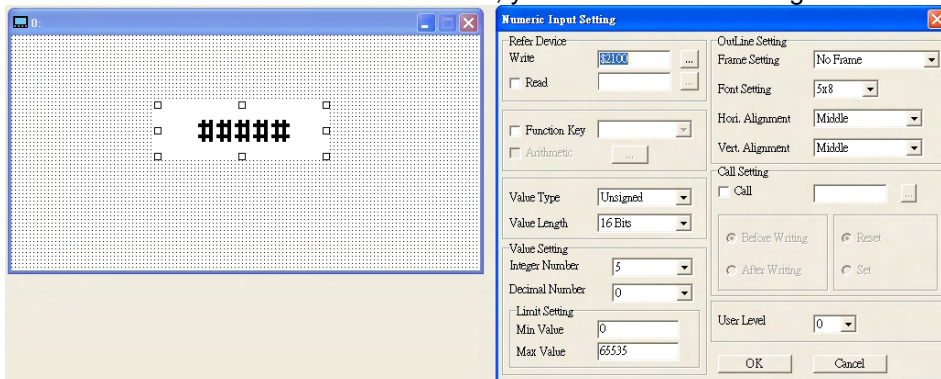


- a. Related Device: There are two blank spaces to fill in, one is <Write> and another one is <Read>. Input the numbers that you want to display and the corresponding numbers of a parameter and that of a communication port. For example, input 012C to Read and Write Parameter P01-44.
- b. OutLine Setting: The Frame setting, Font setting, Vertical Alignment and Horizontal Alignment are the same as mentioned before. Click on the drop down menu and choose the setting that you need.
- c. Function key: The setting here allows you to program keys on the keypad. Press the key on the menu then the corresponding key on the keypad will start to blink, then press Enter to confirm the setting.
- d. Value Type & Value Length: These two factors influence the range of the Minimum and Maximum Value of the Limit Setting. Please note that the corresponding supporting values for C2000 have to be 16bits. The 32bits values are not supported.
- e. Value Setting: This part is set automatically by the keypad itself.
- f. Limit Setting: Input the range the security setting here.
- g. For example, if you set Function Key as F1, Minimum Value as 0 and Maximum Value as 4, then press F1 on Keypad Then you can press Up and Down key on the keypad to increase or decrease the value. Press Enter Key on the keypad to confirm your setting. You can also go to parameter table 01-44 to verify if your input correctly the value.

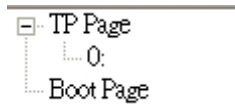 

9. Download TP Page Link. : Press Up or Down key on the keypad until you reach #13 PC Link.





Then press Enter on the keypad and you will see the word "Waiting" on keypad's screen. Now choose a page that you have created then go to Communication (M)→Write to TP(W) to start downloading the page to the keypad






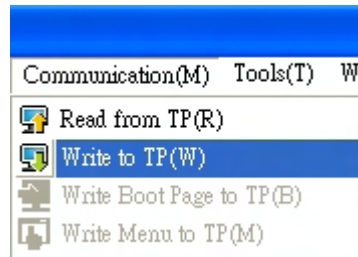


When you see the word Completed on the keypad's screen, that means the download is done. Then you can press ESC on the keypad to go back to the menu of the keypad.

10-4 Digital Keypad KPC-CC01 Fault Codes and Descriptions


Following fault codes and description are for digital keypad KPC-CC01 with version V1.01 and version higher.

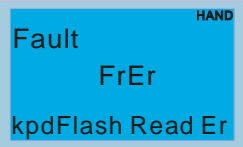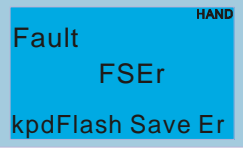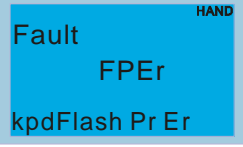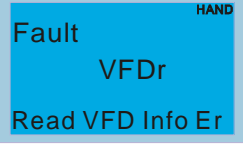LCM Display	Description
 <p>Fault FrEr kpdFlash Read Er</p>	Keypad flash memory read error
 <p>Fault FSEr kpdFlash Save Er</p>	Keypad flash memory save error
 <p>Fault FPEr kpdFlash Pr Er</p>	Keypad flash memory parameter error
 <p>Fault VFDr Read VFD Info Er</p>	Keypad flash memory when read AC drive data error

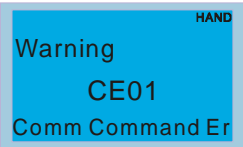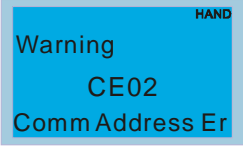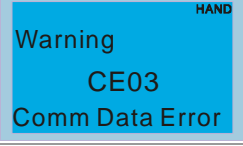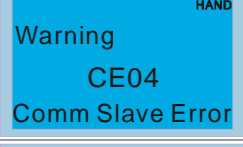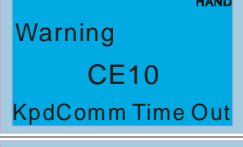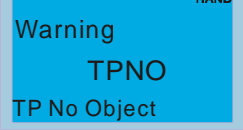LCM Display	Description
 <p>Warning CE01 Comm Command Er</p>	Modbus function code error
 <p>Warning CE02 Comm Address Er</p>	Modbus data address error
 <p>Warning CE03 Comm Data Error</p>	Modbus data value error
 <p>Warning CE04 Comm Slave Error</p>	Modbus slave drive error
 <p>Warning CE10 KpdComm Time Out</p>	Modbus transmission time-Out
 <p>Warning TPNO TP No Object</p>	Object not supported by TP Editor

Fault Description of File Copy and Setting Errors

LCM Display	Description
 <p>File 1 Err Read Only</p>	Parameter and file are read only
 <p>File 1 Err Write Fail</p>	Fail to write parameter and file
 <p>File 1 Err VFD Running</p>	AC drive is in operating status
 <p>File 1 Err Pr Lock</p>	AC drive parameter is locked
 <p>File 1 Err Pr Changing</p>	AC drive parameter changing
 <p>File 1 Err Fault Code</p>	Fault code
 <p>File 1 Err Warning Code</p>	Warning code
 <p>File 1 Err Type Dismatch</p>	File type mismatch
 <p>File 1 Err Password Lock</p>	File is locked with password
 <p>File 1 Err Version Fail</p>	File version mismatch
 <p>File 1 Err VFD Time Out</p>	AC drive copy function time-out
 <p>File 1 Err Keypad Issue</p>	Other keypad error

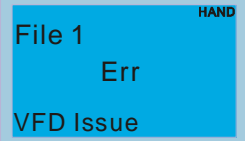LCM Display	Description
 The image shows a blue LCM display with the text "File 1" at the top left, "Err" in the center, and "VFD Issue" at the bottom left. A small "HAND" indicator is visible in the top right corner of the display area.	Other AC drive error

Chapter 11 Summary of Parameter Settings

This chapter provides summary of parameter settings for user to gather the parameter setting ranges, factory settings and set parameters. The parameters can be set, changed and reset by the digital keypad.

NOTE

- 1) \swarrow : the parameter can be set during operation
- 2) For more detail on parameters, please refer to Ch12 Description of Parameter Settings.

00 Drive Parameters


 NOTE IM: Induction Motor; PM: Permanent Magnet Motor

Pr.	Explanation	Settings	Factory Setting
00-00	Identity Code of the AC Motor Drive	4: 230V, 1HP 5: 460 V, 1HP 6: 230V,2HP 7: 460 V, 2HP 8: 230V, 3HP 9: 460 V, 3HP 10: 230V, 5HP 11: 460 V, 5HP 12: 230V, 7.5HP 13: 460 V, 7.5HP 14: 230V, 10HP 15: 460V, 10HP 16: 230V, 15HP 17: 460V, 15HP 18: 230V, 20HP 19: 460V, 20HP 20: 230V, 25HP 21: 460V, 25HP 22: 230V, 30HP 23: 460V, 30HP 24: 230V, 40HP 25: 460V, 40HP 26: 230V, 50HP 27: 460V, 50HP 28: 230V, 60HP 29: 460V, 60HP 30: 230V, 75HP 31: 460V, 75HP 32: 230V, 100HP 33: 460V, 100HP 34: 230V, 125HP 35: 460V, 125HP 37: 460V, 150HP 39: 460V, 175HP 41: 460V, 215HP 43: 460V, 250HP 45: 460V, 300HP 47: 460V, 375HP 49: 460V, 425HP 51: 460V, 475HP 93: 460V, 5HP (4kW)	Read only
00-01	Display AC Motor Drive Rated Current	Display by models	Read only

Pr.	Explanation	Settings	Factory Setting
00-02	Parameter Reset	0: No function 1: Read only 5: Reset KWH display to 0 6: Reset PLC (including CANopen Master Index) 7: Reset CANopen Index (Slave) 8: keypad lock 9: All parameters are reset to factory settings(base frequency is 50Hz) 10: All parameters are reset to factory settings (base frequency is 60Hz)	0
↗ 00-03	Start-up Display Selection	0: F (frequency command) 1: H (output frequency) 2: U (multi-function display, see Pr.00-04) 3: A (output current)	0
↗ 00-04	Content of Multi-function Display	0: Display output current (A) 1: Display counter value (c) 2: Display actual output frequency (H.) 3: Display DC-BUS voltage (v) 4: Display output voltage (E) 5: Display output power angle (n) 6: Display output power in kW (P) 7: Display actual motor speed rpm (r) 8: Display estimate output torque % (t) 9: Display PG feedback (G) (refer to Pr.10-00,10-01) 10: Display PID feedback in % (b) 11: Display AVI in % (1.) 12: Display ACI in % (2.) 13: Display AUI in % (3.) 14: Display the temperature of IGBT in oC (i.) 15: Display the temperature of capacitance in oC (c.) 16: The status of digital input (ON/OFF) (i) 17: The status of digital output (ON/OFF) (o) 18: Multi-step speed (S) 19: The corresponding CPU pin status of digital input (d.) 20: The corresponding CPU pin status of digital output (0.) 21: Actual motor position (PG1 of PG card) (P.) 22: Pulse input frequency (PG2 of PG card) (S.) 23: Pulse input position (PG2 of PG card) (q.) 24: Position command tracing error (E.) 25: Overload count (0.00~100.00%) (h.) 26: Ground Fault GFF (Unit :%)(G.) 27: DC Bus voltage ripple (Unit: Vdc) (r.) 28: Display PLC data D1043 (C) 29: Display PM motor pole section (EMC-PG01U application) (4.) 30: Display output of user defined (U) 31: Display Pr.00-05 user Gain(K) 32: Number of actual motor revolution during operation (PG card plug in and Z phase signal input) (Z.) 33: Motor actual position during operation (when PG card is connected)(q) 34: Operation speed of fan(%) (F.) 35: Control Mode display: 0= Speed control mode (SPD), 1= torque control mode (TQR) (t.) 36: Present operating carrier frequency of drive	3

Pr.	Explanation	Settings	Factory Setting																														
		(Hz) (J.) 37: Reserved 38: Display drive status (6.) 39: Display estimated output torque, positive and negative, using Nt-m as unit (t 0.0: positive torque; -0.0: negative torque (C.))																															
00-05	Coefficient Gain in Actual Output Frequency	0~160.00	0																														
00-06	Software Version	Read-only	##																														
↗ 00-07	Parameter Protection Password Input	0~65535 0~3: the times of password attempts	0																														
↗ 00-08	Parameter Protection Password Setting	0 ~ 65535 0: No password protection / password is entered correctly (Pr00-07) 1: Parameter is locked	0																														
↗ 00-09	Reserved																																
00-10	Control Mode	0: Speed mode 1: Point-to-Point position control 2: Torque mode 3: Home mode	0																														
00-11	Control of Speed Mode	0: VF (IM V/f control) 1: VFPG (IM V/f control+ Encoder) 2: SVC(IM Sensorless vector control) 3: FOCPG (IM FOC vector control+ encoder) 4: FOCPG (PM FOC vector control + Encoder) 5: FOC Sensorless (IM field oriented sensorless vector control) 6: PM Sensorless (PM field oriented sensorless vector control)	0																														
00-12	Point-to-Point Position mode	0: Relative position 1: Absolute position																															
00-13	Torque Mode Control	0: TQCPG (IM Torque control + Encoder) 1: TQCPG (PM Torque control + Encoder) 2: TQC Sensorless (IM Sensorless torque control)	0																														
00-14	Reserved																																
00-15	Reserved																																
↗ 00-16	Load Selection	0: Normal load 1: Heavy load	0																														
00-17	Carrier Frequency	<table border="1"> <thead> <tr> <th colspan="3">Normal load</th> </tr> <tr> <th>230V</th> <th>460V</th> <th>Carrier Frequency</th> </tr> </thead> <tbody> <tr> <td>1-15HP</td> <td>1-20HP</td> <td>2~15KHz</td> </tr> <tr> <td>20-50HP</td> <td>25-75HP</td> <td>2~10KHz</td> </tr> <tr> <td>60-125HP</td> <td>100-475HP</td> <td>2~09KHz</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th colspan="3">Heavy load</th> </tr> <tr> <th>230V</th> <th>460V</th> <th>Carrier Frequency</th> </tr> </thead> <tbody> <tr> <td>1-15HP</td> <td>1-20HP</td> <td>2~15KHz</td> </tr> <tr> <td>20-50HP</td> <td>25-75HP</td> <td>2~10KHz</td> </tr> <tr> <td>60-125HP</td> <td>100-475HP</td> <td>2~09KHz</td> </tr> </tbody> </table>	Normal load			230V	460V	Carrier Frequency	1-15HP	1-20HP	2~15KHz	20-50HP	25-75HP	2~10KHz	60-125HP	100-475HP	2~09KHz	Heavy load			230V	460V	Carrier Frequency	1-15HP	1-20HP	2~15KHz	20-50HP	25-75HP	2~10KHz	60-125HP	100-475HP	2~09KHz	8 6 4 2
Normal load																																	
230V	460V	Carrier Frequency																															
1-15HP	1-20HP	2~15KHz																															
20-50HP	25-75HP	2~10KHz																															
60-125HP	100-475HP	2~09KHz																															
Heavy load																																	
230V	460V	Carrier Frequency																															
1-15HP	1-20HP	2~15KHz																															
20-50HP	25-75HP	2~10KHz																															
60-125HP	100-475HP	2~09KHz																															
00-18	Reserved																																
00-19	PLC Command Mask	Bit 0: Control command by PLC force control Bit 1: Frequency command by PLC force control Bit 2: Position command by PLC force control Bit 3: Torque command by PLC force control	Read only																														
↗ 00-20	Source of Master Frequency Command (AUTO)	0: Digital keypad 1: RS-485 serial communication 2: External analog input (Pr.03-00)	0																														

Pr.	Explanation	Settings	Factory Setting
		3: External UP/DOWN terminal 4: Pulse input without direction command (Pr.10-16 without direction) 5: Pulse input with direction command (Pr.10-16) 6: CANopen communication card 7: Reserved 8: Communication card (no CANopen card)	
↗ 00-21	Source of the Operation Command (AUTO)	0: Digital keypad 1: External terminals. Keypad STOP disabled. 2: RS-485 serial communication. Keypad STOP disabled. 3: CANopen communication card 4: Reserved 5: Communication card (no CANopen card)	0
↗ 00-22	Stop Method	0: Ramp to stop 1: Coast to stop	0
↗ 00-23	Control of Motor Direction	0: Enable forward/reverse 1: Reverse disable 2: Forward disable	0
00-24	Memory of Frequency Command	Read only	Read only
00-25	User Defined Characteristics	Bit 0~3: user define on decimal place 0000b: no decimal place 0001b: one decimal place 0010b: two decimal place 0011b: three decimal place Bit 4~15: user define on unit 000xh: Hz 001xh: rpm 002xh: % 003xh: kg	0
00-26	Max. User Defined Value	0: Disable 0~65535 (when Pr.00-25 set to no decimal place) 0.0~6553.5 (when Pr.00-25 set to 1 decimal place) 0.0~655.35 (when Pr.00-25 set to 2 decimal place) 0.0~65.535 (when Pr.00-25 set to 3 decimal place)	0
00-27	User Defined Value	Read only	Read Only
00-28	Reserved		
00-29	LOCAL/REMOTE Selection	0: Standard HOA function 1: Switching Local/Remote, the drive stops 2: Switching Local/Remote, the drive runs as the REMOTE setting for frequency and operation status 3: Switching Local/Remote, the drive runs as the LOCAL setting for frequency and operation status 4: Switching Local/Remote, the drive runs as LOCAL setting when switch to Local and runs as REMOTE setting when switch to Remote for frequency and operation status.	0
↗ 00-30	Source of the Master Frequency Command (HAND)	0: Digital keypad 1: RS-485 serial communication 2: External analog input (Pr.03-00) 3: External UP/DOWN terminal 4: Pulse input without direction command (Pr.10-16 without direction) 5: Pulse input with direction command (Pr.10-16) 6: CANopen communication card 7: Reserved 8: Communication card (no CANopen card)	0

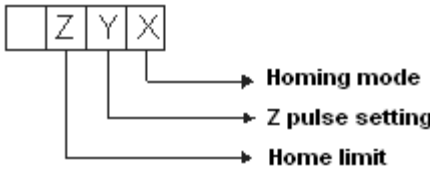Pr.	Explanation	Settings	Factory Setting
00-31	Source of the Operation Command (HAND)	0: Digital keypad 1: External terminals. Keypad STOP disabled. 2: RS-485 serial communication. Keypad STOP disabled. 3: CANopen communication card 4: Reserved 5: Communication card (not include CANopen card)	0
00-32	Digital Keypad STOP Function	0: STOP key disable 1: STOP key enable	0
00-33 ~ 00-39	Reserved		
00-40	Homing mode	 <p>Note: Forward run = clockwise (CW) Reverse run = counterclockwise (CCW)</p> <p>0: Forward run to home. Set PL forward limit as check point. 1: Reverse run (CCW) to home. Set NL reverse limit (CCWL) as check point. 2: Forward run to home. Set ORG : OFF→ON as check point. 3: Reverse to home. Set ORG : OFF→ON as check point. 4: Forward run and search for Z-pulse as check point. 5: Forward run and search for Z-pulse as check point. 6: Forward run to home. Set ORG: ON→OFF as check point. 7: Reverse run to home. Set ORG : ON→OFF as check point. 8: Define current position as home.</p> <p>X Set X to 0, 1, 2, 3, 6, 7 first.</p> <p>Y 0: reverse run to Z pulse 1: continue forward run to Z pulse 2: Ignore Z pulse</p> <p>Z When home limit is reached, set X to 2, 3, 4, 5, 6, 7 first. 0: display the error 1: reverse the direction</p>	0000
00-41	Homing by frequency 1	0.00~600.00Hz	8.00
00-42	Homing by frequency 2	0.00~600.00Hz	2.00
00-43 ~ 00-47	Reserved		
00-48	Display Filter Time (Current)	0.001~65.535 sec	0.100
00-49	Display Filter Time (Keypad)	0.001~65.535 sec	0.100
00-50	Software Version (date)	Read only	#####

01 Basic Parameters

Pr.	Explanation	Settings	Factory Setting
01-00	Max. Operation Frequency	50.00~600.00Hz	60.00/ 50.00
01-01	Output Frequency of Motor 1	0.00~600.00Hz	60.00/ 50.00
01-02	Output Voltage of Motor 1	230V: 0.0V~255.0V 460V: 0.0V~510.0V	200.0 400.0
01-03	Mid-point Frequency 1 of Motor 1	0.00~600.00Hz	3.00
✎ 01-04	Mid-point Voltage 1 of Motor 1	230V: 0.0V~240.0V 460V: 0.0V~480.0V	11.0 22.0
01-05	Mid-point Frequency 2 of Motor 1	0.00~600.00Hz	0.50
✎ 01-06	Mid-point Voltage 2 of Motor 1	230V: 0.0V~240.0V 460V: 0.0V~480.0V	2.0 4.0
01-07	Min. Output Frequency of Motor 1	0.00~600.00Hz	0.00
✎ 01-08	Min. Output Voltage of Motor 1	230V: 0.0V~240.0V 460V: 0.0V~480.0V	0.0 0.0
01-09	Start-Up Frequency	0.00~600.00Hz	0.50
✎ 01-10	Output Frequency Upper Limit	0.00~600.00Hz	600.00
✎ 01-11	Output Frequency Lower Limit	0.00~600.00Hz	0
✎ 01-12	Accel. Time 1	Pr.01-45=0: 0.00~600.00 second Pr.01-45=1: 0.00~6000.0 second AC drive with power greater than 30HP: 60.00/60.0	10.00 10.0
✎ 01-13	Decel Time 1	Pr.01-45=0: 0.00~600.00 second Pr.01-45=1: 0.00~6000.0 second AC drive with power greater than 30HP: 60.00/60.0	10.00 10.0
✎ 01-14	Accel Time 2	Pr.01-45=0: 0.00~600.00 second Pr.01-45=1: 0.00~6000.0 second AC drive with power greater than 30HP: 60.00/60.0	10.00 10.0
✎ 01-15	Decel Time 2	Pr.01-45=0: 0.00~600.00 second Pr.01-45=1: 0.00~6000.0 second AC drive with power greater than 30HP: 60.00/60.0	10.00 10.0
✎ 01-16	Accel Time 3	Pr.01-45=0: 0.00~600.00 second Pr.01-45=1: 0.00~6000.0 second AC drive with power greater than 30HP: 60.00/60.0	10.00 10.0
✎ 01-17	Decel Time 3	Pr.01-45=0: 0.00~600.00 second Pr.01-45=1: 0.00~6000.0 second AC drive with power greater than 30HP: 60.00/60.0	10.00 10.0
✎ 01-18	Accel Time 4	Pr.01-45=0: 0.00~600.00 second Pr.01-45=1: 0.00~6000.0 second AC drive with power greater than 30HP: 60.00/60.0	10.00 10.0
✎ 01-19	Decel Time 4	Pr.01-45=0: 0.00~600.00 second Pr.01-45=1: 0.00~6000.0 second AC drive with power greater than 30HP: 60.00/60.0	10.00 10.0
✎ 01-20	JOG Acceleration Time	Pr.01-45=0: 0.00~600.00 second Pr.01-45=1: 0.00~6000.0 second AC drive with power greater than 30HP: 60.00/60.0	10.00 10.0
✎ 01-21	JOG Deceleration Time	Pr.01-45=0: 0.00~600.00 second	10.00 10.0

Pr.	Explanation	Settings	Factory Setting
		Pr.01-45=1: 0.00~6000.0 second AC drive with power greater than 30HP: 60.00/60.0	
✓ 01-22	JOG Frequency	0.00~600.00Hz	6.00
✓ 01-23	1st/4th Accel/decel Frequency	0.00~600.00Hz	0.00
✓ 01-24	S-curve Acceleration Begin Time 1	Pr.01-45=0: 0.00~25.00 second Pr.01-45=1: 0.0~250.0 second	0.20 0.2
✓ 01-25	S-curve Acceleration Arrival Time 2	Pr.01-45=0: 0.00~25.00 second Pr.01-45=1: 0.0~250.0 second	0.20 0.2
✓ 01-26	S-curve Deceleration Begin Time 1	Pr.01-45=0: 0.00~25.00 second Pr.01-45=1: 0.0~250.0 second	0.20 0.2
✓ 01-27	S-curve Deceleration Arrival Time 2	Pr.01-45=0: 0.00~25.00 second Pr.01-45=1: 0.0~250.0 second	0.20 0.2
01-28	Skip Frequency 1 (upper limit)	0.00~600.00Hz	0.00
01-29	Skip Frequency 1 (lower limit)	0.00~600.00Hz	0.00
01-30	Skip Frequency 2 (upper limit)	0.00~600.00Hz	0.00
01-31	Skip Frequency 2 (lower limit)	0.00~600.00Hz	0.00
01-32	Skip Frequency 3 (upper limit)	0.00~600.00Hz	0.00
01-33	Skip Frequency 3 (lower limit)	0.00~600.00Hz	0.00
01-34	Zero-speed Mode	0: Output waiting 1: Zero-speed operation 2: Fmin (Refer to Pr.01-07, 01-41)	0
01-35	Output Frequency of Motor 2	0.00~600.00Hz	60.00/ 50.00
01-36	Output Voltage of Motor 2	230V: 0.0V~255.0V 460V: 0.0V~510.0V	200.0 400.0
01-37	Mid-point Frequency 1 of Motor 2	0.00~600.00Hz	3.00
✓ 01-38	Mid-point Voltage 1 of Motor 2	230V: 0.0V~240.0V 460V: 0.0V~480.0V	11.0 22.0
01-39	Mid-point Frequency 2 of Motor 2	0.00~600.00Hz	0.50
✓ 01-40	Mid-point Voltage 2 of Motor 2	230V: 0.0V~240.0V 460V: 0.0V~480.0V	2.0 4.0
01-41	Min. Output Frequency of Motor 2	0.00~600.00Hz	0.00
✓ 01-42	Min. Output Voltage of Motor 2	230V: 0.0V~240.0V 460V: 0.0V~480.0V	0.0 0.0
01-43	V/f Curve Selection	0: V/f curve determined by Pr.01-00~01-08 1: Curve to the power of 1.5 2: Curve to the power of 2	0
✓ 01-44	Optimal Acceleration/Deceleration Setting	0: Linear accel./decel. 1: Auto accel.; linear decel. 2: Linear accel.; auto decel. 3: Auto accel./decel. 4: Linear, stall prevention by auto accel./decel. (limit by Pr.01-12~01-21)	0
01-45	Time Unit for Accel./Decel. and S Curve	0: Unit: 0.01 sec 1: Unit: 0.1sec	0
01-46	CANopen Quick Stop Time	Pr. 01-45=0: 0.00~600.00 sec Pr. 01-45=1: 0.0~6000.0 sec	1.00

02 Digital Input/Output Parameters

Pr.	Explanation	Settings	Factory Setting
02-00	2-wire/3-wire Operation Control	0: 2-wire mode, power on for operation control 1: 2-wire mode 2, power on for operation control 2: 3-wire, power on for operation control	0
02-01	Multi-function Input Command 1 (MI1)	0: No function	1
02-02	Multi-function Input Command 2 (MI2)	1: Multi-step speed command 1/multi-step position command 1	2
02-03	Multi-function Input Command 3 (MI3)	2: Multi-step speed command 2/multi-step position command 2	3
02-04	Multi-function Input Command 4 (MI4)	3: Multi-step speed command 3/multi-step position command 3	4
02-05	Multi-function Input Command 5 (MI5)	4: Multi-step speed command 4/multi-step position command 4	0
02-06	Multi-function Input Command 6 (MI6)	5: Reset	0
02-07	Multi-function Input Command 7 (MI7)	6: JOG command (By KPC-CC01 or external control)	0
02-08	Multi-function Input Command 8 (MI8)	7: Acceleration/deceleration speed inhibit	0
02-26	Input terminal of I/O extension card (MI10)	8: The 1 st , 2 nd acceleration/deceleration time selection	0
02-27	Input terminal of I/O extension card (MI11)	9: The 3 rd , 4 th acceleration/deceleration time selection	0
02-28	Input terminal of I/O extension card (MI12)	10: EF Input (Pr.07-20)	0
02-29	Input terminal of I/O extension card (MI13)	11: B.B input from external (Base Block)	0
02-30	Input terminal of I/O extension card (MI14)	12: Output stop	0
02-31	Input terminal of I/O extension card (MI15)	13: Cancel the setting of optimal accel. /decel. time 14: Switch between motor 1 and motor 2 15: Operation speed command from AVI 16: Operation speed command from ACI 17: Operation speed command from AUI 18: Emergency stop (Pr.07-20) 19: Digital up command 20: Digital down command 21: PID function disabled 22: Clear counter 23: Input the counter value (MI6) 24: FWD JOG command 25: REV JOG command 26: TQC/FOCmodel selection 27: ASR1/ASR2 selection 28: Emergency stop (EF1) 29: Signal confirmation for Y-connection 30: Signal confirmation for Δ-connection 31: High torque bias (Pr.11-30) 32: Middle torque bias (Pr.11-31) 33: Low torque bias (Pr.11-32) 34: Switch between multi-step position and multi-speed control 35: Enable single point position control 36: Enable multi-step position learning function (valid at stop) 37: Full position control pulse command input enable 38: Disable EEPROM write function	0

Pr.	Explanation	Settings	Factory Setting
		39: Torque command direction	
		40: Force coast to stop	
		41: HAND switch	
		42: AUTO switch	
		43: Enable resolution selection (Pr.02-48)	
		44: Reversed direction homing	
		45: Forward direction homing	
		46: Homing (ORG)	
		47: Homing function enable	
		48: Mechanical gear ratio switch	
		49: Drive enable	
		50: Master dEb action input	
		51: Selection for PLC mode bit0	
		52: Selection for PLC mode bit1	
		53: Trigger CANopen quick stop	
		54~55: Reserve	
		56: Local/Remote Selection	
		57~70: Reserve	
✓	02-09	UP/DOWN key mode	0
		0: up/down by the accel. /decel. time 1: up/down constant speed (Pr.02-10)	
✓	02-10	Constant speed. The Accel. /Decel. Speed of the UP/DOWN Key	0.01
		0.01~1.00Hz/ms	
✓	02-11	Digital Input Response Time	0.005
		0.000~30.000 second	
✓	02-12	Digital Input Mode Selection	0000
		0000h~FFFFh (0: N.O.; 1: N.C.)	
✓	02-13	Multi-function Output 1 RY1	11
		0: No function	
✓	02-14	Multi-function Output 2 RY2	1
		1: Operation Indication	
✓	02-16	Multi-function Output 3 (MO1)	0
		2: Operation speed attained	
✓	02-17	Multi-function Output 4 (MO2)	0
		3: Desired frequency attained 1 (Pr.02-22)	
✓	02-36	Output terminal of the I/O extension card (MO10)	0
		4: Desired frequency attained 2 (Pr.02-24)	
✓	02-37	Output Terminal of I/O Extension Card (MO11)	0
		5: Zero speed (Frequency command)	
✓	02-38	Output Terminal of I/O Extension Card (MO12)	0
		6: Zero speed, include STOP(Frequency command)	
✓	02-39	Output Terminal of I/O Extension Card (MO13)	0
		7: Over torque 1(Pr.06-06~06-08)	
✓	02-40	Output Terminal of I/O Extension Card (MO14)	0
		8: Over torque 2(Pr.06-09~06-11)	
✓	02-41	Output Terminal of I/O Extension Card (MO15)	0
		9: Drive is ready	
✓	02-42	Output Terminal of I/O Extension Card (MO16)	0
		10: Low voltage warning (LV) (Pr.06-00)	
✓	02-43	Output Terminal of I/O Extension Card (MO17)	0
		11: Malfunction indication	
✓	02-44	Output Terminal of I/O Extension Card (MO18)	0
		12: Mechanical brake release(Pr.02-32)	
✓	02-45	Output Terminal of I/O Extension Card (MO19)	0
		13: Overheat warning (Pr.06-15)	
✓	02-46	Output Terminal of I/O Extension Card (MO20)	0
		14: Software brake signal indication(Pr.07-00)	
		15: PID feedback error	
		16: Slip error (oSL)	
		17: Terminal count value attained, does not return to 0 (Pr.02-20)	

Pr.	Explanation	Settings	Factory Setting	
		18: Preliminary count value attained, returns to 0 (Pr.02-19)		
		19: Base Block		
		20: Warning output		
		21: Over voltage warning		
		22: Over-current stall prevention warning		
		23: Over-voltage stall prevention warning		
		24: Operation mode indication		
		25: Forward command		
		26: Reverse command		
		27: Output when current \geq Pr.02-33 (\geq 02-33)		
		28: Output when current \leq Pr.02-33 (\leq 02-33)		
		29: Output when frequency \geq Pr.02-34 (\geq 02-34)		
		30: Output when frequency \leq Pr.02-34 (\leq 02-34)		
		31: Y-connection for the motor coil		
		32: Δ -connection for the motor coil		
		33: Zero speed (actual output frequency)		
		34: Zero speed include stop(actual output frequency)		
		35: Error output selection 1(Pr.06-23)		
		36: Error output selection 2(Pr.06-24)		
		37: Error output selection 3(Pr.06-25)		
		38: Error output selection 4(Pr.06-26)		
		39: Position attained (Pr.10-19)		
		40: Speed attained (including Stop)		
		41: Multi-position attained		
		42: Crane function		
		43: Actual motor speed slower than Pr.02-47		
		44: Low current output (use with Pr.06-71~06-73)		
		45: UVW Output Electromagnetic valve Switch		
		46: Master dEb warning output		
		47: Closed brake output		
		48: Reserved		
		49: Homing action complete		
		50: Output for CANopen control		
		51: Output for communication card		
		52: Output for RS485		
		53~62: Reserved		
✓	02-18	Multi-function output direction	0000h~FFFFh (0: N.O.; 1: N.C.)	0000
✓	02-19	Terminal counting value attained (returns to 0)	0~65500	0
✓	02-20	Preliminary counting value attained (not return to 0)	0~65500	0
✓	02-21	Digital Output Gain (DFM)	1~166	1
✓	02-22	Desired Frequency Attained 1	0.00~600.00Hz	60.00/ 50.00
✓	02-23	The Width of the Desired Frequency Attained 1	0.00~600.00Hz	2.00
✓	02-24	Desired Frequency Attained 2	0.00~600.00Hz	60.00/ 50.00
✓	02-25	The Width of the Desired Frequency Attained 2	0.00~600.00Hz	2.00
	02-32	Brake Delay Time	0.000~65.000 sec.	0.000
✓	02-33	Output Current Level Setting for Multi-function External Terminals	0~100%	0
✓	02-34	Output frequency setting for multi-function output terminal	0.00~600.00Hz (Motor speed when using PG Card)	0.00
✓	02-35	External Operation Control Selection after Reset and	0: Disable	0

Pr.	Explanation	Settings	Factory Setting
	Activate	1: Drive runs if run command exists after reset	
✓ 02-47	Zero-speed Level of Motor	0~65535 rpm	0
✓ 02-48	Max. Frequency of Resolution Switch	0.01~600.00Hz	60.00
✓ 02-49	Switch the delay time of Max. output frequency	0.000~65.000 sec.	0.000
✓ 02-50	Status of Multi-function Input Terminal	Monitor the status of multi-function input terminals	Read only
02-51	Status of Multi-function Output Terminal	Monitor the status of multi-function output terminals	Read only
02-52	Display External Output terminal occupied by PLC	Monitor the status of PLC input terminals	Read only
02-53	Display Analog Input Terminal occupied by PLC	Monitor the status of PLC output terminals	Read only
02-54	Display the Frequency Command Executed by External Terminal	Read only	Read only
02-55	Reserved		
02-56	Reserved		
02-57	Multi-function output terminal: Function 42: Brake Current Checking Point	0~150%	0
02-58	Multi-function output terminal: Function 42: Brake Frequency Checking Point	0.00~655.35Hz	0.00

03 Analog Input/Output Parameters

	Pr.	Explanation	Settings	Factory Setting
✓	03-00	Analog Input Selection (AVI)	0: No function	1
✓	03-01	Analog Input Selection (ACI)	1: Frequency command (torque limit under torque control mode)	0
✓	03-02	Analog Input Selection (AUI)	2: Torque command (torque limit under speed mode)	0
			3: Torque compensation command	
			4: PID target value	
			5: PID feedback signal	
			6: PTC thermistor input value	
			7: Positive torque limit	
			8: Negative torque limit	
			9: Regenerative torque limit	
			10: Positive/negative torque limit	
			11: PT100 thermistor input value	
			12~17: Reserved	
✓	03-03	Analog Input Bias (AVI)	-100.0~100.0%	0
✓	03-04	Analog Input Bias (ACI)	-100.0~100.0%	0
✓	03-05	Analog Positive Voltage Input Bias (AUI)	-100.0~100.0%	0
✓	03-06	Reserved		
✓	03-07	Positive/negative Bias Mode (AVI)	0: No bias 1: Lower than or equal to bias 2: Greater than or equal to bias 3: The absolute value of the bias voltage while serving as the center 4: Serve bias as the center	0
✓	03-08	Positive/negative Bias Mode (ACI)		
✓	03-09	Positive/negative Bias Mode (AUI)		
	03-10	Analog Frequency Command for Reverse Run	0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal. 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.	0
✓	03-11	Analog Input Gain (AVI)	-500.0~500.0%	100.0
✓	03-12	Analog Input Gain (ACI)	-500.0~500.0%	100.0
✓	03-13	Analog Positive Input Gain (AUI)	-500.0~500.0%	100.0
✓	03-14	Analog Negative Input Gain (AUI)	-500.0~500.0%	100.0
✓	03-15	Analog Input Filter Time (AVI)	0.00~20.00 sec.	0.01
✓	03-16	Analog Input Filter Time (ACI)	0.00~20.00 sec.	0.01
✓	03-17	Analog Input Filter Time (AUI)	0.00~20.00 sec.	0.01
✓	03-18	Addition Function of the Analog Input	0: Disable (AVI, ACI, AUI) 1: Enable	0
✓	03-19	ACI Signal Loss	0: Disable 1: Continue operation at the last frequency 2: Decelerate to 0Hz 3: Stop immediately and display ACE	0

Pr.	Explanation	Settings	Factory Setting
✓ 03-20	Multi-function Output 1 (AFM1)	0: Output frequency (Hz)	0
✓ 03-23	Multi-function Output 2 (AFM2)	1: Frequency command (Hz) 2: Motor speed (Hz) 3: Output current (rms) 4: Output voltage 5: DC Bus voltage 6: Power factor 7: Power 8: Output torque 9: AVI 10: ACI 11: AUI 12: Iq current 13: Iq feedback value 14: Id current 15: Id feedback value 16: Vq-axis voltage 17: Vd-axis voltage 18: Torque command 19: PG2 frequency command 20: CANopen analog output 21: RS485 analog output 22: Communication card analog output 23: Constant voltage/current output	0
✓ 03-21	Gain of Analog Output 1 (AFM1)	0~500.0%	100.0
✓ 03-22	Analog Output 1 when in REV Direction (AFM1)	0: Absolute output voltage 1: Reverse output 0V; Positive output 0-10V 2: Reverse output 5-0V; Positive output 5-10V	0
✓ 03-24	Gain of Analog Output 2 (AFM2)	0~500.0%	100.0
✓ 03-25	Analog Output 2 when in REV Direction (AFM2)	0: Absolute output voltage 1: Output 0V in REV direction; output 0-10V in FWD direction 2: Output 5-0V in REV direction; output 5-10V in FWD direction	0
✓ 03-26	Reserved		
✓ 03-27	AFM2 Output Bias	-100.00~100.00%	0.00
✓ 03-28	AVI Selection	0: 0-10V 1: 0-20mA 2: 4-20mA	0
✓ 03-29	ACI Selection	0: 4-20mA 1: 0-10V 2: 0-20mA	0
✓ 03-30	Status of PLC Output Terminal	Monitor the status of PLC output terminals	Read only
03-31	AFM2 0-20mA Output Selection	0: 0-20mA Output 1: 4-20mA Output	0
03-32	AFM1 DC output setting level	0.00~100.00%	0.00
03-33	AFM2 DC Output Setting Level	0.00~100.00%	0.00
03-34 ~ 03-49	Reserve		
03-50	Analog Input Curve Selection	0: Regular Curve 1: 3 point curve of AVI 2: 3 point curve of ACI	0

Pr.	Explanation	Settings	Factory Setting
		3: 3 point curve of AVI & ACI 4: 3 point curve of AUI 5: 3 point curve of AVI & AUI 6: 3 point curve of ACI & AUI 7: 3 point curve of AVI & ACI & AUI	
03-51	AVI Low Point	Pr.03-28=0, 0.00~10.00V Pr.03-28≠0, 0.00~20.00mA	0.00
03-52	AVI Proportional Low Point	0.00~100.00%	0.00
03-53	AVI Mid Point	Pr.03-28=0, 0.00~10.00V Pr.03-28≠0, 0.00~20.00mA	5.00
03-54	AVI Proportional Mid Point	0.00~100.00%	50.00
03-55	AVI High Point	Pr.03-28=0, 0.00~10.00V Pr.03-28≠0, 0.00~20.00mA	10.00
03-56	AVI Proportional High Point	0.00~100.00%	100.00
03-57	ACI Low Point	Pr.03-29=1, 0.00~10.00V Pr.03-29≠1, 0.00~20.00mA	4.00
03-58	ACI Proportional Low Point	0.00~100.00%	0.00
03-59	ACI Mid Point	Pr.03-29=1, 0.00~10.00V Pr.03-29≠1, 0.00~20.00mA	12.00
03-60	ACI Proportional Mid Point	0.00~100.00%	50.00
03-61	ACI High Point	Pr.03-29=1, 0.00~10.00V Pr.03-29≠1, 0.00~20.00mA	20.00
03-62	ACI Proportional High Point	0.00~100.00%	100.00
03-63	Positive AUI Voltage Low Point	0.00~10.00V	0.00
03-64	Positive AUI Voltage Proportional Low Point	0.00~100.00%	0.00
03-65	Positive AUI Voltage Mid Point	0.00~10.00V	5.00
03-66	Positive AUI Voltage Proportional Mid Point	0.00~100.00%	50.00
03-67	Positive AUI Voltage High Point	0.00~10.00V	10.00
03-68	Positive AUI Voltage Proportional High Point	0.00~100.00%	100.00
03-69	Negative AUI Voltage Low Point	0.00~ -10.00V	0.00
03-70	Negative AUI Voltage Proportional Low Point	0.00~ -100.00%	0.00
03-71	Negative AUI Voltage Mid Point	0.00~ -10.00V	-5.00
03-72	Negative AUI Voltage Proportional Mid Point	0.00~ -100.00%	-50.00
03-73	Negative AUI Voltage High Point	0.00~ -10.00V	-10.00
03-74	Negative AUI Voltage Proportional High Point	0.00~ -100.00%	-100.00

04 Multi-step Speed Parameters

	Pr.	Explanation	Settings	Factory Setting
✓	04-00	1st Step Speed Frequency	0.00~600.00Hz	0
✓	04-01	2nd Step Speed Frequency	0.00~600.00Hz	0
✓	04-02	3rd Step Speed Frequency	0.00~600.00Hz	0
✓	04-03	4th Step Speed Frequency	0.00~600.00Hz	0
✓	04-04	5th Step Speed Frequency	0.00~600.00Hz	0
✓	04-05	6th Step Speed Frequency	0.00~600.00Hz	0
✓	04-06	7th Step Speed Frequency	0.00~600.00Hz	0
✓	04-07	8th Step Speed Frequency	0.00~600.00Hz	0
✓	04-08	9th Step Speed Frequency	0.00~600.00Hz	0
✓	04-09	10th Step Speed Frequency	0.00~600.00Hz	0
✓	04-10	11th Step Speed Frequency	0.00~600.00Hz	0
✓	04-11	12th Step Speed Frequency	0.00~600.00Hz	0
✓	04-12	13th Step Speed Frequency	0.00~600.00Hz	0
✓	04-13	14th Step Speed Frequency	0.00~600.00Hz	0
✓	04-14	15th Step Speed Frequency	0.00~600.00Hz	0
	04-15	Position command 1 (revolution)	-30000~30000	0
✓	04-16	Position command 1 (pulse)	-32767~32767	0
	04-17	Position command 2 (revolution)	-30000~30000	0
✓	04-18	Position command 2 (pulse)	-32767~32767	0
	04-19	Position command 3 (revolution)	-30000~30000	0
✓	04-20	Position command 3 (pulse)	-32767~32767	0
	04-21	Position command 4 (revolution)	-30000~30000	0
✓	04-22	Position command 4 (pulse)	-32767~32767	0
	04-23	Position command 5 (revolution)	-30000~30000	0
✓	04-24	Position command 5 (pulse)	-32767~32767	0
	04-25	Position command 6 (revolution)	-30000~30000	0
✓	04-26	Position command 6 (pulse)	-32767~32767	0
	04-27	Position command 7 (revolution)	-30000~30000	0
✓	04-28	Position command 7 (pulse)	-32767~32767	0
	04-29	Position command 8 (revolution)	-30000~30000	0
✓	04-30	Position command 8 (pulse)	-32767~32767	0
	04-31	Position command 9 (revolution)	-30000~30000	0
✓	04-32	Position command 9 (pulse)	-32767~32767	0
	04-33	Position command 10 (revolution)	-30000~30000	0
✓	04-34	Position command 10 (pulse)	-32767~32767	0
	04-35	Position command 11 (revolution)	-30000~30000	0
✓	04-36	Position command 11 (pulse)	-32767~32767	0

Pr.	Explanation	Settings	Factory Setting
04-37	Position command 12 (revolution)	-30000~30000	0
✓ 04-38	Position command 12 (pulse)	-32767~32767	0
04-39	Position command 13 (revolution)	-30000~30000	0
✓ 04-40	Position command 13 (pulse)	-32767~32767	0
04-41	Position command 14 (revolution)	-30000~30000	0
✓ 04-42	Position command 14 (pulse)	-32767~32767	0
04-43	Position command 15 (revolution)	-30000~30000	0
✓ 04-44	Position command 15 (pulse)	-32767~32767	0

05 Motor Parameters

Pr.	Explanation	Settings	Factory Setting
05-00	Motor Auto Tuning	0: No function 1: Rolling test for induction motor(IM) (Rs, Rr, Lm, Lx, no-load current) 2: Static test for induction motor(IM) 3: No function 4: Rolling test for PM motor magnetic pole 5: Rolling test for PM motor 6: Rolling test for IM motor flux curve 12: FOC Sensorless inertia estimation 13: High frequency and blocked rotor test for PM motor	0
05-01	Full-load Current of Induction Motor 1(A)	10~120% of drive's rated current	###
✓ 05-02	Rated Power of Induction Motor 1(kW)	0~655.35kW	###
✓ 05-03	Rated Speed of Induction Motor 1 (rpm)	0~65535 1710(60Hz 4poles) ; 1410(50Hz 4 poles)	1710
05-04	Pole Number of Induction Motor 1	2~20	4
05-05	No-load Current of Induction Motor 1 (A)	0~ Pr.05-01 factory setting	###
05-06	Stator Resistance (Rs) of Induction Motor 1	0~65.535Ω	####
05-07	Rotor Resistance (Rr) of Induction Motor 1	0~65.535Ω	####
05-08	Magnetizing Inductance (Lm) of Induction Motor 1	0~6553.5mH	##
05-09	Stator Inductance (Lx) of Induction Motor 1	0~6553.5mH	##
05-10 ~ 05-12	Reserved		
05-13	Full-load Current of Induction Motor 2 (A)	10~120%	###
✓ 05-14	Rated Power of Induction Motor 2 (kW)	0~655.35kW	###
✓ 05-15	Rated Speed of Induction Motor 2 (rpm)	0~65535 1710(60Hz 4 poles) ; 1410(50Hz 4 poles)	1710
05-16	Pole Number of Induction Motor 2	2~20	4
05-17	No-load Current of Induction Motor 2 (A)	0~ Pr.05-01 factory setting	###
05-18	Stator Resistance (Rs) of Induction Motor 2	0~65.535Ω	####
05-19	Rotor Resistance (Rr) of Induction Motor 2	0~65.535Ω	####
05-20	Magnetizing Inductance (Lm) of Induction Motor 2	0~6553.5mH	##
05-21	Stator Inductance (Lx) of Induction Motor 2	0~6553.5mH	##
✓ 05-22	Induction Motor 1/ 2 Selection	1: motor 1 2: motor 2	1
✓ 05-23	Frequency for Y-connection/△-connection Switch of Induction Motor	0.00~600.00Hz	60.00
✓ 05-24	Y-connection/△-connection Switch of Induction Motor	0: Disable 1: Enable	0

Pr.	Explanation	Settings	Factory Setting
✓ 05-25	Delay Time for Y-connection/ Δ -connection Switch of Induction Motor	0.000~60.000 sec.	0.200
05-26	Accumulative Watt-second of Motor in Low Word (W-sec)	Read only	##
05-27	Accumulative Watt-second of Motor in High Word (W-sec)	Read only	##
05-28	Accumulative Watt-hour of Motor (W-Hour)	Read only	##
05-29	Accumulative Watt-hour of Motor in Low Word (KW-Hour)	Read only	##
05-30	Accumulative Watt-hour of Motor in High Word (KW-Hour)	Read only	##
05-31	Accumulative Motor Operation Time (Min)	00~1439	0
05-32	Accumulative Motor Operation Time (day)	00~65535	0
05-33	Induction Motor and Permanent Magnet Motor Selection	0: Induction Motor 1: Permanent Magnet Motor	0
05-34	Full-load current of Permanent Magnet Motor	0.00~655.35Amps	0.00
05-35	Rated Power of Permanent Magnet Motor	0.00~655.35kW	0.00
05-36	Rated speed of Permanent Magnet Motor	0~65535rpm	2000
05-37	Pole number of Permanent Magnet Motor	0~65535	10
05-38	Inertia of Permanent Magnet Motor	0.0~6553.5 kg.cm ²	0.0
05-39	Stator Resistance of PM Motor	0.000~65.535 Ω	0.000
05-40	Permanent Magnet Motor Ld	0.00~655.35mH	0.000
05-41	Permanent Magnet Motor Lq	0.00~655.35mH	0.000
05-42	PG Offset angle of PM Motor	0.0~360.0°	0.0
05-43	Ke parameter of PM Motor	0~65535 (Unit: V/1000rpm)	0

06 Protection Parameters

Pr.	Explanation	Settings	Factory Setting
✓ 06-00	Low Voltage Level	230V: Frame A to D: 150.0~220.0Vdc Frame E and frames above E: 190.0~220.0V 460V: Frame A to D: 300.0~440.0Vdc Frame E and frames above E: 380.0~440.0V	180.0 200.0 360.0 400.0
✓ 06-01	Over-voltage Stall Prevention	0: Disabled 230V: 0.0~450.0Vdc 460V: 0.0~900.0Vdc	380.0 760.0
✓ 06-02	Selection for Over-voltage Stall Prevention	0: Traditional over-voltage stall prevention 1: Smart over-voltage prevention	0
✓ 06-03	Over-current Stall Prevention during Acceleration	Normal Load: 0~160%(100%: drive's rated current) Heavy Load: 0~180%(100%: drive's rated current)	120 150
✓ 06-04	Over-current Stall Prevention during Operation	Normal Load: 0~160%(100%: drive's rated current) Heavy Load: 0~180%(100%: drive's rated current)	120 150
✓ 06-05	Accel. /Decel. Time Selection of Stall Prevention at Constant Speed	0: by current accel/decel time 1: by the 1st accel/decel time 2: by the 2nd accel/decel time 3: by the 3rd accel/decel time 4: by the 4th accel/decel time 5: by auto accel/decel	0
✓ 06-06	Over-torque Detection Selection (OT1)	0: No function 1: Over-torque detection during constant speed operation, continue to operate after detection 2: Over-torque detection during constant speed operation, stop operation after detection 3: Over-torque detection during operation, continue to operate after detection 4: Over-torque detection during operation, stop operation after detection	0
✓ 06-07	Over-torque Detection Level (OT1)	10~250% (100%: drive's rated current)	120
✓ 06-08	Over-torque Detection Time (OT1)	0.0~60.0 sec.	0.1
✓ 06-09	Over-torque Detection Selection (OT2)	0: No function 1: Over-torque detection during constant speed operation, continue to operate after detection 2: Over-torque detection during constant speed operation, stop operation after detection 3: Over-torque detection during operation, continue to operate after detection 4: Over-torque detection during operation, stop operation after detection	0
✓ 06-10	Over-torque Detection Level (OT2)	10~250% (100%: drive's rated current)	120
✓ 06-11	Over-torque Detection Time (OT2)	0.0~60.0 sec.	0.1
✓ 06-12	Current Limit	0~250% (100%: drive's rated current)	150
✓ 06-13	Electronic Thermal Relay Selection (Motor 1)	0: Inverter motor 1: Standard motor 2: Disable	2
✓ 06-14	Electronic Thermal Characteristic for Motor 1	30.0~600.0 sec.	60.0
✓ 06-15	Heat Sink Over-heat (OH) Warning	0.0~110.0°C	85.0

Pr.	Explanation	Settings	Factory Setting
06-16	Stall Prevention Limit Level	0~100% (Pr.06-03, Pr.06-04)	50
06-17	Present Fault Record	0: No fault record	0
06-18	Second Most Recent Fault Record	1: Over-current during acceleration (ocA)	0
06-19	Third Most Recent Fault Record	2: Over-current during deceleration (ocd)	0
06-20	Fourth Most Recent Fault Record	3: Over-current during constant speed(ocn)	0
06-21	Fifth Most Recent Fault Record	4: Ground fault (GFF)	0
06-22	Sixth Most Recent Fault Record	5: IGBT short-circuit (occ)	0
		6: Over-current at stop (ocS)	
		7: Over-voltage during acceleration (ovA)	
		8: Over-voltage during deceleration (ovd)	
		9: Over-voltage during constant speed (ovn)	
		10: Over-voltage at stop (ovS)	
		11: Low-voltage during acceleration (LvA)	
		12: Low-voltage during deceleration (Lvd)	
		13: Low-voltage during constant speed (Lvn)	
		14: Stop mid-low voltage (LvS)	
		15: Phase loss protection (OrP)	
		16: IGBT over-heat (oH1)	
		17: Capacitance over-heat (oH2)	
		18: tH1o (TH1 open: IGBT over-heat protection error)	
		19: tH2o (TH2 open: capacitance over-heat protection error)	
		20: Reserved	
		21: Drive over-load (oL)	
		22: Electronics thermal relay 1 (EoL1)	
		23: Electronics thermal relay 2 (EoL2)	
		24: Motor overheat (oH3) (PTC)	
		25: Reserved	
		26: Over-torque 1 (ot1)	
		27: Over-torque 2 (ot2)	
		28: Low current (uC)	
		29: Home limit error (LMIT)	
		30: Memory write-in error (cF1)	
		31: Memory read-out error (cF2)	
		32: Reserved	
		33: U-phase current detection error (cd1)	
		34: V-phase current detection error (cd2)	
		35: W-phase current detection error (cd3)	
		36: Clamp current detection error (Hd0)	
		37: Over-current detection error (Hd1)	
		38: Over-voltage detection error (Hd2)	
		39: Ground current detection error (Hd3)	
		40: Auto tuning error (AUE)	
		41: PID feedback loss (AFE)	
		42: PG feedback error (PGF1)	
		43: PG feedback loss (PGF2)	
		44: PG feedback stall (PGF3)	
		45: PG slip error (PGF4)	
		46: PG ref loss (PGr1)	
		47: PG ref loss (PGr2)	
		48: Analog current input loss (ACE)	
		49: External fault input (EF)	
		50: Emergency stop (EF1)	
		51: External Base Block (bb)	
		52: Password error (PcodeE)	

Pr.	Explanation	Settings	Factory Setting	
		53: Reserved		
		54: Communication error (CE1)		
		55: Communication error (CE2)		
		56: Communication error (CE3)		
		57: Communication error (CE4)		
		58: Communication Time-out (CE10)		
		59: PU Time-out (CP10)		
		60: Brake transistor error (bF)		
		61: Y-connection/ Δ -connection switch error (ydc)		
		62: Decel. Energy Backup Error (dEb)		
		63: Slip error (oSL)		
		64: Electromagnet switch error (ryF)		
		65 : PG Card Error (PGF5)		
		66-72: Reserved		
		73: External safety gate S1		
		74~78: Reserved		
		79: U phase over current (Uocc)		
		80: V phase over current (Vocc)		
		81: W phase over current (Wocc)		
		82: U phase output phase loss (OPHL)		
		83: V phase output phase loss (OPHL)		
		84: W phase output phase loss (OPHL)		
		85~100: Reserved		
		101: CANopen software disconnect1 (CGdE)		
		102: CAN open software disconnect2 (CHbE)		
		103: CANopen synchronous error (CSYE)		
		104: CANopen hardware disconnect (CbFE)		
		105: CANopen index setting error (CIdE)		
		106: CANopen slave station number setting error (CAdE)		
		107: CANopen index setting exceed limit (CFrE)		
		111: Internal communication overtime error (InrCOM)		
✓	06-23	Fault Output Option 1	0~65535(refer to bit table for fault code)	0
✓	06-24	Fault Output Option 2	0~65535(refer to bit table for fault code)	0
✓	06-25	Fault Output Option 3	0~65535(refer to bit table for fault code)	0
✓	06-26	Fault Output Option 4	0~65535(refer to bit table for fault code)	0
✓	06-27	Electronic Thermal Relay Selection 2 (Motor 2)	0: Inverter motor 1: Standard motor 2: Disable	2
✓	06-28	Electronic Thermal Characteristic for Motor 2	30.0~600.0 sec	60.0
✓	06-29	PTC Detection Selection	0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning	0
✓	06-30	PTC Level	0.0~100.0%	50.0
✓	06-31	Frequency Command for Malfunction	0.00~655.35 Hz	Read only
	06-32	Output Frequency at Malfunction	0.00~655.35 Hz	Read only
	06-33	Output Voltage at Malfunction	0.0~6553.5 V	Read only
	06-34	DC Voltage at Malfunction	0.0~6553.5 V	Read only
	06-35	Output Current at Malfunction	0.00~655.35 Amp	Read only

Pr.	Explanation	Settings	Factory Setting
06-36	IGBT Temperature at Malfunction	0.0~6553.5 °C	Read only
06-37	Capacitance Temperature at Malfunction	0.0~6553.5 °C	Read only
06-38	Motor Speed in rpm at Malfunction	0~65535	Read only
06-39	Torque Command at Malfunction	0~65535	Read only
06-40	Status of Multi-function Input Terminal at Malfunction	0000h~FFFFh	Read only
06-41	Status of Multi-function Output Terminal at Malfunction	0000h~FFFFh	Read only
06-42	Drive Status at Malfunction	0000h~FFFFh	Read only
06-43	Reserved		
06-44	Reserved		
06-45	Treatment to Output Phase Loss Detection (OPHL)	0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning	3
06-46	Deceleration Time of Output Phase Loss	0.000~65.535 sec	0.500
06-47	Current Bandwidth	0.00~655.35%	1.00
06-48	DC Brake Time of Output Phase Loss	0.000~65.535sec	0.100
06-49	Reserved		
06-50	Time for Input Phase Loss Detection	0.00~600.00 sec.	0.20
06-51	Reserved		
06-52	Ripple of Input Phase Loss	230V model: 0.0~160.0 Vdc 460V model: 0.0~320.0 Vdc	30.0 /60.0
06-53	Treatment for the detected Input Phase Loss (OrP)	0: warn and ramp to stop 1: warn and coast to stop	0
06-54	Reserved		
06-55	Derating Protection	0: constant rated current and limit carrier wave by load current and temperature 1: constant carrier frequency and limit load current by setting carrier wave 2: constant rated current(same as setting 0), but close current limit	0
06-56	PT100 Detected Level 1	0.000~10.000V	5.000
06-57	PT100 Detected Level 2	0.000~10.000V	7.000
06-58	PT100 Level 1 Frequency Protect	0.00~600.00Hz	0.00
06-59	Reserved		
06-60	Software Detection GFF Current Level	0.0~6553.5 %	60.0
06-61	Software Detection GFF Filter Time	0.0~6553.5 %	0.10
06-62	Disable Level of dEb	230V series: 0.0~220.0 Vdc 460V series: 0.0~440.0 Vdc	180.0 /360.0
06-63	Fault Record 1 (Min)	0~64799 min	Read only

Pr.	Explanation	Settings	Factory Setting
06-64	Fault Record 2 (Min)	0~64799 min	Read only
06-65	Fault Record 3 (Min)	0~64799 min	Read only
06-66	Fault Record 4 (Min)	0~64799 min	Read only
06-67	Fault Record 5 (Min)	0~64799 min	Read only
06-68	Fault Record 6 (Min)	0~64799 min	Read only
06-69	Time interval between errors occur (day)	Read only	Read only
06-70	Time interval between errors occur (minute)	Read only	Read only
06-71	Low Current Setting Level	0.0 ~ 6553.5 %	0.0
06-72	Low Current Detection Time	0.00 ~ 655.35sec	0.00
06-73	Treatment for low current	0 : No function 1 : Warn and coast to stop 2 : Warn and ramp to stop by 2nd deceleration time 3 : Warn and operation continue	0

07 Special Parameters

Pr.	Explanation	Settings	Factory Setting
✓ 07-00	Software Brake Level	230V: 350.0~450.0Vdc 460V: 700.0~900.0Vdc	380.0 760.0
✓ 07-01	DC Brake Current Level	0~100%	0
✓ 07-02	DC Brake Time at Start-up	0.0~60.0 sec.	0.0
✓ 07-03	DC Brake Time at Stop	0.0~60.0 sec.	0.0
✓ 07-04	Startup Frequency for DC Brake	0.00~600.00Hz	0.00
✓ 07-05	Maximum Power Loss Duration	1~200%	100
✓ 07-06	Restart after Momentary Power Loss	0: Stop operation 1: Speed search for last frequency command 2: Speed search for minimum output frequency	0
✓ 07-07	Maximum Power Loss Duration	0.1~20.0 sec.	2.0
✓ 07-08	Base Block Time	0.1~5.0 sec.	0.5
✓ 07-09	Current Limit for Speed Search	20~200%	50
✓ 07-10	Treatment to Reboots After Fault	0: Stop operation 1: Speed search starts with current speed 2: Speed search starts with minimum output frequency	0
✓ 07-11	Auto Restart After Fault	0~10	0
✓ 07-12	Speed Search during Start-up	0: Disable 1: Speed search for maximum output frequency 2: Speed search for start-up motor frequency 3: Speed search for minimum output frequency	0
✓ 07-13	Decel. Time to Momentary Power Loss	0: Disable 1: 1st decel. time 2: 2nd decel. time 3: 3rd decel. time 4: 4th decel. time 5: current decel. time 6: Auto decel. time	0
✓ 07-14	DEB Return Time	0.0~25.0sec	0.0
✓ 07-15	Dwell Time at Accel.	0.00 ~ 600.00sec	0.00
✓ 07-16	Dwell Frequency at Accel.	0.00 ~ 600.00Hz	0.00
✓ 07-17	Dwell Time at Decel.	0.00 ~ 600.00sec	0.00
✓ 07-18	Dwell Frequency at Decel.	0.00 ~ 600.00Hz	0.00
✓ 07-19	Fan Cooling Control	0: Fan always ON 1: 1 minute after the AC motor drive stops, fan will be OFF 2: When the AC motor drive runs, the fan is ON. When the AC motor drive stops, the fan is OFF 3: Fan turns ON when preliminary heat sink temperature (around 60°C) is attained. 4: Fan always OFF	0
✓ 07-20	Emergency Stop (EF) & Force to Stop Selection	0: Coast stop 1: By deceleration Time 1 2: By deceleration Time 2 3: By deceleration Time 3 4: By deceleration Time 4 5: System Deceleration 6: Automatic Deceleration	0

Pr.	Explanation	Settings	Factory Setting
✎ 07-21	Auto Energy-saving Operation	0: Disable 1: Enable	0
✎ 07-22	Energy-saving Gain	10~1000%	100
✎ 07-23	Auto Voltage Regulation(AVR) Function	0: Enable AVR 1: Disable AVR 2: Disable AVR during deceleration	0
✎ 07-24	Filter Time of Torque Command (V/F and SVC control mode)	0.001~10.000 sec	0.020
✎ 07-25	Filter Time of Slip Compensation (V/F and SVC control mode)	0.001~10.000 sec	0.100
✎ 07-26	Torque Compensation Gain (V/F and SVC control mode)	0~10	0
✎ 07-27	Slip Compensation Gain (V/F and SVC control mode)	0.00~10.00	0.00
✎ 07-28	Reserved		
✎ 07-29	Slip Deviation Level	0.0~100.0%	0
✎ 07-30	Detection Time of Slip Deviation	0.0~10.0 sec	1.0
✎ 07-31	Over Slip Treatment	0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning	0
✎ 07-32	Motor Hunting Gain	0~10000	1000
07-33	Auto Reset Time for Restart after Fault	0.0~6000.0 sec	60.0

08 High-function PID Parameters

Pr.	Explanation	Settings	Factory Setting
✓ 08-00	Input Terminal for PID Feedback	0: No function 1: Negative PID feedback: input from external terminal AVI (Pr.03-00) 2: Negative PID feedback from PG card (Pr.10-15, skip direction) 3: Negative PID feedback from PG card (Pr.10-15) 4: Positive PID feedback from external terminal AVI (Pr.03-00) 5: Positive PID feedback from PG card (Pr.10-15, skip direction) 6: Positive PID feedback from PG card (Pr.10-15) 7: Negative PID feedback from communication protocol 8: Positive PID feedback from communication protocol	0
✓ 08-01	Proportional Gain (P)	0.0~500.0%	80.0
✓ 08-02	Integral Time (I)	0.00~100.00sec	1.00
✓ 08-03	Derivative Control (D)	0.00~1.00sec	0.00
✓ 08-04	Upper Limit of Integral Control	0.0~100.0%	100.0
✓ 08-05	PID Output Frequency Limit	0.0~110.0%	100.0
✓ 08-06	PID feedback value by communication protocol	0.00~200.00%	0.00
✓ 08-07	PID Delay Time	0.0~2.5 秒	0.0
✓ 08-08	Feedback Signal Detection Time	0.0~3600.0sec	0.0
✓ 08-09	Feedback Signal Fault Treatment	0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: Warn and operate at last frequency	0
✓ 08-10	Sleep Frequency	0.00 ~ 600.00Hz	0.00
✓ 08-11	Wake-up Frequency	0.00 ~ 600.00Hz	0.00
✓ 08-12	Sleep Time	0.0 ~ 6000.0sec	0.0
✓ 08-13	PID Deviation Level	1.0 ~ 50.0%	10.0
✓ 08-14	PID Deviation Time	0.1~300.0sec	5.0
✓ 08-15	Filter Time for PID Feedback	0.1~300.0sec	5.0
✓ 08-16	PID Compensation Selection	0: Parameter setting 1: Reserve	0
✓ 08-17	PID Compensation	-100.0~+100.0%	0
08-18	Setting of Sleep Mode Function	0: Follow PID output command 1: Follow PID feedback signal	0
08-19	Wake-up Integral Limit	0.0~200.0%	50.0
08-20	PID Mode Selection	0: Serial connection 1: Parallel connection	0
08-21	Enable PID to Change Operation Direction	0: Operation direction can be changed 1: Operation direction can not be changed	0

09 Communication Parameters

	Pr.	Explanation	Settings	Factory Setting
✓	09-00	COM1 Communication Address	1~254	1
✓	09-01	COM1 Transmission Speed	4.8~115.2Kbps	9.6
✓	09-02	COM1 Transmission Fault Treatment	0: Warn and continue operation 1: Warn and ramp to stop 2: Warn and coast to stop 3: No warning and continue operation	3
✓	09-03	COM1 Time-out Detection	0.0~100.0 sec.	0.0
✓	09-04	COM1 Communication Protocol	1: 7N2 (ASCII) 2: 7E1 (ASCII) 3: 7O1 (ASCII) 4: 7E2 (ASCII) 5: 7O2 (ASCII) 6: 8N1 (ASCII) 7: 8N2 (ASCII) 8: 8E1 (ASCII) 9: 8O1 (ASCII) 10: 8E2 (ASCII) 11: 8O2 (ASCII) 12: 8N1 (RTU) 13: 8N2 (RTU) 14: 8E1 (RTU) 15: 8O1 (RTU) 16: 8E2 (RTU) 17: 8O2 (RTU)	1
✓	09-05 ~ 09-08	Reserved		
✓	09-09	Response Delay Time	0.0~200.0ms	2.0
✓	09-10	Main Frequency of the Communication	0.00~600.00Hz	60.00
✓	09-11	Block Transfer 1	0~65535	0
✓	09-12	Block Transfer 2	0~65535	0
✓	09-13	Block Transfer 3	0~65535	0
✓	09-14	Block Transfer 4	0~65535	0
✓	09-15	Block Transfer 5	0~65535	0
✓	09-16	Block Transfer 6	0~65535	0
✓	09-17	Block Transfer 7	0~65535	0
✓	09-18	Block Transfer 8	0~65535	0
✓	09-19	Block Transfer 9	0~65535	0
✓	09-20	Block Transfer 10	0~65535	0
✓	09-21	Block Transfer 11	0~65535	0
✓	09-22	Block Transfer 12	0~65535	0
✓	09-23	Block Transfer 13	0~65535	0
✓	09-24	Block Transfer 14	0~65535	0
✓	09-25	Block Transfer 15	0~65535	0
✓	09-26	Block Transfer 16	0~65535	0

Pr.	Explanation	Settings	Factory Setting
09-27 ~ 09-29	Reserved		
09-30	Communication Decoding Method	0: Decoding Method 1 1: Decoding Method 2	1
09-31	Internal Communication Protocol	0: Modbus 485 -1: Internal Communication Slave 1 -2: Internal Communication Slave 2 -3: Internal Communication Slave 3 -4: Internal Communication Slave 4 -5: Internal Communication Slave 5 -6: Internal Communication Slave 6 -7: Internal Communication Slave 7 -8: Internal Communication Slave 8 -9: Reserve -10: Internal Communication Master -11: Reserve -12: Internal PLC Control	0
09-32 ~ 09-34	Reserve		
09-35	PLC Address	1~254	2
09-36	CANopen Slave Address	0: Disable 1~127	0
09-37	CANopen Speed	0: 1M 1: 500k 2: 250k 3: 125k 4: 100k (Delta only) 5: 50k	0
09-38	CANopen Frequency Gain	1.00 ~ 2.00	1.00
09-39	CANopen Warning Record	bit 0: CANopen Guarding Time out bit 1: CANopen Heartbeat Time out bit 2: CANopen SYNC Time out bit 3: CANopen SDO Time out bit 4: CANopen SDO buffer overflow bit 5: Can Bus Off bit 6: Error protocol of CANopen	0
09-40	CANopen Decoding Method	0: Delta defined decoding method 1: CANopen DS402 Standard	1
09-41	CANopen Communication Status	0: Node Reset State 1: Com Reset State 2: Boot up State 3: Pre Operation State 4: Operation State 5: Stop State	Read Only
09-42	CANopen Control Status	0: Not ready for use state 1: Inhibit start state 2: Ready to switch on state 3: Switched on state 4: Enable operation state 7: Quick Stop Active state 13: Err Reaction Activation state 14: Error state	Read Only
09-43	Reset CANopen Index	bit0: reset address 20XX to 0. bit1: reset address 264X to 0 bit2: reset address 26AX to 0 bit3: reset address 60XX to 0	65535

Pr.	Explanation	Settings	Factory Setting
09-44	Reserved		
09-45	CANopen Master Function	0: Disable 1: Enable	0
09-46	CANopen Master Address	1~127	100
09-47 ~ 09-59	Reserved		
09-60	Identifications for Communication Card	0: No communication card 1: DeviceNet Slave 2: Profibus-DP Slave 3: CANopen Slave/Master 4: Modbus-TCP Slave 5: Ethernet/IP Slave 6~8: Reserved	##
09-61	Firmware Version of Communication Card	Read only	##
09-62	Product Code	Read only	##
09-63	Error Code	Read only	##
09-64 ~ 09-69	Reserved		
09-70	Address of Communication Card	DeviceNet: 0-63 Profibus-DP: 1-125	1
09-71	Setting of DeviceNet Speed	Standard DeviceNet: 0: 125Kbps 1: 250Kbps 2: 500Kbps 3: 1Mbps (Delta Only) Non standard DeviceNet: (Delta Only) 0: 10Kbps 1: 20Kbps 2: 50Kbps 3: 100Kbps 4: 125Kbps 5: 250Kbps 6: 500Kbps 7: 800Kbps 8: 1Mbps	2
09-72	Other Setting of DeviceNet Speed	0: Disable In this mode, baud rate can only be 0,1,2,3 in standard DeviceNet speed 1: Enable In this mode, the baud rate of DeviceNet can be same as CANopen (0-8).	0
09-73	Reserved		
09-74	Reserved		
09-75	IP Configuration of the Communication Card	0: Static IP 1: Dynamic IP (DHCP)	0
09-76	IP Address 1 of the Communication Card	0~255	0
09-77	IP Address 2 of the Communication Card	0~255	0
09-78	IP Address 3 of the Communication Card	0~255	0
09-79	IP Address 4 of the Communication Card	0~255	0

Pr.	Explanation	Settings	Factory Setting
09-80	Address Mask 1 of the Communication Card	0~255	0
09-81	Address Mask 2 of the Communication Card	0~255	0
09-82	Address Mask 3 of the Communication Card	0~255	0
09-83	Address Mask 4 of the Communication Card	0~255	0
09-84	Gateway Address 1 of the Communication Card	0~255	0
09-85	Gateway Address 2 of the Communication Card	0~255	0
09-86	Gateway Address 3 of the Communication Card	0~255	0
09-87	Gateway Address 4 of the Communication Card	0~255	0
09-88	Password for Communication Card (Low word)	0~255	0
09-89	Password for Communication Card (High word)	0~255	0
09-90	Reset Communication Card	0: No function 1: Reset, return to factory setting	0
09-91	Additional Setting for Communication Card	Bit0: Enable IP filter Bit1: Enable to write internet parameters (1bit). This bit will change to disable when it finishes saving the internet parameter updates. Bit 2: Enable login password (1bit). This bit will be changed to disable when it finishes saving the internet parameter updates.	0
09-92	Status of Communication Card	Bit 0: password enable When the communication card is set with password, this bit is enabled. When the password is clear, this bit is disabled.	0

10 Speed Feedback Control Parameters



NOTE IM: Induction Motor; PM: Permanent Magnet Motor

Pr.	Explanation	Settings	Factory Setting
10-00	Encoder Type Selection	0: Disable 1: ABZ 2: ABZ (Delta Encoder for PM motor) 3: Resolver 1x (Standard encoder for PM motor) 4: ABZ/UVW (Standard encoder for PM motor)	0
10-01	Encoder Pulse	1~20000	600
10-02	Encoder Input Type Setting	0: Disable 1: Phase A leads in a forward run command and phase B leads in a reverse run command 2: Phase B leads in a forward run command and phase A leads in a reverse run command 3: Phase A is a pulse input and phase B is a direction input. (low input=reverse direction, high input=forward direction) 4: Phase A is a pulse input and phase B is a direction input. (low input=forward direction, high input=reverse direction) 5: Single-phase input	0
✓ 10-03	Output Setting for Frequency Division (denominator)	1~255	1
✓ 10-04	Electrical Gear at Load Side A1	1~65535	100
✓ 10-05	Electrical Gear at Motor Side B1	1~65535	100
✓ 10-06	Electrical Gear at Load Side A2	1~65535	100
✓ 10-07	Electrical Gear at Motor Side B2	1~65535	100
✓ 10-08	Treatment for Encoder Feedback Fault	0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop	2
✓ 10-09	Detection Time of Encoder Feedback Fault	0.0~10.0sec 0: No function	1.0
✓ 10-10	Encoder Stall Level	0~120% 0: No function	115
✓ 10-11	Detection Time of Encoder Stall	0.0 ~ 2.0sec	0.1
✓ 10-12	Treatment for Encoder Stall	0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop	2
✓ 10-13	Encoder Slip Range	0~50% (0: disable)	50
✓ 10-14	Detection Time of Encoder Slip	0.0~10.0sec	0.5
✓ 10-15	Treatment for Encoder Stall and Slip Error	0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop	2
✓ 10-16	Pulse Input Type Setting	0: Disable 1: Phase A leads in a forward run command and phase B leads in a reverse run command 2: Phase B leads in a forward run command and phase A leads in a reverse run command 3: Phase A is a pulse input and phase B is a direction input. (L=reverse direction, H=forward direction). 4: Phase A is a pulse input and phase B is a direction input. (L=forward direction, H=reverse direction).	0
✓ 10-17	Electrical Gear A	1~65535	100
✓ 10-18	Electrical Gear B	1~65535	100
✓ 10-19	Positioning for Encoder Position	0~65535pulse	0

Pr.	Explanation	Settings	Factory Setting
✓ 10-20	Range for Encoder Position Attained	0~65535pulse	10
✓ 10-21	Filter Time (PG2)	0~65.535 sec	0.100
10-22	Speed Mode (PG2)	0: Electronic Frequency 1: Mechanical Frequency (base on pole pair)	0
10-23	Reserved		
10-24	FOC&TQC Function Control	0~65535	0
10-25	FOC Bandwidth of Speed Observer	1.0~100.0Hz	40.0
10-26	FOC Minimum Stator Frequency	0.0~2.0%fN	2.0
10-27	FOC Low-pass Filter Time Constant	1~1000ms	50
10-28	FOC Excitation Current Rise Time	33~100%Tr	100
10-29	Top Limit of Frequency Deviation	0.00~100.00Hz	20.00
10-30	Resolver Pole Pair	1~50	1
10-31	I/F Mode, current command	0~150%Irated (Rated current % of the drive)	40
10-32	PM Sensorless Obeserver Bandwith for High Speed Zone	0.00~600.00Hz	5.00
10-33	Reserved		
10-34	PM Sensorless Observer Low-pass Filter Gain	0.00~655.35 Hz	1.00
10-35	Reserved		
10-36	Reserved		
10-37	PM Sensorless Control Word	0000~FFFFh	0000
10-38	Reserved		
10-39	Frequency when switch from I/F Mode to PM sensorless mode.	0.00~600.00Hz	20.00
10-40	Frequency when switch from PM sensorless observer mode to V/F mode.	0.00~600.00Hz	20.00
10-41	I/F mode, low pass-filter time	0.0~6.0sec	0.2
10-42	Initial Angle Detection Time	0~20ms	5

11 Advanced Parameters



NOTE IM: Induction Motor; PM: Permanent Magnet Motor

Pr.	Explanation	Settings	Factory Setting
↗ 11-00	System Control	bit 0: Auto tuning for ASR and APR bit 1: Inertia estimate (only for FOC PG mode) bit 2: Zero servo bit 3: Dead Time compensation closed Bit 7: Selection to save or not save the frequency Bit 8: Maximum speed of point to point position control	0
↗ 11-01	Per Unit of System Inertia	1~65535 (256=1PU)	400
↗ 11-02	ASR1/ASR2 Switch Frequency	5.00~600.00Hz	7.00
↗ 11-03	ASR1 Low-speed Bandwidth	1~40Hz (IM)/ 1~100Hz (PM)	10
↗ 11-04	ASR2 High-speed Bandwidth	1~40Hz (IM)/ 1~100Hz (PM)	10
↗ 11-05	Zero-speed Bandwidth	1~40Hz (IM)/ 1~100Hz (PM)	10
↗ 11-06	ASR Control (P) 1	0~40Hz (IM)/ 1~100Hz (PM)	10
↗ 11-07	ASR Control (I) 1	0.000~10.000 sec	0.100
↗ 11-08	ASR Control (P) 2	0~40Hz (IM)/ 0~100Hz (PM)	10
↗ 11-09	ASR Control (I) 2	0.000~10.000 sec	0.100
↗ 11-10	P Gain of Zero Speed	0~40Hz (IM)/ 0~100Hz (PM)	10
↗ 11-11	I Gain of Zero Speed	0.000~10.000 sec	0.100
↗ 11-12	Gain for ASR Speed Feed Forward	0~100%	0
↗ 11-13	PDF Gain	0~200%	30
↗ 11-14	Low-pass Filter Time of ASR Output	0.000~0.350 sec	0.008
↗ 11-15	Notch Filter Depth	0~20db	0
↗ 11-16	Notch Filter Frequency	0.00~200.00Hz	0.0
↗ 11-17	Forward Motor Torque Limit	0~500%	200
↗ 11-18	Forward Regenerative Torque Limit	0~500%	200
↗ 11-19	Reverse Motor Torque Limit	0~500%	200
↗ 11-20	Reverse Regenerative Torque Limit	0~500%	200
↗ 11-21	Gain Value of Flux Weakening Curve for Motor 1	0~200%	90
↗ 11-22	Gain Value of Flux Weakening Curve for Motor 2	0~200%	90
↗ 11-23	Speed Response of Flux Weakening Area	0~150%	65
↗ 11-24	APR Gain	0.00~40.00Hz (IM)/ 0~100.00Hz (PM)	10.00
↗ 11-25	Gain Value of APR Feed Forward	0~100	30
↗ 11-26	APR Curve Time	0.00~655.35 sec	3.00
↗ 11-27	Max. Torque Command	0~500%	100
↗ 11-28	Source of Torque Offset	0: No function 1: Analog signal input (Pr.03-00) 2: RS485 communication (Pr.11-29) 3: Control by external terminal (Pr.11-30~11-32)	0

	Pr.	Explanation	Settings	Factory Setting
↗	11-29	Torque Offset Setting	0~100%	0.0
↗	11-30	High Torque Offset	0~100%	30.0
↗	11-31	Middle Torque Offset	0~100%	20.0
↗	11-32	Low Torque Offset	0~100%	10.0
↗	11-33	Source of Torque Command	0: Digital keypad 1: RS-485 communication (Pr.11-34) 2: Analog input (Pr.03-00) 3: CANopen 4: Reserved 5: Communication extension card	0
↗	11-34	Torque Command	-100.0~+100.0% (Pr.11-27*11-34)	0
↗	11-35	Filter Time of Torque Command	0.000~1.000sec	0.000
↗	11-36	Speed Limit Selection	0: Set by Pr.11-37 (Forward speed limit) and Pr.11-38 (Reverse speed limit) 1: Set by Pr.11-37, 11-38 and Pr.00-20 (Source of Master Frequency Command) 2: Set by Pr.00-20 (Source of Master Frequency Command).	0
↗	11-37	Forward Speed Limit (torque mode)	0~120%	10
↗	11-38	Reverse Speed Limit (torque mode)	0~120%	10
	11-39	Zero Torque Command Mode	0: Torque mode 1: Speed mode	0
	11-40	Command Source of Point-to-Point Position Control	0: External terminal 1: Reserved 2: RS485 3: CAN 4: PLC 5: Communication card	0
	11-41	Reserved		
	11-42	System Control Flags	0000~FFFFh	0000
	11-43	Max. Frequency of Point-to-Point Position Control	0.00~327.67Hz	10.00
	11-44	Accel. Time of Point-to Point Position Control	0.00~655.35 sec	1.00
	11-45	Decel. Time of Point-to Point Position Control	0.00~655.35 sec	3.00

Chapter 12 Description of Parameter Settings

00 Drive Parameters

✎ This parameter can be set during operation.

00-00 Identity Code of the AC Motor Drive

Factory Setting: ##

Settings Read Only

00-01 Display AC Motor Drive Rated Current

Factory Setting: ##

Settings Read Only

- 📖 Pr. 00-00 displays the identity code of the AC motor drive. Using the following table to check if Pr.00-01 setting is the rated current of the AC motor drive. Pr.00-01 corresponds to the identity code Pr.00-01.
- 📖 The factory setting is the rated current for normal duty. Please set Pr.00-16 to 1 to display the rated current for the heavy duty.






230V Series										
Frame	A				B			C		
kW	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22
HP	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30
Pr.00-00	4	6	8	10	12	14	16	18	20	22
Rated Current for Heavy Duty (A)	4.8	7.1	10	16	24	31	47	62	71	86
Rated Current for Normal Duty (A)	5	8	11	17	25	33	49	65	75	90
Frame	D		E			F				
kW	30	37	45	50	75	90				
HP	40	50	60	75	100	125				
Pr.00-00	24	26	28	30	32	34				
Rated Current for Heavy Duty (A)	114	139	171	204	242	329				
Rated Current for Normal Duty (A)	120	146	180	215	255	346				

460V Series													
Frame	A						B			C			
kW	0.75	1.5	2.2	3.7	4.0	5.5	7.5	11	15	18.5	22	30	
HP	1	2	3	5	5	7.5	10	15	20	25	30	40	
Pr.00-00	5	7	9	11	93	13	15	17	19	21	23	25	
Rated Current for Heavy Duty (A)	2.9	3.8	5.7	8.1	9.5	11	17	23	30	36	43	57	
Rated Current for Normal Duty (A)	3.0	4.0	6.0	9.0	10.5	12	18	24	32	38	45	60	
Frame	D			E			F	G		H			
kW	37	45	55	75	90	110	132	160	185	220	280	315	355
HP	50	60	75	100	125	150	175	215	250	300	375	425	475
Pr.00-00	27	29	31	33	35	37	39	41	43	45	47	49	51
Rated Current for Heavy Duty (A)	69	86	105	143	171	209	247	295	352	437	523	585	649
Rated Current for Normal Duty (A)	73	91	110	150	180	220	260	310	370	460	550	616	683

00-02 Parameter Reset

Factory Setting: 0


- Settings
- 0: No Function
 - 1: Write protection for parameters
 - 5: Reset KWH display to 0
 - 6: Reset PLC (including CANopen Master Index)
 - 7: Reset CANopen Index (Slave)
 - 8: keypad lock
 - 9: All parameters are reset to factory settings(base frequency is 50Hz)
 - 10: All parameters are reset to factory settings (base frequency is 60Hz)


-  When it is set to 1, all parameters are read only except Pr.00-02~00-08 and it can be used with password setting for password protection. It needs to set Pr.00-02 to 0 before changing other parameter settings.
-  When it is set to 9 or 10: all parameters are reset to factory settings. If password is set in Pr.00-08, input the password set in Pr.00-07 to reset to factory settings.
-  When it is set to 5, KWH display value can be reset to 0 even when the drive is operating. Pr. 05-26, 05-27, 05-28, 05-29, 05-30 reset to 0.
-  When it is set to 6: clear internal PLC program (includes the related settings of PLC internal CANopen master)
-  When it is set to 7: reset the related settings of CANopen slave.

 **00-03** Start-up Display Selection

Factory setting: 0

- Settings
- 0: Display the frequency command (F)
 - 1: Display the actual output frequency (H)
 - 2: Display User define (U)
 - 3: Output current (A)

-  This parameter determines the start-up display page after power is applied to the drive. User defined choice display according to the setting in Pr.00-04.

 **00-04** Content of Multi-function Display

Factory setting: 3

- Settings
- 0: Display output current (A)
 - 1: Display counter value (c)
 - 2: Display actual output frequency (H.)
 - 3: Display DC-BUS voltage (v)
 - 4: Display output voltage (E)
 - 5: Display output power angle (n)
 - 6: Display output power in kW (P)
 - 7: Display actual motor speed rpm (r = 00: positive speed; -00 negative speed)

- 8: Display estimate output torque % (t = 00: positive torque; -00 negative torque) (t)
- 9: Display PG feedback (G) (refer to Note 1)
- 10: Display PID feedback in % (b)
- 11: Display AVI in % (1.), 0~10V/4-20mA/0-20mA corresponds to 0~100% (Refer to Note 2)
- 12: Display ACI in % (2.), 4~20mA/0~10V/0-20mA corresponds to 0~100% (Refer to Note 2)
- 13: Display AUI in % (3.), -10V~10V corresponds to -100~100%(Refer to Note 2)
- 14: Display the temperature of IGBT in oC (i.)
- 15: Display the temperature of capacitance in oC (c.)
- 16: The status of digital input (ON/OFF) refer to Pr.02-12 (i) (Refer to Note3)
- 17: Display digital output status ON/OFF (Pr.02-18) (o) (refer to NOTE 4)
- 18: Display the multi-step speed that is executing (S)
- 19: The corresponding CPU pin status of digital input (d) (refer to NOTE 3)
- 20: The corresponding CPU pin status of digital output (0.) (refer to NOTE 4)
- 21: Actual motor position (PG1 of PG card). When the motor direction changes or the drive stops, the counter will start from 0 (display value restarts counting from 0) (Max. 65535) (P.)
- 22: Pulse input frequency (PG2 of PG card) (S.)
- 23: Pulse input position (PG2 of PG card) (max. 65535) (q.)
- 24: Position command tracing error (E.)
- 25: Overload counting (0.00~100.00%) (o.) (Refer to Note 6)
- 26: GFF Ground Fault (Unit :%)(G.)
- 27:DC Bus voltage ripple (Unit: Vdc)(r.)
- 28: Display PLC register D1043 data (C) display in hexadecimal
- 29: Display PM motor pole section (EMC-PG01U application) (4.)
- 30 : Display output of user defined (U)
- 31 : H page x 00-05 Display user Gain(K)
- 32: Number of actual motor revolution during operation (PG card plug in and Z phase signal input) (Z.)
- 33: Motor actual position during operation (when PG card is connected)(q)
- 34: Operation speed of fan(%) (F.)
- 35: Control Mode display: 0= Speed control mode (SPD), 1= torque control mode (TQR) (t.)
- 36: Present operating carrier frequency of drive (Hz) (J.)
- 37: Reserved
- 38: Display drive status (6.) (Refer to Note 7)

39: Display estimated output torque, positive and negative, using Nt-m as unit (t 0.0: positive; -0.0 negative torque (C.))

 **NOTE**

1. When Pr.10-01 is set to 1000 and Pr.10-02 is set to 1/2, the display range for PG feedback will be from 0 to 4000.

When Pr.10-01 is set to 1000 and Pr.10-02 is set to 3/4/5, the display range for PG feedback will be from 0 to 1000.

Home position: If it has Z phase, Z phase will be regarded as home position. Otherwise, home position will be the encoder start up position.

2. It can display negative values when setting analog input bias (Pr.03-03~03-10).

Example: assume that AVI input voltage is 0V, Pr.03-03 is 10.0% and Pr.03-07 is 4 (Serve bias as the center).

3. Example: If REV, MI1 and MI6 are ON, the following table shows the status of the terminals.

0: OFF, 1: ON

Terminal	MI15	MI14	MI13	MI12	MI11	MI10	MI8	MI7	MI6	MI5	MI4	MI3	MI2	MI1	REV	FWD
Status	0	0	0	0	0	0	0	0	1	0	0	0	0	1	1	0

MI10~MI15 are the terminals for extension cards (Pr.02-26~02-31).

If REV, MI1 and MI6 are ON, the value is 0000 0000 1000 0110 in binary and 0086h in HEX. When Pr.00-04 is set to "16" or "19", it will display "0086h" with LED U is ON on the keypad KPC-CE01. The setting 16 is the status of digital input by Pr.02-12 setting and the setting 19 is the corresponding CPU pin status of digital input, the FWD/REV action and the three-wire MI are not controlled by Pr.02-12.

User can set to 16 to monitor digital input status and then set to 19 to check if the wire is normal.

4. Assume that RY1: Pr.02-13 is set to 9 (Drive ready). After applying the power to the AC motor drive, if there is no other abnormal status, the contact will be ON. The display status will be shown as follows.

N.O. switch status:

Terminal	Reserved				Reserved				Reserved				MO2	MO1	Reserved	RY2	RY1
Status	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1

At the meanwhile, if Pr.00-04 is set to 17 or 20, it will display in hexadecimal "0001h" with LED U is ON on the keypad. The setting 17 is the status of digital output by Pr.02-18 setting and the setting 20 is the corresponding CPU pin status of digital output. User can set 17 to monitor the digital output status and then set to 20 to check if the wire is normal.

5. Setting 8: 100% means the motor rated torque. Motor rated torque = (motor rated power x60/2π)/motor rated speed

6. If Pr.00-04 = 25, when display value reaches 100.00%, the drive will show "oL" as an overload warning.

7. If Pr.00-04 = 38,

Bit 0: The drive is running forward.

Bit 1: The drive is running backward.

Bit 2: The drive is ready.

Bit 3: Errors occurred on the drive.


Bit 4: The drive is running.

Bit 5: Warnings on the drive.

00-05 Coefficient Gain in Actual Output Frequency

Factory Setting: 0

Settings 0~160.00

-  This parameter is to set coefficient gain in actual output frequency. Set Pr.00-04= 31 to display the calculation result on the screen (calculation = output frequency * Pr.00-05).

00-06 Software Version

Factory Setting: ##

Settings Read only

↗ **00-07** Parameter Protection Password Input

Factory Setting: 0

Settings 1~9998, 10000~65535

Display 0~3 (the times of password attempts)

- 📖 This parameter allows user to enter their password (which is set in Pr.00-08) to unlock the parameter protection and to make changes to the parameter.
- 📖 Pr.00-07 and Pr.00-08 are used to prevent the personal misoperation.
- 📖 When the user have forgotten the password, clear the setting by input 9999 and press ENTER key, then input 9999 again and press Enter within 10 seconds. After decoding, all the settings will return to factory setting.

↗ **00-08** Parameter Protection Password Setting

Factory Setting: 0


Settings 1~9998, 10000~65535


0: No password protection / password is entered correctly (Pr00-07)

1: Password has been set

- 📖 To set a password to protect your parameter settings. If the display shows 0, no password is set nor password has been correctly entered in Pr.00-07. All parameters can then be changed, including Pr.00-08. The first time you can set a password directly. After successful setting of password the display will show 1. Be sure to write down the password for later use. To cancel the parameter lock, set the parameter to 0 after inputting correct password into Pr. 00-07.
- 📖 How to retrieve parameter protection after decoding by Pr.00-07:
 - Method 1: Re-enter the password to Pr.00-08 (input the password once).
 - Method 2: After reboots, password function will be recovered.
 - Method 3: Input any value into Pr.00-07 (Do not enter the password).

Password Decode Flow Chart

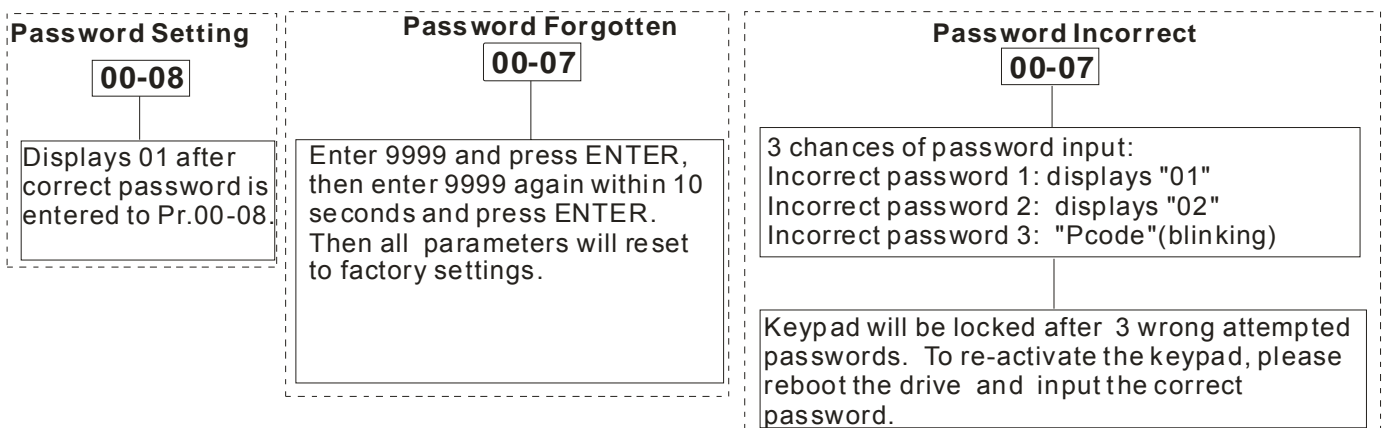

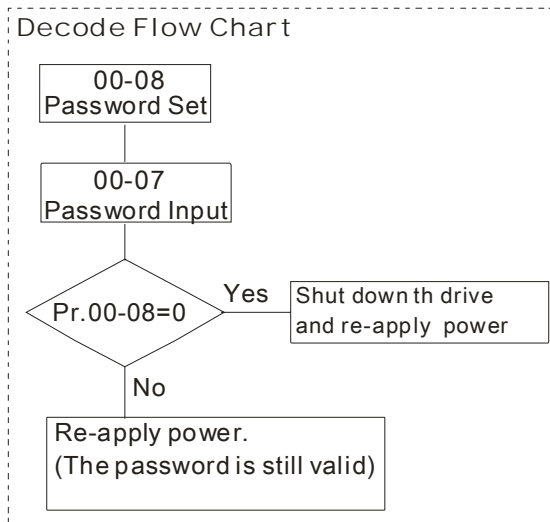

↖ **00-09** Reserved

00-10 Control Mode

Factory Setting: 0

- Settings
- 0: Speed mode
 - 1: Point-to-Point position control
 - 2: Torque mode
 - 3: Home mode

📖 This parameter determines the control mode of C2000 series AC motor drive.

00-11 Control of Speed Mode

Factory Setting: 0

- Settings
- 0: VF (IM V/f control)
 - 1: VFPG (IM V/f control+ Encoder)
 - 2: SVC(IM sensorless vector control)
 - 3: FOCPG (IM FOC vector control+ encoder)
 - 4: FOCPG (PM FOC vector control + Encoder)
 - 5: FOC Sensorless (IM field oriented sensorless vector control)
 - 6 : PM Sensorless (PM field oriented sensorless vector control)

📖 This parameter determines the control method of the AC motor drive:

0: (IM V/f control): user can design proportion of V/f as required and can control multiple motors simultaneously.

1: (IM V/f control + Encoder): user can use optional PG card with encoder for the closed-loop speed control.

2: (IM Sensorless vector control): get the optimal control by the auto-tuning of motor parameters.


3: (IM FOC vector control+ encoder): besides torque increases, the speed control will be more accurate (1:1000).

4: (PM FOC vector control + Encoder): besides torque increases, the speed control will be more accurate (1:1000).


5: FOC Sensorless: IM field oriented sensorless vector control

6: PM Sensorless (PM field oriented sensorless vector control)


When setting Pr.00-11 to 0, the V/F control diagram is shown as follows.

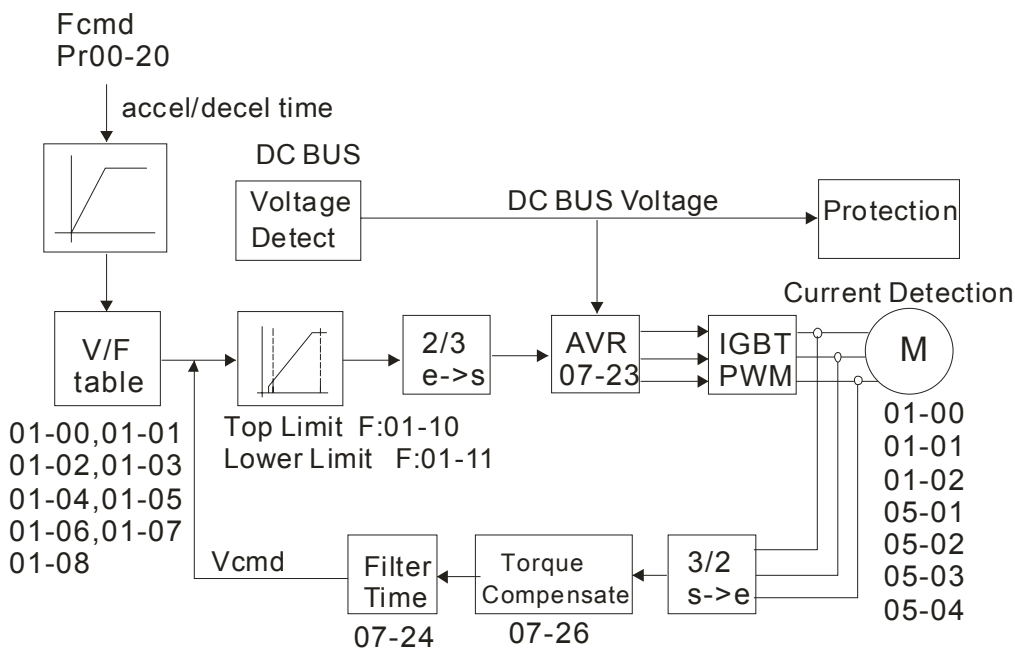


When setting Pr.00-11 to 1, the V/F control + encoder diagram is shown as follows.

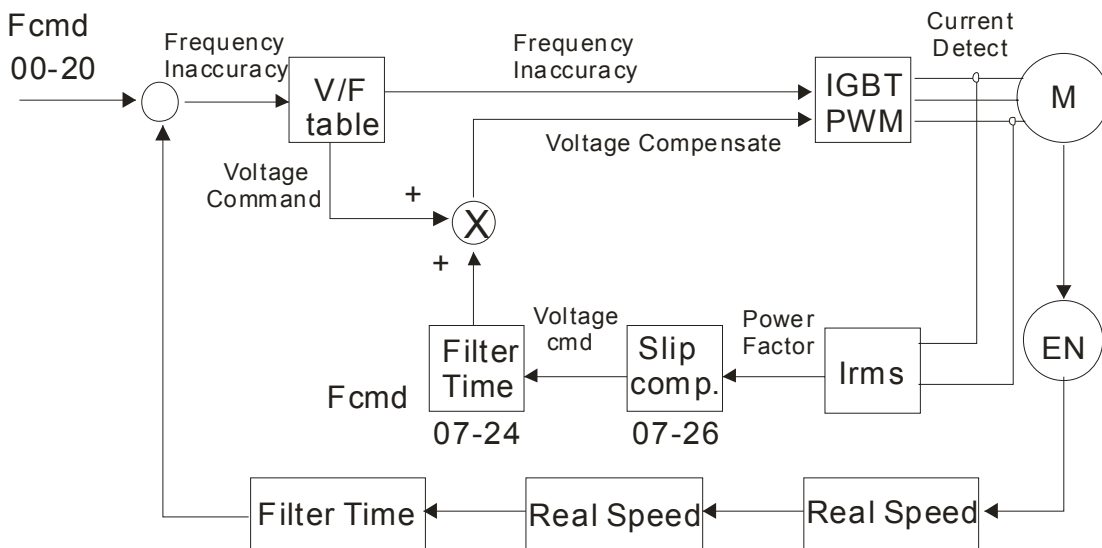


When setting Pr.00-11 to 2, the sensorless vector control diagram is shown as follows.

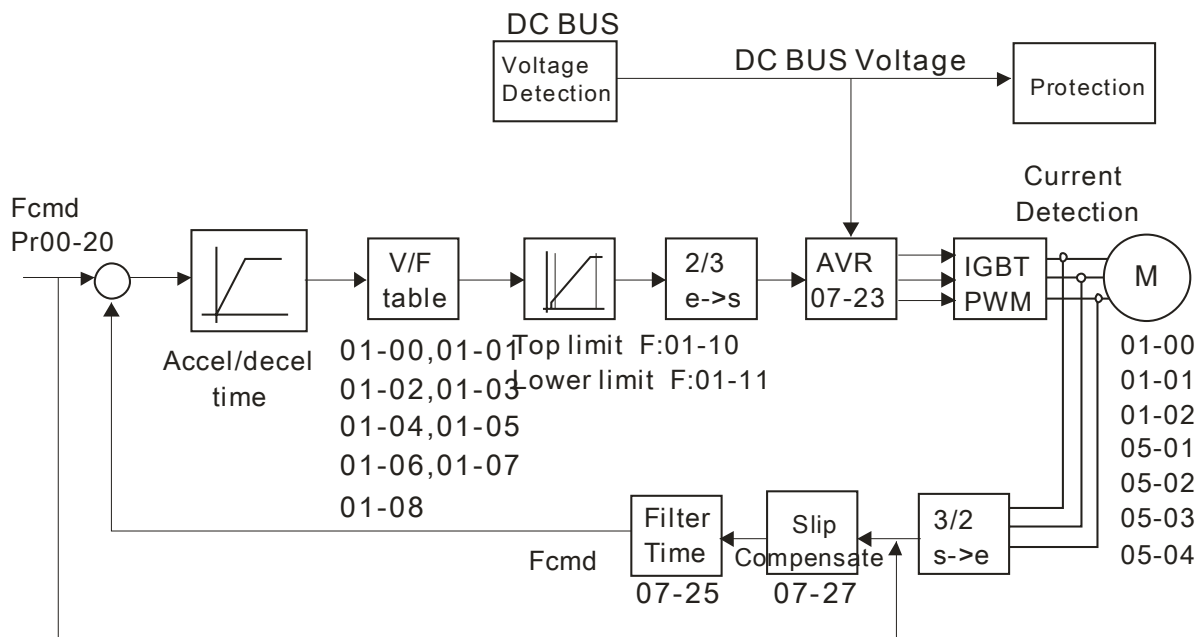


When setting Pr.00-11 to 3, the FOCPG control diagram is shown as follows.

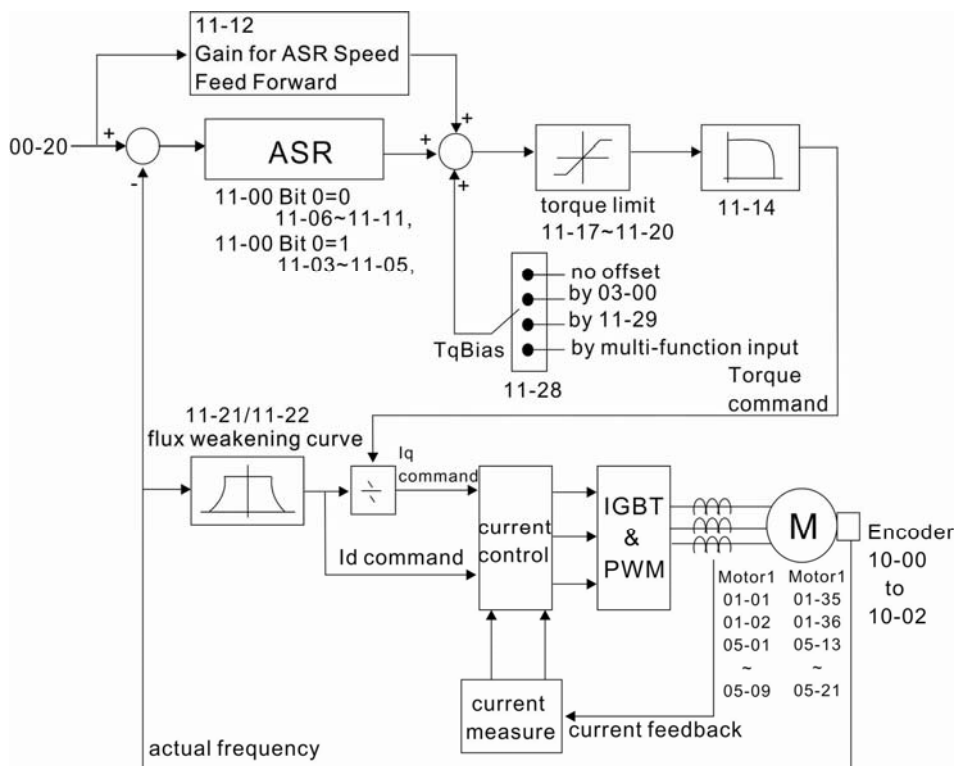

When setting Pr.00-11 to 5, FOC sensorless control diagram is shown as follows.

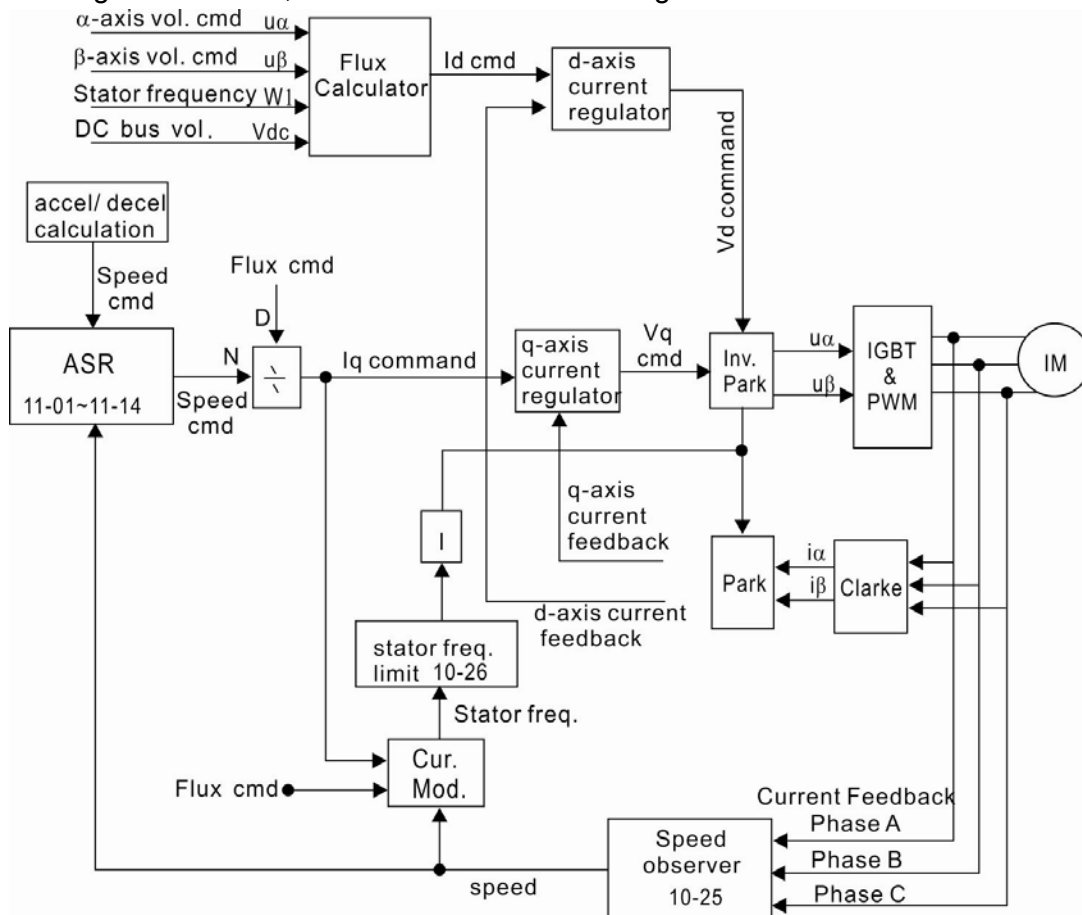

When setting Pr.00-11 to 6, PM FOC sensorless control diagram is shown as follows:

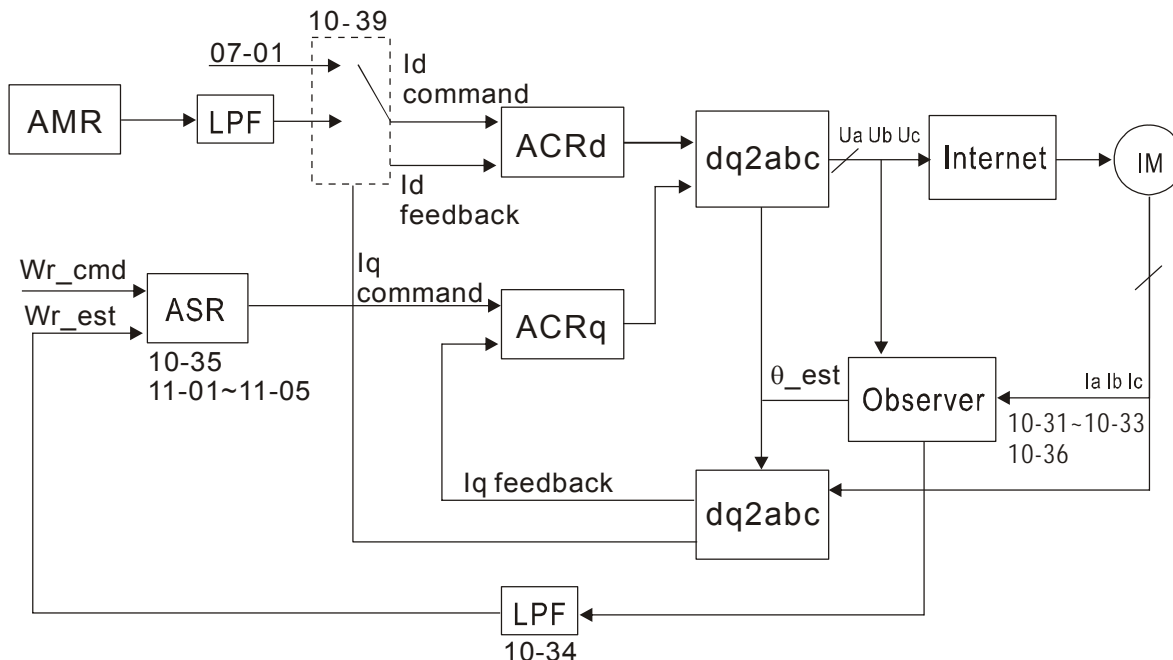


00-12 Point to Point Position control

Factory Settings: 0

Settings: 0: Incremental Type

1: Absolute Type


Pr. 00-12 = 0 is incremental type P2P; Pr.00-12 = 1 is absolute type P2P

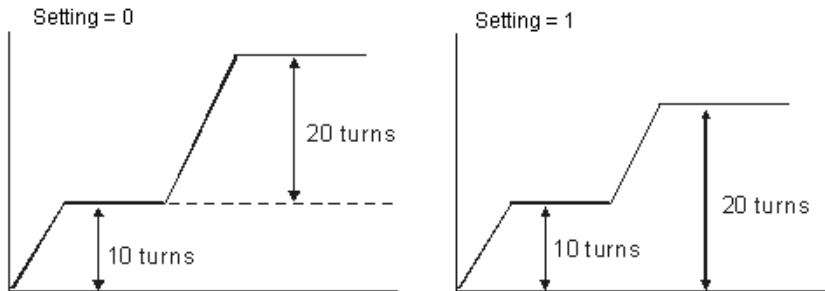

00-13 Control of Torque Mode Factory Setting: 0

- Settings
- 0: TQCPG (IM Torque control + Encoder)
 - 1: TQCPG (PM Torque control + Encoder)
 - 2: TQC Sensorless (IM Sensorless torque control)

TQCPG control diagram is shown in the following:

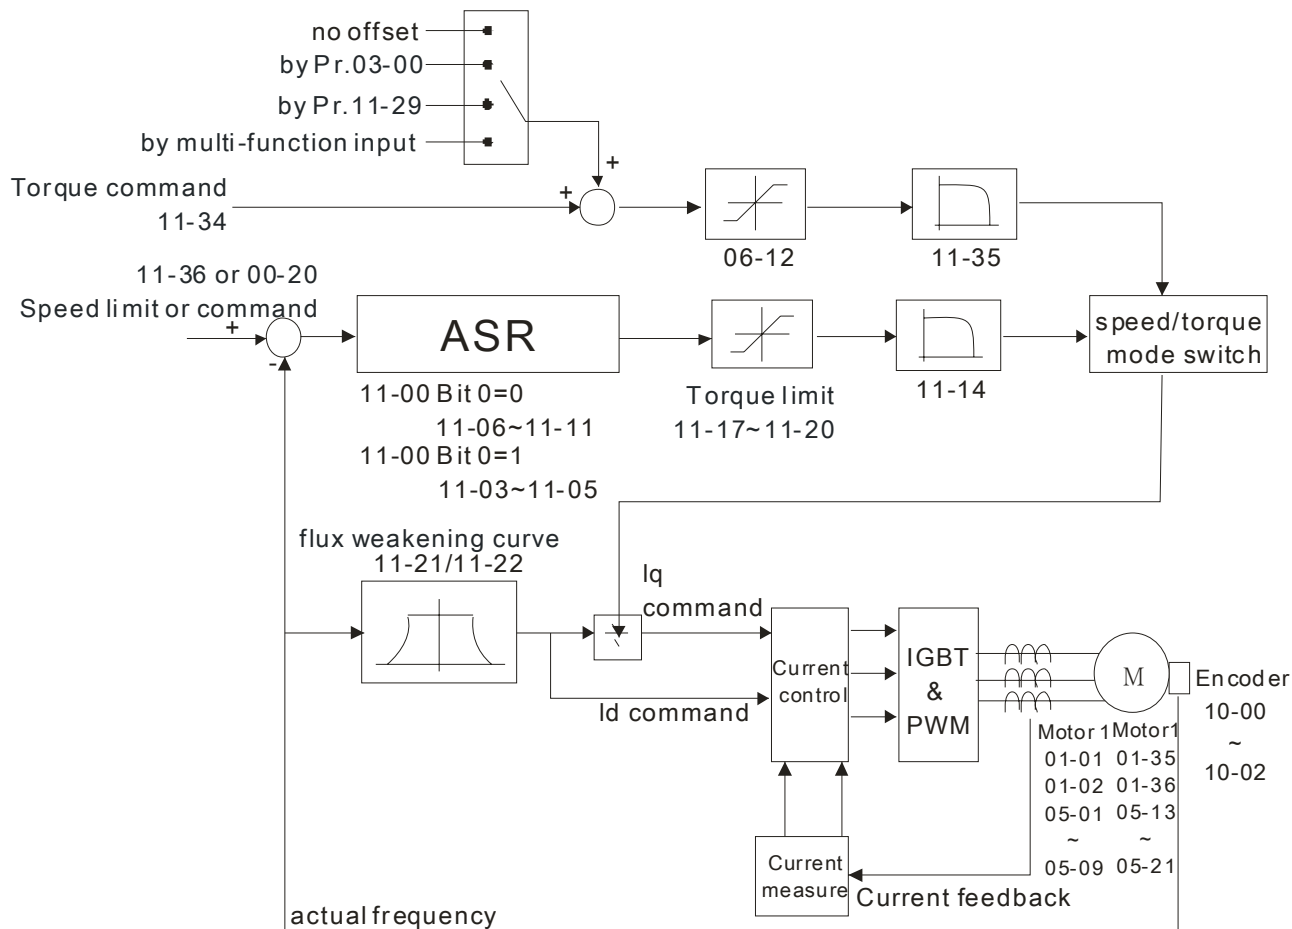

460V Series			
Models	1-20HP [0.75-15kW]	25-75HP [18.5-55kW]	100-475HP [75-355kW]
Setting Range	02~15kHz	02~10kHz	02~09kHz
Normal Duty Factory Setting	8kHz	6kHz	4kHz
Heavy Duty Factory Setting	2kHz		

Carrier Frequency	Acoustic Noise	Electromagnetic Noise or Leakage Current	Heat Dissipation	Current Wave
1kHz	Significant ↑ ↓ Minimal	Minimal ↑ ↓ Significant	Minimal ↑ ↓ Significant	
8kHz				
15kHz				

From the table, we see that the PWM carrier frequency has a significant influence on the electromagnetic noise, AC motor drive heat dissipation, and motor acoustic noise. Therefore, if the surrounding noise is greater than the motor noise, lower the carrier frequency is good to reduce the temperature rise. Although it is quiet operation in the higher carrier frequency, the entire wiring and interference resistance should be considerate.

When the carrier frequency is higher than the factory setting, it needs to protect by decreasing the carrier frequency. See Pr.06-55 for the related setting and details.

00-18 Reserved

00-19 PLC Command Mask

Factory Setting: Read Only

Settings Bit 0: Control command by PLC force control
 Bit 1: Frequency command by PLC force control
 Bit 2: Position command by PLC force control
 Bit 3: Torque command by PLC force control

This parameter determines if frequency command or control command is occupied by PLC

00-20 Source of the Master Frequency Command (AUTO)

Factory Setting: 0

Settings 0: Digital keypad
 1: RS-485 serial communication
 2: External analog input (Pr.03-00)
 3: External UP/DOWN terminal
 4: Pulse input without direction command (Pr.10-16 without direction)
 5: Pulse input with direction command (Pr.10-16)

- 6: CANopen communication card
- 7: Reserved
- 8: Communication card (no CANopen card)

- 📖 It is used to set the source of the master frequency in AUTO mode.
- 📖 Pr.00-20 and 00-21 are for the settings of frequency source and operation source in AUTO mode. Pr.00-30 and 00-31 are for the settings of frequency source and operation source in HAND mode. The AUTO/HAND mode can be switched by the keypad KPC-CC01 or multi-function input terminal (MI).
- 📖 The factory setting of frequency source or operation source is for AUTO mode. It will return to AUTO mode whenever power on again after power off. If there is multi-function input terminal used to switch AUTO/HAND mode. The highest priority is the mutli-function input terminal. When the external terminal is OFF, the drive won't receive any operation signal and can't execute JOG.

➤ **00-21** Source of the Operation Command (AUTO)

Factory Setting: 0

- Settings
- 0: Digital keypad
 - 1: External terminals. Keypad STOP disabled.
 - 2: RS-485 serial communication. Keypad STOP disabled.
 - 3: CANopen card
 - 4: Reserved
 - 5: Communication card (not includes CANopen card)


- 📖 It is used to set the source of the operation frequency in AUTO mode.
- 📖 When the operation command is controlled by the keypad KPC-CC01, keys RUN, STOP and JOG (F1) are valid.

➤ **00-22** Stop Method


Factory Setting: 0


- Settings
- 0: Ramp to stop
 - 1:Coast to stop

- 📖 The parameter determines how the motor is stopped when the AC motor drive receives a valid stop command.

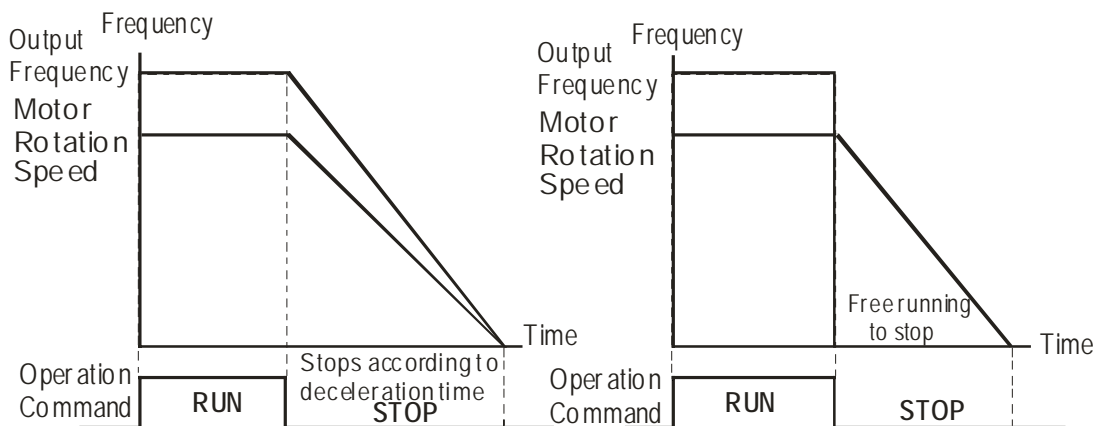

Ramp to Stop and Coast to Stop

 **Ramp to stop:** the AC motor drive decelerates from the setting of deceleration time to 0 or minimum output frequency (Pr. 01-09) and then stop (by Pr.01-07).

 **Coast to stop:** the AC motor drive stops the output instantly upon a STOP command and the motor free runs until it comes to a complete standstill.

(1) It is recommended to use “ramp to stop” for safety of personnel or to prevent material from being wasted in applications where the motor has to stop after the drive is stopped. The deceleration time has to be set accordingly.


(2) If the motor free running is allowed or the load inertia is large, it is recommended to select “coast to stop”. For example, blowers, punching machines and pumps

 The stop method of the torque control is also set by Pr.00-22.

00-23 Control of Motor Direction

Factory Setting: 0


Settings 0: Enable forward/ reverse
1: Disable reverse
2: Disable forward

 This parameter enables the AC motor drives to run in the forward/reverse Direction. It may be used to prevent a motor from running in a direction that would consequently injure the user or damage the equipment.

00-24 Memory of Frequency Command

Factory Setting: Read Only

Settings Read only


 If keypad is the source of frequency command, when Lv or Fault occurs the present frequency command will be saved in this parameter.

00-25 User Defined Characteristics

Factory Setting: 0

Settings Bit 0~3: user define on decimal place
0000b: no decimal place
0001b: one decimal place
0010b: two decimal place
0011b: three decimal place

Bit 4~15: user define on unit
000xh: Hz
001xh: rpm
002xh: %
003xh: kg

 Bit 0~3: F & H page unit and Pr.00-26 decimal display is supported up to 3 decimal places.

 Bit 4~15: F & H page unit and Pr.00-26 unit display is supported up to 4 types of unit display.

00-26 Max. User Defined Value


Factory Setting: 0

Settings 0: Disable
0~65535 (when Pr.00-25 set to no decimal place)

0.0~6553.5 (when Pr.00-25 set to 1 decimal place)

0.0~655.35 (when Pr.00-25 set to 2 decimal place)

0.0~65.535 (when Pr.00-25 set to 3 decimal place)

 User define is enabled when Pr.00-26 is not 0. The setting of Pr.00-26 corresponds to Pr.01.00 (Max. output frequency of the drive).

Example: User define: 100.0%, Pr.01.00 = 60.00Hz

Pr.00.25 setting is 0021h; Pr.0026 setting is 100.0%


 **NOTE**


The drive will display as Pr.00-25 setting when Pr.00-25 is properly set and Pr.00-26 is not 0.

00-27 User Defined Value

Factory Setting: Read only

Settings Read only

 Pr.00-27 will show user defined value when Pr.00-26 is not set to 0.

 User defined function is valid when Pr.00-20 is set to digital keypad control or RS-285 communication input control.

00-28 Reserved

00-29 LOCAL/REMOTE Selection

Factory Setting: 0


Settings 0: Standard HOA function


1: Switching Local/Remote, the drive stops


2: Switching Local/Remote, the drive runs as the REMOTE setting for frequency and operation status


3: Switching Local/Remote, the drive runs as the LOCAL setting for frequency and operation status

4: Switching Local/Remote, the drive runs as LOCAL setting when switch to Local and runs as REMOTE setting when switch to Remote for frequency and operation status.

 The factory setting of Pr.00-29 is 0 (standard Hand-Off-Auto function). The AUTO frequency and source of operation can be set by Pr.00-20 and Pr.00-21, and the HAND frequency and source of operation can be set by Pr.00-30 and Pr.00-31. AUTO/HAND mode can be selected or switched by using digital keypad(KPC-CC01) or setting multi-function input terminal MI= 41, 42.

 When external terminal MI is set to 41 and 42 (AUTO/HAND mode), the settings Pr.00-29=1,2,3,4 will be disabled. The external terminal has the highest priority among all command, Pr.00-29 will always function as Pr.00-29=0, standard HOA mode.

 When Pr.00-29 is not set to 0, Local/Remote function is enabled, the top right corner of digital keypad (KPC-CC01) will display "LOC" or "REM" (the display is available when KPC-CC01 is installed with firmware version higher than version 1.021). The LOCAL frequency and source of operation can be set by Pr.00-20 and Pr.00-21, and the REMOTE frequency and source of operation can be set by Pr.00-30 and Pr.00-31. Local/Remote function can be selected or switched by using digital keypad(KPC-CC01) or setting external terminal MI=56. The AUTO key of the digital keypad now controls for the REMOTE function and HAND key now controls for the LOCAL function.

 When MI is set to 56 for LOC/REM selection, if Pr.00-29 is set to 0, then the external terminal is

disabled.

When MI is set to 56 for LOC/REM selection, if Pr.00-29 is not set to 0, the external terminal has the highest priority of command and the ATUO/HAND keys will be disabled.

➤ **00-30** Source of the Master Frequency Command (HAND)

Factory Setting: 0

- Settings
- 0: Digital keypad
 - 1: RS-485 serial communication
 - 2: External analog input (Pr.03-00)
 - 3: External UP/DOWN terminal
 - 4: Pulse input without direction command (Pr.10-16 without direction)
 - 5: Pulse input with direction command (Pr.10-16)
 - 6: CANopen communication card
 - 7: Reserved
 - 8: Communication card (no CANopen card)

It is used to set the source of the master frequency in HAND mode.

➤ **00-31** Source of the Operation Command (HAND)

Factory Setting: 0

- Settings
- 0: Digital keypad
 - 1: External terminals. Keypad STOP disabled.
 - 2: RS-485 serial communication. Keypad STOP disabled.
 - 3: CANopen communication card
 - 4: Reserved
 - 5: Communication card (not include CANopen card)

It is used to set the source of the operation frequency in HAND mode.

Pr.00-20 and 00-21 are for the settings of frequency source and operation source in AUTO mode. Pr.00-30 and 00-31 are for the settings of frequency source and operation source in HAND mode. The AUTO/HAND mode can be switched by the keypad KPC-CC01 or multi-function input terminal (MI).

The factory setting of frequency source or operation source is for AUTO mode. It will return to AUTO mode whenever power on again after power off. If there is multi-function input terminal used to switch AUTO/HAND mode. The highest priority is the multi-function input terminal. When the external terminal is OFF, the drive won't receive any operation signal and can't execute JOG.

➤ **00-32** Digital Keypad STOP Function

Factory Setting: 0

- Settings
- 0: STOP key disable
 - 1: STOP key enable

00-33

~


Reserved

00-39

00-40 Homing mode

Factory Setting: 0000h

Settings:

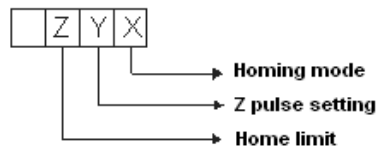


Note: Forward run = clockwise (CW)
Reverse run = counterclockwise (CCW)


- X**
- 0: Forward run to home. Set PL forward limit as check point.
 - 1: Reverse run (CCW) to home. Set NL reverse limit (CCWL) as check point.
 - 2: Forward run to home. Set ORG : OFF→ON as check point.
 - 3: Reverse to home. Set ORG : OFF→ON as check point.
 - 4: Forward run and search for Z-pulse as check point.
 - 5: Forward run and search for Z-pulse as check point.
 - 6: Forward run to home. Set ORG: ON→OFF as check point.
 - 7: Reverse run to home. Set ORG : ON→OFF as check point.
 - 8: Define current position as home.
- Y** Set X to 0, 1, 2, 3, 6, 7 .
- 0: reverse run to Z pulse
 - 1: continue forward run to Z pulse
 - 2: Ignore Z pulse
- Z** When home limit is reached, set X to 2, 3, 4, 5, 6, 7 first.
- 0: display error
 - 1: reverse the direction

Homing action is control by Pr. 00-40, 00-41, 00-42 and 02-01~02-08.


1. When Y=0, X=0 or Y=0, X=2

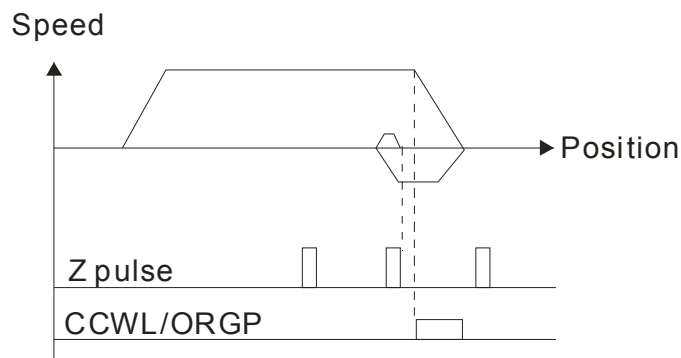


2. When Y=0, X=1 or Y=0, X=3

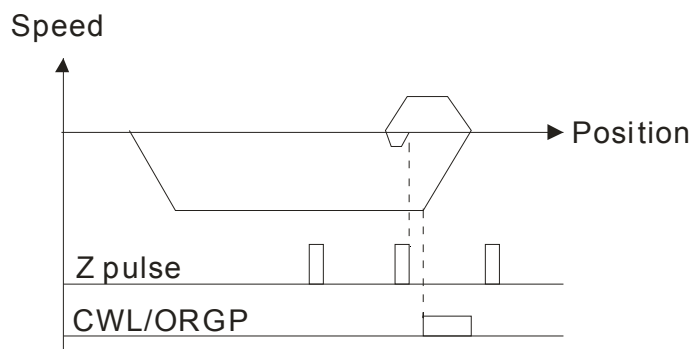


3. When Y=1, X=2

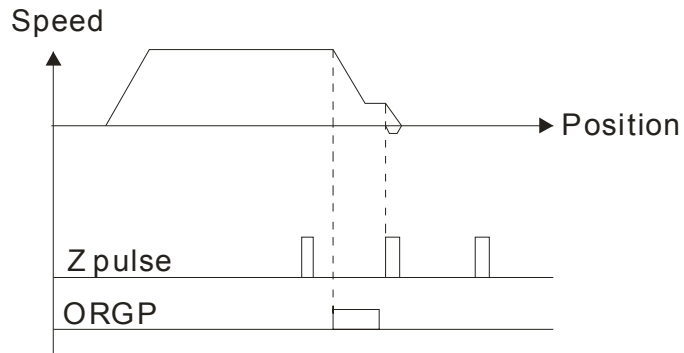


4. When Y=1, X=3

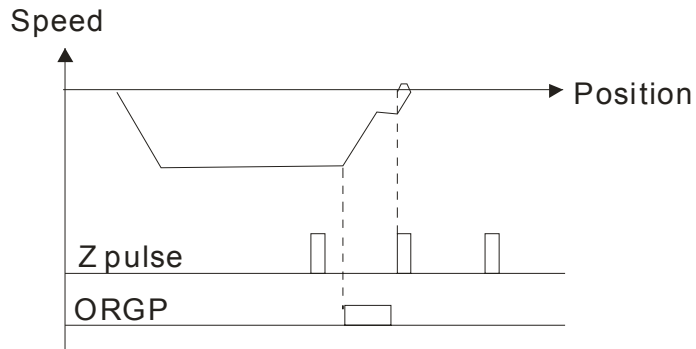


5. When Y=2, X=2

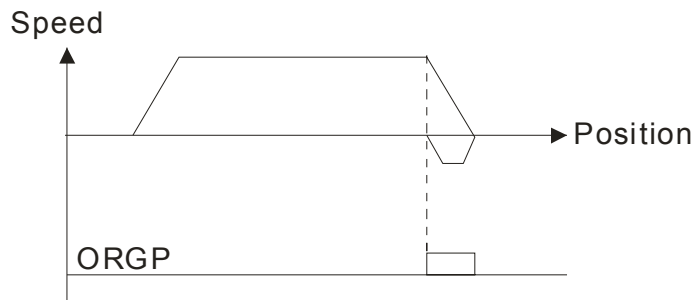


6. When Y=2, X=3

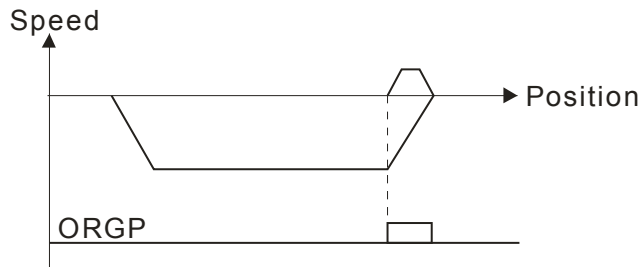

7. When Y=2, X=4

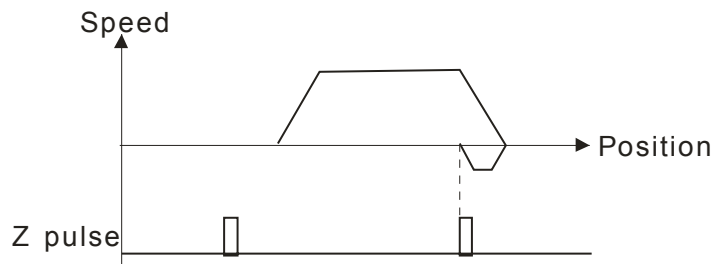

8. When Y=2, X=5

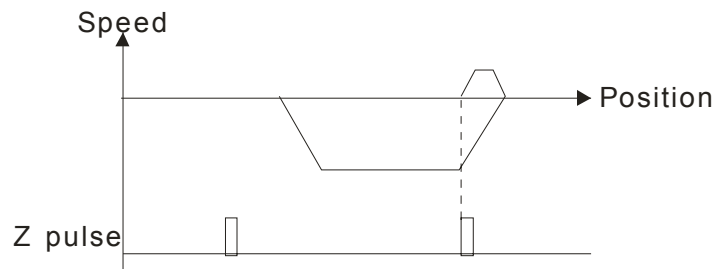

00-41 Homing by Frequency 1

Factory Setting: 8.00

Settings 0.00~600.00Hz

00-42 Homing by Frequency 2

Factory Setting: 2.00

Settings 0.00~600.00Hz

Control by Multi-function Input Terminal Pr. 02-01~02-08 (44~47).

- 44: Reverse direction homing
- 45: Forward direction homing
- 46: Homing (ORG)
- 47: Homing function enable

If the drive is not control by CAN or PLC, set Pr.00-10 = 1 (Control mode = P2P position control) and set external output terminal to 47 (homing function enable) for homing.

When Pr.00-10 is set to 3, after homing is complete, user must set control mode setting Pr.00-10 to 1 in order to perform P2P position control.

00-43

~ Reserved

00-47

00-48 Display Filter Time (Current)

Factory Settings: 0.100

Settings: 0.001~65.535 sec

Set this parameter to minimize the current fluctuation displayed by digital keypad.

00-49 Display Filter Time (Keypad)

Factory Settings: 0.100

Settings: 0.001~65.535 sec

Set this parameter to minimize the display value fluctuation displayed by digital keypad.

00-50 Software Version (date)

Factory Settings: #####

Settings: Read only

This parameter displays the drive's software version by date.

Group 1 Basic Parameters

↗ This parameter can be set during operation.

01-00 Maximum Output Frequency

Factory Setting: 60.00/50.00

Settings 50.00~600.00Hz

📖 This parameter determines the AC motor drive's Maximum Output Frequency. All the AC motor drive frequency command sources (analog inputs 0 to +10V, 4 to 20mA, 0 to 20mA and $\pm 10V$) are scaled to correspond to the output frequency range.

01-01 Output Frequency of Motor 1 (base frequency and motor rated frequency)

01-35 Output Frequency of Motor 2 (base frequency and motor rated frequency)

Factory Setting: 60.00/50.00

Settings 0.00~600.00Hz

📖 This value should be set according to the rated frequency of the motor as indicated on the motor nameplate. If the motor is 60Hz, the setting should be 60Hz. If the motor is 50Hz, it should be set to 50Hz.

📖 Pr.01-35 is used for the application occasion that uses double base motor.

01-02 Output Voltage of Motor 1 (base frequency and motor rated frequency)

01-36 Output Voltage of Motor 2 (base frequency and motor rated frequency)

Factory Setting: 200.0/400.0

Settings 230V series: 0.0~255.0V

460V series: 0.0~510.0V

📖 This value should be set according to the rated voltage of the motor as indicated on the motor nameplate. If the motor is 220V, the setting should be 220.0. If the motor is 200V, it should be set to 200.0.

📖 There are many motor types in the market and the power system for each country is also difference. The economic and convenience method to solve this problem is to install the AC motor drive. There is no problem to use with the different voltage and frequency and also can amplify the original characteristic and life of the motor.

01-03 Mid-point Frequency 1 of Motor 1

Factory Setting: 3.00

Settings 0.00~600.00Hz

↗ **01-04** Mid-point Voltage 1 of Motor 1

Factory Setting: 11.0/22.0

Settings 230V series: 0.0~240.0V


460V series: 0.0~480.0V


01-37 Mid-point Frequency 1 of Motor 2

Factory Setting: 3.00

Settings 0.00~600.00Hz


↗	01-38 Mid-point Voltage 1 of Motor 2	Factory Setting: 11.0/22.0
	Settings 230V series: 0.0~240.0V 460V series: 0.0~480.0V	
	01-05 Mid-point Frequency 2 of Motor 1	Factory Setting: 0.50
	Settings 0.00~600.00Hz	
↗	01-06 Mid-point Voltage 2 of Motor 1	Factory Setting: 2.0/4.0
	Settings 230V series: 0.0~240.0V 460V series: 0.0~480.0V	
	01-39 Mid-point Frequency 2 of Motor 2	Factory Setting: 0.50
	Settings 0.00~600.00Hz	
↗	01-40 Mid-point Voltage 2 of Motor 2	Factory Setting: 2.0/4.0
	Settings 230V series: 0.0~240.0V 460V series: 0.0~480.0V	
	01-07 Min. Output Frequency of Motor 1	Factory Setting: 0.00
	Settings 0.00~600.00Hz	
↗	01-08 Min. Output Voltage of Motor 1	Factory Setting: 0.0/0.0
	Settings 230V series: 0.0~240.0V 460V series: 0.0~480.0V	
	01-41 Min. Output Frequency of Motor 2	Factory Setting: 0.00
	Settings 0.00~600.00Hz	
↗	01-42 Min. Output Voltage of Motor 2	Factory Setting: 0.0/0.0
	Settings 230V series: 0.0~240.0V 460V series: 0.0~480.0V	

 V/f curve setting is usually set by the motor's allowable loading characteristics. Pay special attention to the motor's heat dissipation, dynamic balance, and bearing lubricity, if the loading characteristics exceed the loading limit of the motor.

 There is no limit for the voltage setting, but a high voltage at low frequency may cause motor damage, overheat, and stall prevention or over-current protection. Therefore, please use the low voltage at the low frequency to prevent motor damage.



Pr.01-35 to Pr.01-42 is the V/f curve for the motor 2. When multi-function input terminals Pr.02-01~02-08 and Pr.02-26 ~Pr.02-31 are set to 14 and enabled, the AC motor drive will act as the 2nd V/f curve.

The V/f curve for the motor 1 is shown as follows. The V/f curve for the motor 2 can be deduced from it.


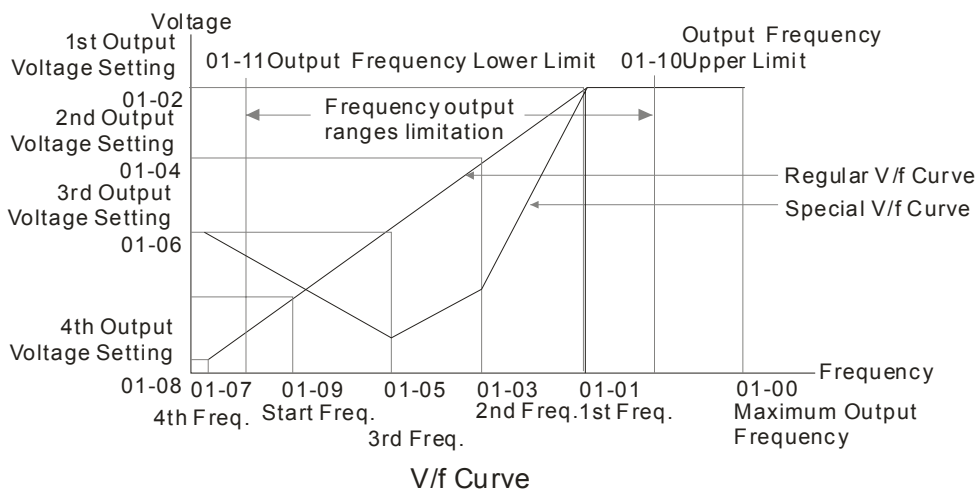


Common settings of V/f curve:



(1) General purpose

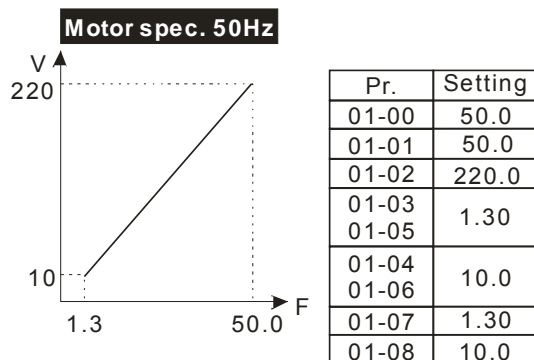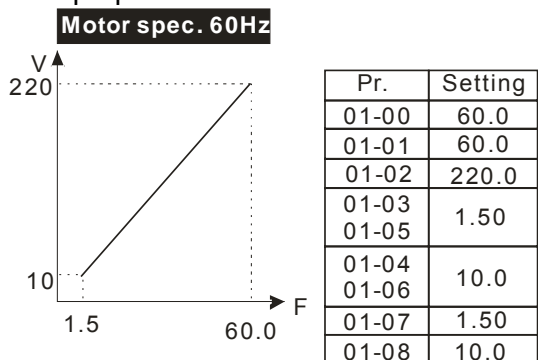

(2) Fan and hydraulic machinery

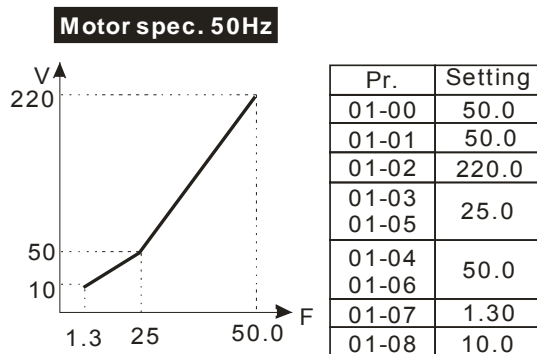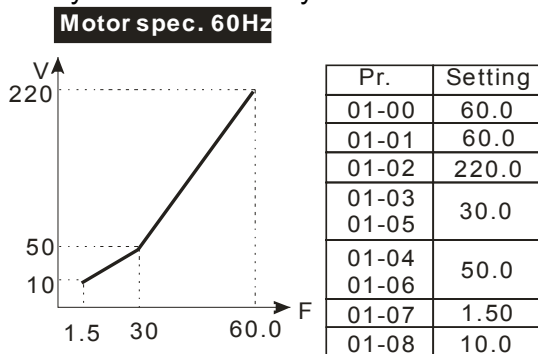

(3) High starting torque

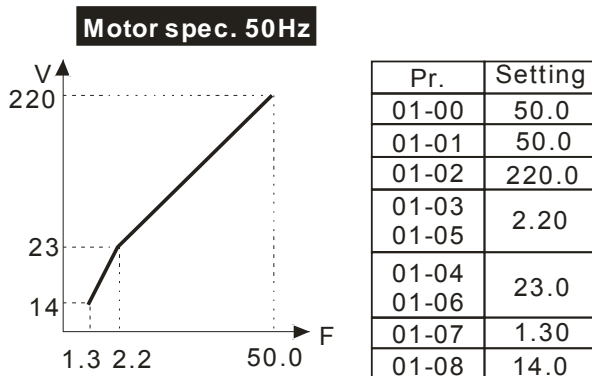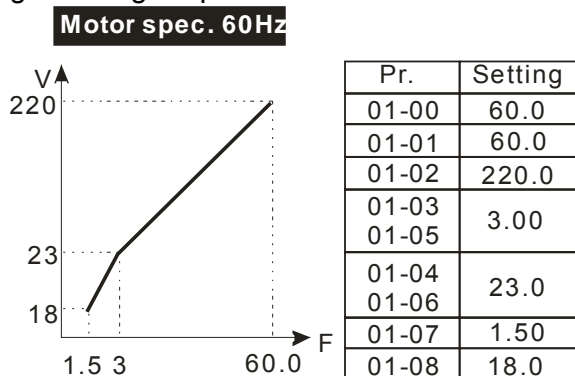


01-09 Start-Up Frequency

Factory Setting: 0.50

Settings 0.0~600.00Hz

When start frequency is higher than the min. output frequency, drives' output will be from start frequency to the setting frequency. Please refer to the following diagram for details.

- 📖 Fcmd=frequency command,
 - Fstart=start frequency (Pr.01-09),
 - fstart=actual start frequency of drive,
 - Fmin=4th output frequency setting (Pr.01-07/Pr.01-41),
 - Flow=output frequency lower limit (Pr.01-11)

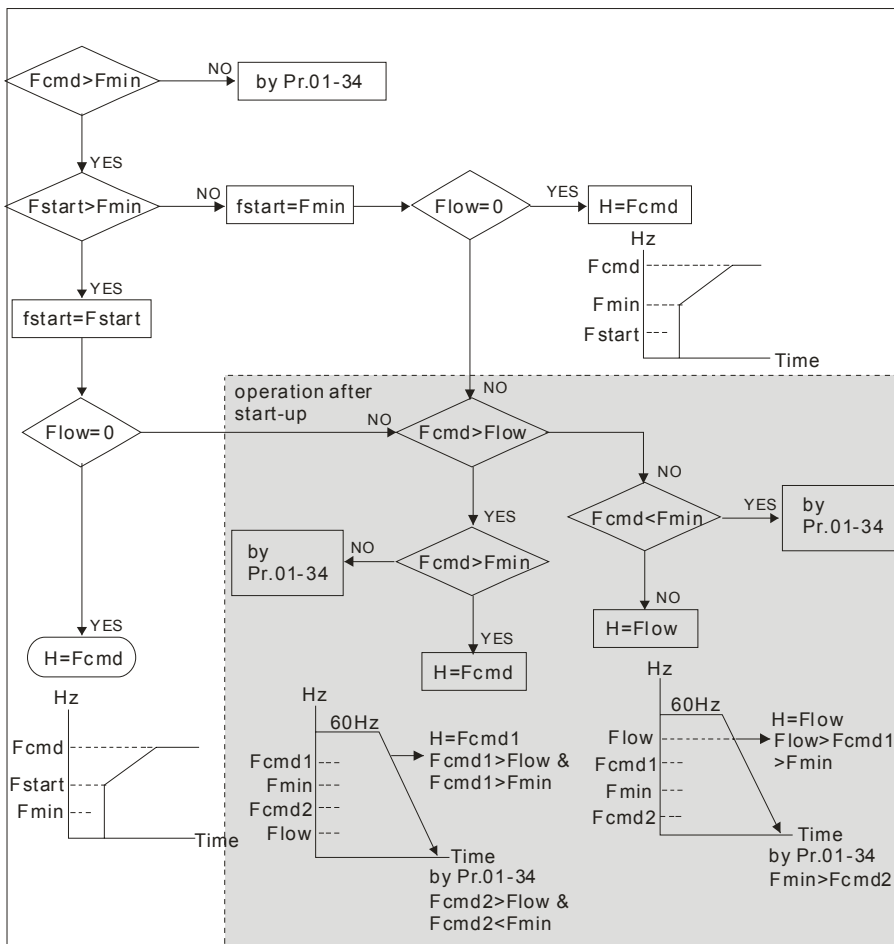

01-10 Output Frequency Upper Limit

Factory Setting: 600.00

Settings 0.0~600.00Hz


01-11 Output Frequency Lower Limit

Factory Setting: 0.00

Settings 0.0~600.00Hz

The upper/lower output frequency setting is used to limit the actual output frequency. If the frequency setting is higher than the upper limit, it will run with the upper limit frequency. If output frequency lower than output frequency lower limit and frequency setting is higher than min. frequency, it will run with lower limit frequency. The upper limit frequency should be set to be higher than the lower limit frequency.

- 📖 Pr.01-10 setting must be \geq Pr.01-11 setting. Pr.01-00 setting is regarded as 100.0%.
- 📖 Output frequency upper limit = $(\text{Pr.01-00} \times \text{Pr.01-10}) / 100$
- 📖 This setting will limit the max. Output frequency of drive. If frequency setting is higher than Pr.01-10, the output frequency will be limited by Pr.01-10 setting.
- 📖 When the drive starts the function of slip compensation (Pr.07-27) or PID feedback control, drive output frequency may exceed frequency command but still be limited by this setting.
- 📖 Related parameters: Pr.01-00 Max. Operation Frequency and Pr.01-11 Output Frequency Lower Limit

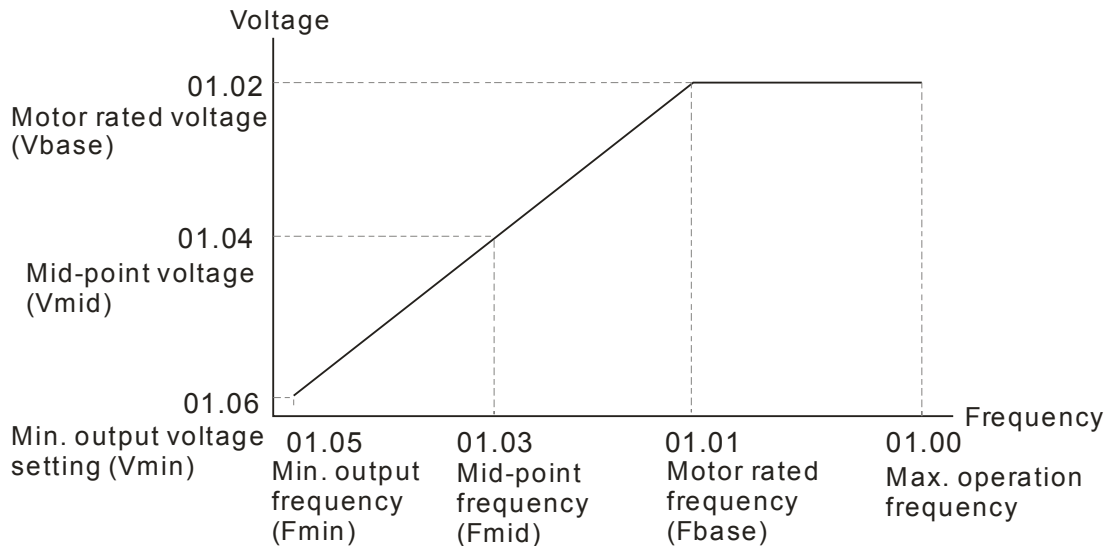

- 📖 This setting will limit the min. output frequency of drive. When drive frequency command or feedback control frequency is lower than this setting, drive output frequency will limit by the lower limit of frequency.
- 📖 When the drive starts, it will operate from min. output frequency (Pr.01-05) and accelerate to the setting frequency. It won't limit by this parameter setting.
- 📖 The setting of output frequency upper/lower limit is used to prevent personal misoperation, overheat due to too low operation frequency or damage due to too high speed.
- 📖 If the output frequency upper limit setting is 50Hz and frequency setting is 60Hz, max. output frequency will be 50Hz.
- 📖 If the output frequency lower limit setting is 10Hz and min. operation frequency setting (Pr.01-05) is 1.5Hz, it will operate by 10Hz when the frequency command is greater than Pr.01-05 and less than 10Hz. If the frequency command is less than Pr.01-05, the drive will be in ready status and no output.
- 📖 If the frequency output upper limit is 60Hz and frequency setting is also 60Hz, it won't exceed 60Hz even after slip compensation. If the output frequency needs to exceed 60Hz, it can increase output frequency upper limit or max. operation frequency.

↗	01-12	Accel. Time 1
↗	01-13	Decel. Time 1
↗	01-14	Accel. Time 2
↗	01-15	Decel. Time 2
↗	01-16	Accel. Time 3

↗	01-17	Decel. Time 3
↗	01-18	Accel. Time 4
↗	01-19	Decel. Time 4
↗	01-20	JOG Acceleration Time
↗	01-21	JOG Deceleration Time


Factory Setting: 10.00/10.0

Factory Setting for AC drive with power
greater than 30HP: 60.00/60.0

Settings Pr.01-45=0: 0.00~600.00 seconds

Pr.01-45=1: 0.00~6000.00 seconds

- 📖 The Acceleration Time is used to determine the time required for the AC motor drive to ramp from 0Hz to Maximum Output Frequency (Pr.01-00).
- 📖 The Deceleration Time is used to determine the time required for the AC motor drive to decelerate from the Maximum Output Frequency (Pr.01-00) down to 0Hz.
- 📖 The Acceleration/Deceleration Time is invalid when using Pr.01-44 Optimal Acceleration/Deceleration Setting.
- 📖 The Acceleration/Deceleration Time 1, 2, 3, 4 are selected according to the Multi-function Input Terminals settings. The factory settings are Accel./Decel. time 1.
- 📖 When enabling torque limits and stalls prevention function, actual accel./decel. time will be longer than the above action time.
- 📖 Please note that it may trigger the protection function (Pr.06-03 Over-current Stall Prevention during Acceleration or Pr.06-01 Over-voltage Stall Prevention) when the setting of accel./decel. time is too short.
- 📖 Please note that it may cause motor damage or drive protection enabled due to over current during acceleration when the setting of acceleration time is too short.
- 📖 Please note that it may cause motor damage or drive protection enabled due to over current during deceleration or over-voltage when the setting of deceleration time is too short.
- 📖 It can use suitable brake resistor (see Chapter 06 Accessories) to decelerate in a short time and prevent over-voltage.
- 📖 When enabling Pr.01-24~Pr.01-27, the actual accel./decel. time will be longer than the setting.

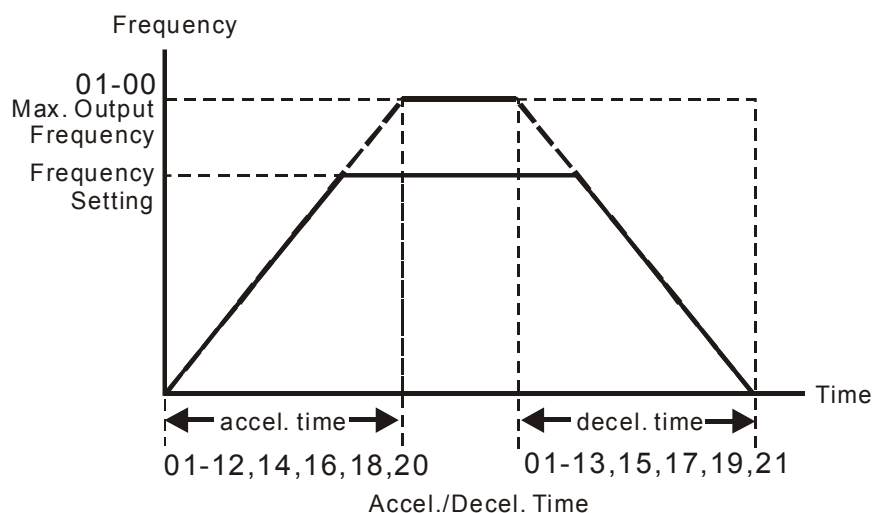

01-22 JOG Frequency

Factory Setting: 6.00

Settings 0.00~600.00Hz


- 📖 Both external terminal JOG and key “F1” on the keypad KPC-CC01 can be used. When the jog command is ON, the AC motor drive will accelerate from 0Hz to jog frequency (Pr.01-22). When the jog command is OFF, the AC motor drive will decelerate from Jog Frequency to zero. The Jog Accel./Decel. time (Pr.01-20, Pr.01-21) is the time that accelerates from 0.0Hz to Pr.01-22 JOG Frequency.
- 📖 The JOG command can't be executed when the AC motor drive is running. In the same way, when the JOG command is executing, other operation commands are invalid except forward/reverse commands and STOP key on the digital keypad.
- 📖 It does not support JOG function in the optional keypad KPC-CE01.

01-23 1st/4th Accel./decel. Frequency

Factory Setting: 0.00

Settings 0.00~600.00Hz

- 📖 The transition from acceleration/deceleration time 1 to acceleration/deceleration time 4, may also be enabled by the external terminals. The external terminal has priority over Pr. 01-23.

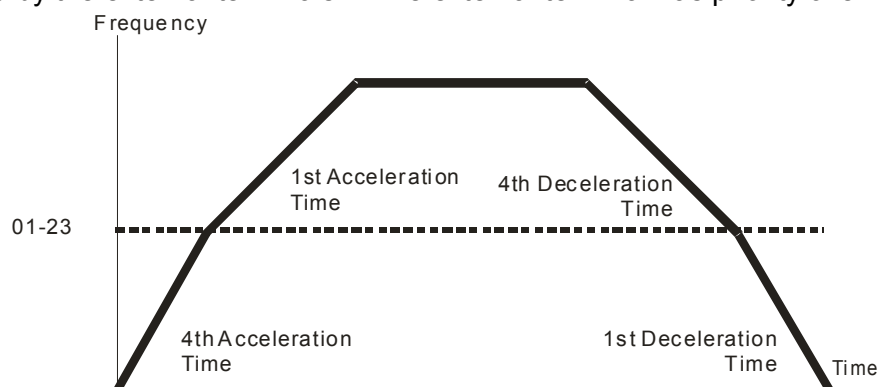

1st/4th Acceleration/Deceleration Frequency Switching

01-24 S-curve Acceleration Begin Time 1

01-25 S-curve Acceleration Arrival Time 2

01-26 S-curve Deceleration Begin Time 1


01-27 S-curve Deceleration Arrival Time 2

Factory Setting: 0.20/0.2

Settings Pr.01-45=0: 0.00~25.00 seconds

Pr.01-45=1: 0.00~250.0 seconds

- 📖 It is used to give the smoothest transition between speed changes. The accel./decel. curve can adjust the S-curve of the accel./decel. When it is enabled, the drive will have different accel./decel. curve by the accel./decel. time.
- 📖 The S-curve function is disabled when accel./decel. time is set to 0.
- 📖 When Pr.01-12, 01-14, 01-16, 01-18 \geq Pr.01-24 and Pr.01-25,
The Actual Accel. Time = Pr.01-12, 01-14, 01-16, 01-18 + (Pr.01-24 + Pr.01-25)/2
- 📖 When Pr.01-13, 01-15, 01-17, 01-19 \geq Pr.01-26 and Pr.01-27,
The Actual Decel. Time = Pr.01-13, 01-15, 01-17, 01-19 + (Pr.01-26 + Pr.01-27)/2

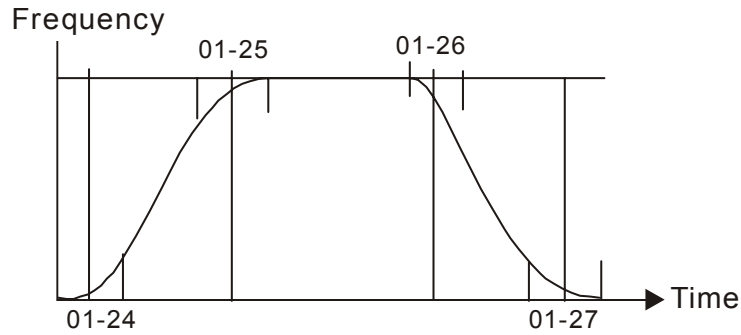

01-28 Skip Frequency 1 (upper limit)

01-29 Skip Frequency 1 (lower limit)

01-30 Skip Frequency 2 (upper limit)

01-31 Skip Frequency 2 (lower limit)


01-32 Skip Frequency 3 (upper limit)

01-33 Skip Frequency 3 (lower limit)

Factory Setting: 0.00

Settings 0.00~600.00Hz

- 📖 These parameters are used to set the skip frequency of the AC drive. But the frequency output is continuous. There is no limit for the setting of these six parameters and can be used as required.
- 📖 The skip frequencies are useful when a motor has vibration at a specific frequency bandwidth. By skipping this frequency, the vibration will be avoided. It offers 3 zones for use.
- 📖 These parameters are used to set the skip frequency of the AC drive. But the frequency output is continuous. The limit of these six parameters is $01-28 \geq 01-29 \geq 01-30 \geq 01-31 \geq 01-32 \geq 01-33$. This function will be invalid when setting to 0.0.
- 📖 The setting of frequency command (F) can be set within the range of skip frequencies. In this moment, the output frequency (H) will be limited by these settings.
- 📖 When accelerating/decelerating, the output frequency will still pass the range of skip frequencies.

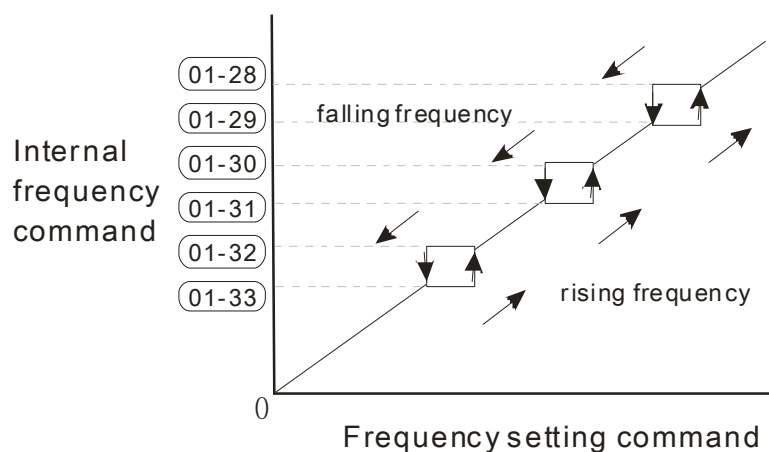


01-34 Zero-speed Mode


Factory Setting: 0

- Settings
- 0: Output waiting
 - 1: Zero-speed operation
 - 2: Fmin (Refer to Pr.01-07, 01-41)

- 📖 When the frequency is less than F_{min} (Pr.01-07 or Pr.01-41), it will operate by this parameter.
- 📖 When it is set to 0, the AC motor drive will be in waiting mode without voltage output from terminals U/V/W.
- 📖 When setting 1, it will execute DC brake by V_{min} (Pr.01-08 and Pr.01-42) in V/f, VFPG and SVC modes. It executes zero-speed operation in VFPG and FOCPG mode.
- 📖 When it is set to 2, the AC motor drive will run by F_{min} (Pr.01-07, Pr.01-41) and V_{min} (Pr.01-08, Pr.01-42) in V/f, VFPG, SVC and FOCPG modes.
- 📖 In V/f, VFPG and SVC modes

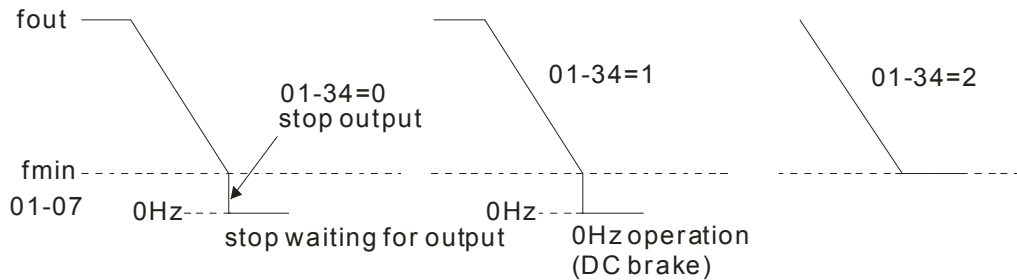

- 📖 In FOCPG mode, when Pr.01-34 is set to 2, it will act according Pr.01-34 setting.

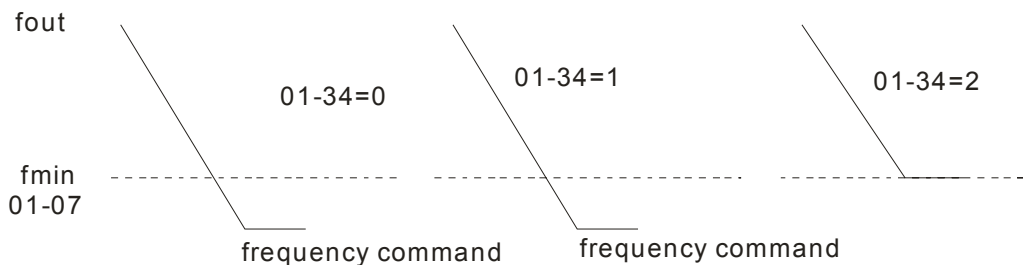


01-43 V/f Curve Selection

Factory Setting: 0

- Settings
- 0: V/f curve determined by group 01
 - 1: 1.5 power curve
 - 2: Square curve

- 📖 When setting to 0, refer to Pr.01-01~01-08 for motor 1 V/f curve. For motor 2, please refer to Pr.01-35~01-42.
- 📖 When setting to 1 or 2, 2nd and 3rd voltage frequency setting are invalid.
- 📖 If motor load is variable torque load (torque is in direct proportion to speed, such as the load of fan or pump), it can decrease input voltage to reduce flux loss and iron loss of the motor at low speed with low load torque to raise the entire efficiency.
- 📖 When setting higher power V/f curve, it is lower torque at low frequency and is not suitable for rapid acceleration/deceleration. It is recommended Not to use this parameter for the rapid acceleration/deceleration.

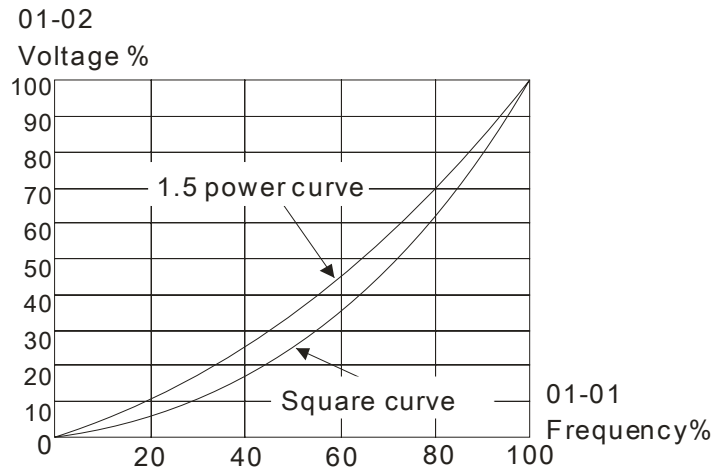


01-44 Optimal Acceleration/Deceleration Setting

Factory Setting: 0

- Settings
- 0: Linear accel./decel.
 - 1: Auto accel., linear decel.
 - 2: Linear accel., auto decel.
 - 3: Auto accel./decel. (auto calculate the accel./decel. time by actual load)
 - 4: Stall prevention by auto accel./decel. (limited by 01-12 to 01-21)

- Pr.01-44 is used to reduce the drive's vibration during load starts and stops. Also it will speed up to the setting frequency with the fastest and smoothest start-up current when it detects small torque. At deceleration, it will auto stop the drive with the fastest and the smoothest deceleration time when the regenerated voltage of the load is detected.
- Setting 0 Linear accel./decel.: it will accelerate/decelerate according to the setting of Pr.01-12~01-19.
- Setting to Auto accel./decel.: it can reduce the mechanical vibration and prevent the complicated auto-tuning processes. It won't stall during acceleration and no need to use brake resistor. In addition, it can improve the operation efficiency and save energy.
- Setting 3 Auto accel./decel. (auto calculate the accel./decel. time by actual load): it can auto detect the load torque and accelerate from the fastest acceleration time and smoothest start current to the setting frequency. In the deceleration, it can auto detect the load re-generation and stop the motor smoothly with the fastest decel. time.
- Setting 4 Stall prevention by auto accel./decel. (limited by 01-12 to 01-21): if the acceleration/deceleration is in the reasonable range, it will accelerate/decelerate by Pr.01-12~01-19. If the accel./decel. time is too short, the actual accel./decel. time is greater than the setting of accel./decel. time.

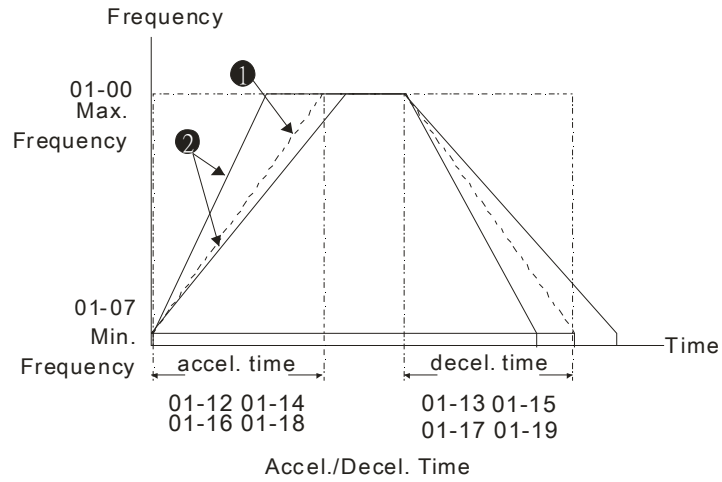

- ① When Pr.01-44 is set to 0.
- ② When Pr.01-44 is set to 3.

01-45 Time Unit for Acceleration/Deceleration and S Curve

Factory Setting: 0

Settings 0: Unit 0.01 sec
1: Unit 0.1 sec

01-46 Time for CANopen Quick Stop

Factory Setting: 1.00

Settings Pr. 01-45=0: 0.00~600.00 sec
Pr. 01-45=1: 0.0~6000.0 sec

It is used to set the time that decelerates from the max. operation frequency (Pr.01-00) to 0.00Hz in CANopen control

02 Digital Input/Output Parameter

✎ This parameter can be set during operation.

02-00 2-wire/3-wire Operation Control

Factory Setting: 0

Settings 0: 2 wire mode 1
1: 2 wire mode 2
2: 3 wire mode

📖 It is used to set the operation control method:

Pr.02-00	Control Circuits of the External Terminal
0 2-wire mode 1 FWD/STOP REV/STOP	
1 2-wire mode 2 RUN/STOP FWD/REV	
3 3-wire operation control	

02-01 Multi-function Input Command 1 (MI1) (MI1= STOP command when in 3-wire operation control)

Factory Setting: 1

02-02 Multi-function Input Command 2 (MI2)

Factory Setting: 2

02-03 Multi-function Input Command 3 (MI3)

Factory Setting: 3

02-04 Multi-function Input Command 4 (MI4)

Factory Setting: 4

02-05 Multi-function Input Command 5 (MI5)

02-06 Multi-function Input Command 6 (MI6)

02-07 Multi-function Input Command 7 (MI7)

02-08 Multi-function Input Command 8 (MI8)

02-26 Input terminal of I/O extension card (MI10)

02-27 Input terminal of I/O extension card (MI11)

02-28 Input terminal of I/O extension card (MI12)

02-29	Input terminal of I/O extension card (MI13)
-------	---

02-30	Input terminal of I/O extension card (MI14)
-------	---

02-31	Input terminal of I/O extension card (MI15)
-------	---

Factory Setting: 0



Settings



- 0: no function
- 1: multi-step speed command 1/multi-step position command 1
- 2: multi-step speed command 2/multi-step position command 2
- 3: multi-step speed command 3/multi-step position command 3
- 4: multi-step speed command 4/multi-step position command 4
- 5: Reset
- 6: JOG command (By KPC-CC01 or external control)
- 7: acceleration/deceleration speed not allow
- 8: the 1st, 2nd acceleration/deceleration time selection
- 9: the 3rd, 4th acceleration/deceleration time selection
- 10: EF Input (Pr.07-20)
- 11: B.B input from external (Base Block)
- 12: Output stop
- 13: cancel the setting of the optimal acceleration/deceleration time
- 14: switch between motor 1 and motor 2
- 15: operation speed command from AVI
- 16: operation speed command from ACI
- 17: operation speed command from AUI
- 18: Emergency stop (Pr.07-20)
- 19: Digital up command
- 20: Digital down command
- 21: PID function disabled
- 22: Clear counter
- 23: Input the counter value (MI6)
- 24: FWD JOG command
- 25: REV JOG command
- 26: FOCG/TQC model selection
- 27: ASR1/ASR2 selection
- 28: Emergency stop (EF1)
- 29: Signal confirmation for Y-connection
- 30: Signal confirmation for Δ-connection
- 31: High torque bias (Pr.11-30)
- 32: Middle torque bias (Pr.11-31)
- 33: Low torque bias (Pr.11-32)
- 34: Switch between multi-step position and multi-speed control
- 35: Enable position control
- 36: Enable multi-step position learning function (valid at stop)
- 37: Enable pulse position input command
- 38: Disable write EEPROM function
- 39: Torque command direction
- 40: Force coast to stop
- 41: HAND switch
- 42: AUTO switch
- 43: Enable resolution selection (Pr.02-48)
- 44: Reverse direction homing
- 45: Forward direction homing
- 46: Homing ORG
- 47: Homing function enable
- 48: Mechanical gear ratio switch
- 49: Drive enable
- 50: Master dEb action input
- 51: Selection for PLC mode bit0

52: Selection for PLC mode bit1
 53: Trigger CANopen quick stop
 54~55: Reserve
 56: Local/Remote Selection
 57~70: Reserve



- 📖 This parameter selects the functions for each multi-function terminal.
- 📖 The terminals of Pr.02-26~Pr.02-29 are virtual and set as MI10~MI13 when using with optional card EMC-D42A. Pr.02-30~02-31 are virtual terminals.
- 📖 When being used as a virtual terminal, it needs to change the status (0/1: ON/OFF) of bit 8-15 of Pr.02-12 by digital keypad KPC-CC01 or communication.
- 📖 If Pr.02-00 is set to 3-wire operation control. Terminal MI1 is for STOP contact. Therefore, MI1 is not allowed for any other operation.
- 📖 Summary of function settings (Take the normally open contact for example, ON: contact is closed, OFF: contact is open)

Settings	Functions	Descriptions
0	No Function	
1	Multi-step speed command 1/multi-step position command 1	15 step speeds could be conducted through the digital status of the 4 terminals, and 16 in total if the master speed is included. (Refer to Parameter set 4)
2	Multi-step speed command 2/ multi-step position command 2	
3	Multi-step speed command 3/ multi-step position command 3	
4	Multi-step speed command 4/ multi-step position command 4	
5	Reset	After the error of the drive is eliminated, use this terminal to reset the drive.
6	JOG Command	<p>Before executing this function, it needs to wait for the drive stop completely. During running, it can change the operation direction and STOP key on the keypad is valid. Once the external terminal receives OFF command, the motor will stop by the JOG deceleration time. Refer to Pr.01-20~01-22 for details.</p> <p>The diagram shows the JOG frequency (01-22) and the minimum output frequency of motor 1 (01-07) over time. The JOG frequency ramps up during the JOG acceleration time (01-20) and ramps down during the JOG deceleration time (01-21). The signal is labeled 'ON' and 'OFF'.</p>
7	Acceleration/deceleration Speed Inhibit	When this function is enabled, acceleration and deceleration is stopped. After this function is disabled, the AC motor drive starts to accel./decel. from the inhibit point.

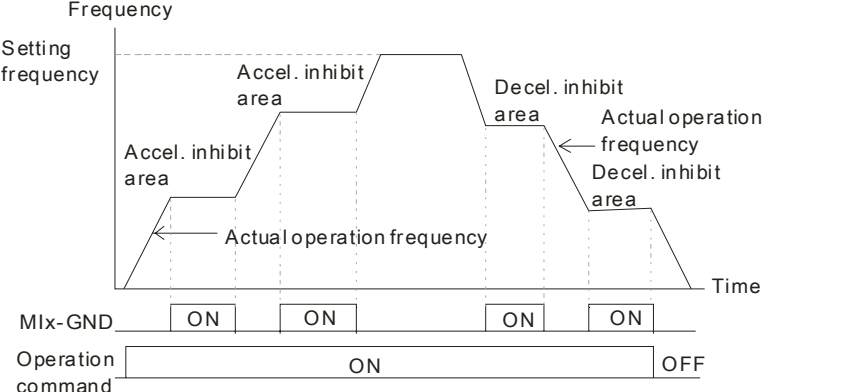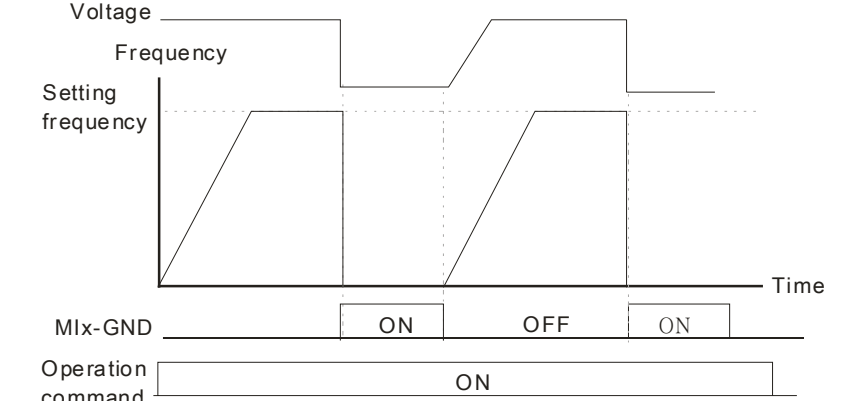Settings	Functions	Descriptions
		 <p>The graph shows Frequency on the vertical axis and Time on the horizontal axis. A dashed horizontal line represents the 'Setting frequency'. The 'Actual operation frequency' starts at zero, rises linearly through an 'Accel. inhibit area' to the setting frequency, remains constant, then falls linearly through a 'Decel. inhibit area' back to zero. Below the graph, the 'MIx-GND' signal is shown as a series of four pulses labeled 'ON'. The 'Operation command' signal is shown as a single long pulse labeled 'ON'.</p>
8	The 1 st , 2 nd acceleration or deceleration time selection	The acceleration/deceleration time of the drive could be selected from this function or the digital status of the terminals; there are 4 acceleration/deceleration speeds in total for selection.
9	The 3 rd , 4 th acceleration or deceleration time selection	
10	EF Input (EF: External fault)	External fault input terminal. It will decelerate by Pr.07-20 setting (it will have fault record when external fault occurs)
11	External B.B. Input (Base Block)	When this contact is ON, output of the drive will be cut off immediately, and the motor will be free run and display B.B. signal. Refer to Pr.07-08 for details.
12	Output Stop	<p>If this contact is ON, output of the drive will be cut off immediately, and the motor will then be free run. And once it is turned to OFF, the drive will accelerate to the setting frequency.</p>  <p>The graph shows Voltage on the vertical axis and Frequency on the horizontal axis. The 'Setting frequency' is indicated by a dashed horizontal line. The frequency ramps up to the setting frequency, then drops to zero when the 'MIx-GND' signal is 'ON'. When 'MIx-GND' is 'OFF', the frequency ramps up again to the setting frequency. The 'Operation command' signal is shown as a single long pulse labeled 'ON'.</p>
13	Cancel the setting of the optimal accel./decel. time	Before using this function, Pr.01-44 should be set to 01/02/03/04 first. When this function is enabled, OFF is for auto mode and ON is for linear accel./decel.
14	Switch between drive settings 1 and 2	When the contact is ON: use motor 2 parameters. OFF: use motor 1 parameters.
15	Operation speed command form AVI	When the contact is ON, the source of the frequency will force to be AVI. (If the operation speed commands are set to AVI, ACI and AUI at the same time. The priority is AVI > ACI > AUI)
16	Operation speed command form ACI	When the contact is ON, the source of the frequency will force to be ACI. (If the operation speed commands are set to AVI, ACI and AUI at the same time. The priority is AVI > ACI > AUI)
17	Operation speed command form AUI	When this function is enabled, the source of the frequency will force to be AUI. (If the operation speed commands are set to AVI, ACI and AUI at the same time. The priority is AVI > ACI > AUI)
18	Emergency Stop (07-20)	When the contact is ON, the drive will ramp to stop by Pr.07-20 setting.
19	Digital Up command	When the contact is ON, the frequency will be increased and decreased. If this function is constantly ON, the frequency will be

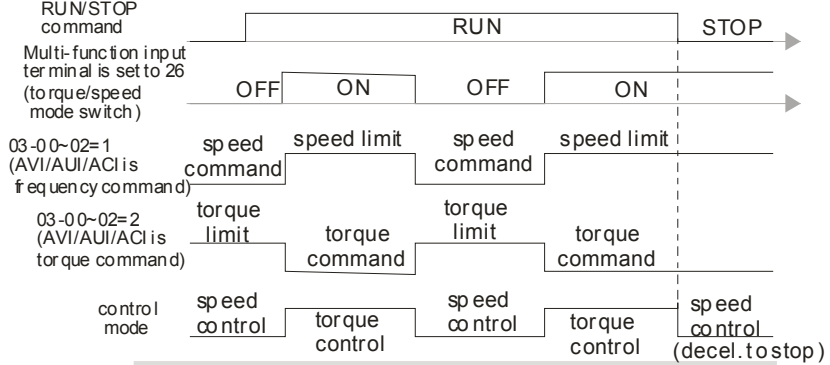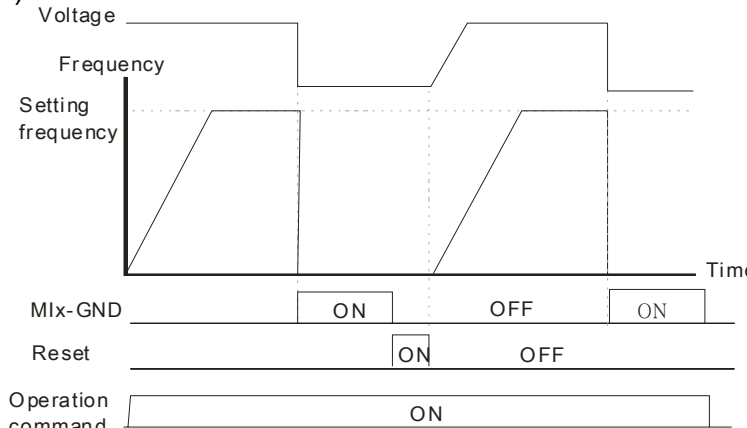Settings	Functions	Descriptions
20	Digital Down command	increased/decreased by Pr.02-09/Pr.02-10.
21	PID function disabled	When the contact is ON, the PID function is disabled.
22	Clear counter	When the contact is ON, it will clear current counter value and display "0". Only when this function is disabled, it will keep counting upward.
23	Input the counter value (multi-function input command 6)	The counter value will increase 1 once the contact is ON. It needs to be used with Pr.02-19.
24	FWD JOG command	When the contact is ON, the drive will execute forward Jog command. When execute JOG command under torque mode, the drive will automatically switch to speed mode; after JOG command is done, the drive will return to torque mode.
25	REV JOG command	When the contact is ON the drive will execute reverse Jog command. When execute JOG command under torque mode, the drive will automatically switch to speed mode; after JOG command is done, the drive will return to torque mode.
26	FOCPG/TQCPG mode selection	<p>When the contact is ON: TQCPG mode. When the contact is OFF: FOCPG mode.</p>  <p>03-00-02=1 (AVI/AUI/ACI is frequency command) 03-00-02=2 (AVI/AUI/ACI is torque command)</p> <p>control mode: speed control, torque control, speed control, torque control, speed control (decel. to stop)</p> <p>Switch timing for torque/speed control (00-10=0/4, multi-function input terminal is set to 26)</p>
27	ASR1/ASR2 selection	When the contact is ON: speed will be adjusted by ASR 2 setting. OFF: speed will be adjusted by ASR 1 setting. Refer to Pr.11-02 for details.
28	Emergency stop (EF1)	<p>When the contact is ON, the drive will execute emergency stop and display EF1 on the keypad. The motor won't run and be in the free run until the fault is cleared after pressing RESET" (EF: External Fault)</p>  <p>Voltage</p> <p>Frequency</p> <p>Setting frequency</p> <p>Time</p> <p>Mix-GND: ON, OFF, ON</p> <p>Reset: ON, OFF</p> <p>Operation command: ON</p>

Settings	Functions	Descriptions
29	Signal confirmation for Y-connection	When is the contact is ON, the drive will operate by 1st V/f.
30	Signal confirmation for Δ-connection	When the contact is ON, the drive will operate by 2nd V/f.
31	High torque bias	Refer to Pr.11-30~11-32 for details.
32	Middle torque bias	
33	Low torque bias	
34	Switch between multi-step position and multi-speed control	

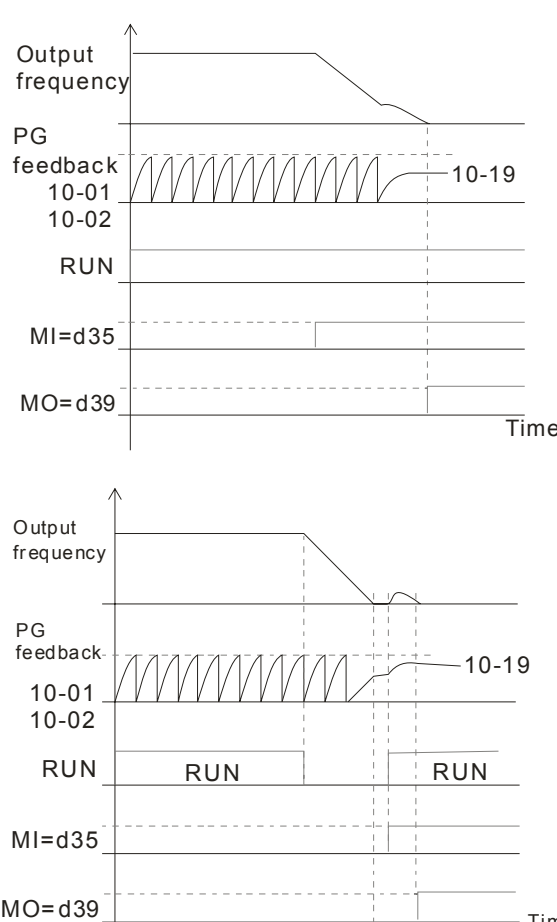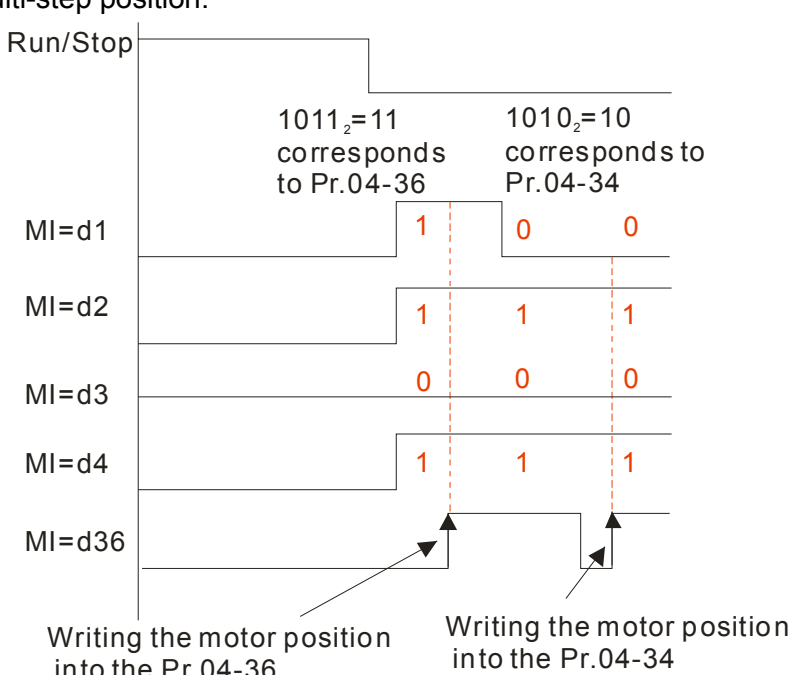Settings	Functions	Descriptions
35	Enable single-point position control	<p>When the contact is ON, the AC motor drive will execute internal single-point position control according to the setting in Pr.10-19. This function is valid in FOCPG mode only.</p> 
36	Enable multi-step position learning function (valid at stop)	<p>When the contact is ON/OFF, the drive will base the multi-function inputs 1-4 ON/OFF status to find the corresponding multi-step positions and write current motor position into such corresponding multi-step position.</p>  <p>Run/Stop</p> <p>$1011_2 = 11$ corresponds to Pr.04-36 $1010_2 = 10$ corresponds to Pr.04-34</p> <p>MI=d1 1 0 0</p> <p>MI=d2 1 1 1</p> <p>MI=d3 0 0 0</p> <p>MI=d4 1 1 1</p> <p>MI=d36 (Active when MI=d1 or MI=d4 is active)</p> <p>Writing the motor position into the Pr.04-36 Writing the motor position into the Pr.04-34</p>

Settings	Functions	Descriptions															
37	Full position control pulse command input enable	<p>When Pr.00-20 is set to 4 or 5 and this contact is ON, the input pulse of PG card is position command. When using this function, it is recommended to set Pr.11-25 to 0. Example: please refer to the following diagram when using this function with MI=d35 return to home position,.</p>															
38	Disable EEPROM write function	When this contact is ON, write to EEPROM is disabled.															
39	Torque command direction	For torque control (Pr.00-10=2), when torque command is AVI or ACI, the contact is ON and it is negative torque.															
40	Force coast to stop	When this contact is ON during the operation, the drive will free run to stop.															
41	HAND switch	1. When MI is switched to off status, it executes a STOP command. , If MI is switched to off during operation, the drive will also stop.															
42	AUTO switch	<p>2. Using keypad KPC-CC01 to switch between HAND/AUTO, the drive will stop first then switch to the HAND or AUTO status.</p> <p>3. On the digital keypad KPC-CC01, it will display current drive status (HAND/OFF/AUTO).</p> <table border="1"> <thead> <tr> <th></th> <th>Bit 1</th> <th>Bit 0</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>0</td> <td>0</td> </tr> <tr> <td>AUTO</td> <td>0</td> <td>1</td> </tr> <tr> <td>HAND</td> <td>1</td> <td>0</td> </tr> <tr> <td>OFF</td> <td>1</td> <td>1</td> </tr> </tbody> </table>		Bit 1	Bit 0	OFF	0	0	AUTO	0	1	HAND	1	0	OFF	1	1
	Bit 1	Bit 0															
OFF	0	0															
AUTO	0	1															
HAND	1	0															
OFF	1	1															
43	Enable resolution selection	Refer to Pr.02-48 for details.															
44	Reverse direction homing	Signal input for reverse direction limit switch. When this terminal is ON, the drive will react to the setting in Pr.00-40, 00-41, 00-42 accordingly to execute homing in a reverse direction (counter clockwise).															
45	Forward direction homing	Signal input for forward direction limit switch. When this terminal is ON, the drive will react to the setting in Pr.00-40, 00-41, 00-42 accordingly to execute homing in a forward direction (clockwise).															
46	Homing ORG	ORG point input. When this terminal is ON, the drive will refer to the setting in Pr.00-40, 00-41, 00-42 accordingly to execute homing.															
47	Homing function enable	Pr.00-10 = 3 (homing mode), if the external terminal MIx=47 is OFF, the drive will ignore the home command and execute Point to Point position control.															

Settings	Functions	Descriptions															
48	Mechanical gear ratio switch	When this contact is ON, the mechanical gear ratio switch will be the second group A2/B2 (refer to Pr.10-08 and Pr.10-09).															
49	Drive enable	When drive=enable, RUN command is valid. When drive= disable, RUN command is invalid. When drive is in operation, motor coast to stop.															
50	Master dEb action input	Input the message setting in this parameter when dEb occurs to Master. This will ensure dEb also occurs to Slave, then Master and Slave will stop simultaneously.															
51	Selection for PLC mode bit0	<table border="1"> <thead> <tr> <th>PLC status</th> <th>Bit 1</th> <th>Bit 0</th> </tr> </thead> <tbody> <tr> <td>Disable PLC function (PLC 0)</td> <td>0</td> <td>0</td> </tr> <tr> <td>Trigger PLC to operation (PLC 1)</td> <td>0</td> <td>1</td> </tr> <tr> <td>Trigger PLC to stop (PLC 2)</td> <td>1</td> <td>0</td> </tr> <tr> <td>No function</td> <td>1</td> <td>1</td> </tr> </tbody> </table>	PLC status	Bit 1	Bit 0	Disable PLC function (PLC 0)	0	0	Trigger PLC to operation (PLC 1)	0	1	Trigger PLC to stop (PLC 2)	1	0	No function	1	1
PLC status	Bit 1		Bit 0														
Disable PLC function (PLC 0)	0		0														
Trigger PLC to operation (PLC 1)	0		1														
Trigger PLC to stop (PLC 2)	1	0															
No function	1	1															
52	Selection for PLC mode bit1																
53	Enable CANopen quick stop	When this function is enabled under CANopen control, it will change to quick stop. Refer to Chapter 15 for more details.															
54~55	Reserved																
56	LOCAL/REMOTE Selection	Use Pr.00-29 to select for LOCAL/REMOTE mode(refer to Pr.00-29) When Pr.00-29 is not set to 0, on the digital keypad KPC-CC01 it will display LOC/REM status. (It will display on the KPC-CC01 if the firmware version is above version 1.021). <table border="1"> <thead> <tr> <th></th> <th>Bit 0</th> </tr> </thead> <tbody> <tr> <td>REM</td> <td>0</td> </tr> <tr> <td>LOC</td> <td>1</td> </tr> </tbody> </table>		Bit 0	REM	0	LOC	1									
	Bit 0																
REM	0																
LOC	1																
57~70	Reserved																

02-09 UP/DOWN Key Mode

Factory Setting: 0

Settings 0: Up/down by the accel/decel time
1: Up/down constant speed (Pr.02-10)


02-10 Constant speed. The Accel. /Decel. Speed of the UP/DOWN Key

Factory Setting: 0.01


Settings 0.01~1.00Hz/ms

These settings are used when multi-function input terminals are set to 19/20. Refer to Pr.02-09 and 02-10 for the frequency up/down command.

Pr.02-09 set to 0: it will increase/decrease frequency command (F) by the external terminal UP/DOWN key as shown in the following diagram. In this mode, it also can be controlled by UP/DOWN key on the digital keypad.

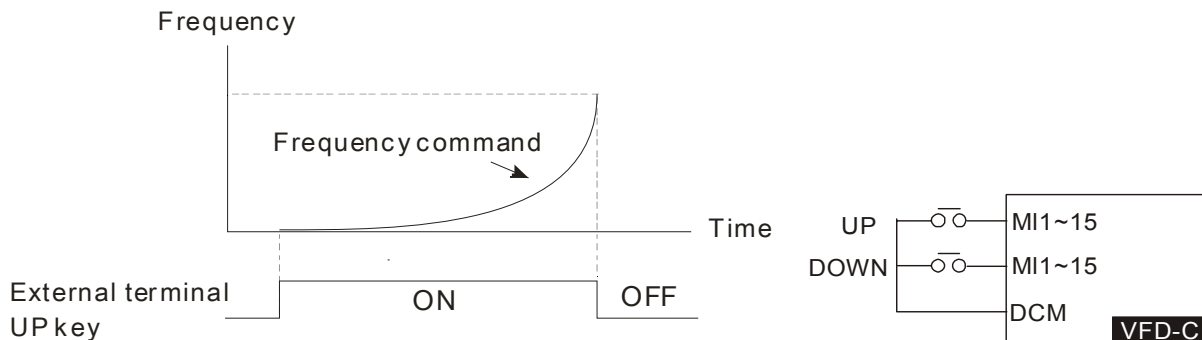

Pr.02-09 set to 1: it will increase/decrease frequency command (F) by the setting of acceleration/deceleration (Pr.01-12~01-19) and only be valid during operation.

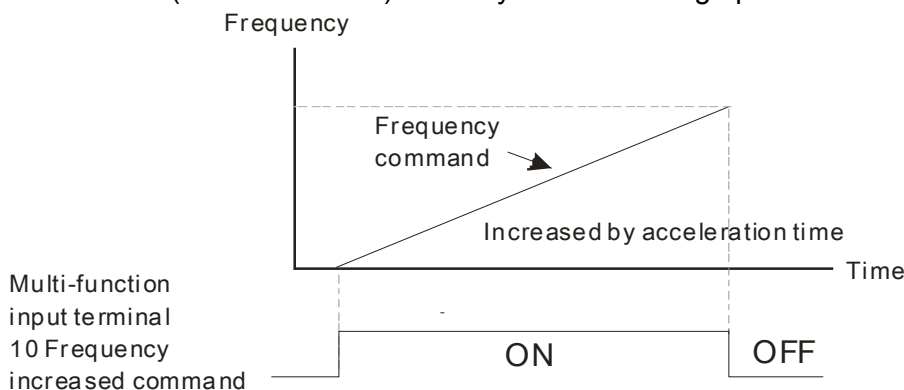

02-11 Digital Input Response Time

Factory Setting: 0.005

Settings 0.000~30.000 sec

- This parameter is used to set the response time of digital input terminals FWD, REV and MI1~MI8.
- It is used for digital input terminal signal delay and confirmation. The delay time is confirmation time to prevent some uncertain interference that would cause error in the input of the digital terminals. Under this condition, confirmation for this parameter would improve effectively, but the response time will be somewhat delayed.

02-12 Digital Input Operation Direction

Factory Setting: 0000

Settings 0000h~FFFFh (0:N.O. ; 1:N.C.)

- The setting of this parameter is In hexadecimal.
- This parameter is used to set the input signal level and it won't be affected by the SINK/SOURCE status.
- Bit0 is for FWD terminal, bit1 is for REV terminal and bit2 to bit15 is for MI1 to MI14.
- User can change terminal status by communicating.

For example, MI1 is set to 1 (multi-step speed command 1), MI2 is set to 2 (multi-step speed command 2). Then the forward + 2nd step speed command=1001(binary)=9 (Decimal). Only need to set Pr.02-12=9 by communication and it can forward with 2nd step speed. It doesn't need to wire any multi-function terminal.






Bit15	bit14	bit13	bit12	bit11	bit10	bit9	bit8	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
MI14	MI13	MI12	MI11	MI10	MI9	MI8	MI7	MI6	MI5	MI4	MI3	MI2	MI1	⊗	⊗

↗	02-13	Multi-function Output 1 (Relay1)	Factory Setting: 11
↗	02-14	Multi-function Output 2 (Relay2)	Factory Setting: 1
↗	02-16	Multi-function Output 3 (MO1)	
↗	02-17	Multi-function Output 4 (MO2)	
↗	02-36	Output terminal of I/O extension card (MO10)	
↗	02-37	Output terminal of I/O extension card (MO11)	
↗	02-38	Output terminal of I/O extension card (MO12)	
↗	02-39	Output terminal of I/O extension card (MO13)	
↗	02-40	Output terminal of I/O extension card (MO14)	
↗	02-41	Output terminal of I/O extension card (MO15)	
↗	02-42	Output terminal of I/O extension card (MO16)	
↗	02-43	Output terminal of I/O extension card (MO17)	
↗	02-44	Output terminal of I/O extension card (MO18)	
↗	02-45	Output terminal of I/O extension card (MO19)	
↗	02-46	Output terminal of the I/O extension card (MO20)	Factory Setting: 0

Settings



- 0: No function
- 1: Operation Indication
- 2: Operation speed attained
- 3: Desired frequency attained 1 (Pr.02-22)
- 4: Desired frequency attained 2 (Pr.02-24)
- 5: Zero speed (Frequency command)
- 6: Zero speed, include STOP(Frequency command)
- 7: Over torque 1(Pr.06-06~06-08)
- 8: Over torque 2(Pr.06-09~06-11)
- 9: Drive is ready
- 10: Low voltage warning (LV) (Pr.06-00)
- 11: Malfunction indication
- 12: Mechanical brake release(Pr.02-32)
- 13: Overheat warning (Pr.06-15)
- 14: Software brake signal indication(Pr.07-00)
- 15: PID feedback error
- 16: Slip error (oSL)
- 17: Terminal count value attained (Pr.02-20; not return to 0)
- 18: Preliminary count value attained (Pr.02-19; returns to 0)
- 19: Base Block
- 20: Warning output
- 21: Over voltage warning

- 22: Over-current stall prevention warning
- 23: Over-voltage stall prevention warning
- 24: Operation mode indication
- 25: Forward command
- 26: Reverse command
- 27: Output when current \geq Pr.02-33 (\geq 02-33)
- 28: Output when current \leq Pr.02-33 (\leq 02-33)
- 29: Output when frequency \geq Pr.02-34 (\geq 02-34)
- 30: Output when frequency \leq Pr.02-34 (\leq 02-34)
- 31: Y-connection for the motor coil
- 32: Δ -connection for the motor coil
- 33: Zero speed (actual output frequency)
- 34: Zero speed include stop(actual output frequency)
- 35: Error output selection 1(Pr.06-23)
- 36: Error output selection 2(Pr.06-24)
- 37: Error output selection 3(Pr.06-25)
- 38: Error output selection 4(Pr.06-26)
- 39: Position attained (Pr.10-19)
- 40: Speed attained (including Stop)
- 41: Multi-position attained
- 42: Crane function
- 43: Actual motor speed slower than Pr.02-47
- 44: Low current output (Pr.06-71 to Pr.06-73)
- 45: UVW Output Electromagnetic valve On/Off Switch
- 46: Master dEb action output
- 47: Closed brake output
- 48: Reserved
- 49: Homing action complete
- 50: Output for CANopen control
- 51: Output for communication card
- 52: Output for RS485
- 53~62: Reserved


-
-  This parameter is used for setting the function of multi-function terminals.
 -  Pr.02-36~Pr.02-41 requires additional extension cards to display the parameters, the choices of optional cards are EMC-D42A and EMC-R6AA.
 -  The optional card EMC-D42A provides 2 output terminals and can be used with Pr.02-36~02-37.
 -  The optional card EMC-R6AA provides 6 output terminals and can be used with Pr.02-36~02-41.
 -  Summary of function settings (Take the normally open contact for example, ON: contact is closed, OFF: contact is open)

Settings	Functions	Descriptions
0	No Function	
1	Operation Indication	Active when the drive is not at STOP.
2	Master Frequency Attained	Active when the AC motor drive reaches the output frequency setting.
3	Desired Frequency Attained 1 (Pr.02-22)	Active when the desired frequency (Pr.02-22) is attained.
4	Desired Frequency Attained 2 (Pr.02-24)	Active when the desired frequency (Pr.02-24) is attained.
5	Zero Speed (frequency command)	Active when frequency command =0. (the drive should be at RUN mode)
6	Zero Speed with Stop (frequency command)	Active when frequency command =0 or stop.
7	Over Torque 1	Active when detecting over-torque. Refer to Pr.06-07 (over-torque detection level-OT1) and Pr.06-08 (over-torque detection time-OT1). Refer to Pr.06-06~06-08.
8	Over Torque 2	Active when detecting over-torque. Refer to Pr.06-10 (over-torque detection level-OT2) and Pr.06-11 (over-torque detection time-OT2). Refer to Pr.06-09~06-11.
9	Drive Ready	Active when the drive is ON and no abnormality detected.
10	Low voltage warn (Lv)	Active when the DC Bus voltage is too low. (refer to Pr.06-00 low voltage level)
11	Malfunction Indication	Active when fault occurs (except Lv stop).
12	Mechanical Brake Release (Pr.02-32)	When drive runs after Pr.02-32, it will be ON. This function should be used with DC brake and it is recommended to use contact "b"(N.C).
13	Overheat	Active when IGBT or heat sink overheats to prevent OH turn off the drive. (refer to Pr.06-15)
14	Software Brake Signal Indication	Active when the soft brake function is ON. (refer to Pr.07-00)
15	PID Feedback Error	Active when the feedback signal is abnormal.
16	Slip Error (oSL)	Active when the slip error is detected.
17	Terminal Count Value Attained (Pr.02-20; not return to 0)	Active when the counter reaches Terminal Counter Value (Pr.02-19). This contact won't active when Pr.02-20>Pr.02-19.
18	Preliminary Counter Value Attained (Pr.02-19; returns to 0)	Active when the counter reaches Preliminary Counter Value (Pr.02-19).
19	External Base Block input (B.B.)	Active when the output of the AC motor drive is shut off during base block.
20	Warning Output	Active when the warning is detected.
21	Over-voltage Warning	Active when the over-voltage is detected.
22	Over-current Stall Prevention Warning	Active when the over-current stall prevention is detected.
23	Over-voltage Stall prevention Warning	Active when the over-voltage stall prevention is detected.
24	Operation Mode Indication	Active when the operation command is controlled by external terminal. (Pr.00-20≠0)
25	Forward Command	Active when the operation direction is forward.
26	Reverse Command	Active when the operation direction is reverse.
27	Output when Current >= Pr.02-33	Active when current is >= Pr.02-33.
28	Output when Current <= Pr.02-33	Active when current is <= Pr.02-33
29	Output when frequency >= Pr.02-34	Active when frequency is >= Pr.02-34.
30	Output when Frequency <= Pr.02-34	Active when frequency is <= Pr.02-34.
31	Y-connection for the Motor Coil	Active when PR.05-24 is less than Pr.05-23 and time is more than Pr.05-25.


Settings	Functions	Descriptions																																																																																
32	.-connection for the Motor Coil	Active when PR.05-24 is higher than Pr.05-23 and time is more than Pr.05-25.																																																																																
33	Zero Speed (actual output frequency)	Active when the actual output frequency is 0. (the drive should be at RUN mode)																																																																																
34	Zero Speed with Stop (actual output frequency)	Active when the actual output frequency is 0 or Stop.																																																																																
35	Error Output Selection 1 (Pr.06-23)	Active when Pr.06-23 is ON.																																																																																
36	Error Output Selection 2 (Pr.06-24)	Active when Pr.06-24 is ON.																																																																																
37	Error Output Selection 3 (Pr.06-25)	Active when Pr.06-25 is ON.																																																																																
38	Error Output Selection 4 (Pr.06-26)	Active when Pr.06-26 is ON.																																																																																
39	Position Attained (Pr.10-19)	Active when the PG position control point reaches Pr.10-19.																																																																																
40	Speed Attained (including zero speed)	Active when the output frequency reaches frequency setting or stop.																																																																																
41	Multi-position Attained	<p>User can set any three multi-function input terminals to 41. The current position action status of these three terminals will be outputted. Example: if setting Pr.02-36~02-38 to 41 and only the multi-position of the second point has been done. Therefore, current status is RA (ON), RA (OFF) and MO1 (OFF). In this way, their status is 010. Bit0 is RA and so on.</p> <table border="1"> <thead> <tr> <th></th> <th>MO2 Pr.02-17=41</th> <th>MO1 Pr.02-16=41</th> <th>RY2 Pr.02-14=41</th> <th>RY1 Pr.02-13=41</th> </tr> </thead> <tbody> <tr><td>Pr.04-16</td><td>0</td><td>0</td><td>0</td><td>1</td></tr> <tr><td>Pr.04-18</td><td>0</td><td>0</td><td>1</td><td>0</td></tr> <tr><td>Pr.04-20</td><td>0</td><td>0</td><td>1</td><td>1</td></tr> <tr><td>Pr.04-22</td><td>0</td><td>1</td><td>0</td><td>0</td></tr> <tr><td>Pr.04-24</td><td>0</td><td>1</td><td>0</td><td>1</td></tr> <tr><td>Pr.04-26</td><td>0</td><td>1</td><td>1</td><td>0</td></tr> <tr><td>Pr.04-28</td><td>0</td><td>1</td><td>1</td><td>1</td></tr> <tr><td>Pr.04-30</td><td>1</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>Pr.04-32</td><td>1</td><td>0</td><td>0</td><td>1</td></tr> <tr><td>Pr.04-34</td><td>1</td><td>0</td><td>1</td><td>0</td></tr> <tr><td>Pr.04-36</td><td>1</td><td>0</td><td>1</td><td>1</td></tr> <tr><td>Pr.04-38</td><td>1</td><td>1</td><td>0</td><td>0</td></tr> <tr><td>Pr.04-40</td><td>1</td><td>1</td><td>0</td><td>1</td></tr> <tr><td>Pr.04-42</td><td>1</td><td>1</td><td>1</td><td>0</td></tr> <tr><td>Pr.04-44</td><td>1</td><td>1</td><td>1</td><td>1</td></tr> </tbody> </table>		MO2 Pr.02-17=41	MO1 Pr.02-16=41	RY2 Pr.02-14=41	RY1 Pr.02-13=41	Pr.04-16	0	0	0	1	Pr.04-18	0	0	1	0	Pr.04-20	0	0	1	1	Pr.04-22	0	1	0	0	Pr.04-24	0	1	0	1	Pr.04-26	0	1	1	0	Pr.04-28	0	1	1	1	Pr.04-30	1	0	0	0	Pr.04-32	1	0	0	1	Pr.04-34	1	0	1	0	Pr.04-36	1	0	1	1	Pr.04-38	1	1	0	0	Pr.04-40	1	1	0	1	Pr.04-42	1	1	1	0	Pr.04-44	1	1	1	1
	MO2 Pr.02-17=41	MO1 Pr.02-16=41	RY2 Pr.02-14=41	RY1 Pr.02-13=41																																																																														
Pr.04-16	0	0	0	1																																																																														
Pr.04-18	0	0	1	0																																																																														
Pr.04-20	0	0	1	1																																																																														
Pr.04-22	0	1	0	0																																																																														
Pr.04-24	0	1	0	1																																																																														
Pr.04-26	0	1	1	0																																																																														
Pr.04-28	0	1	1	1																																																																														
Pr.04-30	1	0	0	0																																																																														
Pr.04-32	1	0	0	1																																																																														
Pr.04-34	1	0	1	0																																																																														
Pr.04-36	1	0	1	1																																																																														
Pr.04-38	1	1	0	0																																																																														
Pr.04-40	1	1	0	1																																																																														
Pr.04-42	1	1	1	0																																																																														
Pr.04-44	1	1	1	1																																																																														
42	Crane Function	<p>This function should be used with Pr.02-32, Pr.02-33, Pr.02-34, Pr.02-57 and Pr.02-58.</p> <p>Active when setting Pr.07-16=Pr.02-34 and Fcmd > Pr.02-34 and output current > Pr.02-33 and Time > Pr.02-32.</p> <p>The example of the crane application is in the following for your reference.</p>																																																																																
43	Motor Zero-speed Output (Pr.02-47)	Active when motor actual speed is less than Pr.02-47.																																																																																
44	Low Current Output	This function needs to be used with Pr.06-71 ~ Pr.06-73																																																																																
45	UVW Phase Magnet Contractor ON/ OFF Switch	<ol style="list-style-type: none"> Under FOCPG control mode, set MI=49 (drive enable) and MO=45 (electromagnetic contractor On/Off switch), then the magnetic contractor will follow the drive status to be On or Off. For brake control, set MO=12 (mechanical brake release), Pr.02-31=T1 sec (mechanical brake delay time); then enable/disable DC braking by set 07-01 (DC brake current) to any 																																																																																

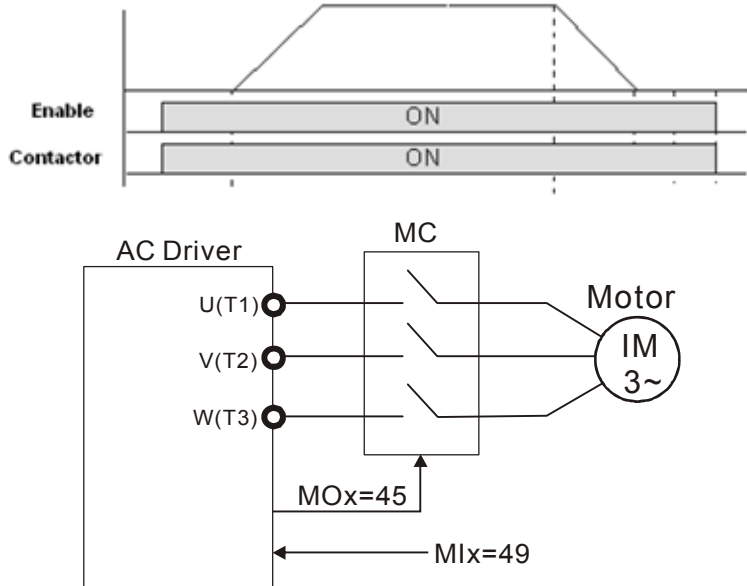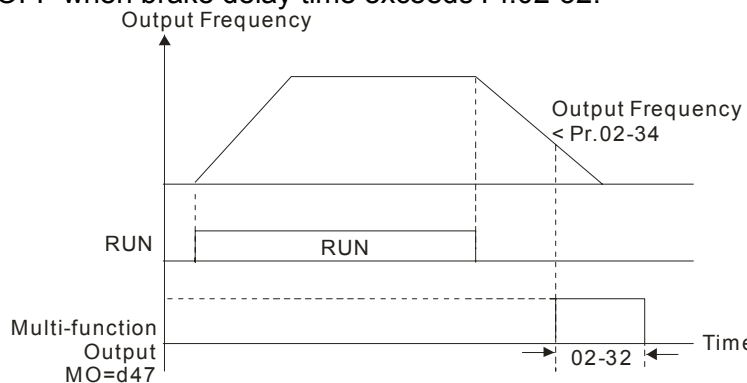Settings	Functions	Descriptions
		<p>level except 0 and set Pr.07-02 = T2 (DC brake time at start up) and Pr.07-03 = T2 (DC brake current at stop). It is recommend to set $T2 > T1$ and try to activate brake control during zero-speed status.</p> 
46	Master dEb signal output	When dEb arise at Master, MO will send a dEb signal to Slave. Then Slave will follow Master's command and decelerate to stop simultaneously.
47	Brake Release at Stop	<p>When drive stops, the corresponding multi-function terminal will be ON if the frequency is less than Pr.02-34. After it is ON, it will be OFF when brake delay time exceeds Pr.02-32.</p> 
48	Reserved	
49	Homing Action Complete	Output when homing action complete.
50	Output for CANopen control	For CANopen communication output
51	Output for communication card	For communication output of communication cards (CMC-MOD01, CMC-EIP01, CMC-PN01 and CMC-DN01)
52	Output for RS-485	For RS-485 output
53~62	Reserved	

Example: Crane Application

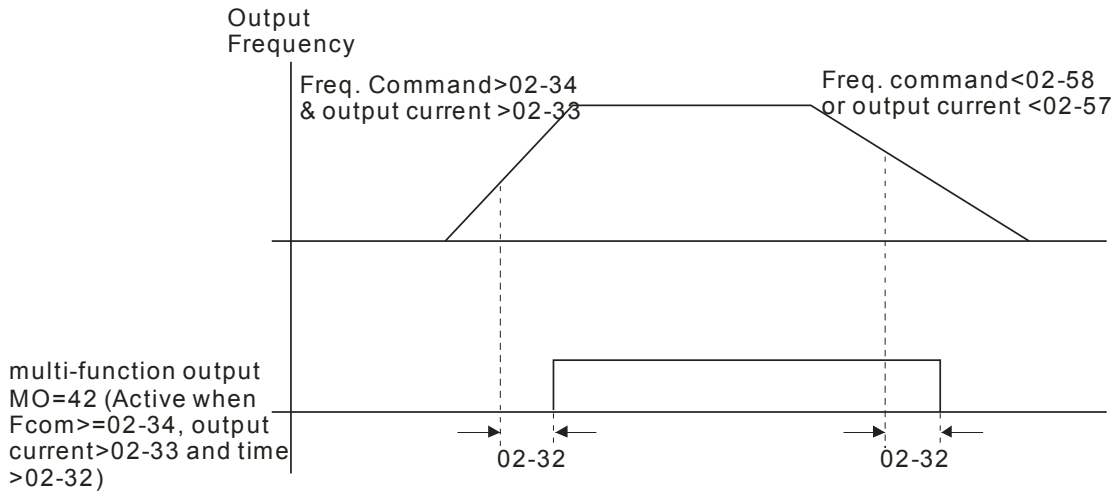

It is recommended to be used with Dwell function as shown in the following:

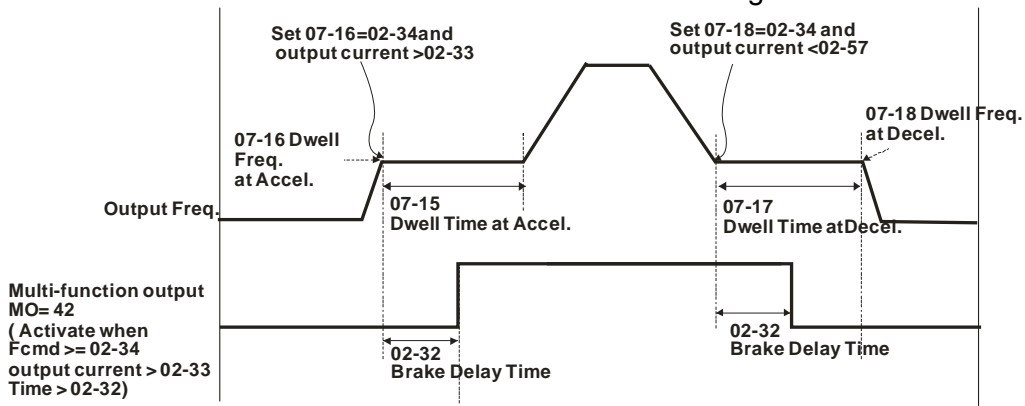

02-18 Multi-function Output Direction

Factory Setting: 0000

Settings 0000h~FFFFh (0:N.O. ; 1:N.C.)

The setting of this parameter is in hexadecimal.

This parameter is set via bit setting. If a bit is 1, the corresponding output acts in the opposite way.

Example:

If Pr02-13=1 and Pr02-18=0, Relay 1 is ON when the drive runs and is open when the drive is stopped.

If Pr02-13=1 and Pr02-18=1, Relay 1 is open when the drive runs and is closed when the drive is stopped.

Bit setting

bit15	bit14	bit13	bit12	bit11	bit10	bit9	bit8	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
MO20	MO19	MO18	MO17	MO16	MO15	MO14	MO13	MO12	MO11	MO10	MO2	MO1	Reserved	RY2	RY1

02-19 Terminal Counting Value Attained (return to 0)

Factory Setting: 0

Settings 0~65535

The counter trigger can be set by the multi-function terminal MI6 (set Pr.02-06 to 23). Upon completion of counting, the specified output terminal will be activated (Pr.02-13~02-14, Pr.02-36, 02-37 is set to 18). Pr.02-19 can't be set to 0.


When the display shows c5555, the drive has counted 5,555 times. If display shows c5555●, it means that real counter value is between 55,550 to 55,559.

02-20 Preliminary Counting Value Attained (not return to 0)

Factory Setting: 0

Settings 0~65535

When the counter value counts from 1 and reaches this value, the corresponding multi-function output terminal will be activated, provided one of Pr. 02-13, 02-14, 02-36, 02-37 set to 17 (Preliminary Count Value Setting). This parameter can be used for the end of the counting to make the drive runs from the low speed to stop.

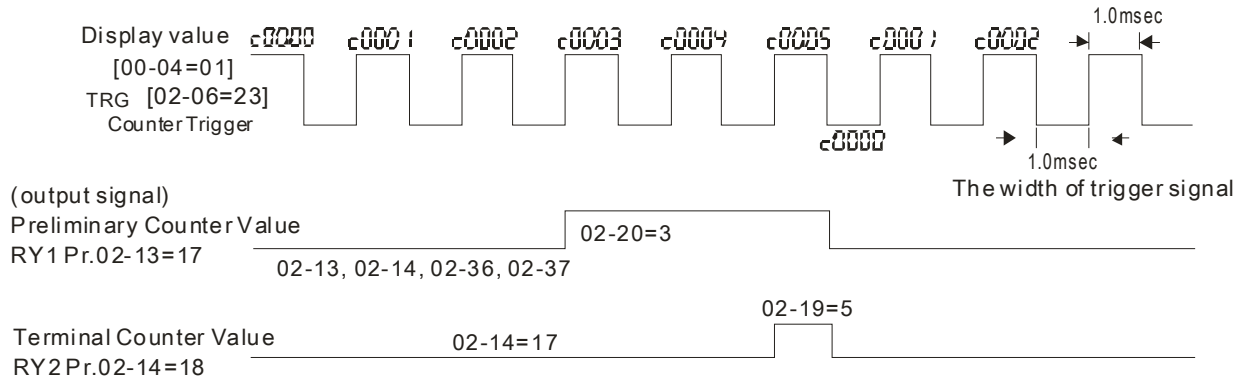

02-21 Digital Output Gain (DFM)

Factory Setting: 1

Settings 1~166

It is used to set the signal for the digital output terminals (DFM-DCM) and digital frequency output (pulse X work period=50%). Output pulse per second = output frequency X Pr.02-21.

02-22 Desired Frequency Attained 1

Factory Setting: 60.00/50.00

Settings 0.00~600.00Hz

02-23 The Width of the Desired Frequency Attained 1

Factory Setting: 2.00

Settings 0.00~600.00Hz

02-24 Desired Frequency Attained 2

Factory Setting: 60.00/50.00


Settings 0.00~600.00Hz

02-25 The Width of the Desired Frequency Attained 2

Factory Setting: 2.00

Settings 0.00~600.00Hz

Once output frequency reaches desired frequency and the corresponding multi-function output terminal is set to 3 or 4 (Pr.02-13, 02-14, 02-36, and 02-37), this multi-function output terminal will be ON.

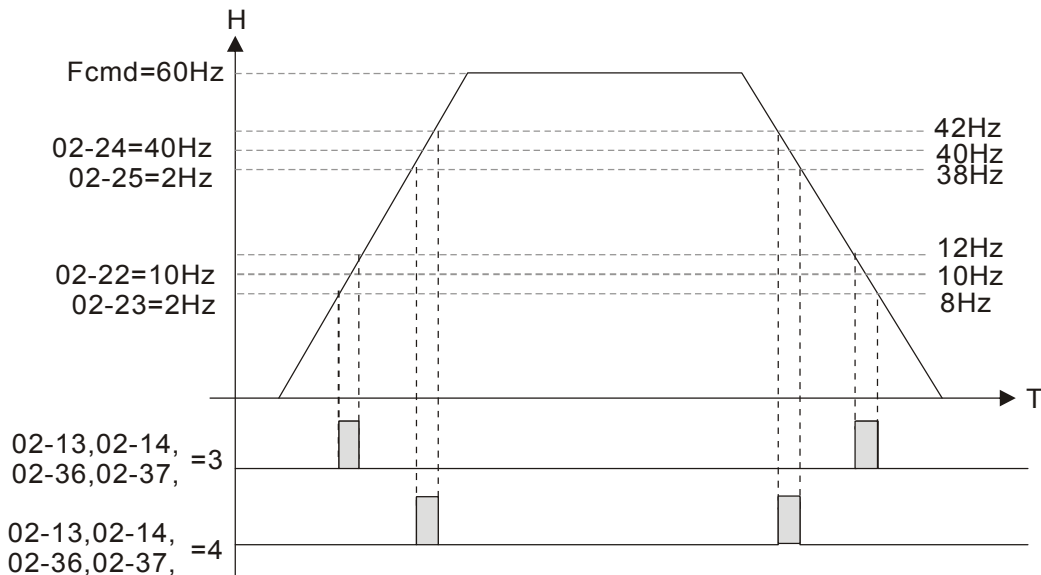


02-32

Brake Delay Time


Factory Setting: 0.000

Settings 0.000~65.000 sec

When the AC motor drive runs after Pr.02-32 delay time, the corresponding multi-function output terminal (12: mechanical brake release) will be ON. It is recommended to use this function with DC brake.

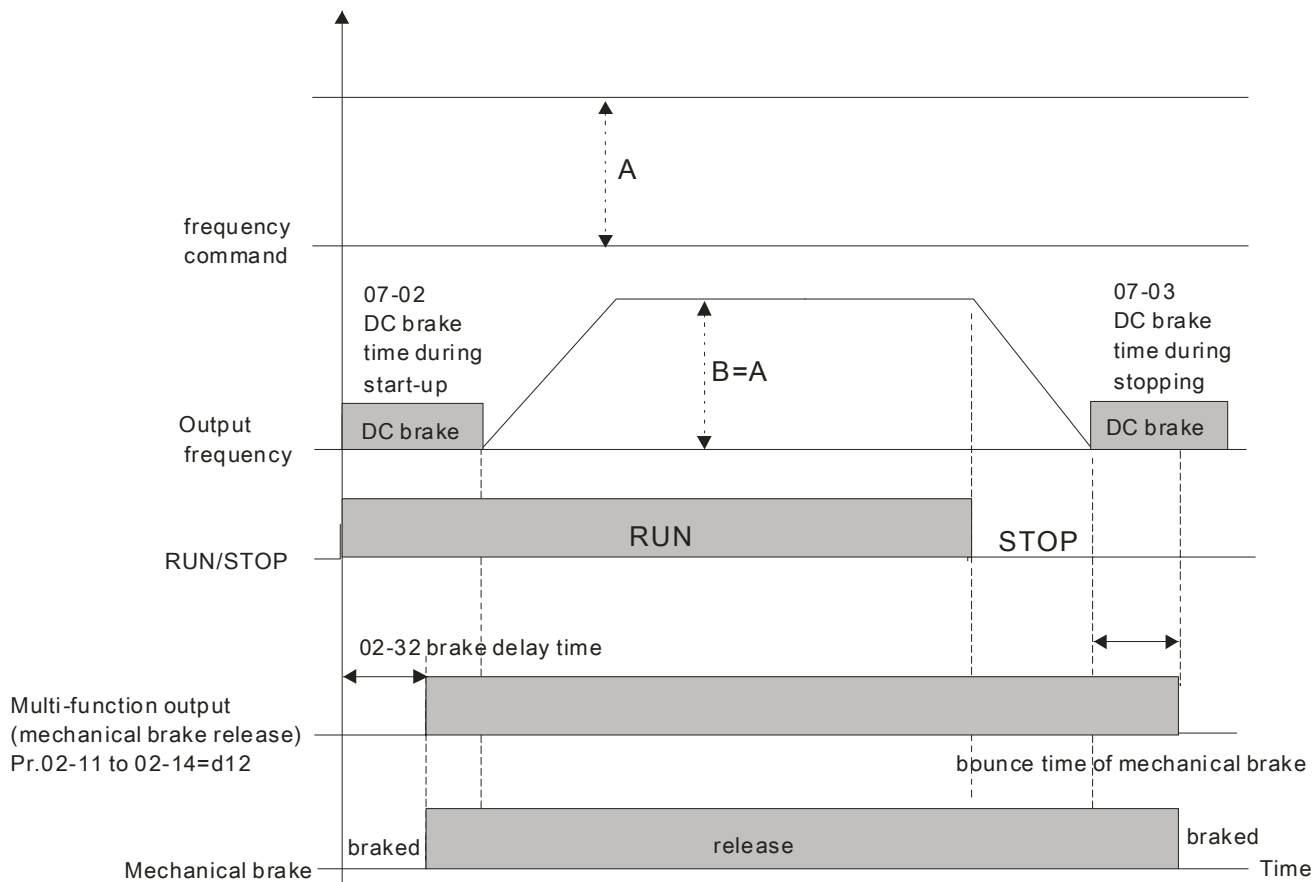

📖 If this parameter is used without DC brake, it will be invalid. Refer to the following operation timing.

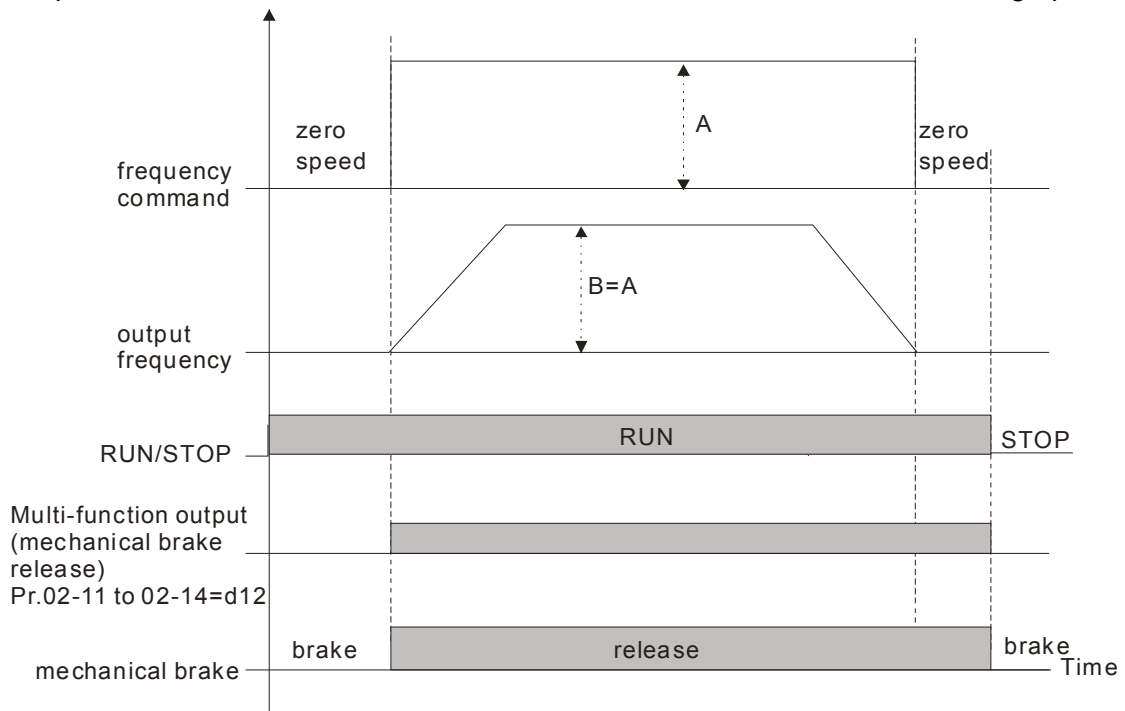

🔧 02-33 Output Current Level Setting for Multi-function Output Terminals

Factory Setting: 0

Settings 0~100%

📖 When output current is higher or equal to Pr.02-33, it will activate multi-function output terminal (Pr.02-13, 02-14, 02-16, and 02-17 is set to 27).

📖 When output current is lower or equal to Pr.02-33, it will activate multi-function output terminal (Pr.02-13, 02-14, 02-16, and 02-17 is set to 28).

🔧 02-34 Output Boundary for Multi-function Output Terminals

Factory Setting: 0.00

Settings 0.00~600.00Hz

📖 When output frequency is higher or equal to Pr.02-34, it will activate the multi-function terminal (Pr.02-13, 02-14, 02-16, 02-17 is set to 29).

📖 When output frequency is lower or equal to Pr.02-34, it will activate the multi-function terminal (Pr.02-13, 02-14, 02-16, 02-17 is set to 30).

🔧 02-35 External Operation Control Selection after Reset and Activate

Factory Setting: 0

Settings 0: Disable

1: Drive runs if the run command still exists after reset or re-boots.

📖 Setting 1:

Status 1: After the drive is powered on and the external terminal for RUN keeps ON, the drive will run.


Status 2: After clearing fault once a fault is detected and the external terminal for RUN keeps ON, the drive can run after pressing RESET key.

➤ **02-47** Zero-speed Level of Motor

Factory Setting: 0

Settings 0~65535 rpm

- 📖 This parameter should be used with the multi-function output terminals (set to 43). It needs to be used with PG card and motor with encoder feedback.
- 📖 This parameter is used to set the level of motor zero-speed. When the actual speed is lower than this setting, the corresponding multi-function output terminal 43 will be ON as shown as follows.

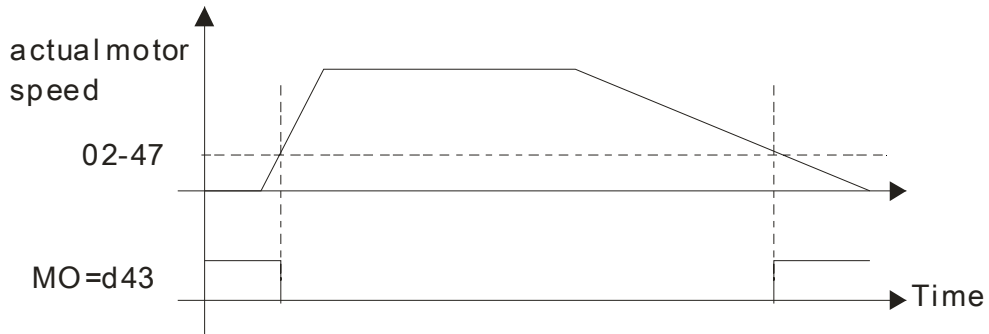

➤ **02-48** Max. Frequency of Resolution Switch

Factory Setting: 60.00


Settings 0.01~600.00Hz

➤ **02-49** Switch the delay time of Max. output frequency

Factory Setting: 0.000


Settings 0.000~65.000 sec

- 📖 It is used to improve the unstable speed or unstable position due to the insufficient of analog resolution. It needs to be used with external terminal (set to 43). After setting this parameter, it needs to adjust the analog output resolution of controller simultaneously by this setting.

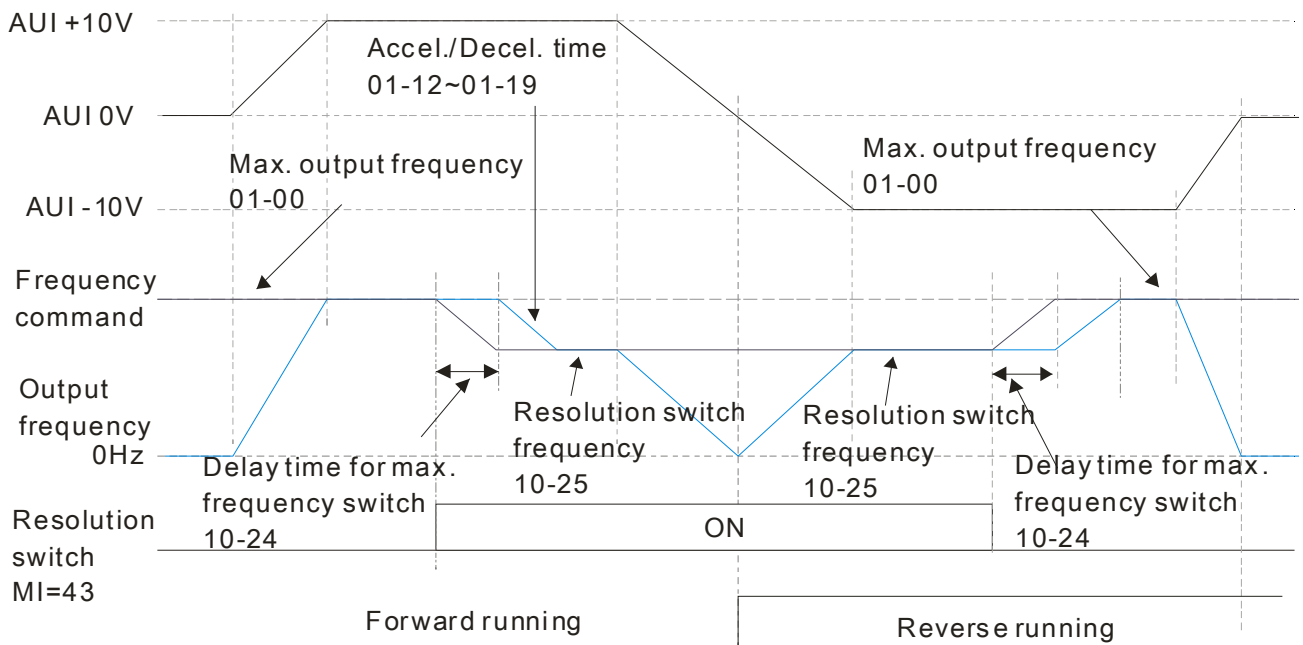


02-50 Display the Status of Multi-function Input Terminal

Factory Setting: Read only

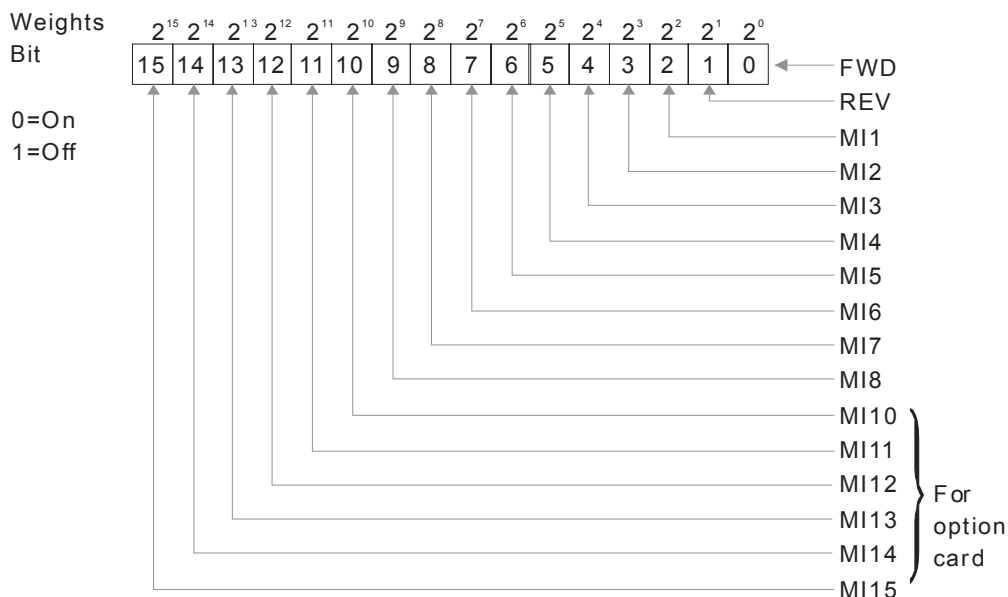

For Example:

If Pr.02-50 displays 0034h (Hex), i.e. the value is 52, and 110100 (binary). It means MI1, MI3 and MI4 are active.

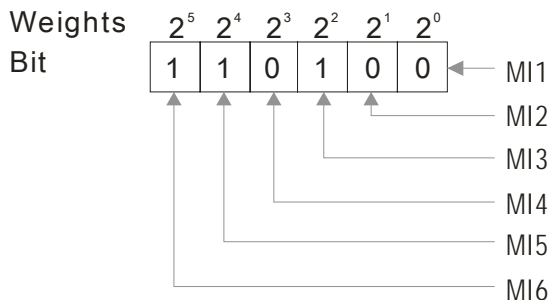

0=ON
1=OFF

Settings
 $= \text{bit}5 \times 2^5 + \text{bit}4 \times 2^4 + \text{bit}2 \times 2^2$
 $= 1 \times 2^5 + 1 \times 2^4 + 1 \times 2^2$
 $= 32 + 16 + 4 = 52$


NOTE					
$2^5 = 32$	$2^4 = 16$	$2^3 = 8$	$2^2 = 4$		
$2^1 = 2$	$2^0 = 1$				

02-51 Status of Multi-function Output Terminal

Factory Setting: Read only

For Example:

If Pr.02-51 displays 000Bh (Hex), i.e. the value is 11, and 1011 (binary). It means RY1, RY2 and MO1 are ON.

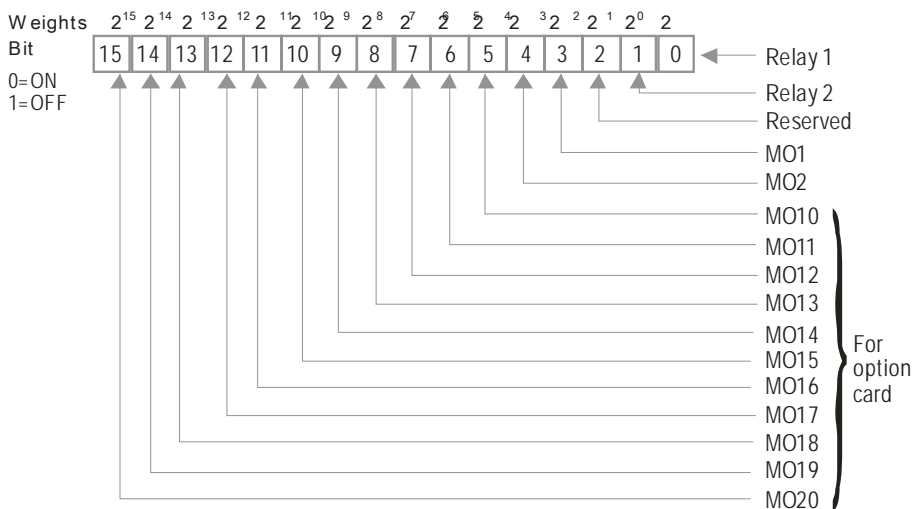


NOTE					
$2^7 = 128$	$2^6 = 64$	$2^5 = 32$	$2^4 = 16$	$2^3 = 8$	
$2^2 = 4$	$2^1 = 2$	$2^0 = 1$			

02-52 Display External Output terminal occupied by PLC


Factory Setting: Read only

P.02-52 shows the external multi-function input terminal that used by PLC.

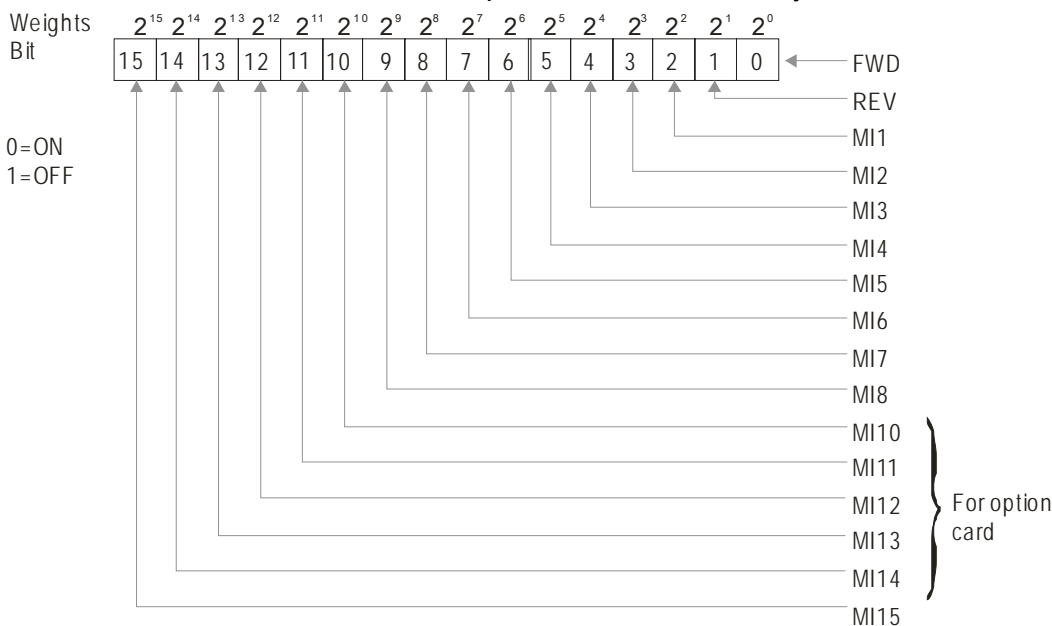

For Example:

When Pr.02-52 displays 0034h(hex) and switching to 110100 (binary), it means MI1, MI3 and MI4 are used by PLC.

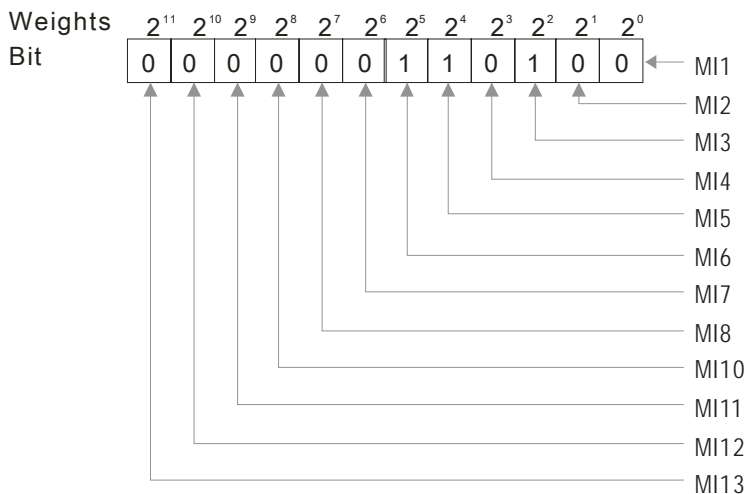

0: not used by PLC
1: used by PLC

Displays

$$= \text{bit}5 \times 2^5 + \text{bit}4 \times 2^4 + \text{bit}2 \times 2^2$$

$$= 1 \times 2^5 + 1 \times 2^4 + 1 \times 2^2$$


$$= 32 + 16 + 4 = 52$$

NOTE		
$2^{14} = 16384$	$2^{13} = 8192$	$2^{12} = 4096$
$2^{11} = 2048$	$2^{10} = 1024$	$2^9 = 512$
$2^8 = 256$	$2^7 = 128$	$2^6 = 64$
$2^5 = 32$	$2^4 = 16$	$2^3 = 8$
$2^1 = 2$	$2^0 = 1$	$2^2 = 4$

02-53 Display Analog Input Terminal occupied by PLC

Factory Setting: Read only


P.02-53 shows the external multi-function output terminal that used by PLC.

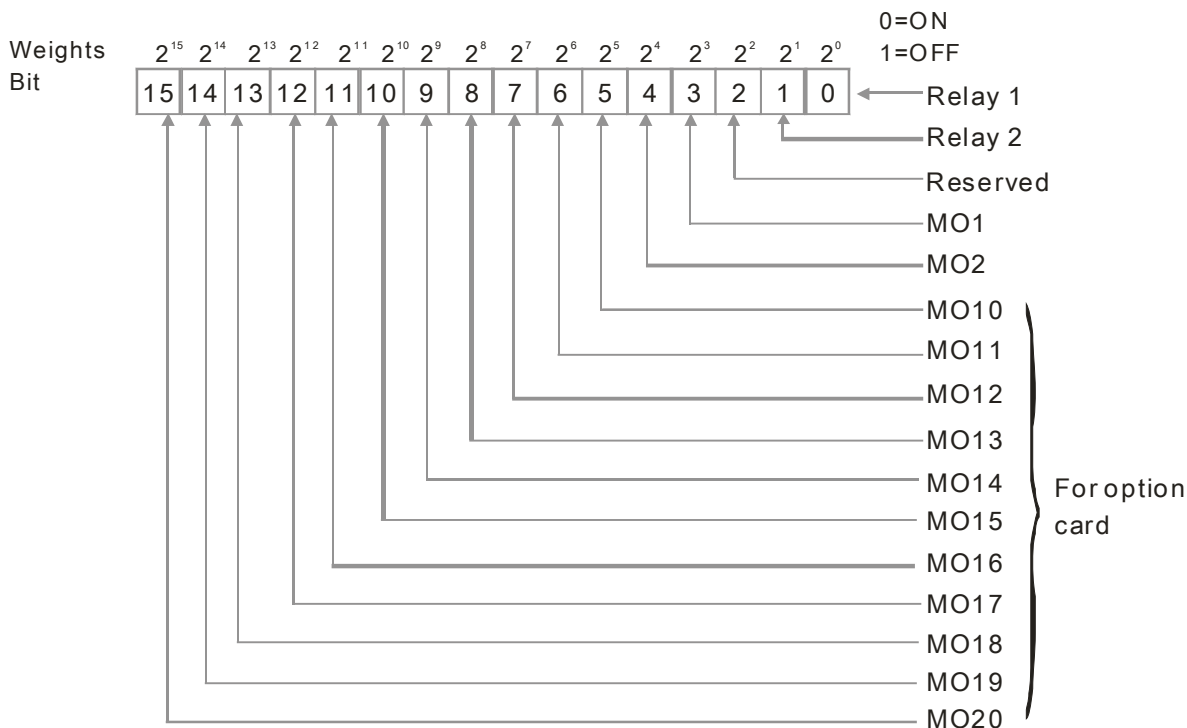

NOTE
 $2^7 = 128$ $2^6 = 64$
 $2^5 = 32$ $2^4 = 16$ $2^3 = 8$
 $2^2 = 4$ $2^1 = 2$ $2^0 = 1$

For Example:

If the value of Pr.02-53 displays 0003h (Hex), it means RY1 and RY2 are used by PLC.

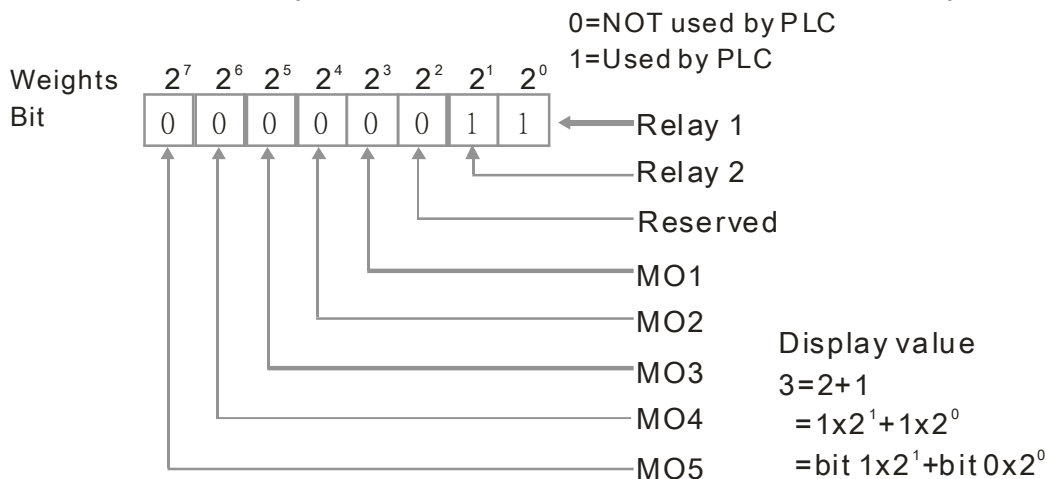

02-54 Display the Frequency Command Executed by External Terminal

Factory Setting: Read only

Settings Read only

When the source of frequency command comes from the external terminal, if Lv or Fault occurs at this time, the frequency command of the external terminal will be saved in this parameter.

02-55 Reserved

02-56 Reserved

↗ **02-57** Multi-function output terminal: Function 42: Brake Current Checking Point

Factory setting: 0

Settings 0~150%

↗ **02-58** Multi-function output terminal: Function 42: Brake Frequency Checking Point

Factory setting : 0.00

Settings 0.00~655.35Hz

- 📖 Pr02-32, Pr02-33, Pr02-34, Pr02-57 and Pr02-58 can be applied on setting up cranes. (Choose crane action #42 to set up multi-functional output Pr02-13, Pr02-14, Pr02-16, and Pr02-17)
- 📖 When output current of a drive is higher than the the setting of Pr02-33 Pivot Point of the Current ($\geq 02-33$) and when output frequency is higher than the the setting of Pr02-34 Pivot Point of the Frequency ($\geq 02-34$), choose #42 to set up Multi-functional output Pr02-13, Pr02-14, Pr02-16 and Pr002-17 after the delay time set at Pr402-32.
- 📖 When the Pivot Point of the Current 's setting $02-57 \neq 0$ and when the output current of the drive is lower than the setting of Pr02-57 ($< 02-57$), or when the output frequency is lower than the setting of Pr02-58 ($< 02-58$), the disable the setting #42 of the multi-functional output Pr02-13, Pr02-14, Pr02-16, Pr02-17
- 📖 When $Pr02-57 = 0$, the output current is lower than setting of Pr02-33 Pivot Point of the Current ($< 02-33$) or when output frequency is lower than the setting of Pr02-58 ($< 02-58$), disable the setting of #42 of the multi-functional output Pr02-13, Pr02-14, Pr02-16, Pr02-17.

03 Analog Input/Output Parameter


✎ This parameter can be set during operation.

✎ 03-00 Analog Input Selection (AVI)	Factory Setting: 1
✎ 03-01 Analog Input Selection (ACI)	Factory Setting: 0
✎ 03-02 Analog Input Selection (AUI)	Factory Setting: 0

Settings

- 0: No function
- 1: Frequency command (torque limit under torque control mode)
- 2: Torque command (torque limit under speed mode)
- 3: Torque compensation command
- 4: PID target value
- 5: PID feedback signal
- 6: PTC thermistor input value
- 7: Positive torque limit
- 8: Negative torque limit
- 9: Regenerative torque limit
- 10: Positive/negative torque limit
- 11: PT100 thermistor input value
- 12~17: Reserved

- 📖 When it is frequency command or TQC speed limit, the corresponding value for 0~±10V/4~20mA is 0 – max. output frequency(Pr.01-00)
- 📖 When it is torque command or torque limit, the corresponding value for 0~±10V/4~20mA is 0 – max. output torque (Pr.11-27).
- 📖 When it is torque compensation, the corresponding value for 0~±10V/4~20mA is 0 – rated torque.

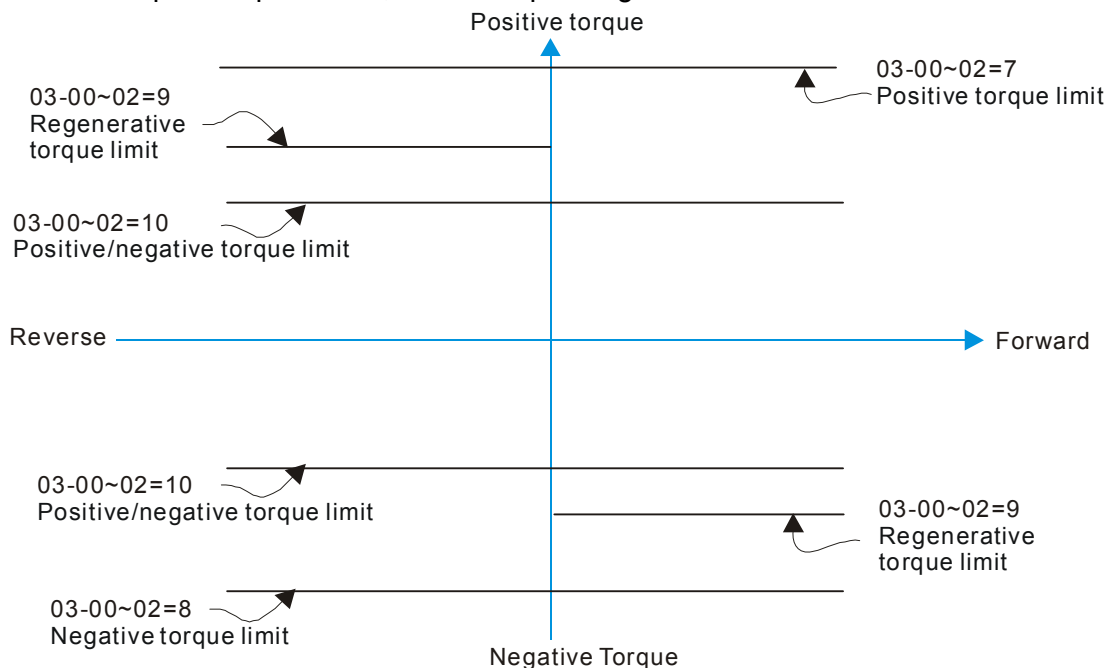

✎ 03-03 Analog Input Bias (AVI)	Factory Setting: 0
Settings -100.0~100.0%	

It is used to set the corresponding AVI voltage of the external analog input 0.

03-04 Analog Input Bias (ACI)

Factory Setting: 0

Settings -100.0~100.0%

It is used to set the corresponding ACI voltage of the external analog input 0.

03-05 Analog Voltage Input Bias (AUI)

Factory Setting: 0

Settings -100.0~100.0%

It is used to set the corresponding AUI voltage of the external analog input 0.

The relation between external input voltage/current and setting frequency: 0~10V (4-20mA) corresponds to 0-60Hz.

03-06 Reserved

03-07 Positive/negative Bias Mode (AVI)

03-08 Positive/negative Bias Mode (ACI)

03-09 Positive/negative Bias Mode (AUI)

Factory Setting: 0

Settings 0: Zero bias

1: Lower than or equal to bias


2: Greater than or equal to bias

3: The absolute value of the bias voltage while serving as the center

4: Serve bias as the center

In a noisy environment, it is advantageous to use negative bias to provide a noise margin. It is recommended NOT to use less than 1V to set the operation frequency.

In the diagram below: Black color line: Frequency. Gray color line: Voltage

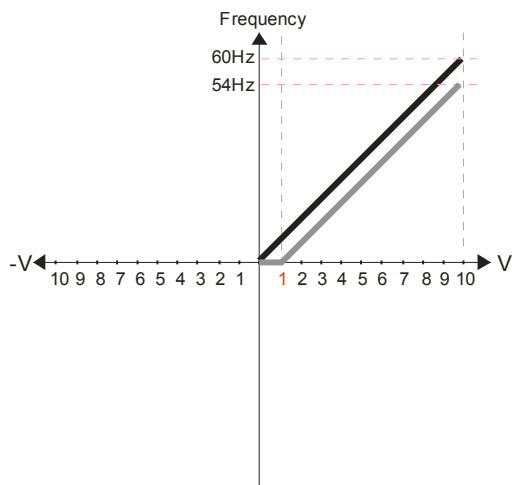

Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

0: No bias

1: Lower than or equal to bias

2: Greater than or equal to bias

3: The absolute value of the bias voltage

while serving as the center

4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

0: Negative frequency is not valid.

Forward and reverse run is controlled by digital keypad or external terminal.

1: Negative frequency is valid. Positive


frequency = forward run; negative

frequency = reverse run. Direction

can not be switched by digital keypad or

external terminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

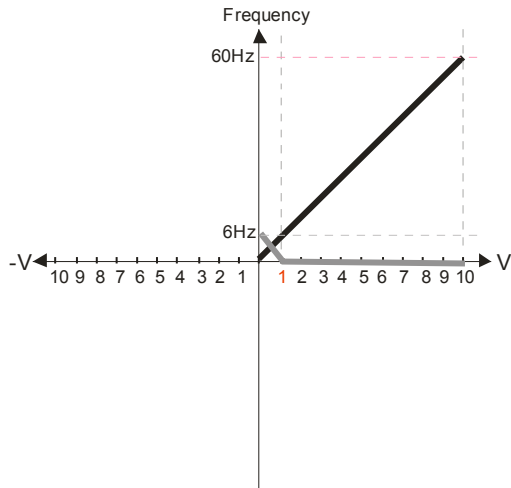

Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.

- 1: Neagative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI)=100%

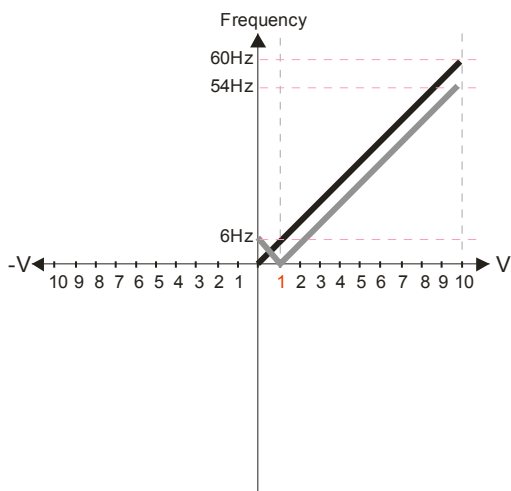

Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.

- 1: Neagative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

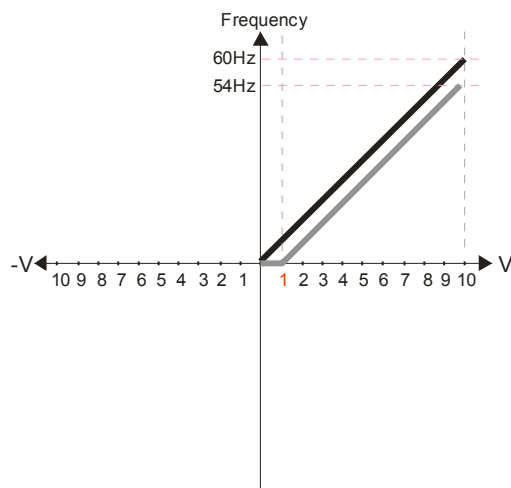

Pr.03-03=10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.

- 1: Neagative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

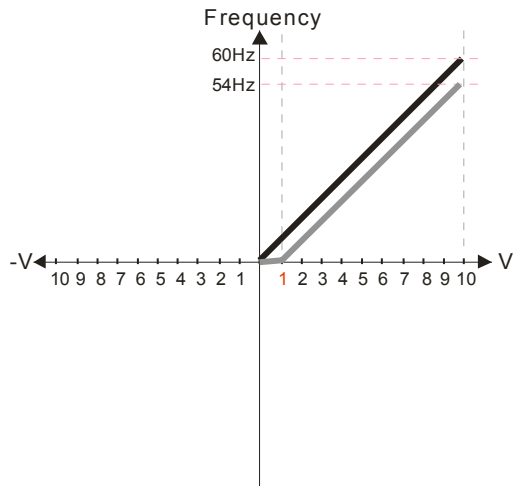

Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

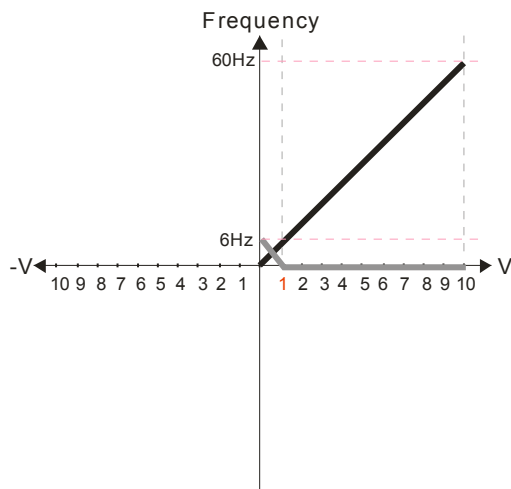

Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

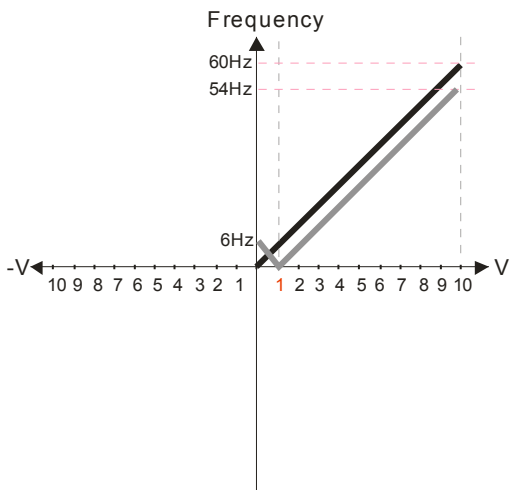

Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

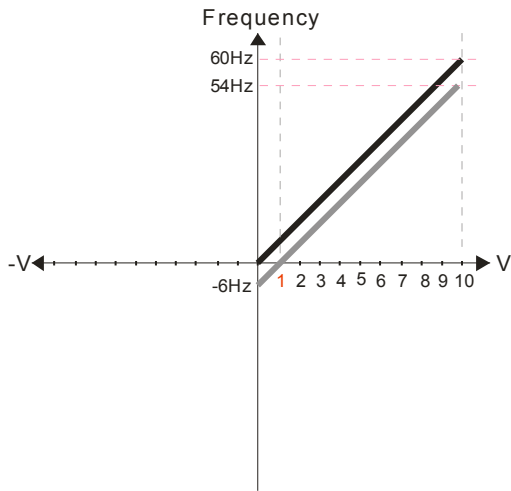

Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

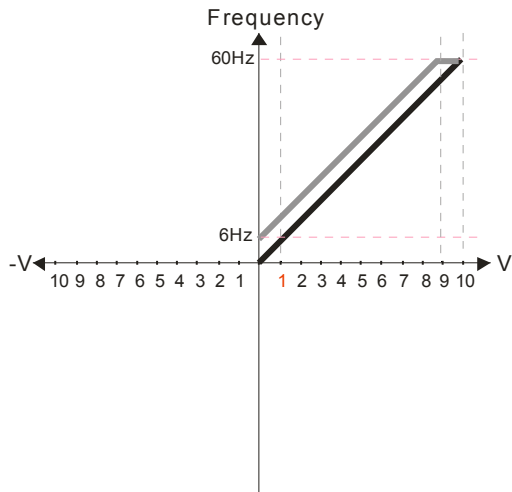

Pr.03-03=-10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

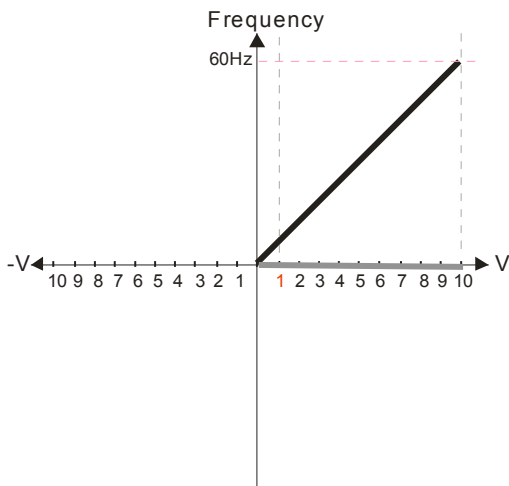

Pr.03-03=-10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

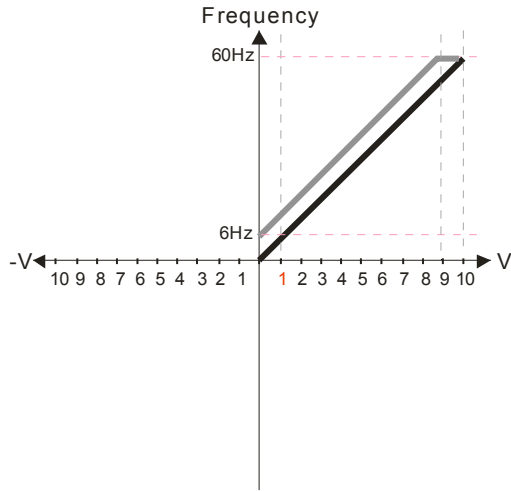

Pr.03-03=-10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

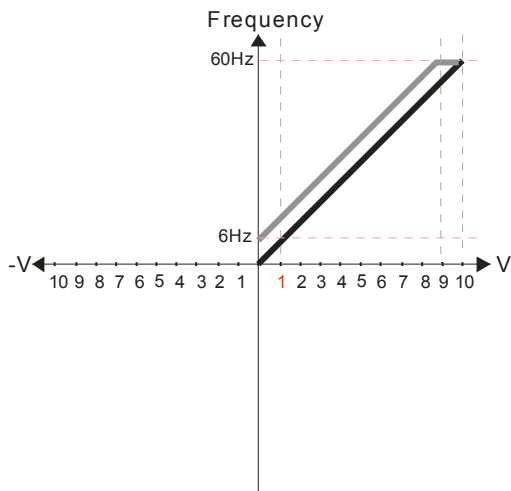

Pr.03-03=-10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

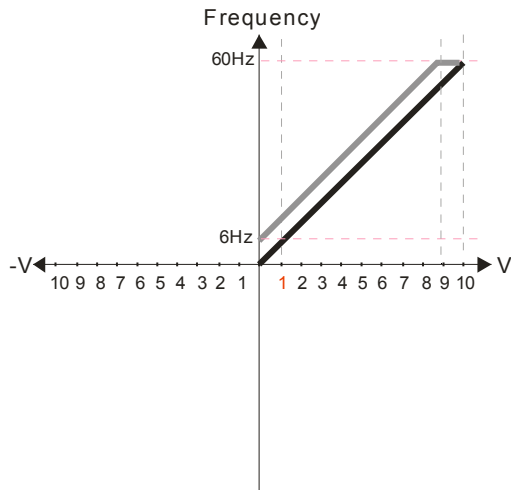

Pr.03-03=-10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

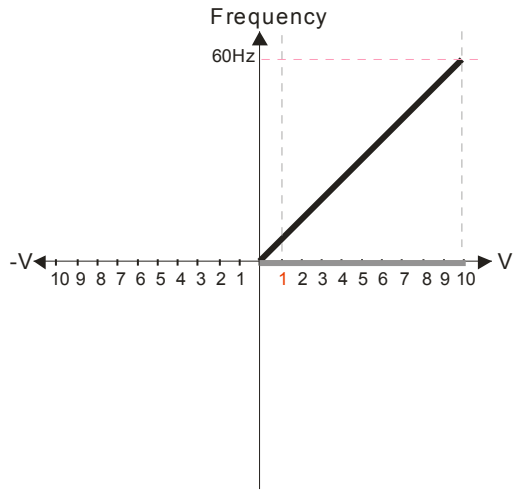

Pr.03-03=-10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI)= 100%

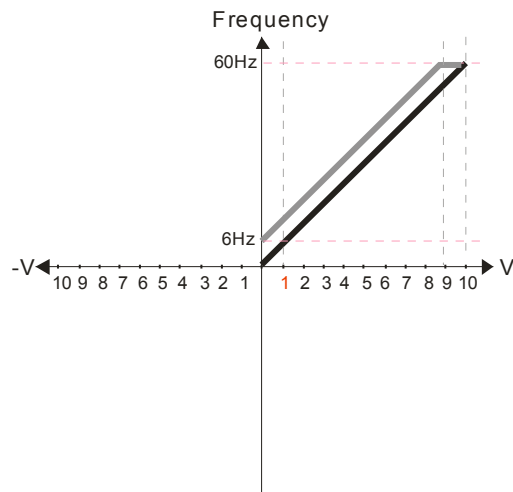

Pr.03-03=-10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

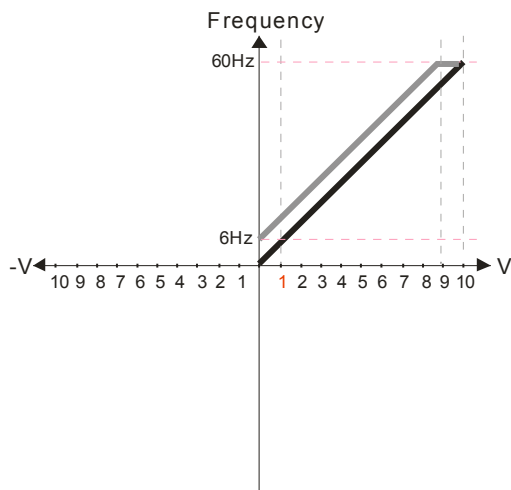

Pr.03-03=-10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI) = 100%

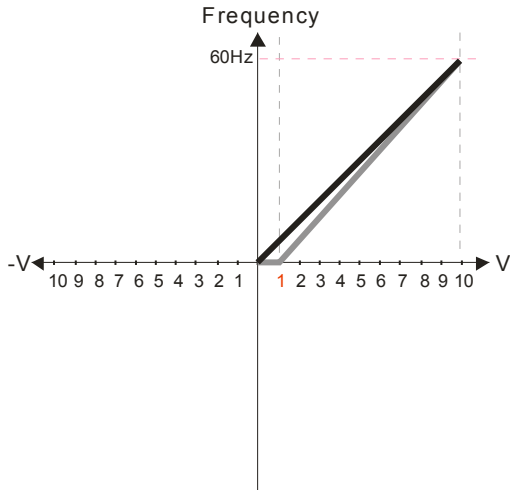

Pr.03-03=-10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI)= 111.1%
10/9=111.1%

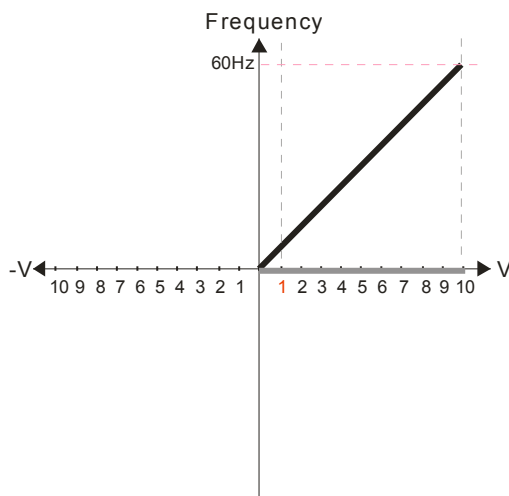

Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI)=111.1%
10/9 =111.1%

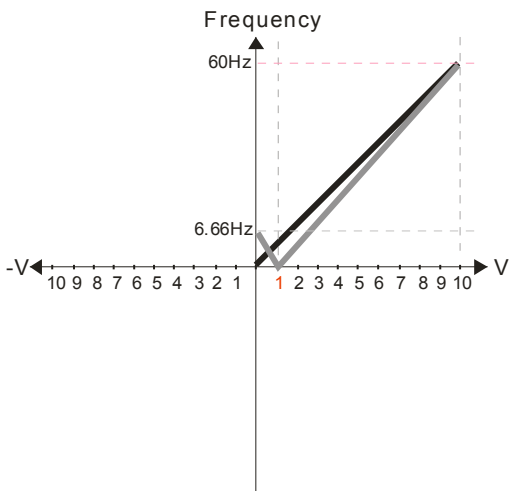

Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI) = 111.1%
10/9 =111.1%

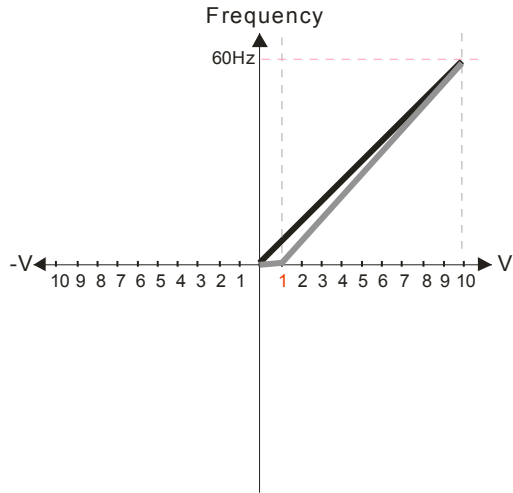

Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.03-11 Analog Input Gain (AVI) = 111.1%
 $10/9 = 111.1\%$

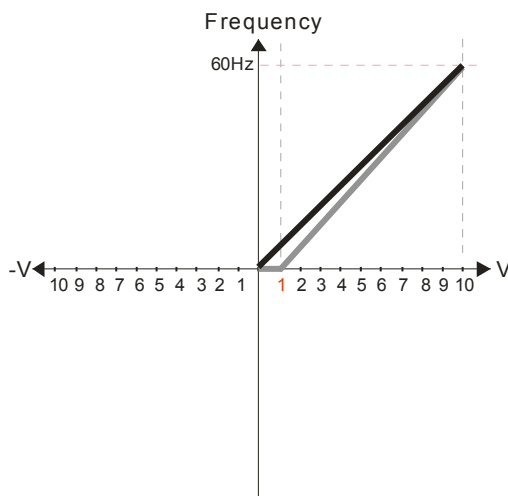

Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr03-11 Analog Input Gain (AVI) = 111.1%
 $10/9 = 111.1\%$

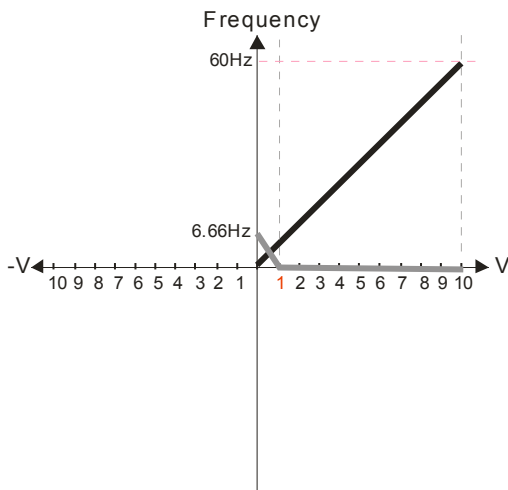

Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr03-11 Analog Input Gain (AVI) = 111.1%
 $10/9 = 111.1\%$

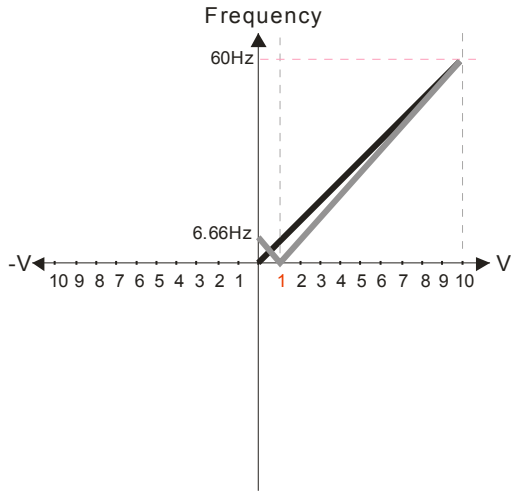

Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr03-11 Analog Input Gain (AVI) = 111.1%
 $10/9 = 111.1\%$

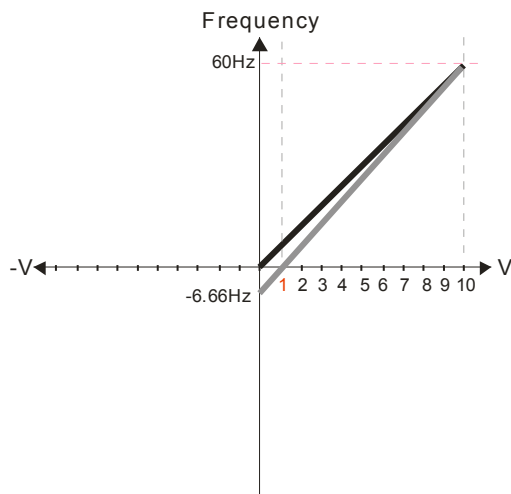

Pr.03-03=10%


Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr03-11 Analog Input Gain (AVI) = 100%
 $10/9 = 111.1\%$

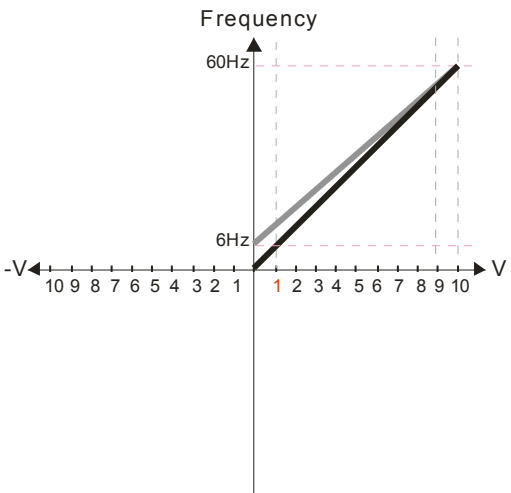

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center


Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Calculate the bias: $\frac{60-6\text{Hz}}{10\text{V}} = \frac{6-0\text{Hz}}{\text{XV}} \quad \text{XV} = \frac{10}{9} = 1.11\text{V}$

$\therefore \text{Pr.03-03} = \frac{1.11}{10} \times 10\%$

Calculate the gain: $\text{Pr.03-11} = \frac{10\text{V}}{11.1\text{V}} \times 100\% = 90.0\%$

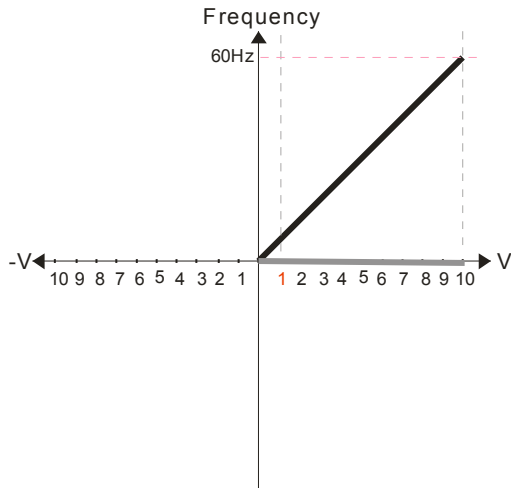

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)


0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.

- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

$$\text{Calculate the bias: } \frac{60-6\text{Hz}}{10\text{V}} = \frac{6-0\text{Hz}}{\text{XV}} \quad \text{XV} = \frac{10}{9} = 1.11\text{V}$$

$$\therefore \text{Pr.03-03} = \frac{1.11}{10} \times 100\%$$

$$\text{Calculate the gain: Pr.03-11} = \frac{10\text{V}}{11.1\text{V}} \times 100\% = 90.0\%$$

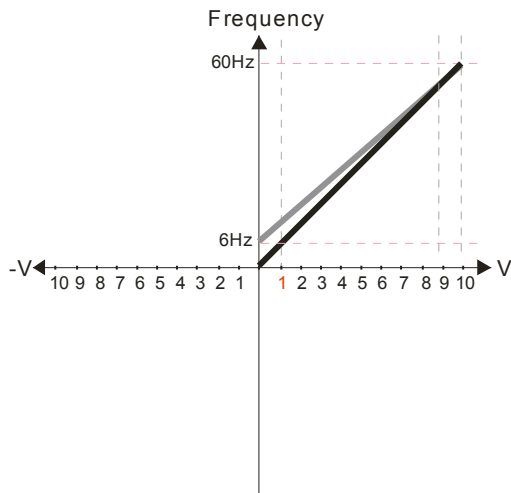

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)


0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.

- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

$$\text{Calculate the bias: } \frac{60-6\text{Hz}}{10\text{V}} = \frac{6-0\text{Hz}}{\text{XV}} \quad \text{XV} = \frac{10}{9} = 1.11\text{V}$$

$$\therefore \text{Pr.03-03} = \frac{1.11}{10} \times 100\%$$

$$\text{Calculate the gain: Pr.03-11} = \frac{10\text{V}}{11.1\text{V}} \times 100\% = 90.0\%$$

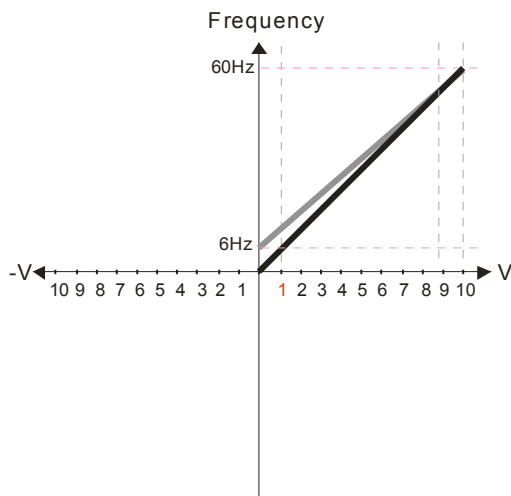

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)


0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.

- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

$$\text{Calculate the bias: } \frac{60-6\text{Hz}}{10\text{V}} = \frac{6-0\text{Hz}}{\text{XV}} \quad \text{XV} = \frac{10}{9} = 1.11\text{V}$$

$$\therefore \text{Pr.03-03} = \frac{1.11}{10} \times 100\%$$

$$\text{Calculate the gain: Pr.03-11} = \frac{10\text{V}}{11.1\text{V}} \times 100\% = 90.0\%$$

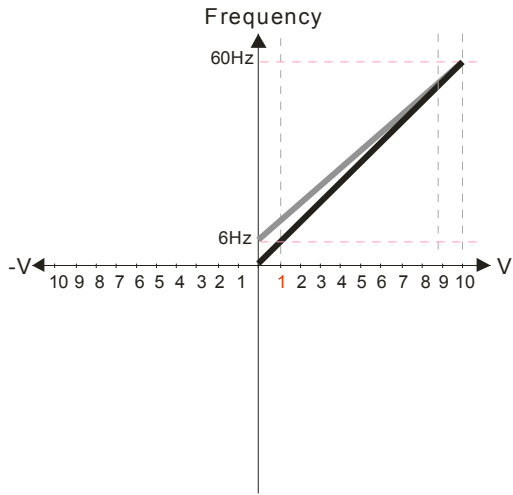

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center


Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

$$\text{Calculate the bias: } \frac{60-6\text{Hz}}{10\text{V}} = \frac{6-0\text{Hz}}{X\text{V}} \Rightarrow X\text{V} = \frac{10}{9} = 1.11\text{V}$$

$$\therefore \text{Pr.03-03} = \frac{1.11}{10} \times 100\%$$

$$\text{Calculate the gain: Pr.03-11} = \frac{10\text{V}}{11.1\text{V}} \times 100\% = 90.0\%$$

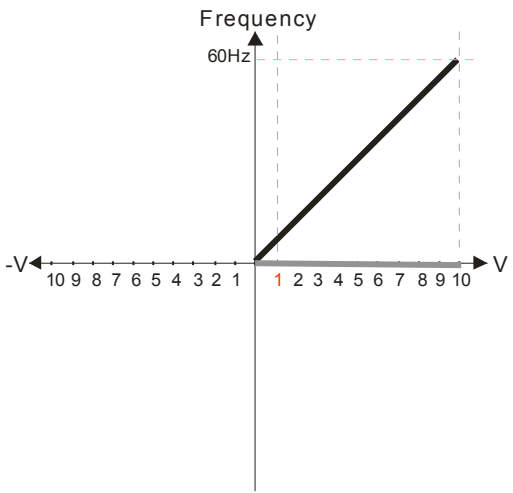

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center


Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

$$\text{Calculate the bias: } \frac{60-6\text{Hz}}{10\text{V}} = \frac{6-0\text{Hz}}{X\text{V}} \Rightarrow X\text{V} = \frac{10}{9} = 1.11\text{V}$$

$$\therefore \text{Pr.03-03} = \frac{1.11}{10} \times 100\%$$

$$\text{Calculate the gain: Pr.03-11} = \frac{10\text{V}}{11.1\text{V}} \times 100\% = 90.0\%$$

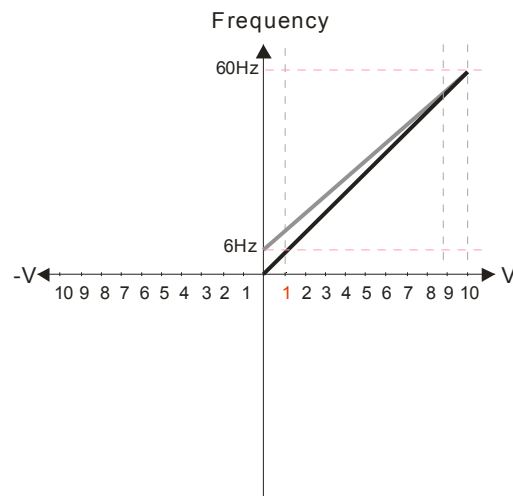

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center


Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

$$\text{Calculate the bias: } \frac{60-6\text{Hz}}{10\text{V}} = \frac{6-0\text{Hz}}{X\text{V}} \Rightarrow X\text{V} = \frac{10}{9} = 1.11\text{V}$$

$$\therefore \text{Pr.03-03} = \frac{1.11}{10} \times 100\%$$

$$\text{Calculate the gain: Pr.03-11} = \frac{10\text{V}}{11.1\text{V}} \times 100\% = 90.0\%$$

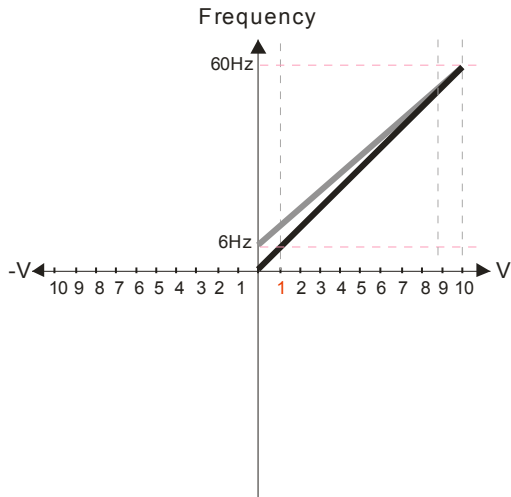

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center


Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

$$\text{Calculate the bias: } \frac{60-6\text{Hz}}{10\text{V}} = \frac{6-0\text{Hz}}{\text{XV}} \Rightarrow \text{XV} = \frac{10}{9} = 1.11\text{V}$$

$$\therefore \text{Pr.03-03} = \frac{1.11}{10} \times 100\%$$

$$\text{Calculate the gain: Pr.03-11} = \frac{10\text{V}}{11.1\text{V}} \times 100\% = 90.0\%$$

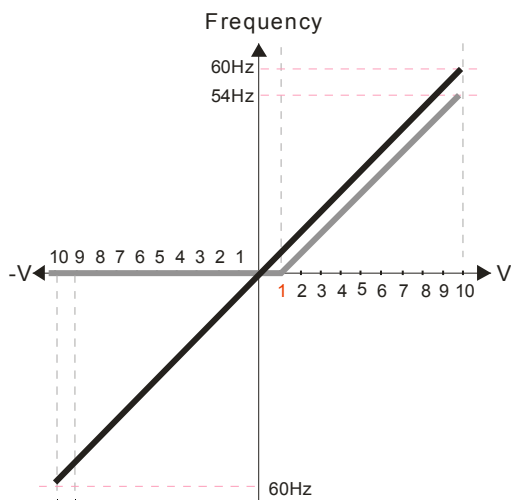

Pr.00-21=0 (Digital keypad control and run in FWD direction)

Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.00-13 Analog Positive Input Gain (AUI)= 100%

Pr.03-14 Analog Negative Input Gain (AUI)= 100%

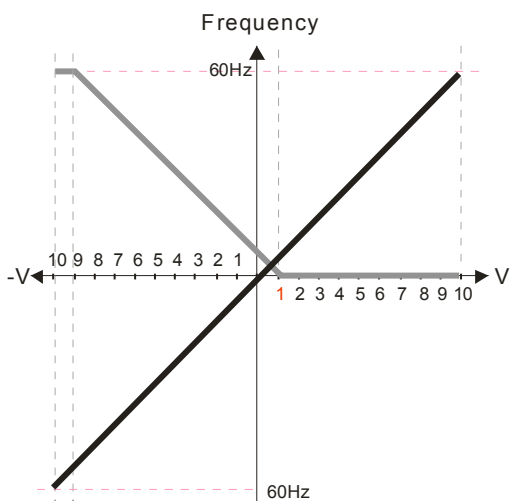

Pr.00-21=0 (Digital keypad control and run in FWD direction)

Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)


- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

- 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
- 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.00-13 Analog Positive Input Gain (AUI)= 100%


Pr.03-14 Analog Negative Input Gain (AUI)= 100%

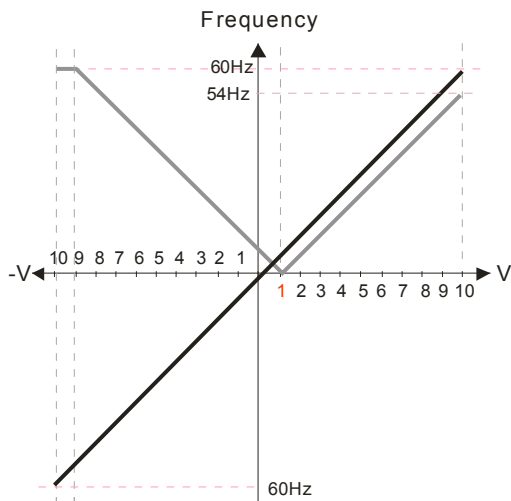

- Pr.00-21=0 (Digital keypad control and run in FWD direction)
- Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
- Pr.03-07~03-09 (Positive/Negative Bias Mode)
 - 0: No bias
 - 1: Lower than or equal to bias
 - 2: Greater than or equal to bias
 - 3: The absolute value of the bias voltage while serving as the center
 - 4: Serve bias as the center

- Pr.03-10 (Analog Frequency Command for Reverse Run)
 - 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 - 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.


Pr.00-13 Analog Positive Input Gain (AUI)= 100%
 Pr.03-14 Analog Negative Input Gain (AUI)= 100%

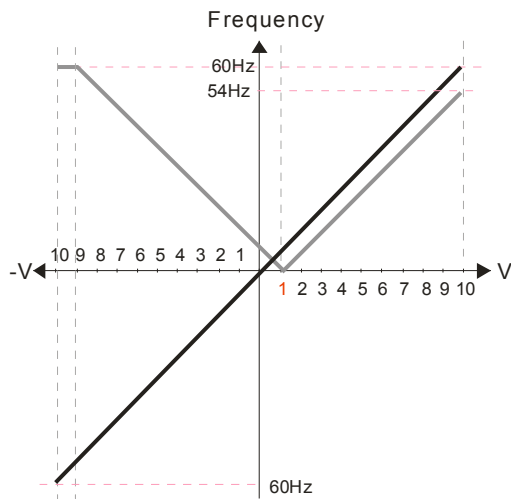

- Pr.00-21=0 (Digital keypad control and run in FWD direction)
- Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
- Pr.03-07~03-09 (Positive/Negative Bias Mode)
 - 0: No bias
 - 1: Lower than or equal to bias
 - 2: Greater than or equal to bias
 - 3: The absolute value of the bias voltage while serving as the center
 - 4: Serve bias as the center

- Pr.03-10 (Analog Frequency Command for Reverse Run)
 - 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 - 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.


Pr.00-13 Analog Positive Input Gain (AUI)= 100%
 Pr.03-14 Analog Negative Input Gain (AUI)= 100%

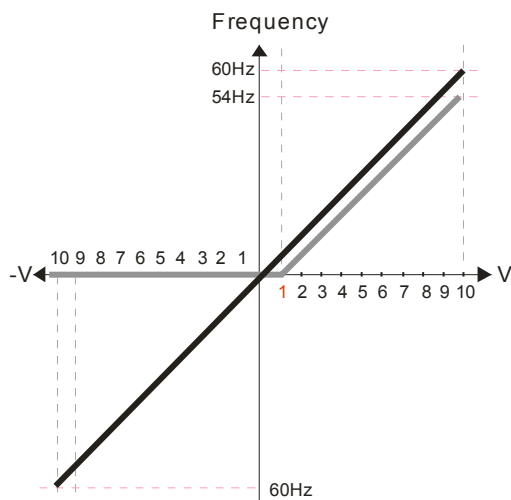

- Pr.00-21=0 (Digital keypad control and run in FWD direction)
- Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
- Pr.03-07~03-09 (Positive/Negative Bias Mode)
 - 0: No bias
 - 1: Lower than or equal to bias
 - 2: Greater than or equal to bias
 - 3: The absolute value of the bias voltage while serving as the center
 - 4: Serve bias as the center

- Pr.03-10 (Analog Frequency Command for Reverse Run)
 - 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 - 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.


Pr.00-13 Analog Positive Input Gain (AUI)= 100%
 Pr.03-14 Analog Negative Input Gain (AUI)= 100%

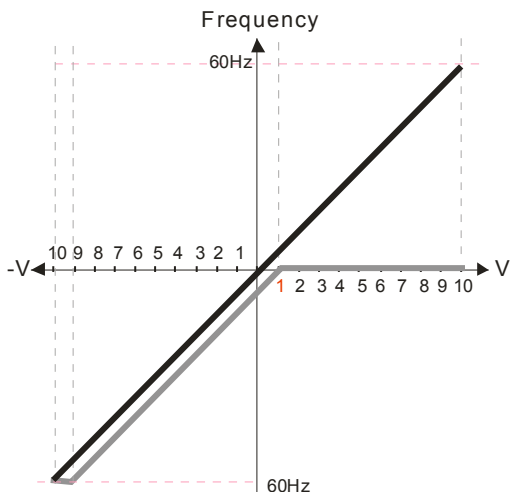

Pr.00-21=0 (Digital keypad control and run in FWD direction)
 Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
 Pr.03-07~03-09 (Positive/Negative Bias Mode)
 0: No bias
 1: Lower than or equal to bias
 2: Greater than or equal to bias
 3: The absolute value of the bias voltage while serving as the center
 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)
 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.


Pr.00-13 Analog Positive Input Gain (AUI)= 100%
 Pr.03-14 Analog Negative Input Gain (AUI)= 100%

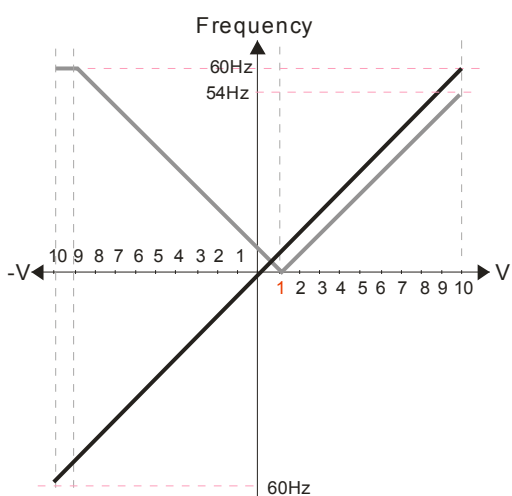

Pr.00-21=0 (Digital keypad control and run in FWD direction)
 Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
 Pr.03-07~03-09 (Positive/Negative Bias Mode)
 0: No bias
 1: Lower than or equal to bias
 2: Greater than or equal to bias
 3: The absolute value of the bias voltage while serving as the center
 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)
 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.


Pr.00-13 Analog Positive Input Gain (AUI)= 100%
 Pr.03-14 Analog Negative Input Gain (AUI)= 100%

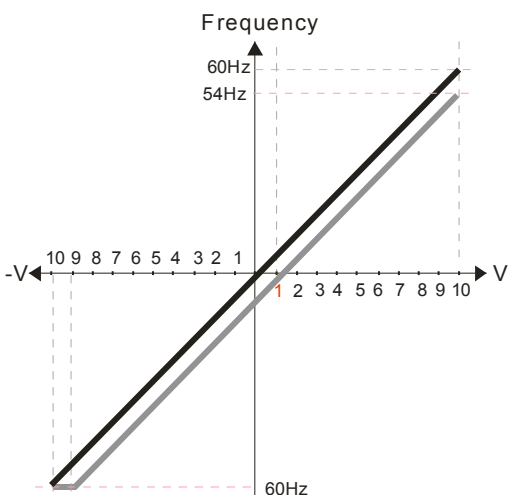

Pr.00-21=0 (Digital keypad control and run in FWD direction)
 Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
 Pr.03-07~03-09 (Positive/Negative Bias Mode)
 0: No bias
 1: Lower than or equal to bias
 2: Greater than or equal to bias
 3: The absolute value of the bias voltage while serving as the center
 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)
 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.00-13 Analog Positive Input Gain (AUI)= 100%
 Pr.03-14 Analog Negative Input Gain (AUI)= 100%

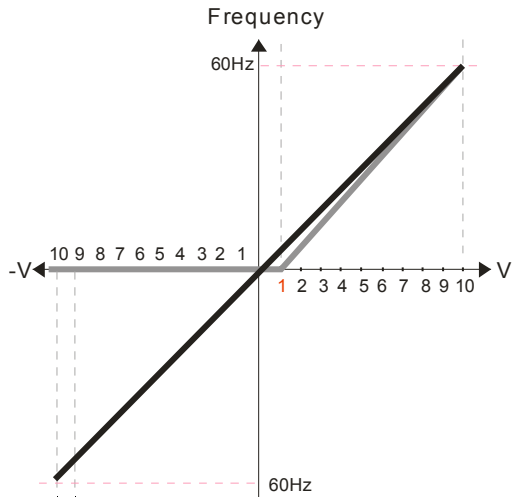


Pr.00-21=0 (Digital keypad control and run in FWD direction)
 Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
 Pr.03-07~03-09 (Positive/Negative Bias Mode)
 0: No bias
 1: Lower than or equal to bias
 2: Greater than or equal to bias
 3: The absolute value of the bias voltage while serving as the center
 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)
 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.00-13 Analog Positive Input Gain (AUI)= 111.1%
 $(10/9) * 100\% = 111.1\%$

Pr.00-14 Analog Negative Input Gain (AUI) = 100%

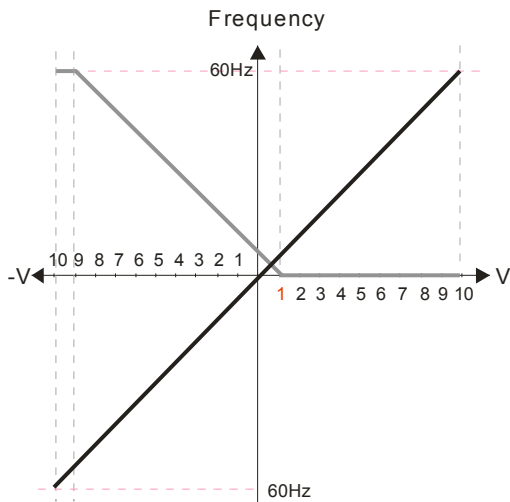


Pr.00-21=0 (Digital keypad control and run in FWD direction)
 Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
 Pr.03-07~03-09 (Positive/Negative Bias Mode)
 0: No bias
 1: Lower than or equal to bias
 2: Greater than or equal to bias
 3: The absolute value of the bias voltage while serving as the center
 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)
 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.00-13 Analog Positive Input Gain (AUI)= 111.1%
 $(10/9) * 100\% = 111.1\%$

Pr.00-14 Analog Negative Input Gain (AUI) = 100%

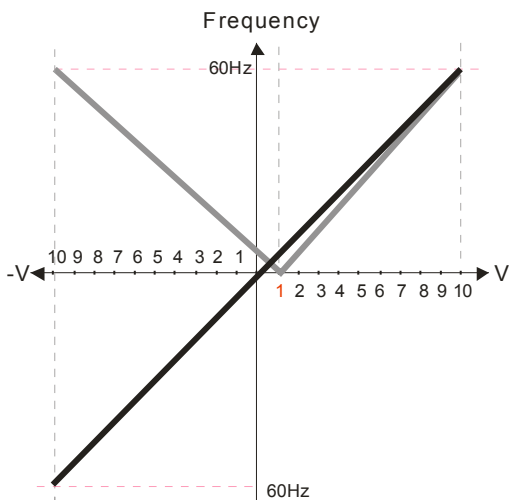


Pr.00-21=0 (Digital keypad control and run in FWD direction)
 Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
 Pr.03-07~03-09 (Positive/Negative Bias Mode)
 0: No bias
 1: Lower than or equal to bias
 2: Greater than or equal to bias
 3: The absolute value of the bias voltage while serving as the center
 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)
 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.00-13 Analog Positive Input Gain (AUI)= 111.1%
 $(10/9) * 100\% = 111.1\%$


Pr.00-14 Analog Negative Input Gain (AUI) = 100%

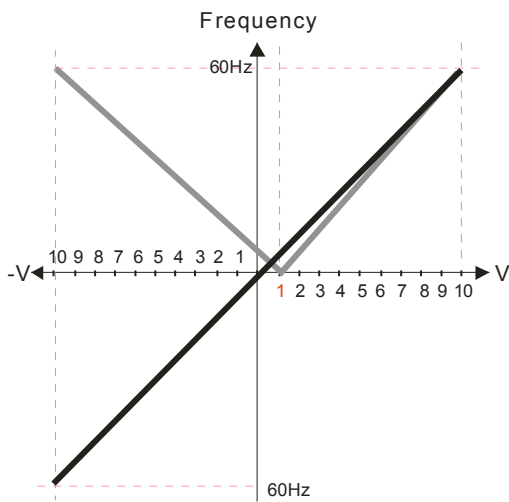

- Pr.00-21=0 (Digital keypad control and run in FWD direction)
- Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
- Pr.03-07~03-09 (Positive/Negative Bias Mode)
 - 0: No bias
 - 1: Lower than or equal to bias
 - 2: Greater than or equal to bias
 - 3: The absolute value of the bias voltage while serving as the center
 - 4: Serve bias as the center

- Pr.03-10 (Analog Frequency Command for Reverse Run)
 - 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 - 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.


Pr.00-13 Analog Positive Input Gain (AUI)= 111.1%
 $(10/9) * 100\% = 111.1\%$
 Pr.00-14 Analog Negative Input Gain (AUI) = 100%

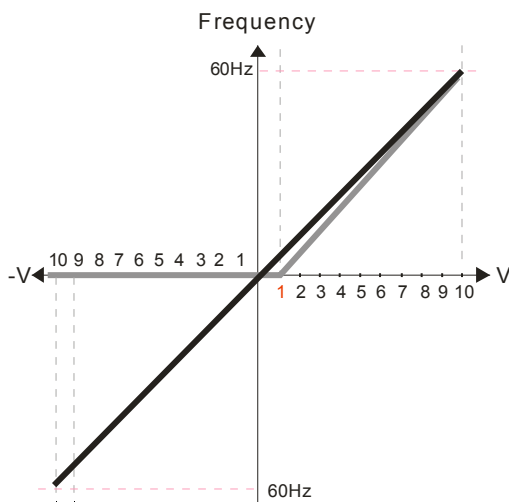

- Pr.00-21=0 (Digital keypad control and run in FWD direction)
- Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
- Pr.03-07~03-09 (Positive/Negative Bias Mode)
 - 0: No bias
 - 1: Lower than or equal to bias
 - 2: Greater than or equal to bias
 - 3: The absolute value of the bias voltage while serving as the center
 - 4: Serve bias as the center

- Pr.03-10 (Analog Frequency Command for Reverse Run)
 - 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 - 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.


Pr.00-13 Analog Positive Input Gain (AUI)= 111.1%
 $(10/9) * 100\% = 111.1\%$
 Pr.00-14 Analog Negative Input Gain (AUI) = 90.9%
 $(10/11) * 100\% = 90.9\%$

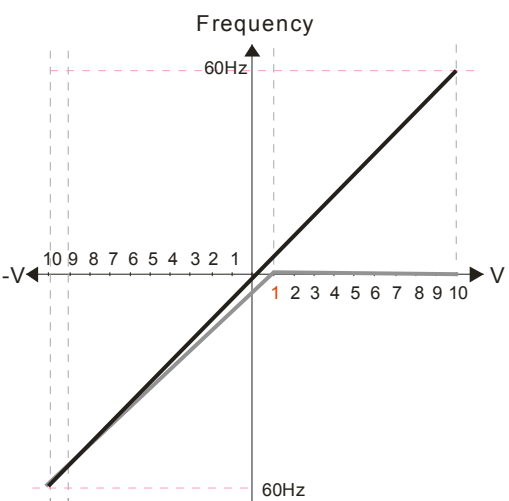

- Pr.00-21=0 (Digital keypad control and run in FWD direction)
- Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%
- Pr.03-07~03-09 (Positive/Negative Bias Mode)
 - 0: No bias
 - 1: Lower than or equal to bias
 - 2: Greater than or equal to bias
 - 3: The absolute value of the bias voltage while serving as the center
 - 4: Serve bias as the center

- Pr.03-10 (Analog Frequency Command for Reverse Run)
 - 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.
 - 1: Neagtive frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external teriminal control.

Pr.00-13 Analog Positive Input Gain (AUI)= 111.1%
 $(10/9) * 100\% = 111.1\%$
 Pr.00-14 Analog Negative Input Gain (AUI) = 90.9%
 $(10/11) * 100\% = 90.9\%$

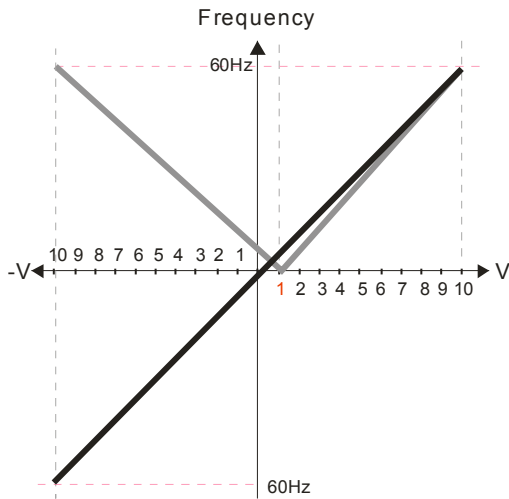

Pr.00-21=0 (Digital keypad control and run in FWD direction)

Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center


Pr.03-10 (Analog Frequency Command for Reverse Run)

0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.

1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.00-13 Analog Positive Input Gain (AUI)= 111.1%
 $(10/9) * 100\% = 111.1\%$

Pr.00-14 Analog Negative Input Gain (AUI) = 90.9%
 $(10/11) * 100\% = 90.9\%$

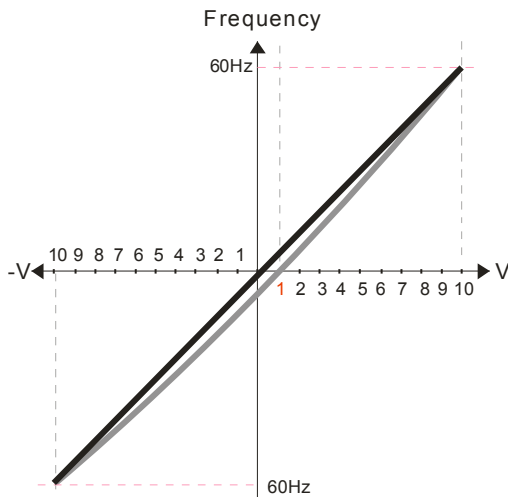

Pr.00-21=0 (Digital keypad control and run in FWD direction)

Pr.03-05 Analog Positive Voltage Input Bias (AUI) = 10%

Pr.03-07~03-09 (Positive/Negative Bias Mode)

- 0: No bias
- 1: Lower than or equal to bias
- 2: Greater than or equal to bias
- 3: The absolute value of the bias voltage while serving as the center
- 4: Serve bias as the center

Pr.03-10 (Analog Frequency Command for Reverse Run)

0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.

1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Direction can not be switched by digital keypad or external terminal control.

Pr.00-13 Analog Positive Input Gain (AUI)= 111.1%
 $(10/9) * 100\% = 111.1\%$

Pr.00-14 Analog Negative Input Gain (AUI) = 90.9%
 $(10/11) * 100\% = 90.9\%$

➤ **03-10** Analog Frequency Command for Reverse Run

Factory Setting: 0

Settings 0: Negative frequency is not valid. Forward and reverse run is controlled by digital keypad or external terminal.

1: Negative frequency is valid. Positive frequency = forward run; negative frequency = reverse run. Run direction can not be switched by digital keypad or the external terminal control.

📖 Parameter 03-10 is used to enable reverse run command when a negative frequency (negative bias and gain) is input to AVI or ACI analog signal input.

➤ **03-11** Analog Input Gain (AVI)

➤ **03-12** Analog Input Gain (ACI)

➤ **03-13** Analog Positive Input Gain (AUI)

➤ **03-14** Analog Negative Input Gain (AUI)

Factory Setting: 100.0

Settings -500.0~500.0%

Parameters 03-03 to 03-14 are used when the source of frequency command is the analog voltage/current signal.

03-15 Analog Input Filter Time (AVI)

03-16 Analog Input Filter Time (ACI)

03-17 Analog Input Filter Time (AUI)

Factory Setting: 0.01

Settings 0.00~20.00 sec

These input delays can be used to filter noisy analog signal.

When the setting of the time constant is too large, the control will be stable but the control response will be slow. When the setting of time constant is too small, the control response will be faster but the control may be unstable. To find the optimal setting, please adjust the setting according to the control stable or response status.


03-18 Addition Function of the Analog Input

Factory Setting: 0

Settings 0: Disable (AVI, ACI, AUI)

1: Enable

When Pr.03-18 is set to 0 and the analog input setting is the same, the priority for AVI, ACI and AUI are AVI>ACI>AUI.

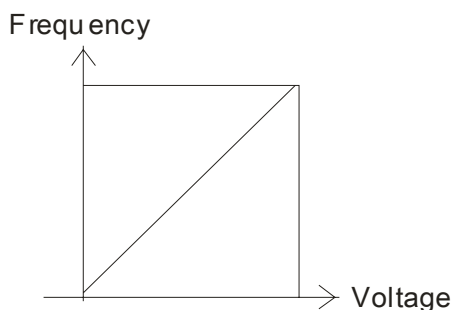

$$F_{\text{command}} = [(a_y - \text{bias}) * \text{gain}] * \frac{F_{\text{max}}(01-00)}{10\text{V or }16\text{mA}}$$

F_{command} : the corresponding

frequency for 10V or 20mA

a_y : 10 or 16mA

bias: Pr.03-03, Pr. 03-04, Pr.03-05

gain: Pr.03-11, Pr.03-12, Pr.03-13, Pr.03-14

03-19 Treatment to 4-20mA Analog Input Signal Loss

Factory Setting: 0

Settings 0: Disable

1: Continue operation at the last frequency

2: Decelerate to stop

3: Stop immediately and display ACE

This parameter determines the behavior when 4~20mA signal is loss, when AVIc(Pr.03-28=2) or ACIc (03-29=0).

When Pr.03-28 is not set to 2, it means the voltage input to AVI terminal is 0-10V or 0-20mA. At this moment, Pr.03-19 will be invalid.

When Pr.03-29 is set to 1, it means the voltage input to ACI terminal is for 0-10V. At this moment, Pr.03-19 will be invalid.

When setting is 1 or 2, it will display warning code "AnL" on the keypad. It will be blinking until the

loss of the ACI signal is recovered or drive is stop.

↗ **03-20** Multi-function Output 1 (AFM1)

Factory Setting: 0

↗ **03-23** Multi-function Output 2 (AFM2)

Factory Setting: 0

Settings 0~23

Function Chart

Settings	Functions	Descriptions
0	Output frequency (Hz)	Max. frequency Pr.01-00 is regarded as 100%.
1	Frequency command (Hz)	Max. frequency Pr.01-00 is regarded as 100%.
2	Motor speed (Hz)	600Hz is regarded as 100%
3	Output current (rms)	(2.5 X rated current) is regarded as 100%
4	Output voltage	(2 X rated voltage) is regarded as 100%
5	DC Bus Voltage	450V (900V)=100%
6	Power factor	-1.000~1.000=100%
7	Power	Rated power is regarded as 100%
8	Output torque	Full-load torque is regarded as 100%
9	AVI	0~10V=0~100%
10	ACI	0~20mA=0~100%
11	AUI	-10~10V=0~100%
12	q-axis current (Iq)	(2.5 X rated current) is regarded as 100%
13	q-axis feedback value (Iq)	(2.5 X rated current) is regarded as 100%
14	d-axis current (Id)	(2.5 X rated current) is regarded as 100%
15	d-axis feedback value (Id)	(2.5 X rated current) is regarded as 100%
16	q-axis voltage (Vq)	250V (500V) =100%
17	d-axis voltage(Vd)	250V (500V) =100%
18	Torque command	Rated torque is regarded as 100%
19	PG2 frequency command	Max. frequency Pr.01-00 is regarded as 100%.
20	Output for CANopen control	For CANopen analog output
21	RS485 analog output	For communication output (CMC-MOD01, CMC-EIP01, CMC-PN01, CMC-DN01)
22	Analog output for communication card	For communication output (CMC-MOD01, CMC-EIP01, CMC-PN01, CMC-DN01)
23	Constant voltage/current output	Pr.03-32 and Pr.03-33 controls voltage/current output level 0~100% of Pr.03-32 corresponds to 0~10V of AFM1.

↗ **03-21** Gain of Analog Output 1 (AFM1)

Factory Setting: 100.0

↗ **03-24** Gain of Analog Output 2 (AFM2)

Factory Setting: 100.0

Settings 0~500.0%

It is used to adjust the analog voltage level (Pr.03-20) that terminal AFM outputs.

This parameter is set the corresponding voltage of the analog output 0.

03-22 Analog Output 1 when in REV Direction (AFM1)

Factory Setting: 0


03-25 Analog Output 2 when in REV Direction (AFM2)

Factory Setting: 0

Settings 0: Absolute value in REV direction

1: Output 0V in REV direction; output 0-10V in FWD direction

2: Output 5-0V in REV direction; output 5-10V in FWD direction

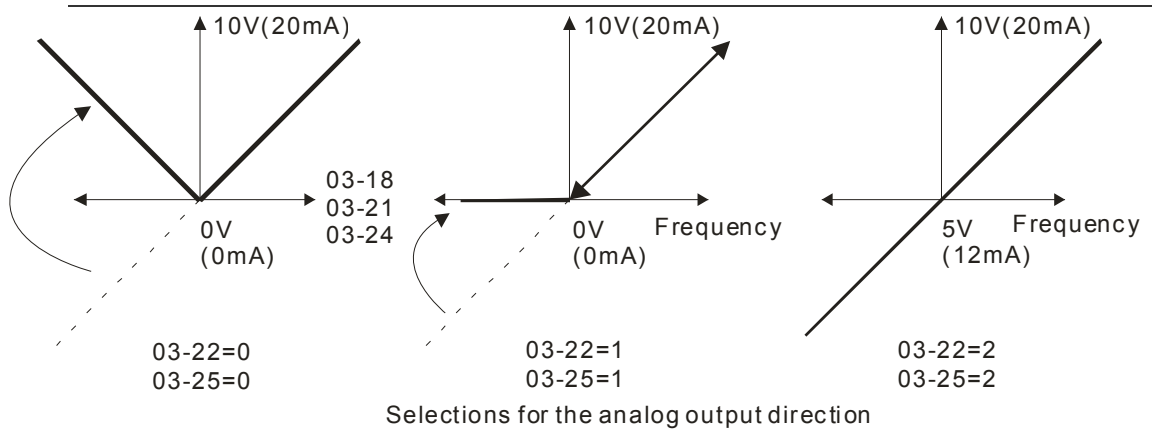

03-26 Reserved

03-27 AFM2 Output Bias

Factory Setting: 0.00

Settings -100.00~100.00%

Example 1, AFM2 0-10V is set output frequency, the output equation is

$$10V \times \left(\frac{\text{Output Frequency}}{01-00} \right) \times 03-24 + 10V \times 03-27$$

Example 2, AFM2 0-20mA is set output frequency, the output equation is

$$20mA \times \left(\frac{\text{Output Frequency}}{01-00} \right) \times 03-24 + 20mA \times 03-27$$

Example 3, AFM2 4-20mA is set output frequency, the output equation is

$$4mA + 16mA \times \left(\frac{\text{Output Frequency}}{01-00} \right) \times 03-24 + 16mA \times 03-27$$

03-28 AVI Selection

Factory Setting: 0

Settings 0: 0-10V

1: 0-20mA

2: 4-20mA

03-29 ACI Selection

Factory Setting: 0

- Settings 0: 4-20mA
 1: 0-10V
 2: 0-20mA


When changing the input mode, please check if the switch of external terminal (SW3, SW4) corresponds to the setting of Pr.03-28~03-29.

03-30 Status of PLC Output Terminal

Factory Setting: ##


- Settings 0~65535
 Monitor the status of PLC analog output terminals

P.03-30 shows the external multi-function output terminal that used by PLC.

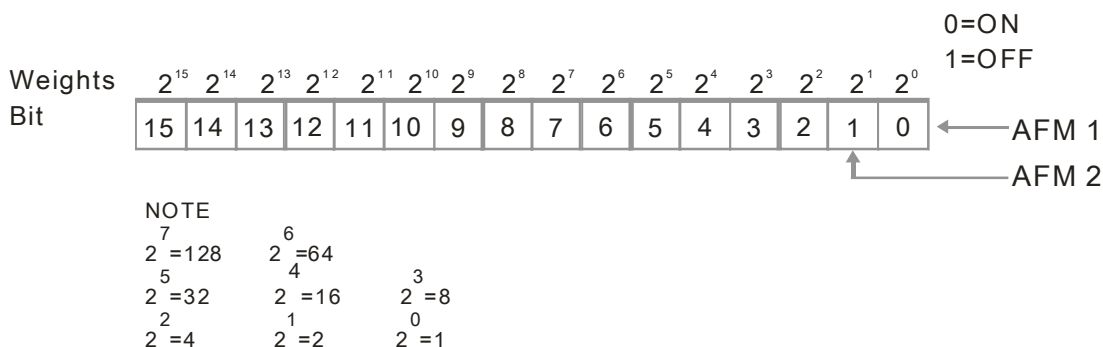

For Example:

If the value of Pr.02-30 displays 0002h(Hex), it means AFM1 and AFM2 are used by PLC.

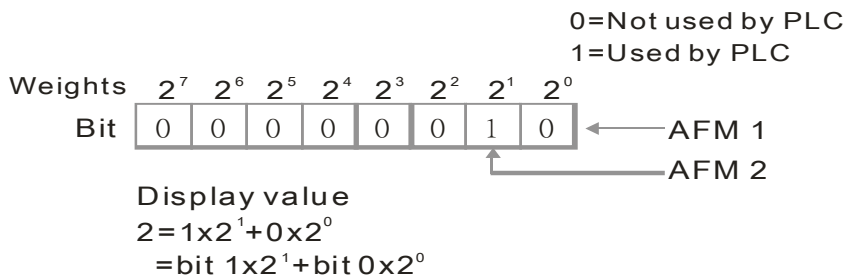

03-31 AFM2 0-20mA Output Selection

Factory Setting: 0

- Settings 0: 0-20mA output
 1: 4-20mA output

03-32 AFM1 DC output setting level

03-33 AFM2 DC Output Setting Level

Factory Setting: 0.00

- Settings 0.00~100.00%

03-34

~

Reserve

03-49**03-50**

Analog Input Curve Selection

Factory Setting: 0

Settings 0: Regular Curve
 1: 3 point curve of AVI
 2: 3 point curve of ACI
 3: 3 point curve of AVI & ACI
 4: 3 point curve of AUI
 5: 3 point curve of AVI & AUI
 6: 3 point curve of ACI & AUI
 7: 3 point curve of AVI & ACI & AUI

03-51

AVI Low Point

Factory Setting: 0.00

Settings 03-28=0, 0.00~10.00V
 03-28≠0, 0.00~20.00mA

03-52

AVI Proportional Low Point

Factory Setting: 0.00

Settings 0.00~100.00%

03-53

AVI Mid Point

Factory Setting: 5.00

Settings 03-28=0, 0.00~10.00V
 03-28≠0, 0.00~20.00mA

03-54

AVI Proportional Mid Point

Factory Setting: 50.00

Settings 0.00~100.00%

03-55

AVI High Point

Factory Setting: 10.00





Settings 03-28=0, 0.00~10.00V
 03-28≠0, 0.00~20.00mA

03-56





AVI Proportional High Point

Factory Setting: 100.00

Settings 0.00~100.00%

-  When Pr.03-28 = 0, AVI setting is 0-10V and the unit is in voltage (V).
-  When Pr.03-28 ≠ 0, AVI setting is 0-20mA or 4-20mA and the unit is in current (mA).
-  When setting anaalog input AVI to frequency command, it 100% corresponds to Fmax (Pr.01-00 Max. operation frequency).
-  Three of the AVI points can be set according to user's demand on voltage(current) and proportion,

there is no setting limit for ACI points.

03-57	ACI Low Point	Factory Setting: 4.00
	Settings Pr.03-29=1, 0.00~10.00V Pr.03-29≠1, 0.00~20.00mA	
03-58	ACI Proportional Low Point	Factory Setting: 0.00
	Settings 0.00~100.00%	
03-59	ACI Mid Point	Factory Setting: 12.00
	Settings 03-29=1, 0.00~10.00V 03-29≠1, 0.00~20.00mA	
03-60	ACI Proportional Mid Point	Factory Setting: 50.00
	Settings 0.00~100.00%	
03-61	ACI High Point	Factory Setting: 20.00
	Settings 03-29=1, 0.00~10.00V 03-29≠1, 0.00~20.00mA	
03-62	ACI Proportional High Point	Factory Setting: 100.00
	Settings 0.00~100.00%	
	When Pr.03-29=1, ACI setting is 0-10V and the unit is in voltage (V).	
	When Pr.03-29≠1, ACI setting is 0-20mA or 4-20mA and the unit is in current (mA).	
	When setting anaalog input ACI to frequency command, it 100% corresponds to Fmax (Pr.01-00 Max. operation frequency).	
	Three of the ACI points can be set according to user's demand on voltage(current) and proportion, there is no setting limit for ACI points.	
03-63	Positive AUI Voltage Low Point	Factory Setting: 0.00
	Settings 0.00~10.00V	
03-64	Positive AUI Voltage Proportional Low Point	Factory Setting: 0.00
	Settings 0.00~100.00%	
03-65	Positive AUI Voltage Mid Point	Factory Setting: 5.00
	Settings 0.00~10.00V	
03-66	Positive AUI Voltage Proportional Mid Point	Factory Setting: 50.00
	Settings 0.00~100.00%	

03-67 Positive AUI Voltage High Point



Factory Setting: 10.00

Settings 0.00~10.00V

03-68 Positive AUI Voltage Proportional High Point

Factory Setting: 100.00

Settings 0.00~100.00%

-  When setting positive voltage AUI to frequency command, it 100% corresponds to Fmax (Pr.01-00 Max. operation frequency) and the motor runs in forward direction.
-  Three of the positive voltage AUI points can be set according to user's demand on voltage and proportion, there is no setting limit for AUI points.

03-69 Negative AUI Voltage Low Point

Factory Setting: 0.00

Settings 0.00~-10.00V

03-70 Negative AUI Voltage Proportional Low Point

Factory Setting: 0.00

Settings 0.00~-100.00%

03-71 Negative AUI Voltage Mid Point

Factory Setting: -5.00

Settings 0.00~-10.00V

03-72 Negative AUI Voltage Proportional Mid Point

Factory Setting: -50.00

Settings 0.00~-100.00%

03-73 Negative AUI Voltage High Point



Factory Setting: -10.00

Settings 0.00~-10.00V

03-74 Negative AUI Voltage Proportional High Point

Factory Setting: -100.00

Settings 0.00~-100.00%

-  When setting negative voltage AUI to frequency command, it 100% corresponds to Fmax (Pr.01-00 Max. operation frequency) and the motor runs in reverse direction.
-  Three of the negative voltage AUI points can be set according to user's demand on voltage and proportion, there is no setting limit for AUI points.


04 Multi-Step Speed Parameters ✎ This parameter can be set during operation.

✎	04-00	1st Step Speed Frequency
✎	04-01	2nd Step Speed Frequency
✎	04-02	3rd Step Speed Frequency
✎	04-03	4th Step Speed Frequency
✎	04-04	5th Step Speed Frequency
✎	04-05	6th Step Speed Frequency
✎	04-06	7th Step Speed Frequency
✎	04-07	8th Step Speed Frequency
✎	04-08	9th Step Speed Frequency
✎	04-09	10th Step Speed Frequency
✎	04-10	11th Step Speed Frequency
✎	04-11	12th Step Speed Frequency
✎	04-12	13th Step Speed Frequency
✎	04-13	14th Step Speed Frequency
✎	04-14	15th Step Speed Frequency

Factory Setting: 0.00

Settings 0.00~600.00Hz

- 📖 The Multi-function Input Terminals (refer to setting 1~4 of Pr.02-01~02-08 and 02-26~02-31) are used to select one of the AC motor drive Multi-step speeds(max. 15 speeds). The speeds (frequencies) are determined by Pr.04-00 to 04-14 as shown in the following.
 - 📖 The run/stop command can be controlled by the external terminal/digital keypad/communication via Pr.00-21.
 - 📖 Each one of multi-step speeds can be set within 0.0~600.0Hz during operation.
 - 📖 Explanation for the timing diagram for multi-step speeds and external terminals
- The Related parameter settings are:
1. Pr.04-00~04-14: setting multi-step speeds (to set the frequency of each step speed)
 2. Pr.02-01~02-08, 02-26~02-31: setting multi-function input terminals (multi-step speed 1~4)
 - Related parameters: 01-22 JOG Frequency, 02-01 Multi-function Input Command 1 (MI1), 02-02 Multi-function Input Command 2 (MI2), 02-03 Multi-function Input Command 3 (MI3), 02-04 Multi-function Input Command 4 (MI4)

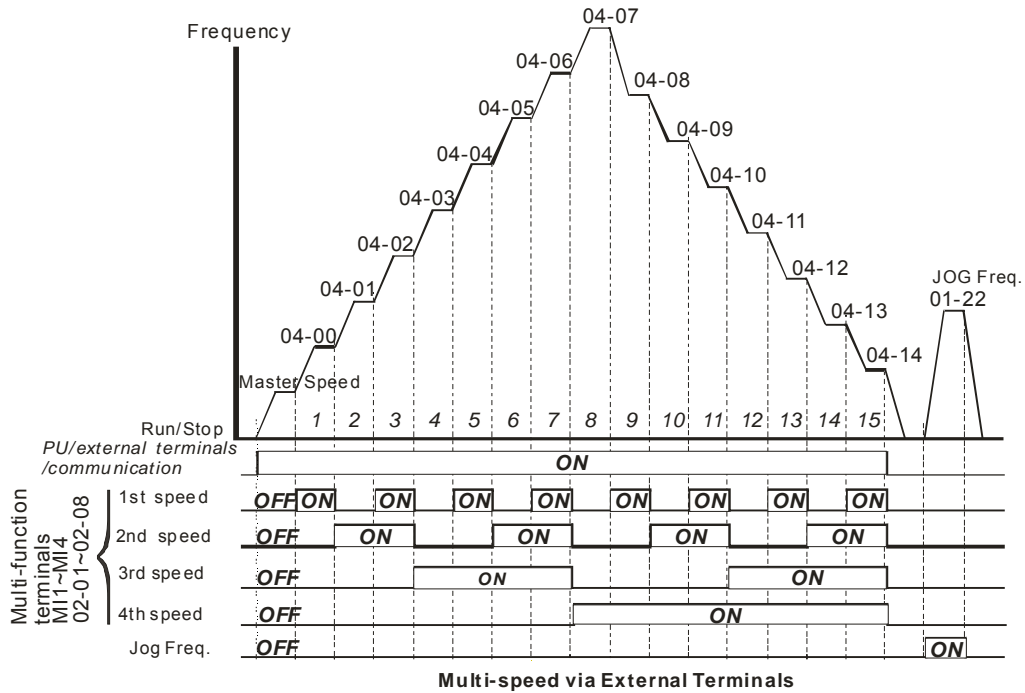

✓	04-16	Position command 1 (pulse)
✓	04-18	Position command 2 (pulse)
✓	04-20	Position command 3 (pulse)
✓	04-22	Position command 4 (pulse)
✓	04-24	Position command 5 (pulse)
✓	04-26	Position command 6 (pulse)
✓	04-28	Position command 7 (pulse)
✓	04-30	Position command 8 (pulse)
✓	04-32	Position command 9 (pulse)
✓	04-34	Position command 10 (pulse)
✓	04-36	Position command 11 (pulse)
✓	04-38	Position command 12 (pulse)
✓	04-40	Position command 13 (pulse)
✓	04-42	Position command 14 (pulse)
✓	04-44	Position command 15 (pulse)

Factory Setting: 0


Settings -32767~32767

📖 Please refer to Pr.02-01~02-08 (Multi-function Input Command) for description on setting 34 (Switch between multi-step position and multi-speed control) and setting 36 (Enable multi-step position learning function).

Multi-step position corresponding	MI4	MI3	MI2	MI1	Multi-step speed corresponding
10-19	0	0	0	0	Positioning for Encoder Position
04-16 Position command 1 (pulse)	0	0	0	1	04-00 1 st step speed frequency
04-18 Position command 1 (pulse)	0	0	1	0	04-01 2 nd step speed frequency
04-20 Position command 1 (pulse)	0	0	1	1	04-02 3 rd step speed frequency

04-22 Position command 1 (pulse)	0	1	0	0	04-03 4 th step speed frequency
04-24 Position command 1 (pulse)	0	1	0	1	04-04 5 th step speed frequency
04-26 Position command 1 (pulse)	0	1	1	0	04-05 6 th step speed frequency
04-28 Position command 1 (pulse)	0	1	1	1	04-06 7 th step speed frequency
04-30 Position command 1 (pulse)	1	0	0	0	04-07 8 th step speed frequency
04-32 Position command 1 (pulse)	1	0	0	1	04-08 9 th step speed frequency
04-34 Position command 1 (pulse)	1	0	1	0	04-09 10 th step speed frequency
04-36 Position command 1 (pulse)	1	0	1	1	04-10 11 th step speed frequency
04-38 Position command 1 (pulse)	1	1	0	0	04-11 12 th step speed frequency
04-40 Position command 1 (pulse)	1	1	0	1	04-12 13 th step speed frequency
04-42 Position command 1 (pulse)	1	1	1	0	04-13 14 th step speed frequency
04-44 Position command 1 (pulse)	1	1	1	1	04-14 15 th step speed frequency

04-15	Position command 1 (revolution)
04-17	Position command 2 (revolution)
04-19	Position command 3 (revolution)
04-21	Position command 4 (revolution)
04-23	Position command 5 (revolution)
04-25	Position command 6 (revolution)
04-27	Position command 7 (revolution)
04-29	Position command 8 (revolution)
04-31	Position command 9 (revolution)
04-33	Position command 10 (revolution)
04-35	Position command 11 (revolution)
04-37	Position command 12 (revolution)
04-39	Position command 13 (revolution)
04-41	Position command 14 (revolution)
04-43	Position command 15 (revolution)

 To switch the target position of the external terminal, set external terminal parameters to Pr.02-01=1, Pr.02-02=2, Pr.02-03=3, Pr.02-04=4 by selecting the P2P target position via multi-step speed.

Setting: Target Position = 04-15 × (10-01*4) + 04-16

Multi-step Speed Status	Target Position of P2P		Maximum Speed of P2P	
	0		11-00 bit8=0	11-00 bit8=1
0000	0		11-43	04-00
0001	Position 1	04-15 04-16		04-01
0010	Position 2	04-17 04-18		04-02
0011	Position 3	04-19 04-20		04-03
0100	Position 4	04-21 04-22		04-04
0101	Position 5	04-23 04-24		04-05
0110	Position 6	04-25 04-26		04-06
0111	Position 7	04-27 04-28	11-43	04-07
1000	Position 8	04-29 04-30		

Multi-step Speed Status	Target Position of P2P			Maximum Speed of P2P
1001	Position 9	04-31	04-32	04-08
1010	Position 10	04-33	04-34	04-09
1011	Position 11	04-35	04-36	04-10
1100	Position 12	04-37	04-38	04-11
1101	Position 13	04-39	04-40	04-12
1110	Position 14	04-41	04-42	04-13
1111	Position 15	04-43	04-44	04-14

05 Motor Parameters

✎ This parameter can be set during operation.

05-00 Motor Auto Tuning

Factory Setting: 0

- Settings
- 0: No function
 - 1: Rolling test for induction motor (Rs, Rr, Lm, Lx, no-load current)
 - 2: Rolling test for induction motor
 - 3: No function
 - 4: Rolling test for PM motor magnetic pole
 - 5: Rolling test for PM motor
 - 6: Rolling test for IM motor flux curve
 - 12: FOC Sensorless inertia estimation
-
- 13: High frequency and blocked rotor test for PM motor parameter

Induction Motor


📖 Press **【Run】** to begin auto tuning. The measured value will be written into motor 1 (Pr.05-05 ~05-09, Rs, Rr, Lm, Lx, no-load current) and motor 2 (Pr.05-17 to Pr.05-21) automatically.

To begin AUTO-Tuning in rolling test:


1. Make sure that all the parameters are set to factory settings and the motor wiring is correct.
2. Make sure the motor has no-load before executing auto-tuning and the shaft is not connected to any belt or gear motor. It is recommended to set to 2 if the motor can't separate from the load.
- 3.

	Motor 1 Parameter	Motor 2 Parameter
Motor Rated Frequency	01-01	01-35
Motor Rated Voltage	01-02	01-36
Motor Full-load Current	05-01	05-13
Motor Rated Power	05-02	05-14
Motor Rated Speed	05-03	05-15
Motor Pole Numbers	05-04	05-16


4. Set Pr.05-00=1 and press **【Run】**, the drive will begin auto-tuning. Please be aware of the motor that it starts spinning as **【Run】** is pressed.
5. When auto-tuning is completed, please check if the measured values are written into motor 1 (Pr.05-05 ~05-09) and motor 2 (Pr.05-17 ~05-21) automatically.
6. Mechanical equivalent circuit

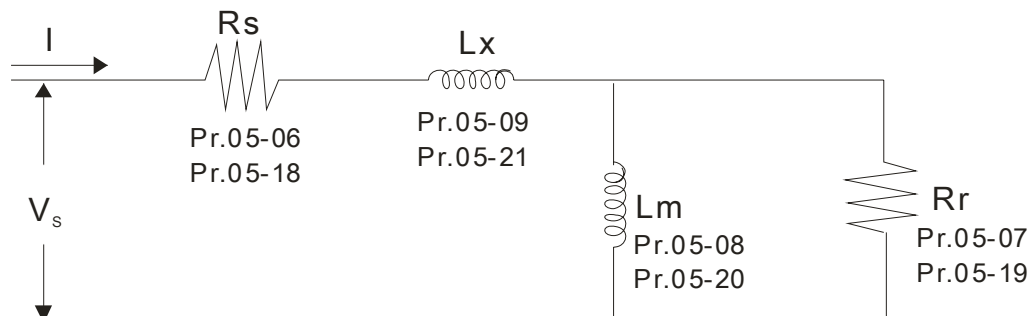

※ If Pr.05-00 is set to 2 (static test), user needs to input the no-load current value of motor into Pr.05-05 for motor 1/Pr.05-17 for motor 2.

 Set Pr.05-00=6 to begin rolling test for IM motor flux curve. This function is available when the drive is in FOC/TQC Sensorless control. User may begin auto-tuning after setting up the motor information.

- Set up Pr.01-01, 01-02, 05-01~05-04 according to the motor nameplate information.
- Set Pr.05-00=6 and press **【Run】**, make sure no loading is applied to the motor before setting Pr.05-00 to 6 and before performing auto-tuning.

 When Pr.05-00=12, the drive begins FOC Sensorless inertia estimation for IM motor. This function is available when the drive is in FOC/TQC Sensorless control. User may begin auto-tuning after setting up the motor information.

- Note: Make sure the motor parameters (no-load current, Rs, Rr, Lm and Lx) of the drive are set before performing Pr.05-00=12 (auto-tuning for FOC Sensorless inertia estimation for IM motor).

1. Set Pr.00-10=2 (torque mode)
2. Set Pr. 00-13=2 (TQCPG, Open-loop torque mode)
3. Set Pr. 05-00=12 and press **【Run】** to begin FOC Sensorless inertia measure
4. When the process of inertia estimation is completed, check Pr.11-01 (unit: PU Q8) and see if the measured value is acceptable.


Set up Sensorless FOC Mode

1. Set Pr.00-10 = 0 (speed mode)
2. Set Pr.00-11 = 5 (FOC sensorless mode)
3. Set bit0 of Pr.11-00 to 1 (use ASR gain function to automatically adjust the ASR bandwidth in Pr.11-03,11-04,11-05)

NOTE

- In torque/vector control mode, it is not recommended to have motors run in parallel.
- It is not recommended to use torque/vector control mode if motor rated power exceeds the rated power of the AC motor drive.
- When auto-tuning 2 motors, it needs to set multi-function input terminals (setting 14) or change Pr.05-22 for motor 1/motor 2 selection.
- The no-load current is usually 20~50% X rated current.
- The rated speed can not be greater than or equal to $120f/p$ (f = rated frequency Pr.01-01/01-35; P : number of motor poles Pr.05-04/05-16).

Permanent Magnet Motor (PM)


 Set Pr.05-00= 5 or 13 and press **【Run】** to begin auto tuning for PM motor. The measured values will be written into Pr.05-39 (Rs), Pr.05-40 & 41 (Ld & Lq) and Pr.05-43 (PM motor's Ke parameter).

To begin AUTO-Tuning for PM motor in rolling test:


1. Make sure all the parameters are reset to factory setting and the motor wiring installation is

correct.

2. For PM motor, set Pr.05-33=1 and complete the following settings according to your motor specifications, Pr.05-34 rated current, Pr.05-35 rated power, Pr.05-36 rated speed and Pr.05-37 pole number. The acceleration time and deceleration time should be set according to your motor capacity.
3. Set Pr.05-00 to 5 and press **【Run】** to begin auto tuning for PM motor. Please be aware of the motor that it starts spinning as **【Run】** is pressed.
4. When auto-tuning is completed, please check if the measured values are written into Pr.05-39~05-41 and Pr.05-43 automatically.

 Set Pr.05-00=4 and press **【Run】** to begin auto-tuning for PM motor PG offset angle. The measured value will be written into Pr.05-42 automatically.

- ☑ Note 1: When execute auto-tuning for PM motor PG origin, please make sure the encoder setting are correct (Pr.10-00, 10-01, 10-02), otherwise the PG origin measure error and motor stall may occur.
- ☑ Note 2: If PM motor runs in an opposite direction of the drive's command, switch any two of the UVW cable and re-connect, then execute PG origin search again. It is crucial to execute auto-tuning after the switch otherwise PG origin measure error and motor stall may occur.

 Auto-tuning process for measuring PG offset angle of PM motor:

1. Set Pr.05-00=5 and press RUN, or manually input the values into Pr. 01-01, 05-34~541 and Pr.05-43.
2. It is strongly suggested to remove the motor and unload before beings auto-tuning.
3. Set Pr.05-00=4 and press **【Run】** to begin auto-tuning. Please be aware of the motor that it starts spinning as **【Run】** is pressed.
4. When auto-tuning is completed, please check if the PG offset angle is written into Pr.05-42 automatically.

 **NOTE**


When auto-tuning for PM motor is completed and the control mode setting is done, it is recommend to turn the drive's power off and restart again to ensure the drive operates according to the motor parameter settings.

05-01 Full-load Current of Induction Motor 1 (A)

Unit: Amper

Factory Setting: #.##

Settings 10 to 120% of drive's rated current

 This value should be set according to the rated frequency of the motor as indicated on the motor nameplate. The factory setting is 90% X rated current.

Example: The rated current for 7.5HP (5.5kW) is 25 and factory setting is 22.5A. The range for setting will be 10~30A.(25*40%=10A and 25*120%=30A)

↖ 05-02	Rated Power of Induction Motor 1(kW)	Factory Setting: ###
	Settings 0~655.35 kW	
	📖 It is used to set rated power of the motor 1. The factory setting is the power of the drive.	
↖ 05-03	Rated Speed of Induction Motor 1 (rpm)	Factory Setting: 1710 (60Hz 4 poles) 1410 (50Hz 4 poles)
	Settings 0~65535	
	📖 It is used to set the rated speed of the motor and need to set according to the value indicated on the motor nameplate.	
05-04	Pole Number of Induction Motor 1	Factory Setting: 4
	Settings 2~20	
	📖 It is used to set the number of motor poles (must be an even number).	
05-05	No-load Current of Induction Motor 1 (A)	Unit: Amper Factory Setting: ###
	Settings 0 to the factory setting in Pr.05-01	
	📖 The factory setting is 40% X rated current.	
05-06	Stator Resistance(Rs) of Induction Motor 1	
05-07	Rotor Resistance(Rr) of Induction Motor 1	Factory Setting: ####
	Settings 0~65.535Ω	
05-08	Magnetizing Inductance(Lm) of Induction Motor 1	
05-09	Stator inductance(Lx) of Induction Motor 1	Factory Setting: ##
	Settings 0~6553.5mH	
05-10	Reserved	
~		
05-12		
05-13	Full-load Current of Induction Motor 2 (A)	Unit: Amper Factory Setting:###
	Settings 10~120%	
	📖 This value should be set according to the rated frequency of the motor as indicated on the motor	

nameplate. The factory setting is 90% X rated current.

Example: The rated current for 7.5HP (5.5kW) is 25A and factory setting is 22.5A. The range for setting will be 10~30A.(25*40%=10A and 25*120%=30A)

↗ **05-14** Rated Power of Induction Motor 2 (kW) Factory Setting: ###

Settings 0~655.35 kW

📖 It is used to set rated power of the motor 2. The factory setting is the power of the drive.

↗ **05-15** Rated Speed of Induction Motor 2 (rpm) Factory Setting: 1710

Settings 0~65535

📖 It is used to set the rated speed of the motor and need to set according to the value indicated on the motor nameplate.

05-16 Pole Number of Induction Motor 2 Factory Setting: 4

Settings 2~20

📖 It is used to set the number of motor poles (must be an even number).

05-17 No-load Current of Induction Motor 2 (A) Unit: Amper
Factory Setting: ###

Settings 0 to the factory setting in Pr.05-01

📖 The factory setting is 40% X rated current.

05-18 Stator Resistance (Rs) of Induction Motor 2
05-19 Rotor Resistance (Rr) of Induction Motor 2 Factory Setting: ####

Settings 0~65.535Ω

05-20 Magnetizing Inductance (Lm) of Induction Motor 2
05-21 Stator Inductance (Lx) of Induction Motor 2 Factory Setting: ##

Settings 0~6553.5 mH

05-22 Induction Motor 1/ 2 Selection Factory Setting: 1

Settings 1: Motor 1
2: Motor 2

📖 It is used to set the motor that driven by the AC motor drive.

↗ **05-23** Frequency for Y-connection/△-connection Switch of Induction Motor Factory Setting: 60.00

Settings 0.00~600.00Hz

05-24 Y-connection/ Δ -connection Switch of Induction Motor IM

Factory Setting: 0






Settings 0: Disable


1: Enable

05-25 Delay Time for Y-connection/ Δ -connection Switch of Induction Motor

Factory Setting: 0.200



Settings 0.000~60.000 sec

-  P.05-23 and Pr.05-25 are applied in the wide range motors and the motor coil will execute the switch of Y-connection/ Δ -connection as required. (The wide range motors has relation with the motor design. In general, it has higher torque at low speed and Y-connection and it has higher speed at high speed and Δ -connection.)
-  Pr.05-24 is used to enable/disable Y-connection/ Δ -connection Switch.
-  When Pr.05-24 is set to 1, the drive will select by Pr.05-23 setting and current motor frequency to switch motor to Y-connection or Δ -connection. At the same time, it will also affect motor parameters.
-  Pr.05-25 is used to set the switch delay time of Y-connection/ Δ -connection.
-  When output frequency reaches Y-connection/ Δ -connection switch frequency, drive will delay by Pr.05-25 before multi-function output terminals are active.

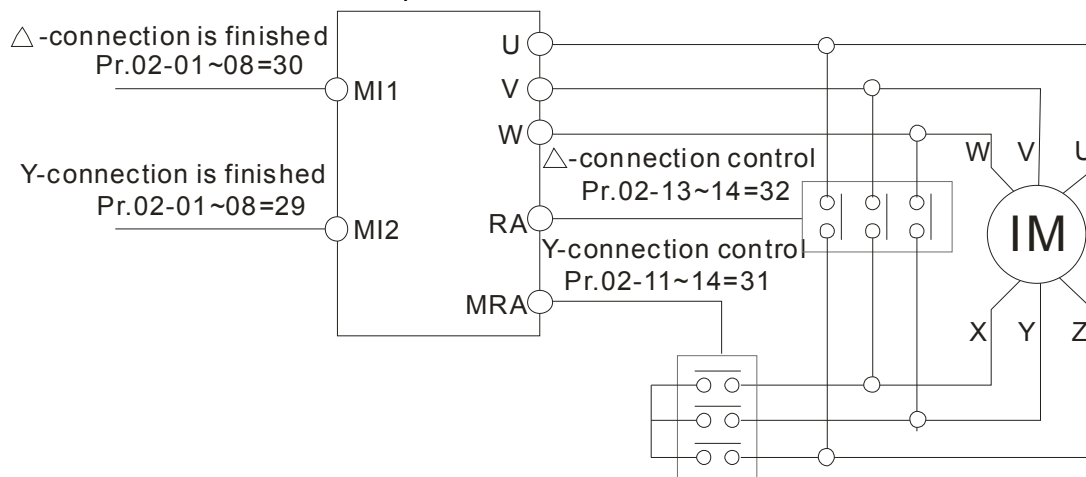Y- Δ connection switch: can be used for wide range motor

Y-connection for low speed: higher torque can be used for rigid tapping

 Δ -connection for high speed: higher torque can be used for high-speed drilling

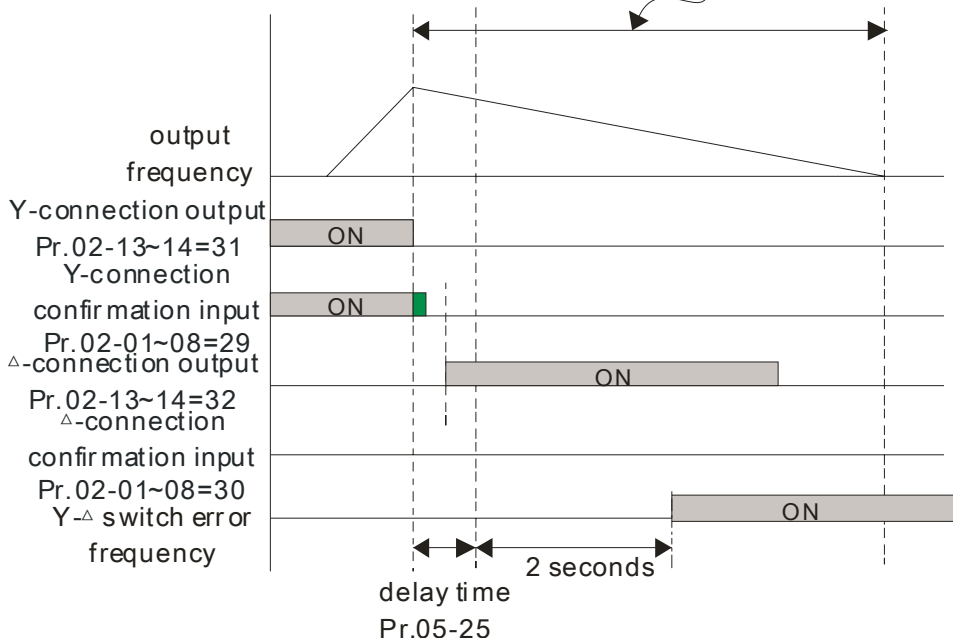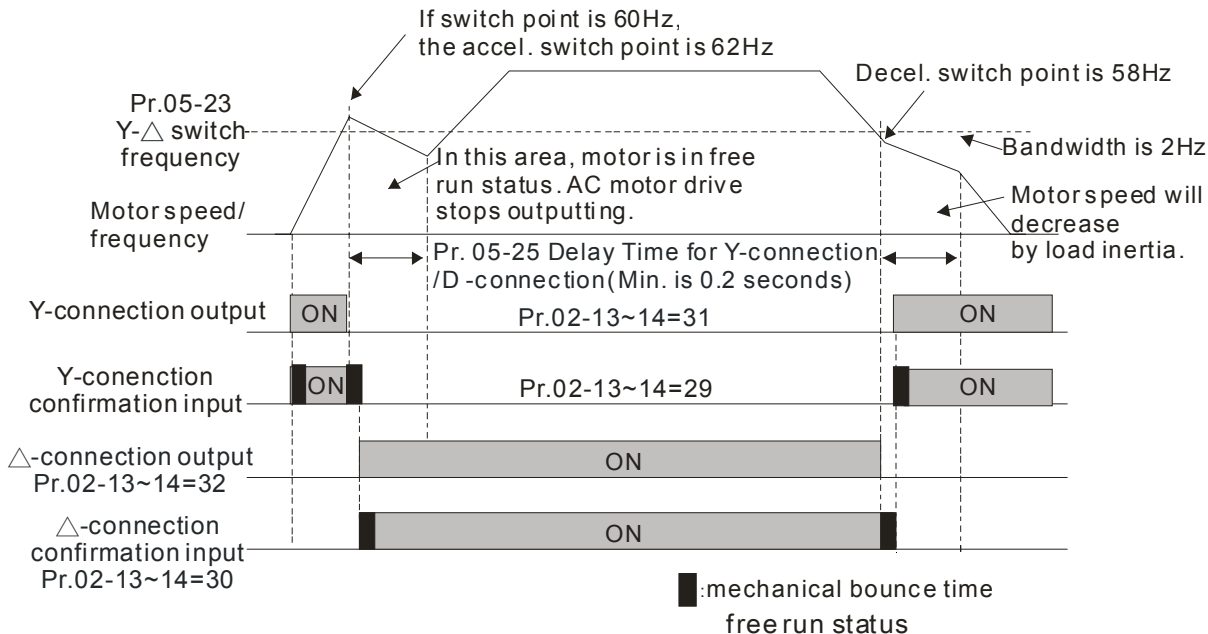

05-26 Accumulative Watt Per Second of Motor in Low Word (W-sec) Factory Setting: 0.0

Settings Read only

05-27 Accumulative Watt Per Second of Motor in High Word (W-sec) Factory Setting: 0.0

Settings Read only

05-28 Accumulative Watt-hour of Motor (W-Hour) Factory Setting: 0.0

Settings Read only

05-29 Accumulative Watt-hour of Motor in Low Word (KW-Hour) Factory Setting: 0.0

Settings Read only

05-30 Accumulative Watt-hour of Motor in High Word (KW-Hour) Factory Setting: 0.0

Settings Read only

Pr.05-26~05-29 records the amount of power consumed by motors. The accumulation begins when the drive is activated and record is saved when the drive stops or turns OFF. The amount of consumed watts will continue to accumulate when the drive activate again. To clear the accumulation, set Pr.00-02 to 5 then the accumulation record will return to 0.

05-31 Accumulative Motor Operation Time (Min)

Factory Setting: 0

Settings 00~1439

05-32 Accumulative Motor Operation Time (day)

Factory Setting: 0

Settings 00~65535

Pr. 05-31 and Pr.05-32 are used to record the motor operation time. To clear the operation time, set Pr.05-31 and Pr.05-32 to 00. Operation time shorter than 60 seconds will not be recorded.

05-33 Induction Motor (IM) and Permanent Magnet Motor Selection

Factory Setting: 0

Settings 0: Induction Motor
1: Permanent Magnet Motor

05-34 Full-load current of Permanent Magnet Motor

Factory Setting: 0.00

Settings 0.00~655.35 Amps

05-35 Rated Power of Permanent Magnet Motor

Factory Setting: 0.00

Settings 0.00~655.35 kW

05-36 Rated speed of Permanent Magnet Motor

Factory Setting: 2000

Settings 0~65535 rpm

05-37 Pole number of Permanent Magnet Motor

Factory Setting: 10

Settings 0~65535

05-38 Inertia of Permanent Magnet Motor

Factory Setting: 0.0

Settings 0.0~6553.5 kg.cm² (0.0001kg.m²)

This parameter setting is defined in **kg-cm²**. If this measure is not familiar to you, please refer to the chart below. (Delta's motor inertia chart is for reference purpose only.)

Delta Motor (Low inertia model)								
Rated Power(kW)	0.1	0.2	0.4	0.4	0.75	1	2	
Rotor inertia (kg.m ²)	3.70E-06	1.77E-05	2.77E-05	6.80E-05	1.13E-04	2.65E-04	4.45E-04	

Delta Motor (Mid to High Inertia model)								
Rated Power(kW)	0.5	1	1.5	2	2	0.3	0.6	0.9
Rotor inertia (kg.m ²)	8.17E-04	8.41E-04	1.12E-03	1.46E-03	3.47E-03	8.17E-04	8.41E-04	1.12E-03

※ For more information on motor inertia value, please refer to Pr.11-01.

05-39 Stator Resistance of PM Motor

Factory Setting: 0.000

Settings 0.000~65.535Ω

05-40 Permanent Magnet Motor Ld

Factory Setting: 0.00

Settings 0.00~655.35 mH

05-41 Permanent Magnet Motor Lq


Factory Setting: 0.00

Settings 0.00~655.35 mH

05-42 PG Offset angle of PM Motor

Factory Setting: 0

Settings 0.0~360.0°

 When Pr.05-00 is set to 4, the drive will detect offset angle and write into Pr.05-42.

05-43 Ke parameter of PM Motor

Unit: V/1000rpm

Factory Setting: 0

Settings 0~65535

06 Protection Parameters


✎ This parameter can be set during operation.

✎ 06-00 Low Voltage Level

Factory Setting:

Settings	230V Series:	
	Frame A to D: 150.0~ 220.0 Vdc	180.0
	Frame E and frames above E: 190.0~220.0V	200.0
	Frame A to D:	
	460V Series: 300.0~440.0V	360.0
	Frame E and frames above E: 380.0~440.0V	400.0

📖 It is used to set the Lv level. When the drive is in the low voltage, it will stop output and free to stop.

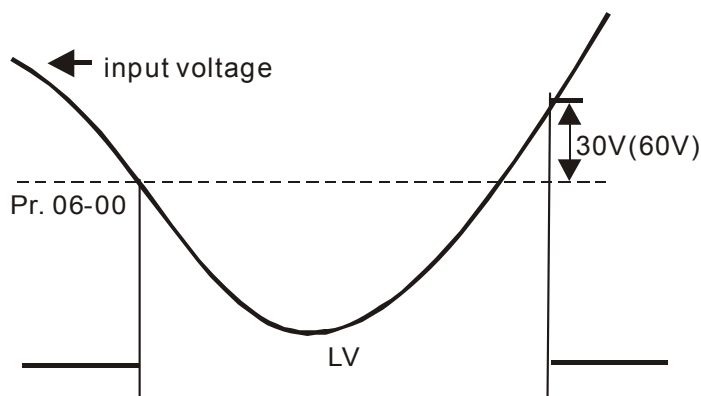


✎ 06-01 Over-voltage Stall Prevention

Factory Setting: 380.0/760.0

Settings	230V Series: 0.0~450.0V
	460V Series: 0.0~900.0V
	0: Disabled

- 📖 When Pr.06-01 is set to 0.0, the over-voltage stall prevention function is disabled.
- 📖 During deceleration, the DC bus voltage may exceed its Maximum Allowable Value due to motor regeneration. When this function is enabled, the AC motor drive will not decelerate further and keep the output frequency constant until the voltage drops below the preset value again.
- 📖 This function is used for the occasion that the load inertia is unsure. When it stops in the normal load, the over-voltage won't occur during deceleration and fulfill the setting of deceleration time. Sometimes, it may not stop due to over-voltage during decelerating to stop when increasing the load regenerative inertia. At this moment, the AC drive will auto add the deceleration time until drive stop.
- 📖 When the over-voltage stall prevention is enabled, drive deceleration time will be larger than the setting.
- 📖 When there is any problem as using deceleration time, refer to the following items to solve it.
 1. Add the suitable deceleration time.
 2. Add brake resistor (refer to appendix B-1 for details) to consume the electrical energy that regenerated from the motor with heat type.
- Related parameters: Pr.01-13, 01-15, 01-17, 01-19 (settings of decel. time 1~4), Pr.02-13~02-14 (Multi-function Output 1 RY1, RY2), Pr. 02-16~02-17 Multi-function Output (MO1, 2)

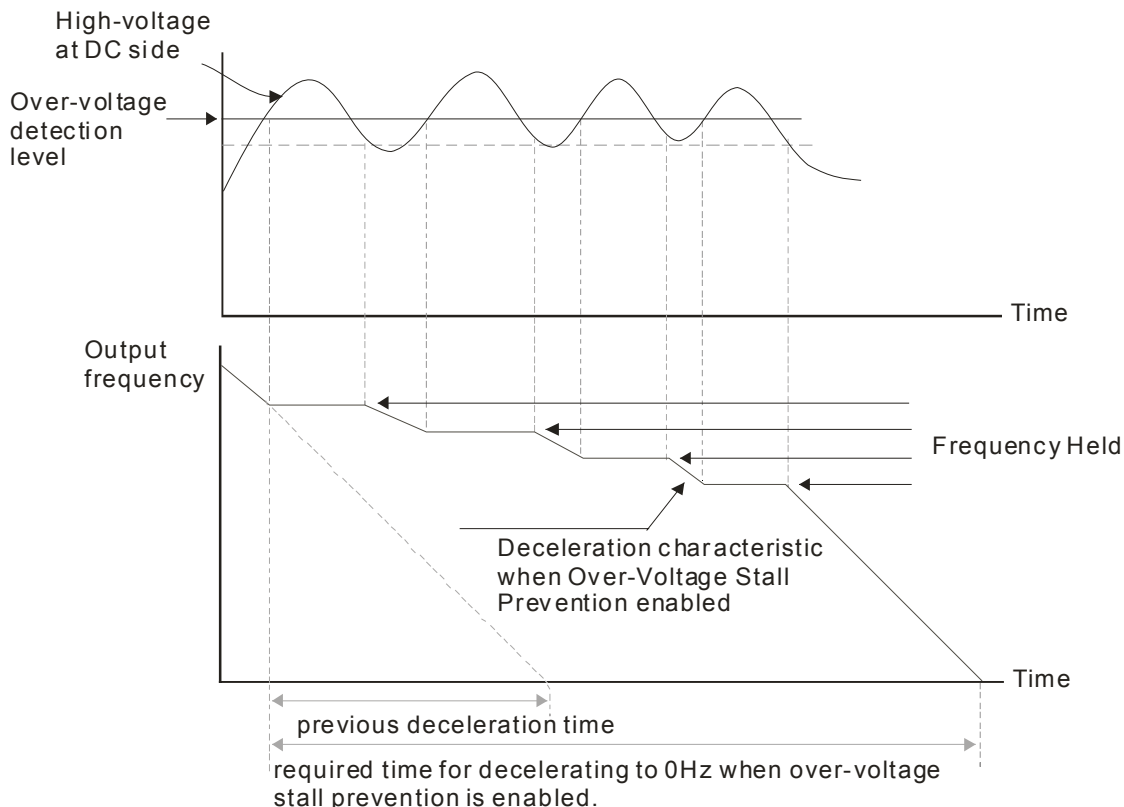


06-02 Selection for Over-voltage Stall Prevention

Factory Setting: 0

- Settings 0: Traditional over-voltage stall prevention
- 1: Smart over-voltage prevention

When Pr.06-02 is set to 1, the drive will maintain DCbus voltage when decelerating and prevent OV.

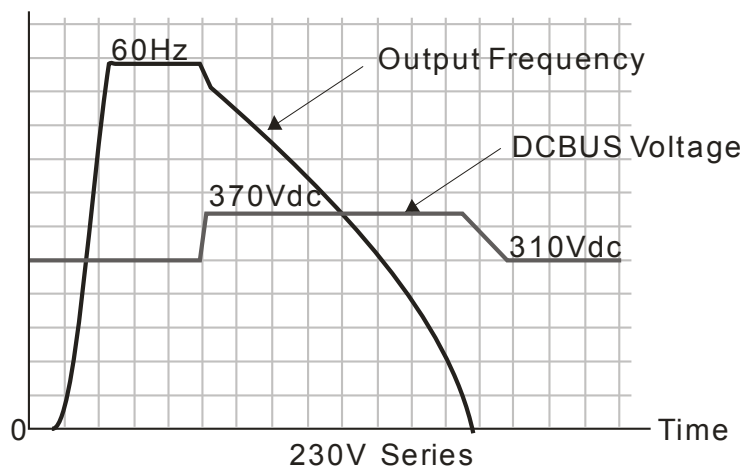


06-03 Over-current Stall Prevention during Acceleration

- Settings Normal duty: 0~160% (100%: drive's rated current) Factory Setting: 120
- Heavy duty: 0~180% (100%: drive's rated current) Factory Setting: 150

If the motor load is too large or drive acceleration time is too short, the AC drive output current may increase abruptly during acceleration and it may cause motor damage or trigger protection functions (OL or OC). This parameter is used to prevent this situation.


- 📖 During acceleration, the AC drive output current may increase abruptly and exceed the value specified by Pr.06-03 due to rapid acceleration or excessive load on the motor. When this function is enabled, the AC drive will stop accelerating and keep the output frequency constant until the current drops below the maximum value.
- 📖 When the over-current stall prevention is enabled, drive deceleration time will be larger than the setting.
- 📖 When the Over-Current Stall Prevention occurs due to too small motor capacity or in the factory setting, please decrease Pr.06-03 setting.
- 📖 When there is any problem by using acceleration time, refer to the following items to solve it.
- 📖 Related parameters: Pr.01-12, 01-14, 01-16, 01-18 (settings of accel. time 1~4), Pr.01-44
 1. dd the suitable acceleration time.
 2. Setting Pr.01-44 Optimal Acceleration/Deceleration Setting to 1, 3 or 4 (auto accel.)
- 📖 Optimal Acceleration/Deceleration Setting, Pr.02-13~02-14 (Multi-function Output 1 RY1, RY2), Pr. 02-16~02-17 Multi-function Output (MO1, 2)

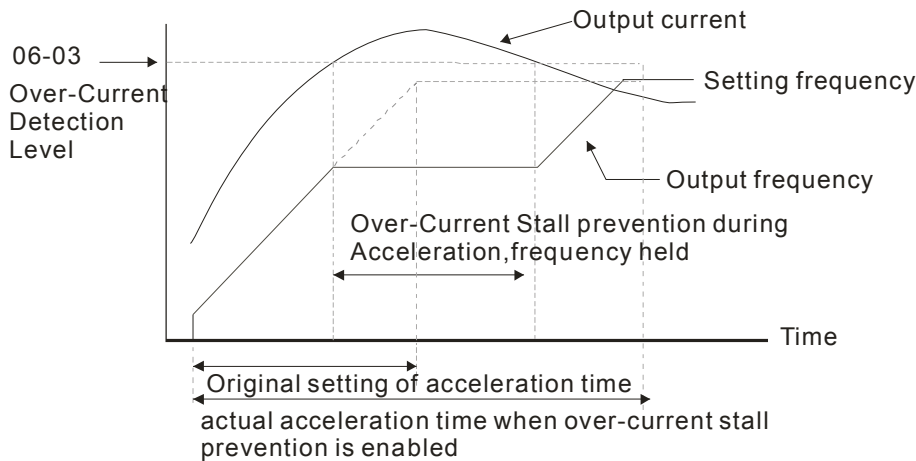

🔪 **06-04** Over-current Stall Prevention during Operation

Settings	Normal duty: 0~160% (100%: drive's rated current)	Factory Setting: 120
	Heavy duty: 0~180% (100%: drive's rated current)	Factory Setting: 150

- 📖 It is a protection for drive to auto decrease output frequency when the motor is over-load abruptly during motor constant operation.
- 📖 If the output current exceeds the setting specified in Pr.06-04 when the drive is operating, the drive will decrease its output frequency (according to Pr.06-05) to prevent the motor stall. If the output current is lower than the setting specified in Pr.06-04, the drive will accelerate (according to Pr.06-05) again to catch up with the set frequency command value.

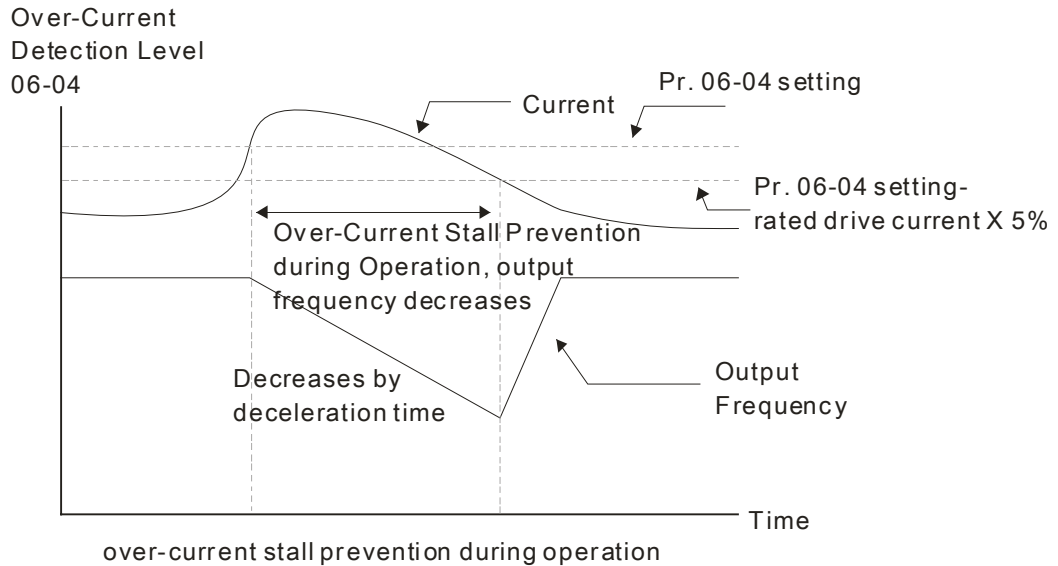

06-05 Accel./Decel. Time Selection of Stall Prevention at Constant Speed

Factory Setting: 0

- Settings
- 0: by current accel/decel time
 - 1: by the 1st accel/decel time
 - 2: by the 2nd accel/decel time
 - 3: by the 3rd accel/decel time
 - 4: by the 4th accel/decel time
 - 5: by auto accel/decel

It is used to set the accel./decel. time selection when stall prevention occurs at constant speed.

06-06 Over-torque Detection Selection (OT1)

Factory Setting: 0

- Settings
- 0: Disable
 - 1: Over-torque detection during constant speed operation, continue to operate after detection
 - 2: Over-torque detection during constant speed operation, stop operation after detection
 - 3: Over-torque detection during operation, continue to operate after detection
 - 4: Over-torque detection during operation, stop operation after detection

06-09 Over-torque Detection Selection (OT2)


Factory Setting: 0

- Settings
- 0: Disable
 - 1: Over-torque detection during constant speed operation, continue to operate after detection
 - 2: Over-torque detection during constant speed operation, stop operation after detection
 - 3: Over-torque detection during operation, continue to operation after detection
 - 4: Over-torque detection during operation, stop operation after detection

- 📖 When Pr.06-06 and Pr.06-09 are set to 1 or 3, it will display a warning message and won't have an abnormal record.
- 📖 When Pr.06-06 and Pr.06-09 are set to 2 or 4, it will display a warning message and will have an abnormal record.

↗ 06-07 Over-torque Detection Level (OT1)	Factory Setting: 120
Settings 10 to 250% (100%: drive's rated current)	
↗ 06-08 Over-torque Detection Level (OT1)	Factory Setting: 0.1
Settings 0.0~60.0 sec	
↗ 06-10 Over-torque Detection Level (OT2)	Factory Setting: 120
Settings 10 to 250% (100%: drive's rated current)	
↗ 06-11 Over-torque Detection Time (OT2)	Factory Setting: 0.1
Settings 0.0~60.0 sec	

- 📖 Over torque detection is determine by the following method: if the output current exceeds the over-torque detection level (Pr.06-07, factory setting: 150%) and also exceeds Pr.06-08 Over-Torque Detection Time, the fault code "ot1/ot2" will appear. If a Multi-Functional Output Terminal is to over-torque detection (setting 7 or 8), the output is on. Please refer to Pr.02-13~02-14 for details.

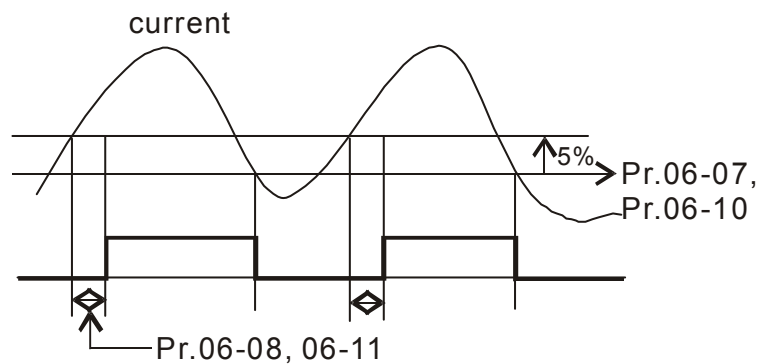

↗ 06-12 Current Limit	Factory Setting: 170
Settings 0~250% (100%: drive's rated current)	
<ul style="list-style-type: none"> 📖 Pr.06-12 sets the maximum output current of the drive. Pr.06-12 and Pr.11-17 ~ Pr.11-20 are used to set the drive's output current limit. When the drive is in VF, SVC or VFPG control mode, output frequency will decreases as the output current reaches current limit. It is a current stall prevention. 	
↗ 06-13 Electronic Thermal Relay Selection (Motor 1)	
↗ 06-27 Electronic Thermal Relay Selection (Motor 2)	Factory Setting: 2
Settings 0: Inverter motor	

- 1: Standard motor
- 2: Disable


It is used to prevent self-cooled motor overheats under low speed. User can use electronic thermal relay to limit driver's output power.

- 06-14 Electronic Thermal Characteristic for Motor 1
- 06-28 Electronic Thermal Characteristic for Motor 2

Factory Setting: 60.0

Settings 30.0~600.0 sec

The parameter is set by the 150% of motor rated current and the setting of Pr.06-14 and Pr.06-28 to prevent the motor damaged from overheating. When it reaches the setting, it will display "EoL1/EoL2" and the motor will be in free running.

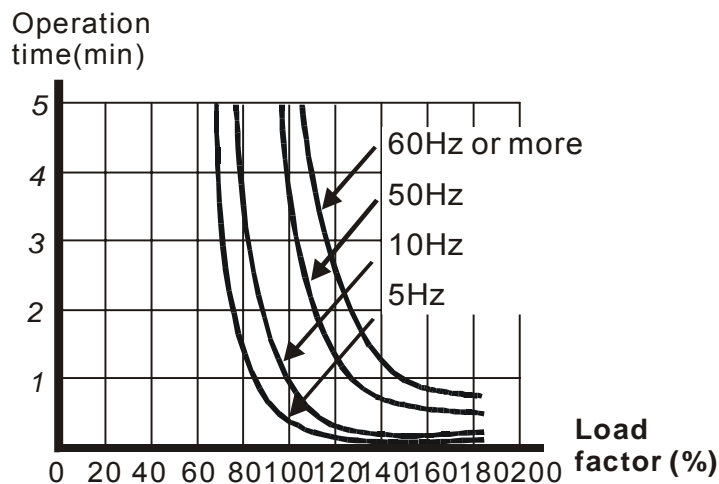

- 06-15 Heat Sink Over-heat (OH) Warning

Factory Setting: 85.0

Settings 0.0~110.0°C

Pr.06-15 sets the heatsink temperature level of the drive. The drive will output an overheating warning when the temperature exceeds the setting of Pr.06-15. If the setting of Pr.06-15 is higher than the default setting of the drive, the drive will use the default setting level for warning output. Capacitor (CAP) overheating level is set by the drive's default setting, it can not be adjusted.

Over-heating Level (°C)		
Model	IGBT OH1	CAP OH 2
VFD007C23A/E	100	90
VFD015C23A/E	100	90
VFD022C23A/E	100	90
VFD037C23A/E	100	95
VFD055C23A/E	100	75
VFD075C23A/E	100	75
VFD110C23A/E	100	75
VFD150C23A/E	95	70
VFD185C23A/E	95	70
VFD220C23A/E	95	70
VFD300C23A/E	95	60
VFD370C23A/E	95	60

Over-heating Level (°C)		
Model	IGBT OH1	CAP OH 2
VFD055C43A/E	100	95
VFD075C43A/E	95	75
VFD110C43A/E	95	75
VFD150C43A/E	95	75
VFD185C43A/E	95	80
VFD220C43A/E	95	80
VFD300C43A/E	100	80
VFD370C43A/E	95	60
VFD450C43A/E	95	60
VFD550C43A/E	100	60
VFD750C43A/E	100	60
VFD900C43A/E	100	60

Over-heating Level (°C)		
VFD450C23A/E	100	60
VFD550C23A/E	100	60
VFD750C23A/E	100	60
VFD900C23A/E	100	60
VFD007C43A/E	100	90
VFD015C43A/E	100	90
VFD022C43A/E	100	95
VFD037C43A/E	100	100
VFD040C43A/E	100	95

Over-heating Level (°C)		
VFD1100C43A/E	100	60
VFD1320C43A/E	100	60
VFD1600C43A/E	100	60
VFD1850C43A/E	100	65
VFD2200C43A/E	100	65
VFD2800C43A/E	100	65
VFD3150C43A/E	100	65
VFD3550C43A/E	100	65

06-16 Stall Prevention Limit Level

Factory Setting: 50

Settings 0~100% (Refer to Pr.06-03, Pr.06-04)

When operation frequency is larger than Pr.01-01; e.g. Pr06-03=150%, Pr. 06-04=100% and Pr. 06-16=80%:

Calculate the Stall Prevention Level during acceleration: Pr.06-03 * Pr.06-16=150x80%=120%.

Calculate the Stall Prevention Level at constant speed: Pr.06-04 * Pr.06-16=100x80%=80%.

06-17 Present Fault Record

06-18 Second Most Recent Fault Record

06-19 Third Most Recent Fault Record

06-20 Fourth Most Recent Fault Record

06-21 Fifth Most Recent Fault Record

06-22 Sixth Most Recent Fault Record

Settings

0: No fault record

1: Over-current during acceleration (ocA)

2: Over-current during deceleration (ocd)

3: Over-current during constant speed(ocn)

4: Ground fault (GFF)

5: IGBT short-circuit (occ)

6: Over-current at stop (ocS)

7: Over-voltage during acceleration (ovA)

8: Over-voltage during deceleration (ovd)

9: Over-voltage during constant speed (ovn)

10: Over-voltage at stop (ovS)

11: Low-voltage during acceleration (LvA)

12: Low-voltage during deceleration (Lvd)

13: Low-voltage during constant speed (Lvn)

14: Stop mid-low voltage (LvS)


15: Phase loss protection (OrP)


16: IGBT over-heat (oH1)


17: Capacitance over-heat (oH2) (for 40hp above)

- 18: tH1o (TH1 open: IGBT over-heat protection error)
- 19: tH2o (TH2 open: capacitance over-heat protection error)
- 20: Reserved
- 21: Drive over-load (oL)
- 22: Electronics thermal relay 1 (EoL1)
- 23: Electronics thermal relay 2 (EoL2)
- 24: Motor PTC overheat (oH3) (PTC)
- 25: Reserved
- 26: Over-torque 1 (ot1)
- 27: Over-torque 2 (ot2)
- 28: Low current (uC)
- 29: Home limit error (LMIT)
- 30: Memory write-in error (cF1)
- 31: Memory read-out error (cF2)
- 32: Reserved
- 33: U-phase current detection error (cd1)
- 34: V-phase current detection error (cd2)
- 35: W-phase current detection error (cd3)
- 36: Clamp current detection error (Hd0)
- 37: Over-current detection error (Hd1)
- 38: Over-voltage detection error (Hd2)
- 39: occ IGBT short circuit detection error (Hd3)
- 40: Auto tuning error (AUE)
- 41: PID feedback loss (AFE)
- 42: PG feedback error (PGF1)
- 43: PG feedback loss (PGF2)
- 44: PG feedback stall (PGF3)
- 45: PG slip error (PGF4)
- 46: PG ref loss (PGr1)
- 47: PG ref loss (PGr2)
- 48: Analog current input loss (ACE)
- 49: External fault input (EF)
- 50: Emergency stop (EF1)
- 51: External Base Block (bb)
- 52: Password error (PcodE)
- 53: Reserved
- 54: Communication error (CE1)
- 55: Communication error (CE2)
- 56: Communication error (CE3)
- 57: Communication error (CE4)

- 58: Communication Time-out (CE10)
- 59: PU Time-out (CP10)
- 60: Brake transistor error (bF)
- 61: Y-connection/ Δ -connection switch error (ydc)
- 62: Decel. Energy Backup Error (dEb)
- 63: Slip error (oSL)
- 64: Electromagnet switch error (ryF)
- 65 : PG Card Error (PGF5)
- 66-72: Reserved
- 73: External safety gate S1
- 74~78: Reserved
- 79: Uocc U phase over current (Detection begins as RUN is pressed, software protection)
- 80: Vocc V phase over current (Detection begins as RUN is pressed, software protection)
- 81: Wocc W phase over current (Detection begins as RUN is pressed, software protection)
- 82: OPHL U phase output phase loss
- 83: OPHL Vphase output phase loss
- 84: OPHL Wphase output phase loss
- 85~100: Reserved
- 101: CGdE CANopen software disconnect1
- 102: CHbE CANopen software disconnect2
- 103: CSYE CANopen synchronous error
- 104: CbFE CANopen hardware disconnect
- 105: CIdE CANopen index setting error
- 106: CAdE CANopen slave station number setting error
- 107: CFrE CANopen index setting exceed limit
- 108~110: Reserved
- 111: InrCOM Internal communication overtime error

 When the fault occurs and force stopping, it will record in this parameter.


 At stop with low voltage Lv (LvS warn, no record). During operation with mid-low voltage Lv (LvA, Lvd, Lvn error, will record).

 Setting 62: when dEb function is enabled, the drive will execute dEb and record to the Pr.06-17 to Pr.06-22 simultaneously.

- | | | |
|---|--------------|-----------------------|
| ↗ | 06-23 | Fault Output Option 1 |
| ↗ | 06-24 | Fault Output Option 2 |
| ↗ | 06-25 | Fault Output Option 3 |
| ↗ | 06-26 | Fault Output Option 4 |

Factory Setting: 0

Settings 0 to 65535 sec (refer to bit table for fault code)

 These parameters can be used with multi-function output (set to 35-38) for the specific

requirement. When the fault occurs, the corresponding terminals will be activated (It needs to convert binary value to decimal value to fill in Pr.06-23 to Pr.06-26).

Fault Code	Bit0	Bit1	Bit2	Bit3	Bit4	Bit5	Bit6
	current	Volt.	OL	SYS	FBK	EXI	CE
0: No fault							
1: Over-current during acceleration (ocA)	•						
2: Over-current during deceleration (ocd)	•						
3: Over-current during constant speed(ocn)	•						
4: Ground fault (GFF)	•						
5: IGBT short-circuit (occ)	•						
6: Over-current at stop (ocS)	•						
7: Over-voltage during acceleration (ovA)		•					
8: Over-voltage during deceleration (ovd)		•					
9: Over-voltage during constant speed (ovn)		•					
10: Over-voltage at stop (ovS)		•					
11: Low-voltage during acceleration (LvA)		•					
12: Low-voltage during deceleration (Lvd)		•					
13: Low-voltage during constant speed (Lvn)		•					
14: Stop mid-low voltage (LvS)		•					
15: Phase loss protection (OrP)		•					
16: IGBT over-heat (oH1)			•				
17: Capacitance over-heat (oH2)			•				
18: tH1o (TH1 open)			•				
19: tH2o (TH2 open)			•				
20: Reserved							
21: Drive over-load (oL)			•				
22: Electronics thermal relay 1 (EoL1)			•				
23: Electronics thermal relay 2 (EoL2)			•				
24: Motor PTC overheat (oH3) (PTC)			•				
25: Reserved							
26: Over-torque 1 (ot1)			•				
27: Over-torque 2 (ot2)			•				
28: Low current (uC)	•						
29: Home limit error (LMIT)						•	
30: Memory write-in error (cF1)				•			
31: Memory read-out error (cF2)				•			
32: Reserved							
33: U-phase current detection error (cd1)				•			
34: V-phase current detection error (cd2)				•			
35: W-phase current detection error (cd3)				•			

Fault Code	Bit0	Bit1	Bit2	Bit3	Bit4	Bit5	Bit6
	current	Volt.	OL	SYS	FBK	EXI	CE
36: Clamp current detection error (Hd0)				•			
37: Over-current detection error (Hd1)				•			
38: Over-voltage detection error (Hd2)				•			
39: occ IGBT short circuit detection error (Hd3)				•			
40: Auto tuning error (AUE)				•			
41: PID feedback loss (AFE)					•		
42: PG feedback error (PGF1)					•		
43: PG feedback loss (PGF2)					•		
44: PG feedback stall (PGF3)					•		
45: PG slip error (PGF4)					•		
46: PG ref loss (PGr1)					•		
47: PG ref loss (PGr2)					•		
48: Analog current input loss (ACE)					•		
49: External fault input (EF)						•	
50: Emergency stop (EF1)						•	
51: External Base Block (bb)						•	
52: Password error (PcodE)				•			
53: Reserved							
54: Communication error (CE1)							•
55: Communication error (CE2)							•
56: Communication error (CE3)							•
57: Communication error (CE4)							•
58: Communication Time-out (CE10)							•
59: PU Time-out (CP10)							•
60: Brake transistor error (bF)						•	
61: Y-connection/ Δ -connection switch error (ydc)						•	
62: Decel. Energy Backup Error (dEb)		•					
63: Slip error (oSL)						•	
64: Electromagnet switch error (ryF)						•	
65 : PG Card Error (PGF5)						•	
66-72: Reserved							
73: External safety gate S1				•			
74~78: Reserved							
79: U phase over current (Uocc)	•						
80: V phase over current (Vocc)	•						
81: W phase over current (Wocc)	•						
82: OPHL U phase output phase loss	•						

Fault Code	Bit0	Bit1	Bit2	Bit3	Bit4	Bit5	Bit6
	current	Volt.	OL	SYS	FBK	EXI	CE
83: OPHL Vphase output phase loss	•						
84: OPHL Wphase output phase loss	•						
85~100: Reserved							
101: CGdE CANopen software disconnect1							•
102: CHbE CANopen software disconnect2							•
103: CSYE CANopen synchronous error							•
104: CbFE CANopen hardware disconnect							•
105: CIdE CANopen index setting error							•
106: CAdE CANopen slave station number setting error							•
107: CFrE CANopen index setting exceed limit							•
108~110: Reserved							
111: InrCOM Internal communication overtime error							•

06-29 PTC (Positive Temperature Coefficient) Detection Selection

Factory Setting: 0


- Settings
- 0: Warn and keep operating
 - 1: Warn and ramp to stop
 - 2: Warn and coast to stop
 - 3: No warning

 Pr.06-29 setting defines how the will drive operate after PTC detection.

06-30 PTC Level

Factory Setting: 50.0

Settings 0.0~100.0%


 It needs to set AVI/ACI/AUI analog input function Pr.03-00~03-02 to 6 (P.T.C. thermistor input value).

 It is used to set the PTC level, and the corresponding value for 100% is max. analog input value.

06-31 Frequency Command for Malfunction

Factory Setting: Read only


Settings 0.00~655.35Hz

 When malfunction occurs, use can check the frequency command. If it happens again, it will overwrite the previous record.

06-32 Output Frequency at Malfunction

Factory Setting: Read only


Settings 0.00~655.35Hz

 When malfunction occurs, use can check the current frequency command. If it happens again, it will overwrite the previous record.

06-33 Output Voltage at Malfunction

Factory Setting: Read only


Settings 0.0~6553.5V

 When malfunction occurs, user can check current output voltage. If it happens again, it will overwrite the previous record.

06-34 DC Voltage at Malfunction

Factory Setting: Read only


Settings 0.0~6553.5V

 When malfunction occurs, user can check the current DC voltage. If it happens again, it will overwrite the previous record.

06-35 Output Current at Malfunction

Factory Setting: Read only


Settings 0.00~655.35Amp

 When malfunction occurs, user can check the current output current. If it happens again, it will overwrite the previous record.

06-36 IGBT Temperature at Malfunction

Factory Setting: Read only


Settings 0.0~6553.5°C

 When malfunction occurs, user can check the current IGBT temperature. If it happens again, it will overwrite the previous record.

06-37 Capacitance Temperature at Malfunction

Factory Setting: Read only


Settings 0.0~6553.5°C

 When malfunction occurs, user can check the current capacitance temperature. If it happens again, it will overwrite the previous record.

06-38 Motor Speed in rpm at Malfunction

Factory Setting: Read only


Settings 0.0~6553.5°C

 When malfunction occurs, user can check the current motor speed in rpm. If it happens again, it will overwrite the previous record.

06-39 Torque Command at Malfunction

Factory Setting: Read only

Settings 0~65535

 When malfunction occurs, user can check the current torque command. If it happens again, it will overwrite the previous record.

06-40 Status of Multi-function Input Terminal at Malfunction

Factory Setting: Read only

Settings 0000h~FFFFh

06-41 Status of Multi-function Output Terminal at Malfunction

Factory Setting: Read only

Settings 0000h~FFFFh

📖 When malfunction occurs, user can check the status of multi-function input/output terminals. If it happens again, it will overwrite the previous record.

06-42 Drive Status at Malfunction

Factory Setting: Read only

Settings 0000H~FFFFh

📖 When malfunction occurs, please check the drive status (communication address 2119H). If malfunction happens again, the previous record will be overwritten by this parameter.

06-43 Reserved**06-44** Reserved**06-45** Treatment to Output Phase Loss Detection (OPHL)

Factory Setting: 3

Settings 0: Warn and keep operating
 1: Warn and ramp to stop
 2: Warn and coast to stop
 3: No warning

📖 Pr.06-45 defines how the drive will operate when output phase loss occur.

06-46 Deceleration Time of Output Phase Loss

Factory Setting:0.500

Settings 0.000~65.535 sec

06-47 Current Bandwidth

Factory Setting:1.00

Settings 0.00~655.35%

06-48 DC Brake Time of Output Phase Loss

Factory Setting:0.000

Settings 0.000~65.535 sec

06-49 Reserved**06-50** Time for Input Phase Loss Detection

Factory Setting:0.20

Settings 0.00~600.00 sec

06-51 Reserved

06-52 Ripple of Input Phase Loss

Factory Setting: 30.0 / 60.0

Settings 230V Series: 0.0~160.0 Vdc
460V Series: 0.0~320.0 Vdc

06-53 Treatment for the detected Input Phase Loss (OrP)

Factory Setting: 0

Settings 0: warn, ramp to stop
1: warn, coast to stop

 Over ripple protection

06-54 Reserved**06-55** Derating Protection

Factory Setting: 0

Settings 0: constant rated current and limit carrier wave by load current and temperature
1: constant carrier frequency and limit load current by setting carrier wave
2: constant rated current(same as setting 0), but close current limit

 Setting 0:

When the rated current is constant, carrier frequency (F_c) outputted by PWM will auto decrease according to surrounding temperature, overload output current and time. If overload situation is not frequent and only cares the carrier frequency operated with the rated current for a long time and carrier wave changes during short overload, it is recommended to set to 0.

Refer to the following diagram for the level of carrier frequency. Take VFD007C43A in normal duty as example, surrounding temperature 50°C with independent installation and UL open-type.

When the carrier frequency is set to 15kHz, it corresponds to 72% rated output current. When it outputs higher than the value, it will auto decrease the carrier frequency. If the output is 83% rated current and the carrier frequency will decrease to 12kHz. In addition, it will also decrease the carrier frequency when overload. When the carrier frequency is 15kHz and the current is $120\% \times 72\% = 86\%$ for a minute, the carrier frequency will decrease to the factory setting.

 Setting 1:

It is used for the fixed carrier frequency and prevents the carrier wave changes and motor noise caused by the surrounding temperature and frequent overload.


Refer to the following for the derating level of rated current. Take VFD007C43A in normal duty as example, when the carrier frequency keeps in 15kHz and the rated current is decreased to 72%, it will have OL protection when the current is $120\% \times 72\% = 86\%$ for a minute. Therefore, it needs to operate by the curve to keep the carrier frequency.

 Setting 2:

It sets the protection method and action to 0 and disables the current limit for the Ratio*160% of


output current in the normal duty and Ratio*180% of output current in the heavy duty. The advantage is that it can provide higher output current when the setting is higher than the factory setting of carrier frequency. The disadvantage is that it decreases carrier wave easily when overload.

Derating curve diagram in the normal duty (Pr.00-16=0)



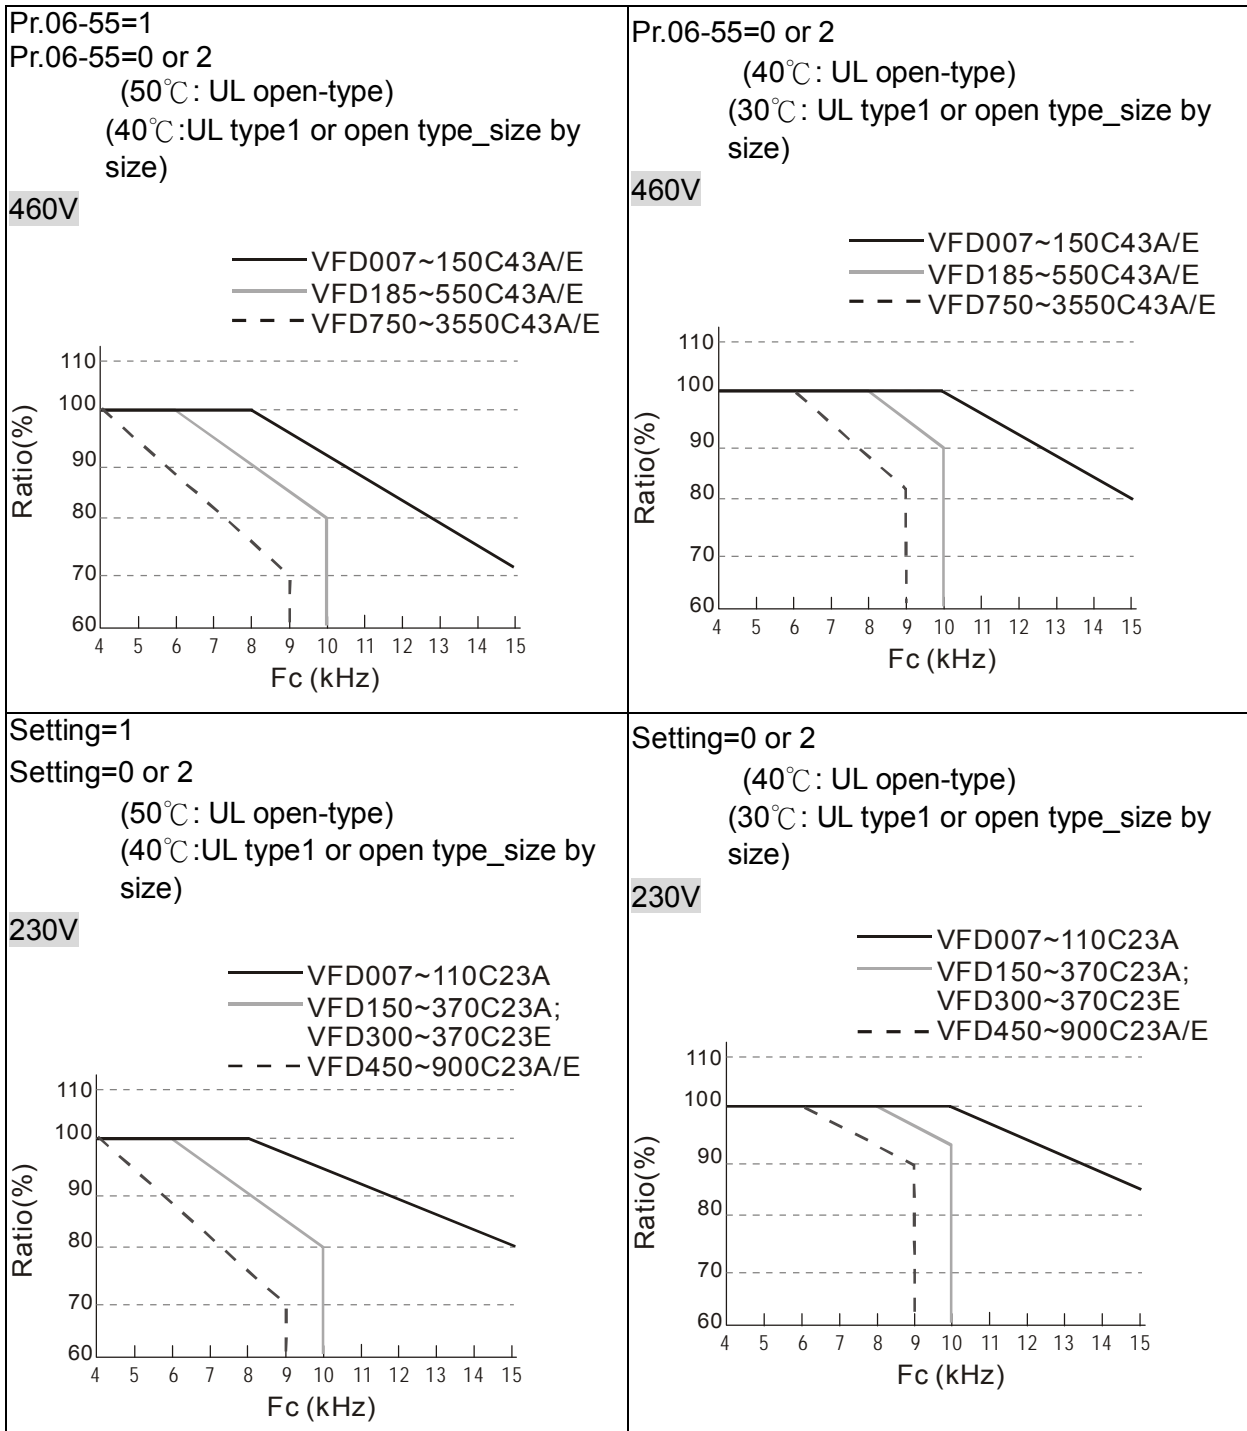


Derating curve diagram in the heavy duty (Pr.00-16=1)


Pr.06-55=1
 Pr.06-55=0 or 2
 (50°C: UL open-type)
 (40°C: UL type1 or open type_size by size)

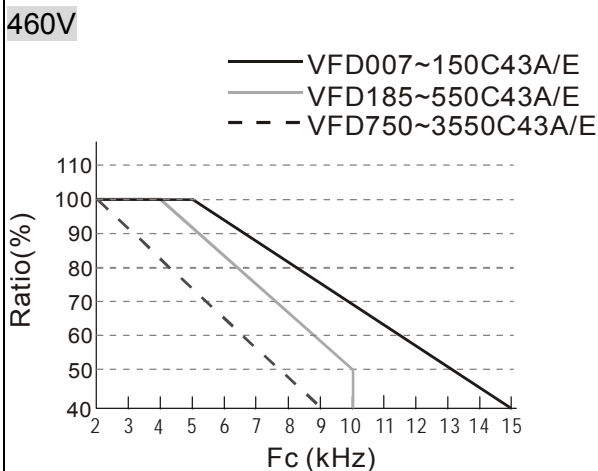

Pr.06-55=0 or 2
 (40°C: UL open-type)
 (30°C: UL type1 or open type_size by size)

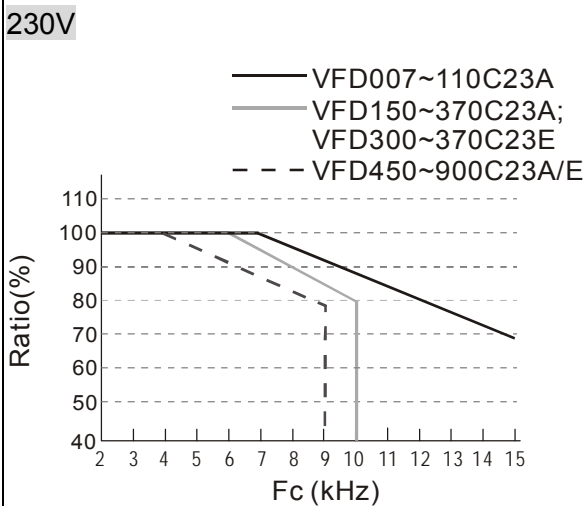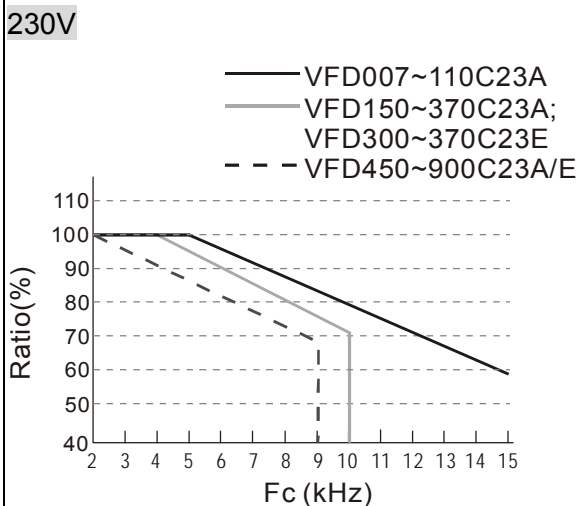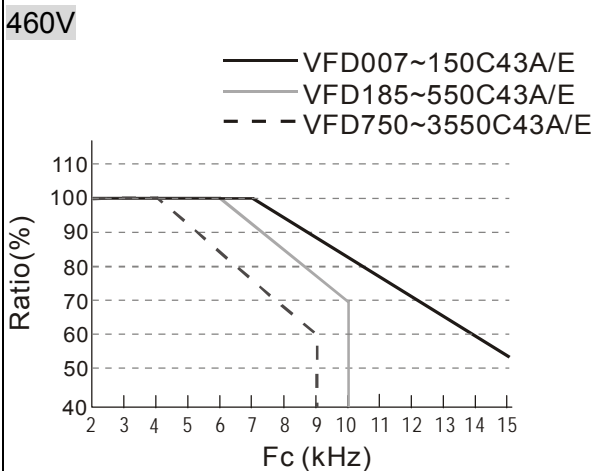

It should be used with Pr. 00-16 and Pr.00-17 for setting.

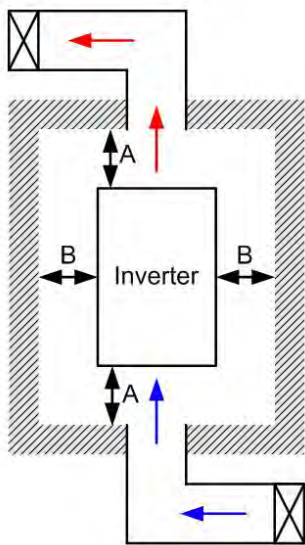

NOTE

- ※ The mounting clearances stated in the figure is for installing the drive in an open area. To install the drive in a confined space (such as cabinet or electric box), please follow the following three rules: (1) Keep the minimum mounting clearances. (2) Install a ventilation equipment or an air conditioner to keep surrounding temperature lower than operation temperature. (3) Refer to parameter setting and set up Pr. 00-16, Pr.00-17, and Pr. 06-55.
- ※ The following table shows heat dissipation and the required air volume when installing a single drive in a confined space. When installing multiple drives, the required air volume shall be multiplied by the number the drives.
- ※ Refer to the chart (Air flow rate for cooling) for ventilation equipment design and selection.
- ※ Refer to the chart (Power dissipation) for air conditioner design and selection.

Minimum mounting clearances:

Frame	A (mm)	B (mm)	C (mm)	D (mm)
A~C	60	30	10	0
D~F	100	50	-	0
G	200	100	-	0
H	350	0	0	200 (100, Ta=40°C)

Air flow rate for cooling							Power dissipation of AC motor drive			
Model No.	Flow Rate (cfm)			Flow Rate (m ³ /hr)			Power Dissipation			
	External	Internal	Total	External	Internal	Total	Loss External (Heat sink)	Internal	Total	
VFD007C23A	-	-	-	-	-	-	33	27	61	
VFD015C23A	14	-	14	24	-	24	56	31	88	
VFD022C23A	14	-	14	24	-	24	79	36	115	
VFD037C23A	10	-	10	17	-	17	113	46	159	
VFD055C23A	40	14	54	68	24	92	197	67	264	
VFD075C23A	66	14	80	112	24	136	249	86	335	
VFD110C23A	58	14	73	99	24	124	409	121	529	
VFD150C23A	166	12	178	282	20	302	455	161	616	
VFD185C23A	166	12	178	282	20	302	549	184	733	
VFD220C23A	146	12	158	248	20	268	649	216	865	
VFD300C23A/E	179	30	209	304	51	355	913	186	1099	
VFD370C23A/E	179	30	209	304	51	355	1091	220	1311	
VFD450C23A/E	228	73	301	387	124	511	1251	267	1518	
VFD550C23A/E	228	73	301	387	124	511	1401	308	1709	
VFD750C23A/E	246	73	319	418	124	542	1770	369	2139	
VFD900C23A/E	224	112	336	381	190	571	2304	484	2788	
VFD007C43A/E	-	-	-	-	-	-	33	25	59	
VFD015C43A/E	-	-	-	-	-	-	45	29	74	
VFD022C43A/E	14	-	14	24	-	24	71	33	104	
VFD037C43A/E	10	-	10	17	-	17	103	38	141	
VFD040C43A/E	10	-	10	17	-	17	116	42	158	
VFD055C43A/E	10	-	10	17	-	17	134	46	180	
VFD075C43A/E	40	14	54	68	24	92	216	76	292	
VFD110C43A/E	66	14	80	112	24	136	287	93	380	
VFD150C43A/E	58	14	73	99	24	124	396	122	518	
VFD185C43A/E	99	21	120	168	36	204	369	138	507	
VFD220C43A/E	99	21	120	168	36	204	476	158	635	
VFD300C43A/E	126	21	147	214	36	250	655	211	866	
VFD370C43A/E	179	30	209	304	51	355	809	184	993	
VFD450C43A/E	179	30	209	304	51	355	929	218	1147	
VFD550C43A/E	179	30	209	304	51	355	1156	257	1413	
VFD750C43A/E	186	30	216	316	51	367	1408	334	1742	
VFD900C43A/E	257	73	330	437	124	561	1693	399	2092	
VFD1100C43A/E	223	73	296	379	124	503	2107	491	2599	
VFD1320C43A/E	224	112	336	381	190	571	2502	579	3081	
VFD1600C43A/E	289	112	401	491	190	681	3096	687	3783	
VFD1850C43A/E			454			771			4589	
VFD2200C43A/E			454			771			5772	
VFD2800C43A/E			769			1307			6381	
VFD3150C43A/E			769			1307			7156	
VFD3550C43A/E			769			1307			8007	
※	The required airflow shown in chart is for installing one drive in confined space.						※	The heat dissipation shown in the chart is for installing single drive in a confined space.		
※	When installing the multiple drives, the required air volume should be the required air volume for single drive X the number of the drives.						※	When installing multiple drives, volume of heat dissipation should be the heat dissipated for single drive X the number of the drives.		
							※	Heat dissipation for each model is calculated by rated voltage, current and default carrier.		

06-56 PT100 Detection Level 1

Factory Setting: 5.000

Settings 0.000~10.000V

06-57 PT100 Detection Level 2

Factory Setting: 7.000

Settings 0.000~10.000V


06-58 PT100 Level 1 Frequency Protection

Factory Setting: 0.00


Settings 0.00~600.00 Hz

PT100 operation

- (1) Use AVI, AUI or ACI(set to 0-10V) for analog voltage input and select PT100 mode.
- (2) Choose one of the analog voltage input type: (a)AVI (Pr.03-00=11), (b) AUI (Pr.03-02=11), or (c) ACI (Pr.03-01=11 and Pr.03-29=1).
- (3) When using ACI as analog voltage input, set Pr.03-01=11 and Pr.03-29=1. Then switch SW2 to 0-10V on the I/O control terminal block.
- (4) Set Pr.03-23=23 and AFM2 to constant current output. Switch AFM2 (SW2) to 0-20mA on the I/O control terminal block and set constant current output to 9mA by setting Pr.03-33=45. The AFM2 constant output current is $20\text{mA} * 45\% = 9\text{mA}$.
- (5) Pr.03-33 is for adjusting the constant voltage or constant current of AFM2, the setting range is 0~100.00%.
- (6) There are two types of action level for PT100. The diagram of PT protecting action is shown as below:

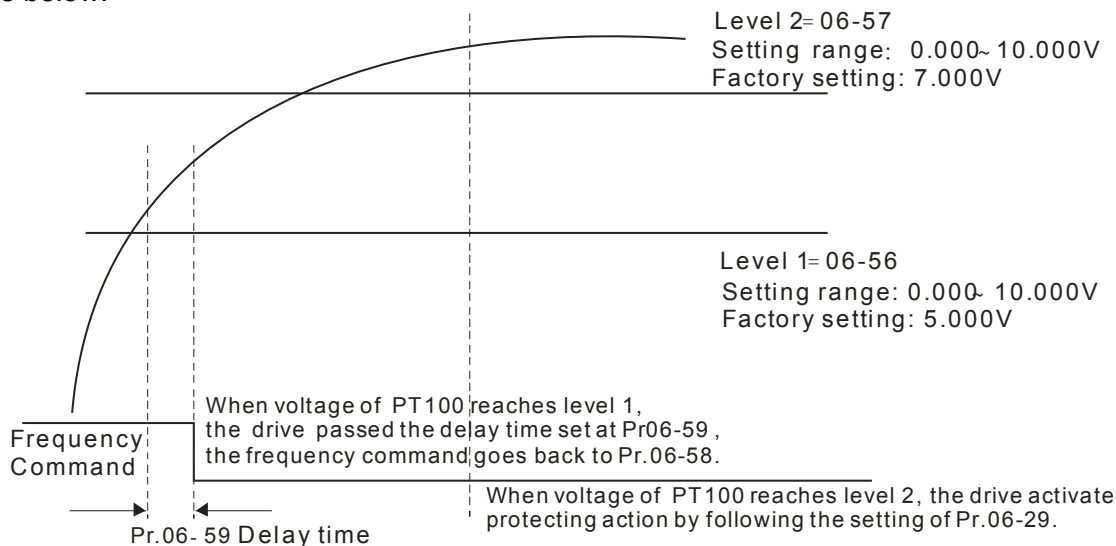

(7) PT100 wiring diagram:

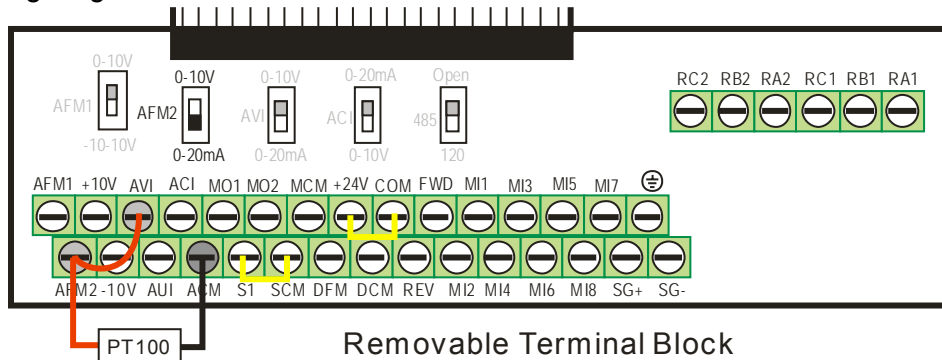

Removable Terminal Block
Figure 1

📖 When Pr.06-58=0.00Hz, PT100 function is disabled.

Example:

A PT100 is installed to the drive. If motor temperature reaches 135°C (275°F) or higher, the drive will decrease motor frequency to the setting of Pr.06-58. Motor will operate at this frequency (Pr.06-58) till the motor temperature decreases to 135°C (275°F) or lower. If motor temperature rises beyond 150°C (302°F), the motor will decelerate to stop and outputs an 'OH3' warning.

Set up process:

1. Switch AFM2 (SW2) to 0-20mA on the I/O control terminal block. (Refer to Figure 1, PT100 wiring diagram)
2. Wiring (Refer to Figure 1, PT100 wiring diagram):
 - Connect external terminal AFM2 to (+)
 - Connect external terminal ACM to (-)
 - Connect external terminals AFM2 and AVI to short-circuit
3. Set Pr.03-00=11 or Pr.03-23=23 or Pr.03-33=45%(9mA)
4. Refer to RTD temperature and resistance comparison table
 - Temperature=135°C, current=151.71Ω; Input current: 9mA, Voltage: approximately: 1.37Vdc
 - Temperature=150°C, current=157.33Ω; Input current: 9mA, Voltage: approximately: 1.42Vdc
5. Set Pr.06=56=1.37 and Pr.06-58=10Hz. When RTD temperature increases to 135°C or higher, the drive will decelerate to the selected frequency. When Pr.06-58=0, the drive will not run.
6. Set Pr.06-57=1.42 and Pr.06-29=1 (warning and decelerate to stop). When RTD temperature increases to 150°C or higher, the drive will decelerate to stop and outputs an 'OH3' warning.

06-59	Reserved	
06-60	Software Detection GFF Current Level	Factory Setting: 60.0
	Settings 0.0~6553.5 %	
06-61	Software Detection GFF Filter Time	Factory Setting: 0.10
	Settings 0.0~6553.5 %	
06-62	Disable Level of dab	Factory Setting: 180.0/360.0
	Settings 230V series: 0.0~220.0 Vic 460V series: 0.0~440.0 Vic	
06-63	Fault Record 1 (min)	
06-64	Fault Record 2 (min)	
06-65	Fault Record 3 (min)	
06-66	Fault Record 4 (min)	
06-67	Fault Record 5 (min)	
06-68	Fault Record 6 (min)	

Factory Setting: Read only

Settings 0~64799 min

Pr.06-63 to Pr.06-68 are used to record the operation time for 6 malfunctions and it can also check if there is any wrong with the drive according to the internal time.

When the malfunction occurs during operation, it records fault in Pr.06-17~06-22 and operation time is recorded in Pr.06-63~06-68.

For example: When the first fault ovA occurs after operation 3000 min., second fault ovd occurs at 3482 min., third fault ovA occurs at 4051 min., fourth fault ocA at 5003 min., fifth fault ocA at 5824 min., sixth fault ocd occurs at 6402 min. and seven fault ocS at 6951 min..

It'll be recorded as the following table:

It will be recorded as the following table:

First fault	Pr.06-17	ovA	Pr.06-63	3000	ovA occurs at the 3000 min after operating.
Second fault	Pr.06-17	ovd	Pr.06-63	3482	$3482-3000=482$ min ovd occurs at 482 min after last fault (ovA)
	Pr.06-18	ovA	Pr.06-64	3000	
Third fault	Pr.06-17	ovA	Pr.06-63	4051	$4051-3482=569$ min ovA occurs at 569 min after last fault (ovd)
	Pr.06-18	ovd	Pr.06-64	3482	
	Pr.06-19	ovA	Pr.06-65	3000	
Seven fault	Pr.06-17	ocS	Pr.06-63	12	$(12-5824)+64800=58988$ min ocS occurs at 58988 min after last fault (ocA)
	Pr.06-18	ocA	Pr.06-64	5824	
	Pr.06-19	ocA	Pr.06-65	5003	
	Pr.06-20	ovA	Pr.06-66	4051	
	Pr.06-21	ovd	Pr.06-67	3482	
	Pr.06-22	ovA	Pr.06-68	3000	

06-69 Time interval between errors occur (day)

Factory Setting: Read only

Settings Read only

06-70 Time interval between errors occur (minute)

Factory Setting: Read only

Settings Read only

06-71 Low Current Setting Level

Factory Setting: 0.0

Settings 0.0 ~ 6553.5 %

06-72 Low Current Detection Time


Factory Setting: 0.00

Settings 0.00 ~ 655.35 sec

06-73 Treatment for low current

Factory Setting: 0


Settings 0 : No function
 1 : warn and coast to stop
 2 : warn and ramp to stop by 2nd deceleration time
 3 : warn and operation continue


 The drive will operate as the setting of Pr.06-73 when output current is lower than the setting of Pr.06-71 and when low current continues for a period longer than the setting of Pr.06-72. This parameter can also be used with external multi-function output terminal 44 (MO44) for low current output.





07 Special Parameters

✎ This parameter can be set during operation.

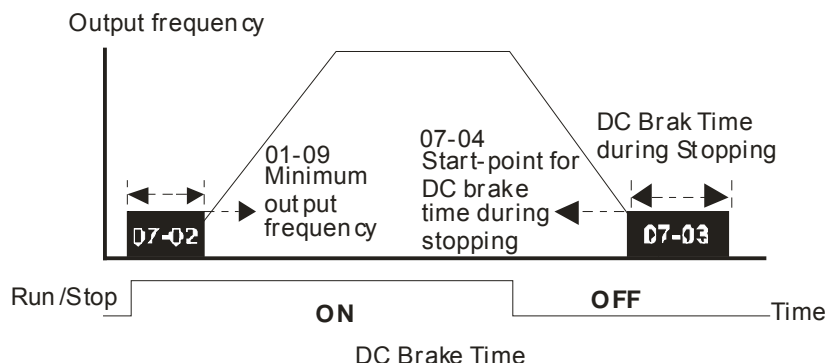-
- ✎ **07-00** Software Brake Level Factory Setting: 380.0/760.0
- Settings 230V series: 350.0~450.0Vdc
460V series: 700.0~900.0Vdc
-
- 📖 This parameter sets the DC-bus voltage at which the brake chopper is activated. Users can choose the suitable brake resistor to have the best deceleration. Refer to Chapter 7 Accessories for the information of the brake resistor.
- 📖 It is only valid for the models below 30kW of 460 series and 22kW of 230 series.
-
- ✎ **07-01** DC Brake Current Level Factory Setting: 0
- Settings 0~100%
-
- 📖 This parameter sets the level of DC Brake Current output to the motor during start-up and stopping. When setting DC Brake Current, the Rated Current is regarded as 100%. It is recommended to start with a low DC Brake Current Level and then increase until proper holding torque has been attained.
- 📖 When it is in FOCPG/TQCPG mode, DC brake is zero-speed operation. It can enable DC brake function by setting to any value.
-
- ✎ **07-02** DC Brake Time at Start-up Factory Setting: 0.0
- Settings 0.00~60.0 sec
-
- 📖 The motor may be in the rotation status due to external force or itself inertia. If the drive is used with the motor at this moment, it may cause motor damage or drive protection due to over current. This parameter can be used to output DC current before motor operation to stop the motor and get a stable start. This parameter determines the duration of the DC Brake current after a RUN command. When it is set to 0.0, it is invalid.
-
- ✎ **07-03** DC Brake Time at Stop Factory Setting: 0.00
- Settings 0.00~60.00 sec
-
- 📖 The motor may be in the rotation status after drive stop outputting due to external force or itself inertia and can't stop accurately. This parameter can output DC current to force the motor drive stop after drive stops to make sure that the motor is stop.
- 📖 This parameter determines the duration of the DC Brake current during stopping. To DC brake at stop, this function will be valid when Pr.00-22 is set to 0 or 2. When setting to 0.0, it is invalid.
- 📖 Related parameters: Pr.00-22 Stop Method, Pr.07-04 Start-point for DC Brake
-
- ✎ **07-04** Start-Point for DC Brake Factory Setting: 0.00
- Settings 0.00~600.00Hz
-

-  This parameter determines the frequency when DC Brake will begin during deceleration. When this setting is less than start frequency (Pr.01-09), the start-point for DC brake will start from the min. frequency.




-  DC Brake at Start-up is used for loads that may move before the AC drive starts, such as fans and pumps. Under such circumstances, DC Brake can be used to hold the load in position before setting it in motion.
-  DC Brake at stop is used to shorten the stopping time and also to hold a stopped load in position, such as crane or cutting machine.
-  DC Brake at Start-up is used for loads that may move before the AC drive starts, such as fans and pumps. Under such circumstances, DC Brake can be used to hold the load in position before setting it in motion.
-  DC Brake at stop is used to shorten the stopping time and also to hold a stopped load in position, such as crane or cutting machine.

07-05 Voltage Increasing Gain

Factory Setting: 100




Settings 1~200%

-  When the user is using speed tracking, adjust Pr07-05 to slow down the increasing of voltage if there are errors such as oL or ocv. Then the speed tracking time will be longer and the Pr07-09 Pivot Point of the Speed Tracking of the Current 20~200%, factory setting 50. If the pivot point of the user is higher than the Pr06-03 pivot point of the oc stall, then the drive will choose the pivot point of Pr06-03 as the highest pivot point of the speed tracking.

07-06 Restart after Momentary Power Loss

Factory Setting: 0

Settings 0: Stop operation
 1: Speed search for last frequency command
 2: Speed search for the minimum output frequency

-  This parameter determines the operation mode when the AC motor drive restarts from a momentary power loss.
-  The power connected to the drive may power off momentarily due to many reasons. This function allows the drive to keep outputting after power is on again after power off and won't cause drive stops.
-  Setting 1: Operation continues after momentary power loss, speed search starts with the Master Frequency reference value after drive output frequency and motor rotator speed is synchronous.

The motor has the characteristics of big inertia and small obstruction. For example, in the equipment with big inertia wheel, it doesn't need to wait to execute operation command until wheel is complete stop after re-start to save time.

- 📖 Setting 2: Operation continues after momentary power loss, speed search starts with the master frequency after drive output frequency and motor rotator speed is synchronous. The motor has the characteristics of small inertia and bigger obstruction.
- 📖 In PG control mode, the AC motor drive will execute the speed search function automatically by the PG speed when this setting isn't set to 0.

🔪 07-07 Maximum Power Loss Duration

Factory Setting: 2.0

Settings 0.1~20.0 sec


- 📖 If the duration of a power loss is less than this parameter setting, the AC motor drive will resume operation. If it exceeds the Maximum Allowable Power Loss Time, the AC motor drive output is then turned off (coast stop).
- 📖 The selected operation after power loss in Pr.07-06 is only executed when the maximum allowable power loss time is ≤ 5 seconds and the AC motor drive displays "LU". But if the AC motor drive is powered off due to overload, even if the maximum allowable power loss time is ≤ 5 seconds, the operation mode as set in Pr.07-06 is not executed. In that case it starts up normally.

🔪 07-08 Base block Time


Factory Setting: 0.5

Settings 0.1~5.0 sec


- 📖 When momentary power loss is detected, the AC drive will block its output and then wait for a specified period of time (determined by Pr.07-08, called Base-Block Time) before resuming operation. This parameter should be set at a value to ensure that any residual regeneration voltage from the motor on the output has disappeared before the drive is activated again.

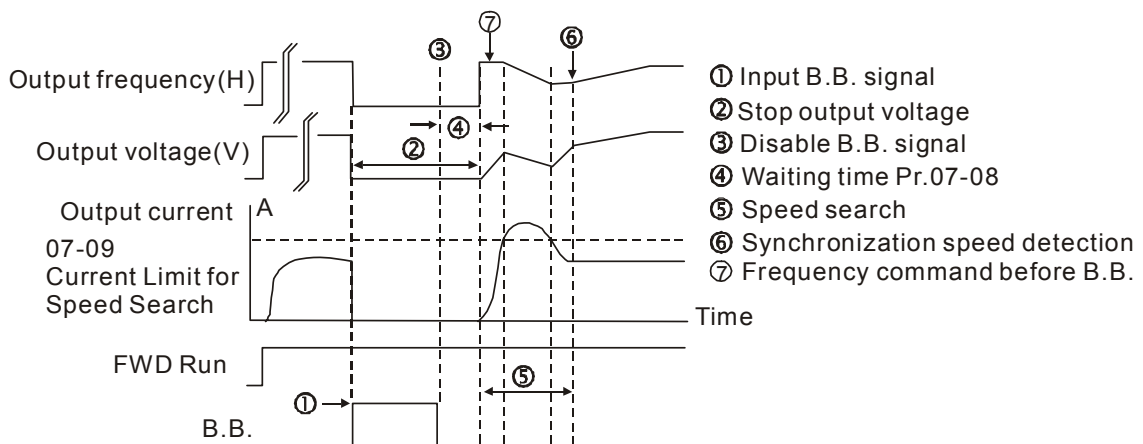

B.B. Search with last output frequency downward timing chart

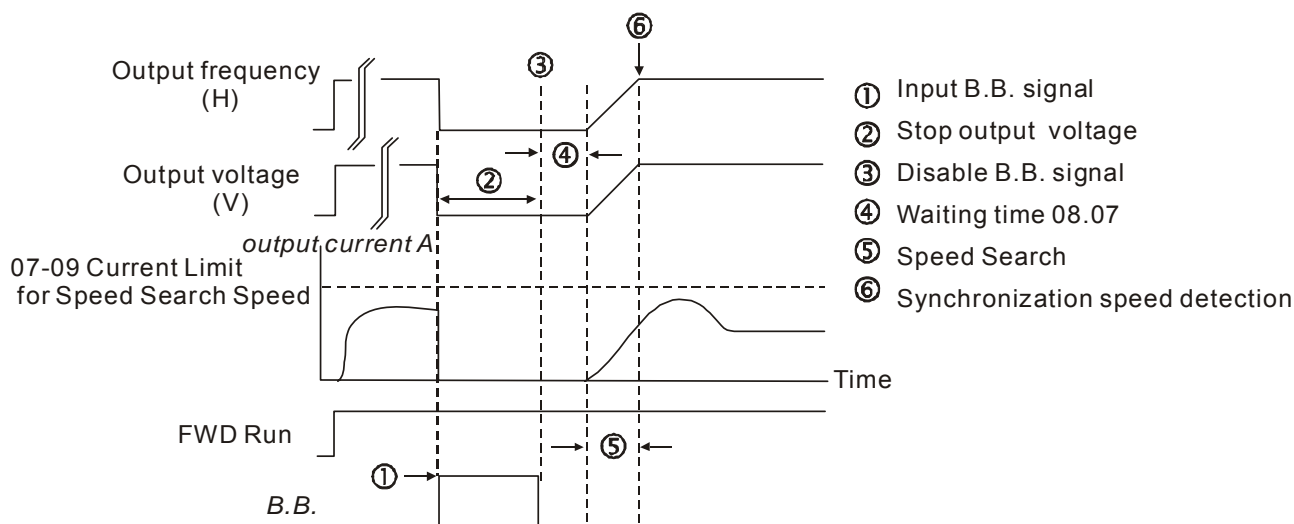

B.B. Search with minimum output frequency upward timing chart

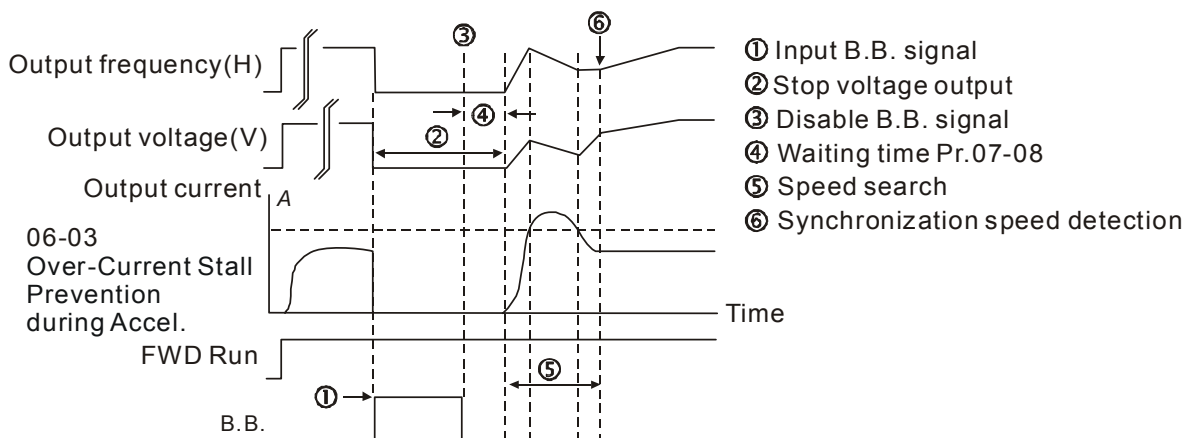

B.B. Search with minimum output frequency upward timing chart

07-09 Current Limit for Speed Search Factory Setting: 50

Settings 20~200%

- Following a momentary power loss, the AC motor drive will start its speed search operation only if the output current is greater than the value set by Pr.07-09.
- When executing speed search, the V/f curve is operated by group 1 setting. The maximum current for the optimum accel./decel. and start speed search is set by Pr.07-09.
- The speed search level will affect the synchronous time. It will get the synchronization faster when this parameter is set to larger value. But too large value may active overload protection.

07-10 Treatment to Reboots After Fault Factory Setting: 0

Settings 0: Stop operation
 1: Speed search starts with current speed
 2: Speed search starts with minimum output frequency




- In PG control mode, the AC motor drive will execute the speed search function automatically by the PG speed when this setting isn't set to 0.

 Fault includes: bb,oc,ov,occ etc. To restart after oc, ov, occ, Pr.07-11 can not be set to 0.

07-11 Auto Restart After Fault

Factory Setting: 0

Settings 0~10



-  After fault (oc, ov, ov), occurs the AC motor drive can be reset/restarted automatically up to 10 times.
-  Setting this parameter to 0 will disable the reset/restart operation after any fault has occurred. When enabled, the AC motor drive will restart with speed search, which starts at the frequency before the fault.
-  If the drive execute reset/restart after fault more than the numbers of time set in Pr.07-11 and the limit is reached within the time period in Pr.07-33, the drive will stop execute reset/restart after fault function. User will be need to input RESET manually for the drive to continue operation.

07-12 Speed Search during Start-up

Factory Setting: 0

Settings 0: Disable

- 1: Speed search from maximum output frequency
- 2: Speed search from start-up motor frequency
- 3: Speed search from minimum output frequency


-  This parameter is used for starting and stopping a motor with a high inertia. A motor with high inertia will take 2-5 minutes or longer to stop completely. By setting this parameter, the user does not need to wait for the motor to come to a complete stop before restarting the AC motor drive. If a PG card and encoder is used on the drive and motor, then the speed search will start from the speed that is detected by the encoder and accelerate quickly to the commanded frequency. The output current is set by the Pr.07-09.
-  In PG control mode, the AC motor drive will execute the speed search function automatically by the PG speed when this setting isn't set to 0.

07-13 Decel. Time at Momentary Power Loss (dEb function)

Factory Setting: 0

Settings 0: Disable


- 1: 1st decel. time
- 2: 2nd decel. time
- 3: 3rd decel. time
- 4: 4th decel. time
- 5: Current decel. time
- 6: Auto decel. time

-  This parameter is used for the decel. time selection for momentary power loss.


07-14 dEb Return Time

Factory Setting: 0.0

Settings 0.0~25.0 sec

 function is the AC motor drive decelerates to stop after momentary power loss. When the momentary power loss occurs, this function can be used for the motor to decelerate to 0 speed with deceleration stop method. When the power is on again, motor will run again after DEB return time. (has applied on high-speed spindle)


Status 1: Insufficient power supply due to momentary power-loss/unstable power (due to low voltage)/sudden heavy-load

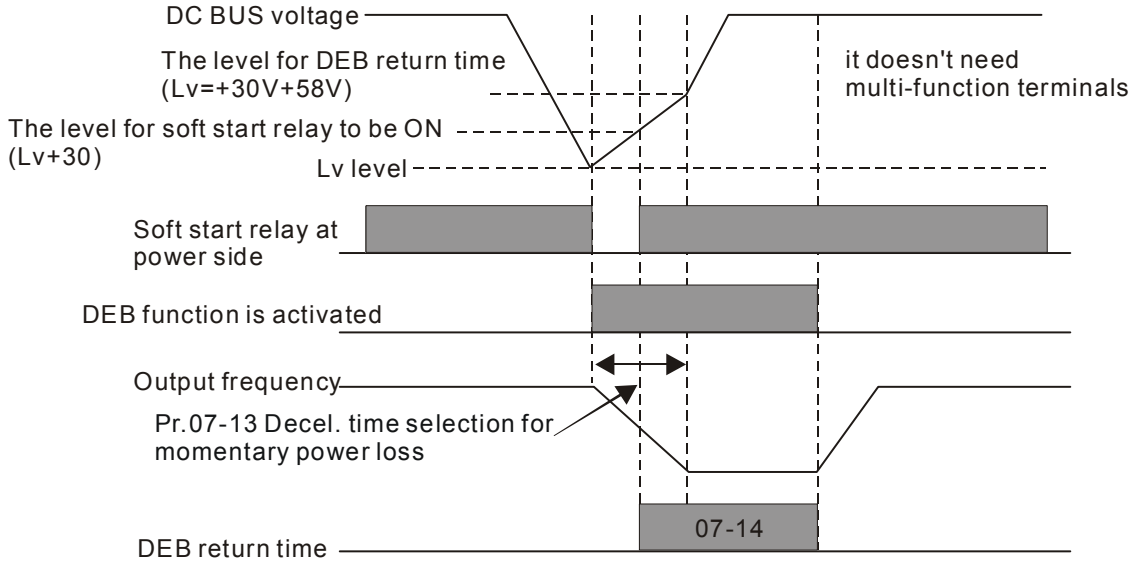

 **NOTE**

When Pr.07-14 is set to 0, the AC motor drive will be stopped and won't re-start at the power-on again.

Status 2: unexpected power off, such as momentary power loss

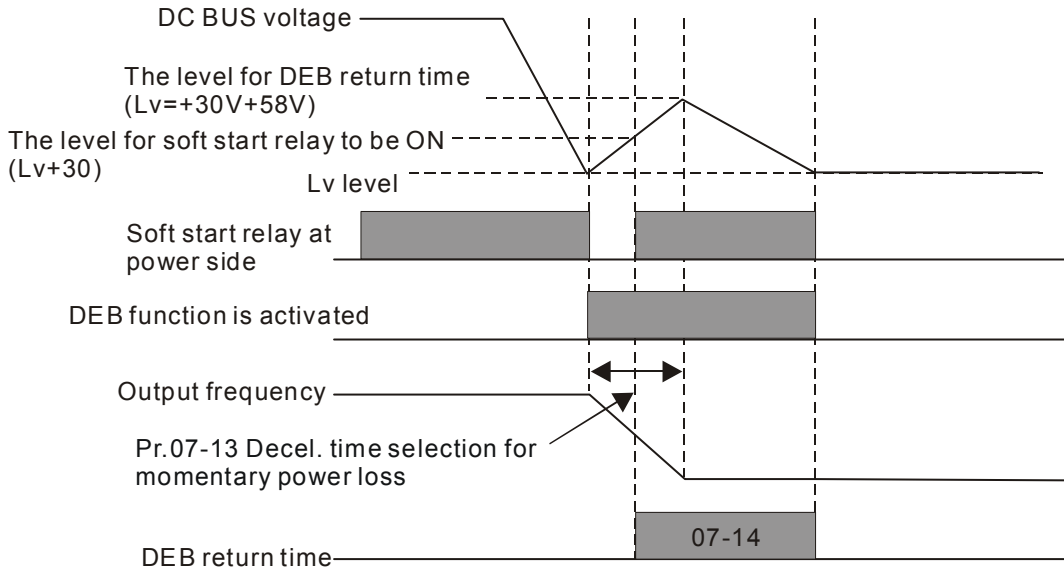

 **NOTE**

For example, in textile machinery, you will hope that all the machines can be decelerated to stop to prevent broken stitching when power loss. In this case, the host controller will send a message to the AC motor drive to use dEb function with deceleration time via EF.

↖ **07-15** Dwell Time at Accel.

Factory Setting: 0.00

Settings 0.00~600.00 sec

↖ **07-16** Dwell Frequency at Accel.

Factory Setting: 0.00

Settings 0.00~600.00Hz

07-17 Dwell Time at Decel.


Factory Setting: 0.00

Settings 0.00~600.00 sec


07-18 Dwell Frequency at Decel.

Factory Setting: 0.00

Settings 0.00~600.00 Hz

 In the heavy load situation, Dwell can make stable output frequency temporarily, such as crane or elevator.

 Pr.07-15 to Pr.07-18 is for heavy load to prevent OV or OC occurs.

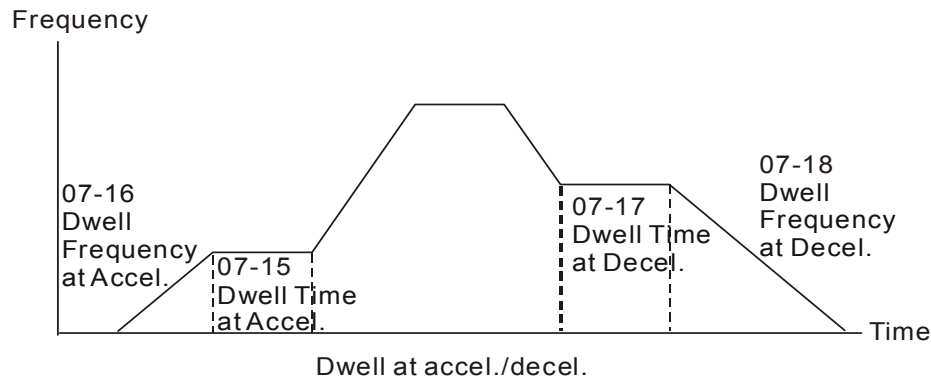

07-19 Fan Cooling Control

Factory Setting: 0


Settings 0: Fan always ON


1: 1 minute after the AC motor drive stops, fan will be OFF


2: When the AC motor drive runs, the fan is ON. When the AC motor drive stops, the fan is OFF


3: Fan turns ON when preliminary heat sink temperature (around 60°C) is attained.


4: Fan always OFF

 This parameter is used for the fan control.

 Setting 0: Fan will be ON as the drive's power is turned ON.

 Setting 1: 1 minute after AC motor drive stops, fan will be OFF

 Setting 2: AC motor drive runs and fan will be ON. AC motor drive stops and fan will be OFF.

 Setting 3: Fan run according to IGBT and capacitance temperature. Fan will be ON when preliminary capacitance temperature is higher than 60oC. Fan will be OFF, when capacitance temperature is lower than 40oC.

 Setting 4: Fan is always OFF

07-20 Emergency Stop (EF) & Force Stop

Factory Setting: 0

Settings 0: Coast to stop

1: Stop by 1st deceleration time2: Stop by 2nd deceleration time3: Stop by 3rd deceleration time

4: Stop by 4th deceleration time

5: System Deceleration

6: Automatic Deceleration

Pr.07-20 determines AC motor drive stop method. When the multi-function input terminal is set to 10 or 18 and is activated, the drive will stop according to the setting in Pr.07-20.

07-21 Auto Energy-saving Operation


Factory Setting: 0

Settings 0: Disable

1: Enable

When Pr.07-21 is set to 1, the acceleration and deceleration will operate with full voltage. During constant speed operation, it will auto calculate the best voltage value by the load power for the load. This function is not suitable for the ever-changing load or near full-load during operation.

When the output frequency is constant, i.e. constant operation, the output voltage will auto decrease by the load reduction. Therefore, the drive will operate with min. power, multiplication of voltage and current.

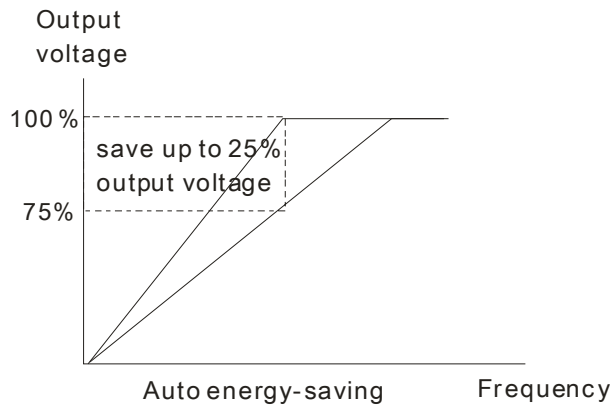

07-22 Energy-saving Gain

Factory Setting: 100

Settings 10~1000%

When Pr.00-19 is set to 1, this parameter can be used to adjust the gain of energy-saving. The factory setting is 100%. If the result is not good, it can adjust by decreasing the setting. If the motor oscillates, it should increase the setting.

07-23 Auto Voltage Regulation(AVR) Function

Factory Setting: 0

Settings 0: Enable AVR






1: Disable AVR

2: Disable AVR during deceleration

The rated voltage of the motor is usually 220V/200VAC 60Hz/50Hz and the input voltage of the AC motor drive may vary between 180V to 264 VAC 50Hz/60Hz. Therefore, when the AC motor drive is used without AVR function, the output voltage will be the same as the input voltage. When the motor runs at voltages exceeding the rated voltage with 12% - 20%, its lifetime will be shorter and it can be damaged due to higher temperature, failing insulation and unstable torque output.

AVR function automatically regulates the AC motor drive output voltage to the motor rated voltage.


For instance, if V/f curve is set at 200 VAC/50Hz and the input voltage is at 200V to 264VAC, then the motor Output Voltage will automatically be reduced to a maximum of 200VAC/50Hz. If the input voltage is at 180V to 200VAC, output voltage to motor and input power will be in direct proportion.

-  Setting 0: when AVR function is enabled, the drive will calculate the output voltage by actual DC-bus voltage. The output voltage won't be changed by DC bus voltage.
-  Setting 1: when AVR function is disabled, the drive will calculate the output voltage by DC-bus voltage. The output voltage will be changed by DC bus voltage. It may cause insufficient/over current.
-  Setting 2: the drive will disable the AVR during deceleration, such as operated from high speed to low speed.
-  When the motor ramps to stop, the deceleration time is longer. When setting this parameter to 2 with auto acceleration/deceleration, the deceleration will be quicker.
-  When it is in FOC PG or TQCPG, it is recommended to set to 0 (enable AVR).

07-24 Filter Time of Torque Command (V/F and SVC control mode)

Factory Setting: 0.020



Settings 0.001~10.000 sec

-  When the setting is too long, the control will be stable but the control response will be delay. When the setting is too short, the response will be quickly but the control may be unstable. User can adjust the setting by the control and response situation.

07-25 Filter Time of Slip Compensation (V/F and SVC control mode)

Factory Setting: 0.100




Settings 0.001~10.000 sec

-  It can set Pr.05-22 and 05-23 to change the response time of compensation.
-  If Pr.05-22 and 05-23 are set to 10seconds, the response time of compensation is the slowest. But the system may be unstable when the setting is too short.

07-26 Torque Compensation Gain (V/F and SVC control mode)

Factory Setting: 0






Settings 0~10

-  When the motor load is large, a part of drive output voltage is absorbed by the resistor of stator winding and causes insufficient voltage at motor induction and result in over output current and insufficient output torque. It can auto adjust output voltage by the load and keep the air gap magnetic fields stable to get the optimal operation.
-  In the V/F control, the voltage will be decreased in direct proportion when the frequency is decreased. It'll cause decrease torque at low speed due to small AC resistor and the same DC resistor. Therefore, Auto torque compensation function will increase the output voltage in the low frequency to get higher start torque.
-  When Pr.07-26 is set to large, it may cause motor overflux and result in too large output current, motor overheat or triggers protection function.

✎ **07-27** Slip Compensation Gain (V/F and SVC control mode)

Factory Setting: 0.00

Settings 0.00~10.00

-  The induction motor needs the constant slip to produce magnetic torque. It can be ignore in the higher motor speed, such as rated speed or 2-3% slip.
-  In the operation with variable frequency, the slip and the synchronous frequency will be in reverse proportion to produce the same magnetic torque. That is the slip will be larger with the reduction of synchronous frequency. The motor may stop when the synchronous frequency is decreased to a specific value. Therefore, the slip serious affects the accuracy of motor speed at low speed.
-  In another situation, when the drive uses with induction motor, the slip will be increased by the increasing load. It also affects the accuracy of motor speed.
-  This parameter can be used to set compensation frequency and reduce the slip to close the synchronous speed when the motor runs in the rated current to raise the drive accuracy. When the drive output current is larger than Pr.05-05 No-load Current of Induction Motor 1 (A), the drive will compensation the frequency by this parameter.
-  When the control method (Pr.00-11) is changed from V/f mode to vector mode, this parameter will auto be set to 1.00. Otherwise, it will be set to 0.00. Please do the compensation of slip after overload and acceleration. The compensation value should be increased from small to large gradually. That is to add the output frequency with motor rated slip X Pr.07-27 Slip Compensation Gain when the motor is rated load. If the actual speed ratio is slow than expectation, please increase the setting. Otherwise, decrease the setting.

07-28 Reserved

✎ **07-29** Slip Deviation Level

Factory Setting: 0

Settings 0~100.0%
0: No detection

✎ **07-30** Detection Time of Slip Deviation


Factory Setting:1.0

Settings 0.0~10.0 sec

✎ **07-31** Over Slip Treatment

Factory Setting:0

Settings 0: Warn and keep operation
1: Warn and ramp to stop
2: Warn and coast to stop
3: No warning


-  Pr.07-29 to Pr.07-31 are used to set allowable slip level/time and over slip treatment when the drive is running.

✎ **07-32** Motor Hunting Gain

Factory Setting:1000

Settings 0~10000


0: Disable

-  The motor will have current wave motion in some specific area. It can improve this situation by setting this parameter. (When it is high frequency or run with PG, it can be set to 0. when the current wave motion happens in the low frequency, please increase Pr.05-29.)

↘ **07-33** Recovery Time to Pr.07-11 (# of automatic reboots after fault)

Factory Setting:60.0

Settings 00~6000.0 sec

-  When a reset/restart after fault occurs, the drive will regards Pr.07-33 as a time boundary and begin counting the numbers of faults occur within this time period. Within the period, if numbers of faults occurred did not exceed the setting in Pr.07-11, the counting will be cleared and starts from 0 when next fault occurs. However, if the numbers of faults occurred within this time period have exceed the setting in Pr.07-11, user will need to press RESET key manually for the drive to operate again.

08 High-function PID Parameters

✎ This parameter can be set during operation.

08-00 Input Terminal for PID Feedback


Factory Setting:0

- Settings
- 0: No function
 - 1: Negative PID feedback: input from external terminal AVI (Pr.03-00)
 - 2: Negative PID feedback from PG card (Pr.10-15, skip direction)
 - 3: Negative PID feedback from PG card (Pr.10-15)
 - 4: Positive PID feedback from external terminal AVI (Pr.03-00)
 - 5: Positive PID feedback from PG card (Pr.10-15, skip direction)
 - 6: Positive PID feedback from PG card (Pr.10-15)
 - 7: Negative PID feedback from communication protocol
 - 8: Positive PID feedback from communication protocol

- 📖 Negative feedback means: +target value – feedback. It is used for the detection value will be increased by increasing the output frequency.
- 📖 Positive feedback means: -target value + feedback. It is used for the detection value will be decreased by increasing the output frequency.
- 📖 When Pr08-00≠7 neither ≠8, input value is disabled. The value of the setting remain the same after the derive is off.

Common applications for PID control

- ☑ Flow control: A flow sensor is used to feedback the flow data and performs accurate flow control.
 - ☑ Pressure control: A pressure sensor is used to feedback the pressure data and performs precise pressure control.
 - ☑ Air volume control: An air volume sensor is used to feedback the air volume data to have excellent air volume regulation.
 - ☑ Temperature control: A thermocouple or thermistor is used to feedback temperature data for comfortable temperature control.
 - ☑ Speed control: A speed sensor or encoder is used to feedback motor shaft speed or input another machines speed as a target value for closed loop speed control of master-slave operation. Pr.10.00 sets the PID set point source (target value).
 - ☑ PID control operates with the feedback signal as set by Pr.10.01 either 0~+10V voltage or 4-20mA current.
- 📖 PID control loop:

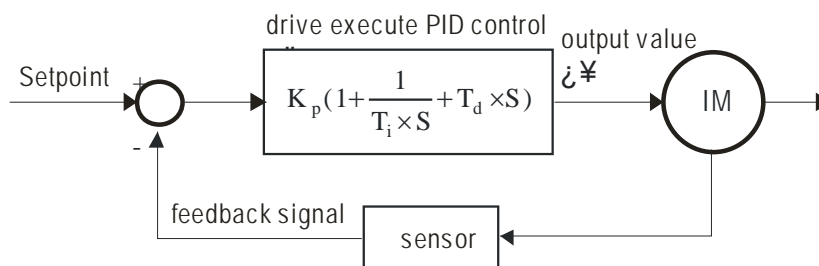

K_p : Proportional gain(P) T_i : Integral time(I) T_d : Derivative control(D) S: Operator

📖 Concept of PID control

1. Proportional gain(P):

the output is proportional to input. With only proportional gain control, there will always be a steady-state error.

2. Integral time(I):


the controller output is proportional to the integral of the controller input. To eliminate the steady-state error, an “integral part” needs to be added to the controller. The integral time decides the relation between integral part and error. The integral part will be increased by time even if the error is small. It gradually increases the controller output to eliminate the error until it is 0. In this way a system can be stable without steady-state error by proportional gain control and integral time control.

3. Differential control(D):

the controller output is proportional to the differential of the controller input. During elimination of the error, oscillation or instability may occur. The differential control can be used to suppress these effects by acting before the error. That is, when the error is near 0, the differential control should be 0. Proportional gain(P) + differential control(D) can be used to improve the system state during PID adjustment.


📖 When PID control is used in a constant pressure pump feedback application:

Set the application's constant pressure value (bar) to be the set point of PID control. The pressure sensor will send the actual value as PID feedback value. After comparing the PID set point and PID feedback, there will be an error. Thus, the PID controller needs to calculate the output by using proportional gain(P), integral time(I) and differential time(D) to control the pump. It controls the drive to have different pump speed and achieves constant pressure control by using a 4-20mA signal corresponding to 0-10 bar as feedback to the drive.

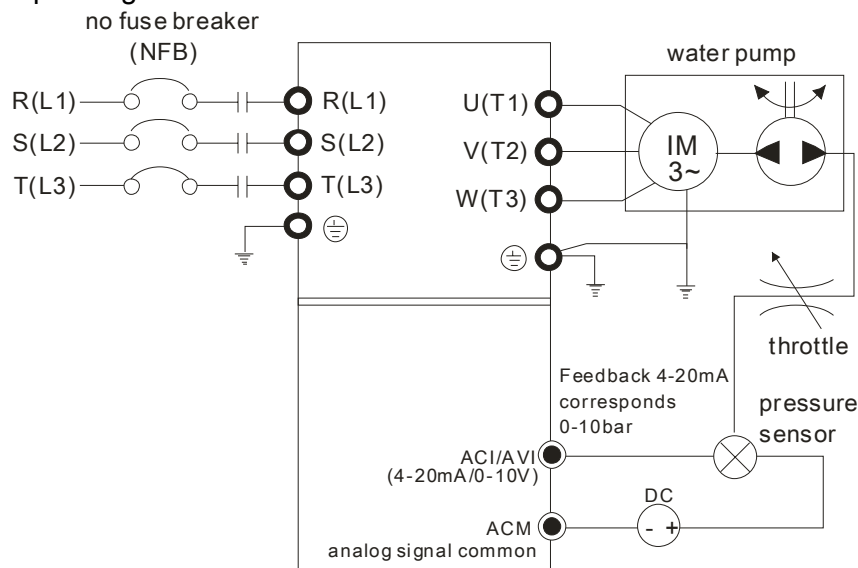

1. Pr.00-04 is set to 10 (Display PID analog feedback signal value (b) (%))
2. Pr.01-12 Acceleration Time will be set as required
3. Pr.01-13 Deceleration Time will be set as required
4. Pr.00-21=0 to operate from the digital keypad
5. Pr.00-20=0, the set point is controlled by the digital keypad
6. Pr.08-00=1 (Negative PID feedback from analog input)
7. ACI analog input Pr. 03-01 set to 5, PID feedback signal.

- 8. Pr.08-01-08-03 will be set as required
- 8.1 If there is no vibration in the system, increase Pr.08-01(Proportional Gain (P))
- 8.2 If there is no vibration in the system, reduce Pr.08-02(Integral Time (I))
- 8.3 If there is no vibration in the system, increase Pr.08-03(Differential Time(D))

 Refer to Pr.08-00 to 08-21 for PID parameters settings.

08-01 Proportional Gain (P)

Factory Setting:80.0

Settings 0.0~500.0%





- It is used to eliminate the system error. It is usually used to decrease the error and get the faster response speed. But if setting too large value in Pr.08-01, it may cause the system oscillation and instability.
- If the other two gains (I and D) are set to zero, proportional control is the only one effective.

08-02 Integral Time (I)

Factory Setting:1.00

Settings 0.00~100.00 sec




0.00: Disable

-  The integral controller is used to eliminate the error during stable system. The integral control doesn't stop working until error is 0. The integral is acted by the integral time. The smaller integral time is set, the stronger integral action will be. It is helpful to reduce overshoot and oscillation to make a stable system. At this moment, the decreasing error will be slow. The integral control is often used with other two controls to become PI controller or PID controller.
-  This parameter is used to set the integral time of I controller. When the integral time is long, it will have small gain of I controller, the slower response and bad external control. When the integral time is short, it will have large gain of I controller, the faster response and rapid external control.
-  When the integral time is too small, it may cause system oscillation.
-  If the integral time is set as 0.00, Pr.08-02 will be disabled.









08-03 Derivative Control (D)

Factory Setting:0.00


Settings 0.00~1.00 sec


-  The differential controller is used to show the change of system error and it is helpful to preview the change of error. So the differential controller can be used to eliminate the error to improve system state. With the suitable differential time, it can reduce overshoot and shorten adjustment time. However, the differential operation will increase the noise interference. Please note that too large differential will cause big noise interference. Besides, the differential shows the change and the output of the differential will be 0 when there is no change. Therefore, the differential control can't be used independently. It needs to be used with other two controllers to make a PD controller or PID controller.
-  This parameter can be used to set the gain of D controller to decide the response of error change. The suitable differential time can reduce the overshoot of P and I controller to decrease the oscillation and have a stable system. But too long differential time may cause system oscillation.
-  The differential controller acts for the change of error and can't reduce the interference. It is not


recommended to use this function in the serious interference.


- ↗ **08-04** Upper limit of Integral Control Factory Setting:100.0
- Settings 0.0~100.0%
-
-  This parameter defines an upper bound or limit for the integral gain (I) and therefore limits the Master Frequency. The formula is: Integral upper bound = Maximum Output Frequency (Pr.01-00) x (Pr.08-04 %).
-  Too large integral value will make the slow response due to sudden load change. In this way, it may cause motor stall or machine damage.
- ↗ **08-05** PID Output Frequency Limit Factory Setting:100.0
- Settings 0.0~110.0%
-
-  This parameter defines the percentage of output frequency limit during the PID control. The formula is Output Frequency Limit = Maximum Output Frequency (Pr.01-00) X Pr.08-05 %.
- ↗ **08-06** PID feedback value by communication protocol Factory Setting: 0.00
- Settings 0.00~200.00%
-
- ↗ **08-07** PID Delay Time Factory Setting: 0.0
- Settings 0.0~35.0 sec
-
- 08-20** PID Mode Selection Factory Setting: 0
- Settings 0: Serial connection
1: Parallel connection
-
-  Pr.08-07 determines the primary low pass filter time when in PID control. Setting a large time constant may slow down the response rate of drive.
-  Output frequency of PID control will filter by primary low pass function. This function could filtering a mix frequencies. A long primary low pass time means filter degree is high and vice versa.
-  Inappropriate setting of delay time may cause system error.
-  PI Control: controlled by the P action only, and thus, the deviation cannot be eliminated entirely. To eliminate residual deviations, the P + I control will generally be utilized. And when the PI control is utilized, it could eliminate the deviation incurred by the targeted value changes and the constant external interferences. However, if the I action is excessively powerful, it will delay the responding toward the swift variation. The P action could be used solely on the loading system that possesses the integral components.
-  PD Control: when deviation occurred, the system will immediately generate some operation load that is greater than the load generated single handedly by the D action to restrain the increment of the deviation. If the deviation is small, the effectiveness of the P action will be decreasing as well. The control objects include occasions with integral component loads, which are controlled by the


P action only, and sometimes, if the integral component is functioning, the whole system will be vibrating. On such occasions, in order to make the P action's vibration subsiding and the system stabilizing, the PD control could be utilized. In other words, this control is good for use with loadings of no brake functions over the processes.

 PID Control: Utilize the I action to eliminate the deviation and the D action to restrain the vibration, thereafter, combine with the P action to construct the PID control. Use of the PID method could obtain a control process with no deviations, high accuracies and a stable system.

 Serial connection

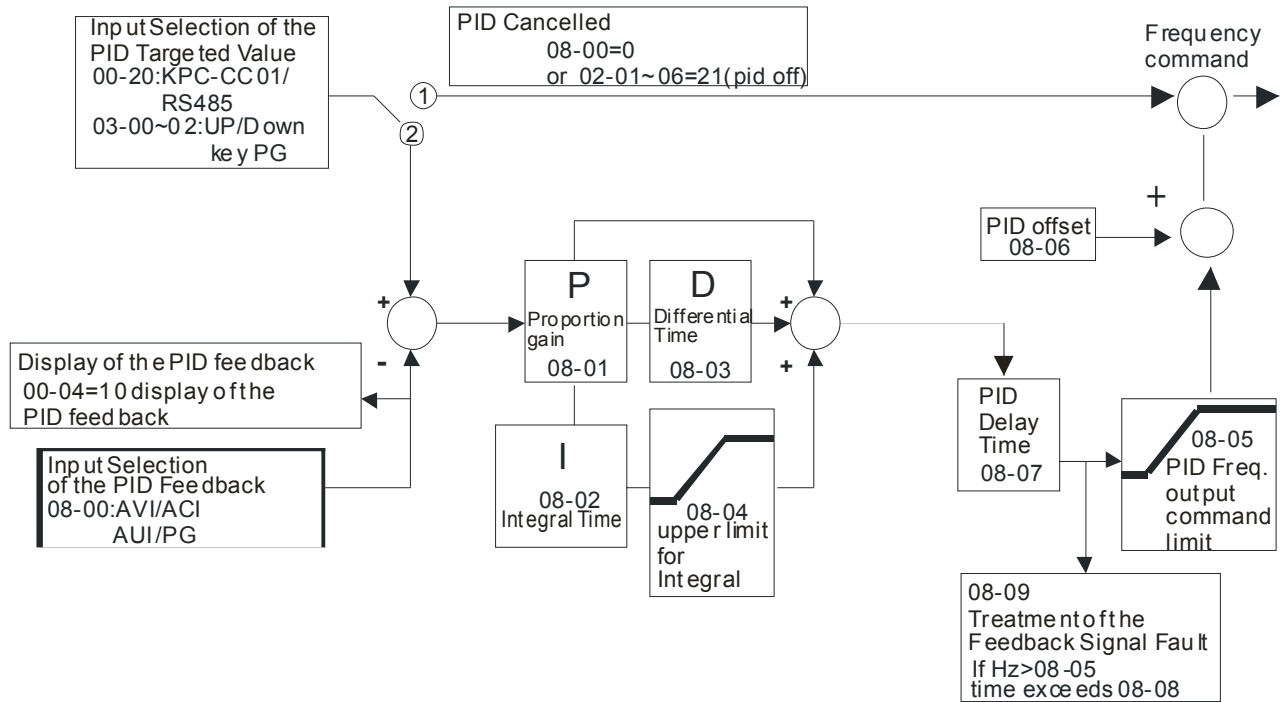

 Parallel connection

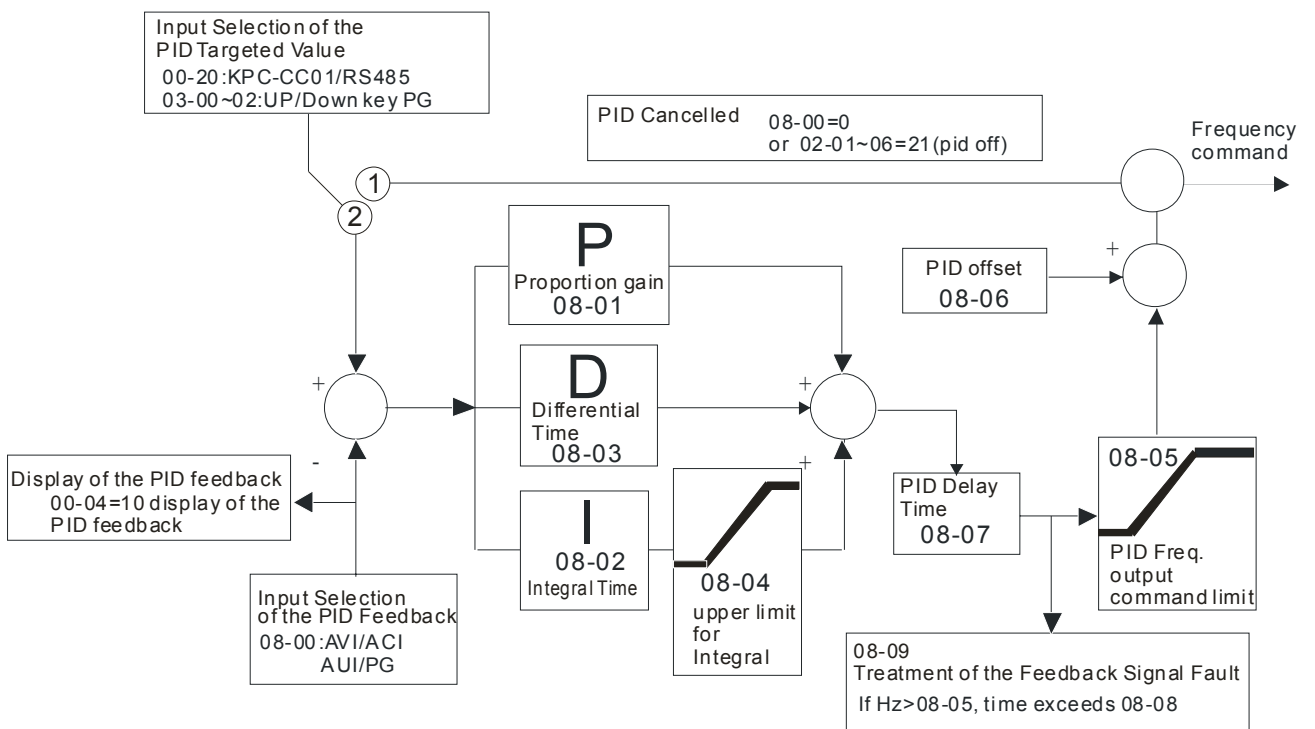

08-08 Feedback Signal Detection Time

Factory Setting: 0.0

Settings 0.0~3600.0 sec

Pr.08-08 is valid only if the feedback signal is ACI.

This parameter sets the detection time of abnormal PID derivative. If detection time is set to 0.0, detection function is disabled.

08-09 Feedback Signal Fault Treatment

Factory Setting: 0

Settings 0: Warn and keep operation
 1: Warn and ramp to stop
 2: Warn and coast to stop
 3: Warn and operate at last frequency

This parameter is valid only when the feedback signal is ACI.

AC motor drive acts when the feedback signals (analog PID feedback or PG (encoder) feedback) are abnormal.

08-10 Sleep Frequency

Factory Setting: 0.00

Settings 0.00~600.00Hz

08-11 Wake-up Frequency

Factory Setting: 0.00


Settings 0.00~600.00Hz

08-12 Sleep Time

Factory Setting: 0.0

Settings 0.00~6000.0 sec

If the command frequency falls below the sleep frequency, for the specified time in Pr. 08-12, then the drive will shut off the output and wait until the command frequency rises above Pr.08-11.

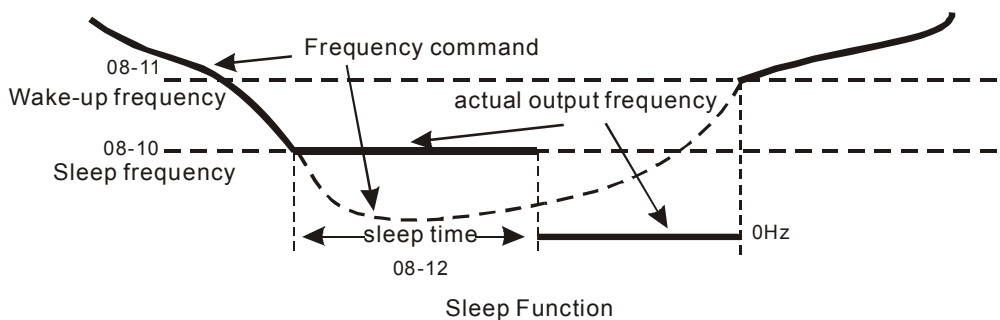

08-13 PID Deviation Level

Factory Setting: 10.0

Settings 1.0~50.0%

08-14 PID Deviation Time

Factory Setting: 5.0


Settings 0.1~300.0 sec

↗	08-15	Filter Time for PID Feedback	Factory Setting: 5.0
		Settings 0.1~300.0 sec	
📖	When the PID control function is normal, it should calculate within a period of time and close to the setpoint value.		
📖	Refer to the PID control diagram for details. When executing PID feedback control, if $ \text{PID reference target value} - \text{detection value} > \text{Pr.08-13 PID Deviation Level}$ and exceeds Pr.08-14 setting, the PID control fault occurs. The treatment will be done as Pr.08-09 setting.		
↗	08-16	PID Compensation Selection	Factory Setting: 0
		Settings 0: Parameter setting 1: Analog input	
↗	08-17	PID Compensation	Factory Setting: 0
		Settings -100.0~+100.0%	
08-18	Setting of Sleep Mode Function		Factory Setting: 0
		Settings 0: Follow PID output command 1: Follow PID feedback signal	
08-19	Wake-up Integral Limit		Factory Setting: 50.0
		Settings 0.0~200.0%	
08-21	Enable PID to Change the Operation Direction		Factory Setting: 0
		Settings 0: Disable change of direction 1: Enable change of direction	

09 Communication Parameters

✎ The parameter can be set during the operation.

When using communication devices, connects AC drive with PC by using Delta IFD6530 or IFD6500.

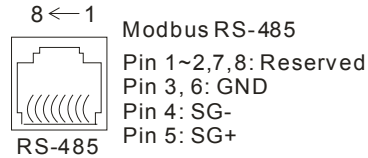

✎ 09-00 COM1 Communication Address

Factory Setting: 1

Settings 1~254

📖 If the AC motor drive is controlled by RS-485 serial communication, the communication address for this drive must be set via this parameter. And the communication address for each AC motor drive must be different and unique.

✎ 09-01 COM1 Transmission Speed

Factory Setting: 9.6

Settings 4.8~115.2 Kbps

📖 This parameter is used to set the transmission speed between the RS485 master (PLC, PC, etc.) and AC motor drive.

✎ 09-02 COM1 Transmission Fault Treatment

Factory Setting: 3

Settings 0: Warn and keep operation
1: Warn and ramp to stop
2: Warn and coast to stop
3: No warning and continue operation

📖 This parameter is set to how to react if transmission errors occur.

✎ 09-03 COM1 Time-out Detection

Factory Setting: 0.0

Settings 0.0~100.0 sec
0.0: Disable




📖 It is used to set the transmission time between communication and keypad.

✎ 09-04 COM1 Communication Protocol

Factory Setting: 1

Settings 1: 7, N, 2 for ASCII
2: 7, E, 1 for ASCII
3: 7, O, 1 for ASCII
4: 7, E, 2 for ASCII
5: 7, O, 2 for ASCII
6: 8, N, 1 for ASCII
7: 8, N, 2 for ASCII
8: 8, E, 1 for ASCII

- 9: 8, O, 1 for ASCII
- 10: 8, E, 2 for ASCII
- 11: 8, O, 2 for ASCII
- 12: 8, N, 1 for RTU
- 13: 8, N, 2 for RTU
- 14: 8, E, 1 for RTU
- 15: 8, O, 1 for RTU
- 16: 8, E, 2 for RTU
- 17: 8, O, 2 for RTU

-  Control by PC or PLC (Computer Link)
-  A VFD-C2000 can be set up to communicate on Modbus networks using one of the following modes: ASCII (American Standard Code for Information Interchange) or RTU (Remote Terminal Unit). Users can select the desired mode along with the RS-485 serial port communication protocol in Pr.09-00.
-  MODBUS ASCII (American Standard Code for Information Interchange) : Each byte data is the combination of two ASCII characters. For example, a 1-byte data: 64 Hex, shown as '64' in ASCII, consists of '6' (36Hex) and '4' (34Hex).

1. Code Description

Communication protocol is in hexadecimal, ASCII: "0", "9", "A", "F", every 16 hexadecimal represent ASCII code. For example:


Character	'0'	'1'	'2'	'3'	'4'	'5'	'6'	'7'
ASCII code	30H	31H	32H	33H	34H	35H	36H	37H

Character	'8'	'9'	'A'	'B'	'C'	'D'	'E'	'F'
ASCII code	38H	39H	41H	42H	43H	44H	45H	46H


 Data Format

10-bit character frame (For ASCII):


(7 , N , 2)

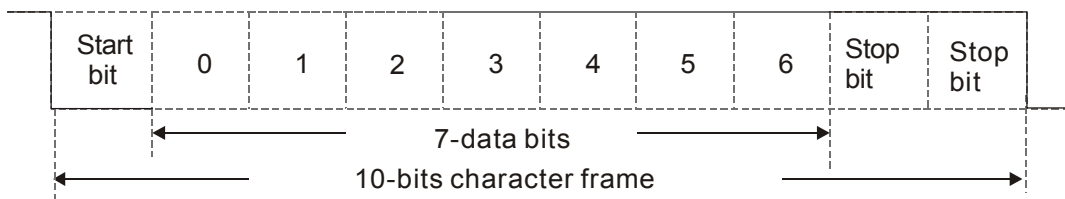

(7 , E , 1)

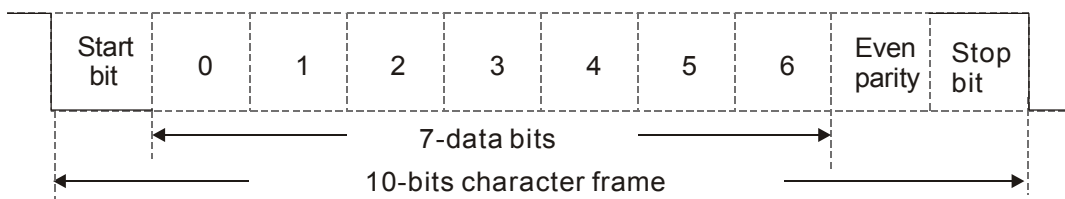


(7, 0, 1)

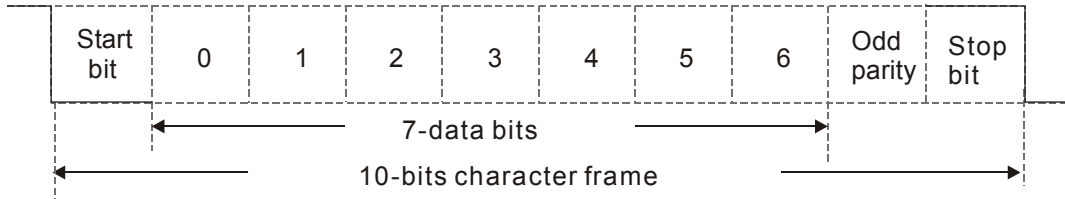


11-bit character frame (For RTU):


(8, N, 2)

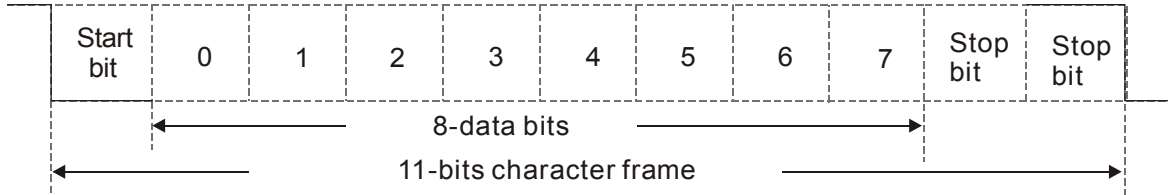

(8, E, 1)

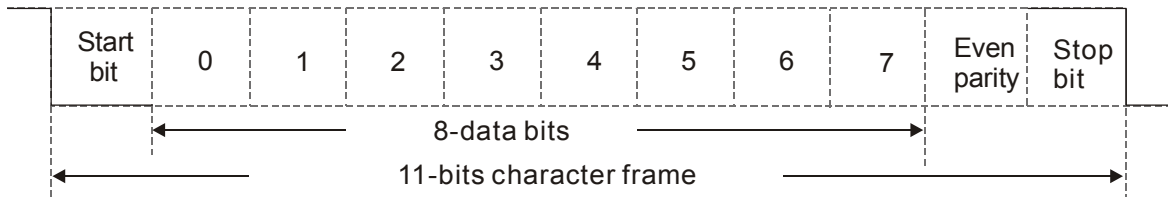

(8, O, 1)

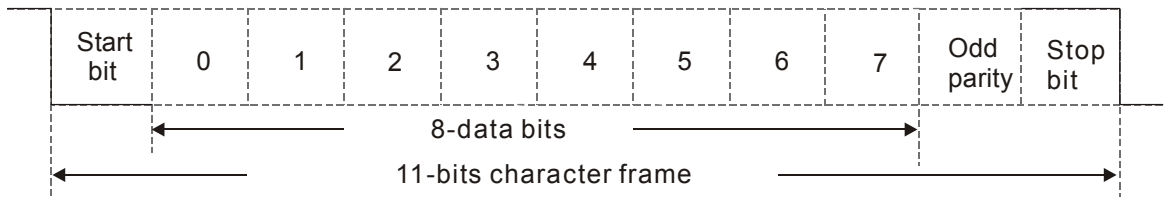

2. Communication Protocol

Communication Data Frame: **ASCII mode**

STX	Start character = ':' (3AH)
Address Hi	Communication address: 8-bit address consists of 2 ASCII codes
Address Lo	
Function Hi	Command code: 8-bit command consists of 2 ASCII codes
Function Lo	
DATA (n-1)	Contents of data: Nx8-bit data consist of 2n ASCII codes n<=16, maximum of 32 ASCII codes
.....	
DATA 0	
LRC CHK Hi	LRC check sum: 8-bit check sum consists of 2 ASCII codes
LRC CHK Lo	
END Hi	End characters: END1= CR (0DH), END0= LF(0AH)
END Lo	

Communication Data Frame: **RTU mode**

START	A silent interval of more than 10 ms
Address	Communication address: 8-bit address
Function	Command code: 8-bit command

DATA (n-1)	Contents of data: n×8-bit data, n≤16
.....	
DATA 0	
CRC CHK Low	CRC check sum: 16-bit check sum consists of 2 8-bit characters
CRC CHK High	
END	A silent interval of more than 10 ms

Address (Communication Address)

Valid communication addresses are in the range of 0 to 254. A communication address equal to 0, means broadcast to all AC drives (AMD). In this case, the AMD will not reply any message to the master device.

- 00H: broadcast to all AC drives
- 01H: AC drive of address 01
- 0FH: AC drive of address 15
- 10H: AC drive of address 16
- ⋮
- FEH: AC drive of address 254

Function (Function code) and DATA (data characters)

The format of data characters depends on the function code.

- 03H: read data from register
- 06H: write single register

Example: reading continuous 2 data from register address 2102H, AMD address is 01H.
ASCII mode:

Command Message:		Response Message	
STX	‘.’	STX	‘.’
Address	‘0’	Address	‘0’
	‘1’		‘1’
Function	‘0’	Function	‘0’
	‘3’		‘3’
Starting address	‘2’	Number of data (count by byte)	‘0’
	‘1’		‘4’
	‘0’	Content of starting address 2102H	‘1’
	‘2’		‘7’
Number of data (count by word)	‘0’	Content of address 2103H	‘7’
	‘0’		‘0’
	‘2’		‘0’
	‘D’		‘0’
LRC Check	‘7’	LRC Check	‘0’
	CR		‘7’
END	LF	END	‘1’
			CR
			LF

RTU mode:

Command Message:		Response Message	
Address	01H	Address	01H
Function	03H	Function	03H
Starting data address	21H	Number of data (count by byte)	04H
	02H		
Number of data (count by world)	00H	Content of data address 2102H	17H
	02H		70H

CRC CHK Low	6FH	Content of data address 2103H	00H
CRC CHK High	F7H	CRC CHK Low	FEH
		CRC CHK High	5CH

06H: single write, write single data to register.

Example: writing data 6000(1770H) to register 0100H. AMD address is 01H.

ASCII mode:

Command Message:		Response Message	
STX	‘.’	STX	‘.’
Address	‘0’	Address	‘0’
	‘1’		‘1’
Function	‘0’	Function	‘0’
	‘6’		‘6’
Data address	‘0’	Data address	‘0’
	‘1’		‘1’
	‘0’		‘0’
	‘0’		‘0’
Data content	‘1’	Data content	‘1’
	‘7’		‘7’
	‘7’		‘7’
	‘0’		‘0’
LRC Check	‘7’	LRC Check	‘7’
	‘1’		‘1’
END	CR	END	CR
	LF		LF

RTU mode:

Command Message:		Response Message	
Address	01H	Address	01H
Function	06H	Function	06H
Data address	01H	Data address	01H
	00H		00H
Data content	17H	Data content	17H
	70H		70H
CRC CHK Low	86H	CRC CHK Low	86H
CRC CHK High	22H	CRC CHK High	22H

10H: write multiple registers (write multiple data to registers)

Example: Set the multi-step speed,

Pr.04-00=50.00 (1388H), Pr.04-01=40.00 (0FA0H). AC drive address is 01H.

ASCII Mode

Command Message:		Response Message	
STX	‘.’	STX	‘.’
ADR 1	‘0’	ADR 1	‘0’
ADR 0	‘1’	ADR 0	‘1’
CMD 1	‘1’	CMD 1	‘1’
CMD 0	‘0’	CMD 0	‘0’
Starting data address	‘0’	Starting data address	‘0’
	‘5’		‘5’
	‘0’		‘0’
	‘0’		‘0’
Number of data (count by word)	‘0’	Number of data (count by word)	‘0’
	‘0’		‘0’
	‘0’		‘0’
	‘2’		‘2’

Number of data (count by byte)	'0'	LRC Check	'E'
	'4'		'8'
The first data content	'1'	END	CR
	'3'		LF
	'8'		
	'8'		
The second data content	'0'		
	'F'		
	'A'		
	'0'		
LRC Check	'9'		
	'A'		
END	CR		
	LF		

RTU mode:

Command Message:		Response Message	
ADR	01H	ADR	01H
CMD	10H	CMD 1	10H
Starting data address	05H	Starting data address	05H
Number of data (count by word)	00H	Number of data (count by word)	00H
Number of data (count by byte)	02H	CRC Check Low	41H
	04	CRC Check High	04H
The first data content	13H		
	88H		
The second data content	0FH		
	A0H		
CRC Check Low	'9'		
CRC Check High	'A'		

Check sum

ASCII mode:

LRC (Longitudinal Redundancy Check) is calculated by summing up, module 256, and the values of the bytes from ADR1 to last data character then calculating the hexadecimal representation of the 2's-complement negation of the sum.

For example,

$01H+03H+21H+02H+00H+02H=29H$, the 2's-complement negation of 29H is **D7H**.

RTU mode:

CRC (Cyclical Redundancy Check) is calculated by the following steps:

Step 1:

Load a 16-bit register (called CRC register) with FFFFH.

Step 2:

Exclusive OR the first 8-bit byte of the command message with the low order byte of the 16-bit CRC register, putting the result in the CRC register.

Step 3:

Examine the LSB of CRC register.

Step 4:

If the LSB of CRC register is 0, shift the CRC register one bit to the right with MSB zero filling, then repeat step 3. If the LSB of CRC register is 1, shift the CRC register one bit to the right with MSB zero filling, Exclusive OR the CRC register with the polynomial value A001H, then repeat step 3.

Step 5:

Repeat step 3 and 4 until eight shifts have been performed. When this is done, a complete 8-bit byte will have been processed.

Step 6:

Repeat step 2 to 5 for the next 8-bit byte of the command message. Continue doing this until all bytes have been processed. The final contents of the CRC register are the CRC value. When transmitting the CRC value in the message, the upper and lower bytes of the CRC value must be swapped, i.e. the lower order byte will be transmitted first.

The following is an example of CRC generation using C language. The function takes two arguments:

Unsigned char* data ← a pointer to the message buffer

Unsigned char length ← the quantity of bytes in the message buffer

The function returns the CRC value as a type of unsigned integer.

Unsigned int crc_chk(unsigned char* data, unsigned char length)

```

{
    int j;
    unsigned int reg_crc=0Xffff;
    while(length--){
        reg_crc ^= *data++;
        for(j=0;j<8;j++){
            if(reg_crc & 0x01){ /* LSB(b0)=1 */
                reg_crc=(reg_crc>>1) ^ 0Xa001;
            }else{
                reg_crc=reg_crc >>1;
            }
        }
    }
}

return reg_crc;                // return register CRC

```

3. Address list

Content	Address	Function	
AC drive Parameters	GGnnH	GG means parameter group, nn means parameter number, for example, the address of Pr 4-01 is 0401H.	
Command Write only	2000H	Bit 0-3	0: No function 1: Stop 2: Run 3: Jog + Run
		Bit 4-5	00B: No function 01B: FWD 10B: REV 11B: Change direction
		Bit 6-7	00B: 1st accel/decel 01B: 2nd accel/decel 10B: 3rd accel/decel 11B: 4th accel/decel
		Bit 8-11	000B: master speed
			0001B: 1st accel/decel.
			0010B: 2nd accel/decel
			0011B: 3rd accel/decel
			0100B: 4th accel/decel
			0101B: 5th accel/decel
			0110B: 6th accel/decel
			0111B: 7th accel/decel
			1000B: 8th accel/decel
			1001B: 9th accel/decel
			1010B: 10th accel/decel
			1011B: 11th accel/decel
1100B: 12th accel/decel			
1101B: 13th accel/decel			
1110B: 14th accel/decel			
1111B: 15th accel/decel			
Bit 12	1: enable bit06-11 function		
Bit 13~14	00B: No function 01B: operated by digital keypad 10B: operated by Pr.00-21 setting 11B: change operation source		
	Bit 15	Reserved	
Command Write only	2001H	Frequency command	
	2002H	Bit 0	1: EF (external fault) on
		Bit 1	1: Reset
		Bit 2	1: B.B. ON
	Bit 3-15	Reserved	
Status monitor Read only	2100H	Error code: refer to Pr.06-17 to Pr.06-22	
	2101H	Bit0	AC Drive Operation Status 00b: Drive stops 01b: Drive decelerating
		Bit1	10b: Drive standby 11b: Drive operating
		Bit2	1: JOG Command
		Bit3	Operation Direction 00b: FWD run 01b: from REV run to FWD run
		Bit4	10b: REV run 11b: from FWD run to REV run
Bit8	1: Master frequency controlled by communication interface		

Content	Address	Function
	Bit9	1: Master frequency controlled by analog signal
	Bit10	1: Operation command controlled by communication interface
	Bit11	1: Parameter locked
	Bit12	1: Enable to copy parameters from keypad
	Bit13~15	Reserved
	2102H	Frequency command (F)
	2103H	Output frequency (H)
	2104H	Output current (AXX.X.X)
	2105H	DC-BUS Voltage (UXXX.X)
	2106H	Output voltage (EXXX.X)
	2107H	Current step number of Multi-Step Speed Operation
	2108H	Reserved
	2109H	Counter value
	201AH	Power Factor Angle (XXX.X)
	201BH	Output Torque (%)
	201CH	Actual motor speed (rpm)
	201DH	Number of PG feed back pulses
	201EH	Number of PG2 pulse commands
	201FH	Power output (X.XXX)
	2116H	Multi-function display (Pr.00-04)
	211BH	Max. operation frequency (Pr.01-00) or Max. user defined value (Pr.00-26)
	2200H	Display output current (A)
	2201H	Display counter value of TRG terminal (c)
	2202H	Display actual output frequency (H)
	2203H	Display DC-BUS voltage (u)
	2204H	Display output voltage of U, V, W (E)
	2205H	Display output power angle of U, V, W (n)
	2206H	Display actual motor speed kW of U, V, W (P)
	2207H	Display motor speed in rpm estimated by the drive or encoder feedback (r00: positive speed, -00: negative speed)
	2208H	Display positive/negative output torque in %, estimated by the drive (t0.0: positive torque, -0.0: negative torque)
	2209H	Display PG feedback (as NOTE 1)
	220AH	Display PID feedback value after enabling PID function in % (b)
	220BH	Display signal of AVI analog input terminal, 0-10V corresponds to 0-100% (1.) (as NOTE 2)
	220CH	Display signal of ACI analog input terminal, 4-V20mA/0-10V corresponds to 0-100% (2.) (as NOTE 2)
	220DH	Display signal of AUI analog input terminal, -10V~10V corresponds to -100~100% (3.) (as NOTE 2)
	220EH	Display the IGBT temperature of drive power module in °C (c.)
	220FH	Display the temperature of capacitance in °C (i.)
	2210H	The status of digital input (ON/OFF), refer to Pr.02-12 (as NOTE 3)
	2211H	The status of digital output (ON/OFF), refer to Pr.02-18 (as NOTE 4)
	2212H	Display the multi-step speed that is executing (S)
	2213H	The corresponding CPU pin status of digital input (d.) (as NOTE 3)
	2214H	The corresponding CPU pin status of digital output (O.) (as NOTE 4)
	2215H	Number of actual motor revolution (PG1 of PG card) (P.) it will start from 9 when the actual operation direction is changed or keypad display at stop is 0. Max. is 65535 (P.)
	2216H	Pulse input frequency (PG2 of PG card)(S.)

Content	Address	Function
	2217H	Pulse input position (PG card PG2), maximum setting is 65535.
	2218H	Position command tracing error (P.)
	2219H	Display times of counter overload (0.00~100.00%)
	221AH	Display GFF in % (G.)
	221BH	Display DCbus voltage ripples (Unit: Vdc) (r.)
	221CH	Display PLC register D1043 data (C)
	221DH	Display Pole of Permanent Magnet Motor
	221EH	User page displays the value in physical measure
	221FH	Output Value of Pr.00-05
	2220H	Number of motor turns when drive operates
	2221H	Operation position of motor
	2222H	Fan speed of the drive
	2223H	Control mode of the drive 0: speed mode 1: torque mode
	2224H	Carrier frequency of the drive

4. Exception response:

The AC motor drive is expected to return a normal response after receiving command messages from the master device. The following depicts the conditions when no normal response is replied to the master device.

The AC motor drive does not receive the messages due to a communication error; thus, the AC motor drive has no response. The master device will eventually process a timeout condition.

The AC motor drive receives the messages without a communication error, but cannot handle them. An exception response will be returned to the master device and an error message "CExx" will be displayed on the keypad of AC motor drive. The xx of "CExx" is a decimal code equal to the exception code that is described below.

In the exception response, the most significant bit of the original command code is set to 1, and an exception code which explains the condition that caused the exception is returned.

Example:

ASCII mode:		RTU mode:	
STX	‘.’	Address	01H
Address	‘0’	Function	86H
	‘1’	Exception code	02H
Function	‘8’	CRC CHK Low	C3H
	‘6’	CRC CHK High	A1H
Exception code	‘0’		
	‘2’		
LRC CHK	‘7’		
	‘7’		
END	CR		
	LF		

The explanation of exception codes:


Exception code	Explanation
1	Illegal data value: The data value received in the command message is not available for the AC drive.
2	Illegal data address: The data address received in the command message is not available for the AC motor drive.
3	Parameters are locked: parameters can't be changed
4	Parameters can't be changed during operation
10	Communication time-out.


↗	09-05	Reserved
	~	
	09-08	

↗	09-09	Response Delay Time
---	--------------	---------------------

Factory Setting: 2.0

Settings 0.0~200.0ms


 This parameter is the response delay time after AC drive receives communication command as shown in the following.

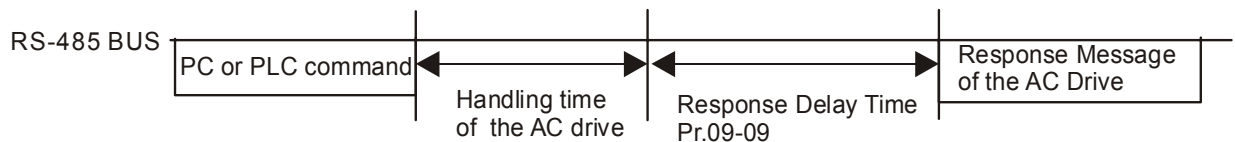

↗	09-10	Main Frequency of the Communication
---	--------------	-------------------------------------

Factory Setting: 60.00


Settings 0.00~600.00Hz

 When Pr.00-20 is set to 1 (RS485 communication). The AC motor drive will save the last frequency command into Pr.09-10 when abnormal turn-off or momentary power loss. After reboots the power, it will regards the frequency set in Pr.09-10 if no new frequency command is inputted.

↗	09-11	Block Transfer 1
↗	09-12	Block Transfer 2
↗	09-13	Block Transfer 3
↗	09-14	Block Transfer 4
↗	09-15	Block Transfer 5
↗	09-16	Block Transfer 6
↗	09-17	Block Transfer 7
↗	09-18	Block Transfer 8
↗	09-19	Block Transfer 9
↗	09-20	Block Transfer 10
↗	09-21	Block Transfer 11
↗	09-22	Block Transfer 12
↗	09-23	Block Transfer 13
↗	09-24	Block Transfer 14
↗	09-25	Block Transfer 15
↗	09-26	Block Transfer 16

Factory Setting: 0

Settings 0~65535

 There is a group of block transfer parameter available in the AC motor drive (Pr.09-11 to Pr.09-20). User can use them (Pr.09-11 to Pr.09-20) to save those parameters that you want to read.

09-27

~

Reserved

09-29

09-30

Communication Decoding Method

Factory Setting: 1

- Settings 0: Decoding Method 1
 1: Decoding Method 2

		Decoding Method 1	Decoding Method 2
Source of Operation Control	Digital Keypd	Digital keypad controls the drive action regardless decoding method 1 or 2.	
	External Terminal	External terminal controls the drive action regardless decoding method 1 or 2.	
	RS-485	Refer to address: 2000h~20FFh	Refer to address: 6000h ~ 60FFh
	CANopen	Refer to index: 2020-01h~2020-FFh	Refer to index:2060-01h ~ 2060-FFh
	Communication Card	Refer to address: 2000h ~ 20FFh	Refer to address: 6000h ~ 60FFh
	PLC	PLC commands the drive action regardless decoding method 1 or 2.	

09-31

Internal Communication Protocol

Factory Setting: 0

- Settings 0: Modbus 485
 -1: Internal Communication Slave 1
 -2: Internal Communication Slave 2
 -3: Internal Communication Slave 3
 -4: Internal Communication Slave 4
 -5: Internal Communication Slave 5
 -6: Internal Communication Slave 6
 -7: Internal Communication Slave 7
 -8: Internal Communication Slave 8
 -9: Reserve
 -10: Internal Communication Master
 -11: Reserve
 -12: Internal PLC Control

09-32

~

Reserved

09-34

09-35

PLC Address

Factory Setting: 2

Settings 1~254

09-36 CANopen Slave Address

Factory Setting: 0

Settings 0: Disable
1~127**09-37** CANopen Speed

Factory Setting: 0

Settings 0: 1M
1: 500k
2: 250k
3: 125k
4: 100k (Delta only)
5: 50k**09-38** CANopen Frequency Gain

Factory Setting: 1.00

Settings 1.00~2.00

09-39 CANopen Warning Record

Factory Setting: 0

Settings bit 0: CANopen Guarding Time out
bit 1: CANopen Heartbeat Time out
bit 2: CANopen SYNC Time out
bit 3: CANopen SDO Time out
bit 4: CANopen SDO buffer overflow
bit 5: Can Bus Off
bit 6: Error protocol of CANOPEN**09-40** CANopen Decoding Method

Factory Setting: 1

Settings 0: Delta defined decoding method
1: CANopen Standard DS402 protocol**09-41** CANopen Status

Factory Setting: 0

Settings 0: Node Reset State
1: Com Reset State
2: Boot up State
3: Pre Operation State
4: Operation State

5: Stop State

09-42 CANopen Control Status

Factory Setting: Read Only

- Settings
- 0: Not ready for use state
 - 1: Inhibit start state
 - 2: Ready to switch on state
 - 3: Switched on state
 - 4: Enable operation state
 - 7: Quick stop active state
 - 13: Err reaction activation state
 - 14: Error state

09-43 Reset CANopen Index

Factory Setting: 65535

- Settings:
- bit0: reset address 20XX to 0.
 - bit1: reset address 264X to 0
 - bit2: reset address 26AX to 0
 - bit3: reset address 60XX to 0

09-44 Reserved

09-45 CANopen Master Function

Factory Setting: 0

- Settings
- 0: Disable
 - 1: Enable

09-46 CANopen Master Address

Factory Setting: 100

- Settings 1~127

09-47
~ Reserved

09-59

09-60 Identifications for Communication Card

Factory Setting: ##

- Settings
- 0: No communication card
 - 1: DeviceNet Slave
 - 2: Profibus-DP Slave
 - 3: CANopen Slave/Master

4: Modbus-TCP Slave

5: EtherNet/IP Slave

6~8: Reserved

09-61 Firmware Version of Communication Card

Factory Setting: ##

Settings Read only

09-62 Product Code

Factory Setting: ##

Settings Read only

09-63 Error Code

Factory Setting: ##

Settings Read only

09-64
~ Reserved**09-69****09-70** Address of Communication Card

Factory Setting: 1

Settings DeviceNet: 0-63
Profibus-DP: 1-125**09-71** Setting of DeviceNet Speed (according to Pr.09-72)

Factory Setting: 2




Settings Standard DeviceNet:
0: 125Kbps
1: 250Kbps
2: 500Kbps
3: 1Mbps (Delta only)
Non standard DeviceNet: (Delta only)
0: 10Kbps
1: 20Kbps
2: 50Kbps
3: 100Kbps
4: 125Kbps
5: 250Kbps
6: 500Kbps
7: 800Kbps

8: 1Mbps

09-72 Other Setting of DeviceNet Speed

Factory Setting: 0



Settings 0: Disable
1: Enable

-  It needs to use with Pr.09-71.
-  Setting 0: the baud rate can only be set to 0, 1, 2 or 3.
-  Setting 1: setting of DeviceNet baud rate can be the same as CANopen (setting 0-8).

09-73 Reserved**09-74** Reserved**09-75** IP Configuration of the Communication Card

Factory Setting: 0

Settings 0: Static IP
1: DynamicIP (DHCP)

-  Setting 0: it needs to set IP address manually.
-  Setting 1: IP address will be auto set by host controller.

09-76 IP Address 1 of the Communication Card**09-77** IP Address 2 of the Communication Card**09-78** IP Address 3 of the Communication Card**09-79** IP Address 4 of the Communication Card

Factory Setting: 0

Settings 0~255

09-80 Address Mask 1 of the Communication Card**09-81** Address Mask 2 of the Communication Card**09-82** Address Mask 3 of the Communication Card**09-83** Address Mask 4 of the Communication Card

Factory Setting: 0

Settings 0~255

09-84 Getway Address 1 of the Communication Card**09-85** Getway Address 2 of the Communication Card**09-86** Getway Address 3 of the Communication Card**09-87** Getway Address 4 of the Communication Card

Factory Setting: 0

Settings 0~255

09-88 Password for Communication Card (Low word)

09-89 Password for Communication Card (High word)

Factory Setting: 0

Settings 0~255

09-90 Reset Communication Card

Factory Setting: 0

Settings 0: Disable

1: Reset, return to factory setting

09-91 Additional Setting for Communication Card

Factory Setting: 1

Settings Bit 0: Enable IP Filter

Bit 1: Internet parameters enable(1bit)

Enable to write internet parameters (1bit). This bit will change to disable when it finishes saving the update of internet parameters.

Bit 2: Login password enable(1bit)

Enable login password (1bit). This bit will be changed to disable when it finishes saving the update of internet parameters.

09-92 Status of Communication Card

Factory Setting: 0

Settings Bit 0: password enable

When the communication card is set with password, this bit is enabled.

When the password is clear, this bit is disabled.

10 PID Control

⚡ This parameter can be set during operation.

In this parameter group, ASR is the abbreviation for Adjust Speed Regulator and PG is the abbreviation for Pulse Generator.

10-00 Encoder Type Selection

Factory Setting: 0

- Settings
- 0: Disable
 - 1: ABZ
 - 2: ABZ (Delta encoder for PM motor)
 - 3: Resolver (Standard encoder for PM motor)
 - 4: ABZ/UWW (Standard encoder for PM motor)

- 📖 For PG extension card EMC-PG01L and EMC-PG01O, set Pr.10-00=1. These extension cards are for IM motor only.
- 📖 For EMC-PG01U, when setting Pr.10-00=2 (Delta encoder) make sure SW1 is switched to D (Delta type). If the setting for Pr.10-00, 10-01 and 10-02 has changed, please turn off the drive's power and reboots to prevent PM motor stall. This mode is suggested for PM motor.
- 📖 For EMC-PG01R, when setting Pr.10-00=3 please also input 1024 ppr.
- 📖 For EMC-PG01U, when setting Pr.10-00=4 (Standard ABZ/UWW Encoder) make sure SW1 is switched to S (Standard Type). This mode is applicable for both IM and PM motor.

10-01 Encoder Pulse

Factory Setting: 600


- Settings 1~20000

- 📖 A Pulse Generator (PG) or encoder is used as a sensor that provides a feedback signal of the motor speed. This parameter defines the number of pulses for each cycle of the PG control, i.e. the number of pulses for a cycle of A phase/B phase.
- 📖 This setting is also the encoder resolution. With the higher resolution, the speed control will be more accurate.
- 📖 An errotic input to Pr.10-00 may result drive over current, motor stall, PM motor magnetic pole origin detection error. If Pr.10-00 setting has changed, please trace the magnetic pole again, set Pr.05-00=4 (static test for PM motor magnetic pole and PG origin again).


10-02 Encoder Input Type Setting

Factory Setting: 0


- Settings
- 0: Disable
 - 1: Phase A leads in a forward run command and phase B leads in a reverse run command

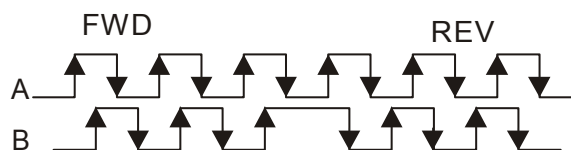


2: Phase B leads in a forward run command and phase A leads in a reverse run command

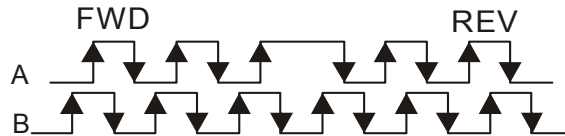

3: Phase A is a pulse input and phase B is a direction input. (L =reverse direction, H=forward direction)

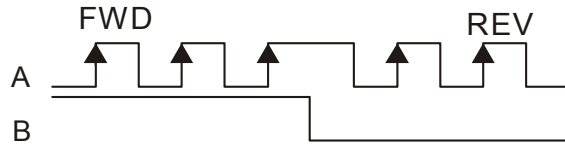

4: Phase A is a pulse input and phase B is a direction input. (L=forward direction, H=reverse direction)

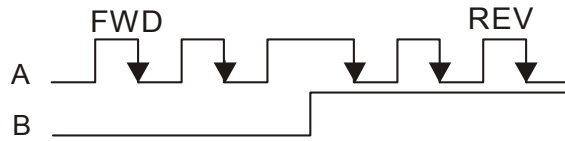

5: Single-phase input



➤ **10-03** Output Setting for Frequency Division (denominator)

Factory Setting: 1

Settings 1~255

📖 This parameter is used to set the denominator for frequency division (for PG card EMC-PG01L or EMC-PG01O). For example, when it is set to 2 with feedback 1024ppr, PG output will be $1024/2=512$ ppr.

➤ **10-04** Electrical Gear at Load Side A1

➤ **10-05** Electrical Gear at Motor Side B1


➤ **10-06** Electrical Gear at Load Side A2

➤ **10-07** Electrical Gear at Motor Side B2

Factory Setting: 100

Settings 1~65535

📖 Parameters 10-04 to 10-07 can be used with the multi-function input terminal (set to 48) to switch to Pr.10-04~10-05 or Pr.10-06~10-07 as shown as follows

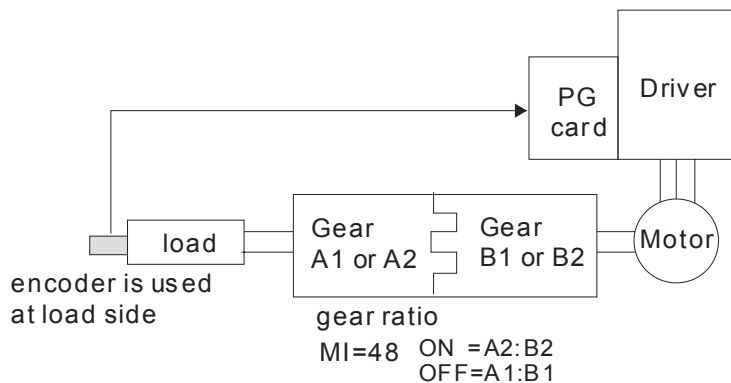

10-08 Treatment for Encoder Feedback Fault

Factory Setting: 2

- Settings 0: Warn and keep operating
1: Warn and RAMP to stop
2: Warn and COAST to stop

10-09 Detection Time of Encoder Feedback Fault

Factory Setting: 1.0

- Settings 0.0~10.0 sec
0: No function

When encoder loss, encoder signal error, pulse signal setting error or signal error, if time exceeds the detection time for encoder feedback fault (Pr.10-09), the encoder signal error will occur. Refer to the Pr.10-08 for encoder feedback fault treatment.

10-10 Encoder Stall Level

Factory Setting: 115

- Settings 0~120%
0: No function

This parameter determines the maximum encoder feedback signal allowed before a fault occurs. (Max. output frequency Pr.01-00 =100%)

10-11 Detection Time of Encoder Stall

Factory Setting: 0.1

- Settings 0.0~2.0 sec

10-12 Treatment for Encoder Stall

Factory Setting: 2

- Settings 0: Warn and keep operation
1: Warn and ramp to stop
2: Warn and coast to stop

When the motor frequency exceeds Pr.10-10 setting and detection time exceeds Pr.10-11, it will operate as Pr.10-12 setting.

10-13 Encoder Slip Range

Factory Setting: 50

Settings 0~50%
0: Disable

10-14 Detection Time of Encoder Slip

Factory Setting: 0.5

Settings 0.0~10.0 sec

10-15 Treatment for Encoder Stall and Slip Error

Factory Setting: 2


Settings 0: Warn and keep operation
1: Warn and ramp to stop
2: Warn and coast to stop

When the value of (rotation speed – motor frequency) exceeds Pr.10-13 setting, detection time exceeds Pr.10-14; it will start to accumulate time. If detection time exceeds Pr.10-14, the encoder feedback signal error will occur. Refer to Pr.10-15 encoder stall and slip error treatment.


10-16 Pulse Input Type Setting (PG card: PG2)

Factory Setting: 0


Settings 0: Disable
1: Phase A leads in a forward run command and phase B leads in a reverse run command

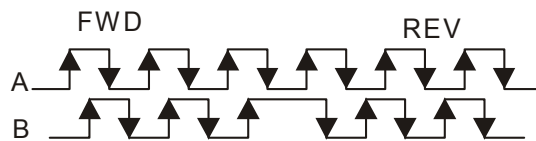


2: Phase B leads in a forward run command and phase A leads in a reverse run command

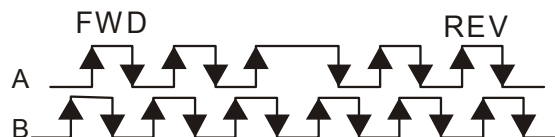

3: Phase A is a pulse input and phase B is a direction input. (L=reverse direction, H=forward direction)

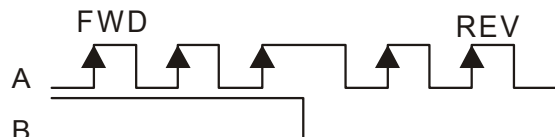

4: Phase A is a pulse input and phase B is a direction input. (L=forward direction, H=reverse direction)

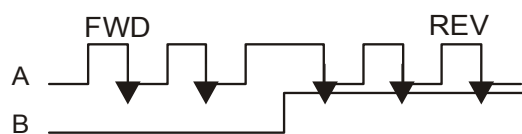


When this setting is different from Pr.10-01 setting and the source of the frequency command is pulse input (Pr.00-20 is set to 4 or 5), it may have 4 times frequency problem.

Example: Assume that Pr.10-01=1024, Pr.10-02=1, Pr.10-16=3, Pr.00-20=5, MI=37 and ON, it

needs 4096 pulses to rotate the motor a revolution.

Assume that Pr.10-01=1024, Pr.10-02=1, Pr.10-16=1, Pr.00-20=5, MI=37 and ON, it needs 1024 pulses to rotate the motor a revolution.

Position control diagram

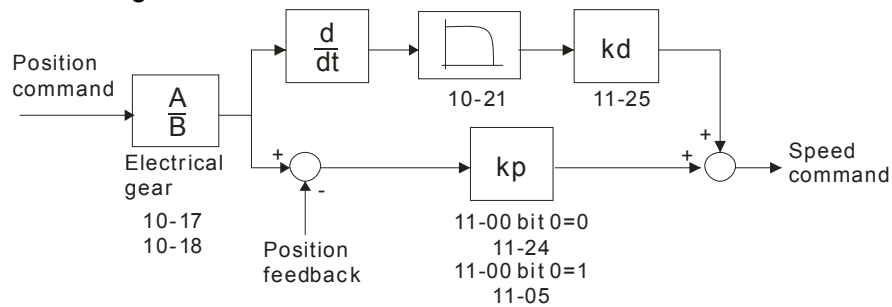

✓	10-17	Electrical Gear A
✓	10-18	Electrical Gear B

Factory Setting: 100

Settings 1~65535

Rotation speed = pulse frequency/encoder pulse (Pr.10-00) * PG Electrical Gear A / PG Electrical Gear B.

✓	10-19	Positioning for Encoder Position
---	--------------	----------------------------------

Factory Setting: 0

Settings 0~65535 pulse

- This parameter determines the internal position in the position mode.
- It needs to be used with multi-function input terminal setting =35 (enable position control).
- When it is set to 0, it is the Z-phase position of encoder.

✓	10-20	Range for Encoder Position Attained
---	--------------	-------------------------------------

Factory Setting: 10

Settings 0~65535 pulse

This parameter determines the range for internal positioning position attained.

For example:

When the position is set by Pr.10-19 Positioning for Encoder Position and Pr.10-20 is set to 1000, it reaches the position if the position is within 990-1010 after finishing the positioning.

✓	10-21	Filter Time (PG2)
---	--------------	-------------------

Factory Setting: 0.100

Settings 0.000~65.535 sec

When Pr.00-20 is set to 5 and multi-function input terminal is set to 37 (OFF), the pulse command will be regarded as frequency command. This parameter can be used to suppress the jump of speed command.

	10-22	Speed Mode (PG2)
--	--------------	------------------

Factory Setting: 0

Settings 0: Electronic Frequency

1: Mechanical Frequency (base on pole pair)

10-23 Reserved**10-24** FOC&TQC Function Control

Factory Setting: 0


Settings 0~65535

Bit#	Description
0	ASR control at sensorless torque 0:use PI as ASR; 1:use P as ASR
1~10	NA
11	Activate DC braking when executing zero torque command 0:ON , 1:OFF
12	FOC Sensorless mode, cross zero means speed goes from negative to positive or positive to negative (forward to reverse direction or reverse to forward direction). 0: determine by stator frequency , 1: determine by speed command
13	NA
14	NA
15	Direction control at open loop status 0: Switch ON direction control 1: Switch OFF direction control

10-25 FOC Bandwidth of Speed Observer

Factory Setting:40.0


Settings 20.0~100.0Hz

-  Setting speed observer to higher bandwidth could shorten the speed response time but will create greater noise interference during the speed observation.

10-26 FOC Minimum Stator Frequency

Factory Setting:2.0


Settings 0.0~10.0%fN

-  This parameter is used to set the minimum level of stator frequency at operation status. This setting ensures the stability and accuracy of observer and avoid interferences from voltage, current and motor parameter.

10-27 FOC Low-pass Filter Time Constant

Factory Setting:50


Settings 1~1000ms

-  This parameter sets the low-pass filter time constant of a flux observer at start up. If the motor can not be activated during the high-speed operation, please lower the setting in this parameter.

10-28 FOC Gain of Excitation Current Rise Time

Factory Setting:100

Settings 33~100% Tr (Tr: rotor time constant)

-  This parameter sets the drive's excitation current rise time when activates at sensorless torque mode. When the drive's activation time is too long at torque mode, please adjust this parameter to

a shorter time constant.

10-29 Top Limit of Frequency Deviation Factory Setting: 20.00

Settings 0.00~100.00Hz

Pr.10-29 is for setting the maximum of frequency deviation.

10-30 Resolver Pole Pair Factory Setting: 1

Settings 1~50

To use Pr.10-30 function, user must set Pr.10-00=3(Resolver Encoder) first.

10-33 Reserved

10-35 Reserved

10-36 Reserved

10-38 Reserved

10-31 I/F Mode, current command Factory Setting: 40

Settings 0~150%I_{rated} (Rated current % of the drive)

10-32 PM Sensorless Obeserver Bandwith for High Speed Zone Factory Setting: 5.00

Settings 0.00~600.00Hz

10-34 PM Sensorless Observer Low-pass Filter Gain Factory Setting: 1.00

Settings 0.00~655.35Hz

10-37 PM Sensorless Control Word Factory Setting: 0000

Settings 0000~FFFFh

Bit No.	Function	Description
0	Reserved	
1	Reserved	
2	Choose a control mode to start.	0 :Start by IF mode 1: Start by VF mode
3	Choose a mode to stop .	0 :Stop by IF mode 1 :Stop by VF mode
4	Reserved	
5	Choose a control mode to stop	0 : When lower than Pr10-40, coast to stop If lower than Pr10-40, decelerate to stop by VF mode.
6	Reserved	
7	Reserved	

10-39 Frequency Point when switch from I/F mode to PM Sensorless mode

Factory Setting: 20.00

Settings 0.00~600.00Hz

10-40

Frequency Point when switch from PM Sensorless Observation mode to I/F mode

Factory Setting: 20.00

Settings 0.00~600.00Hz

10-41

I/F mode, low pass-filter time

Factory Setting: 0.2

Settings 0.0~6.0 sec

10-42

Initial Angle Detection Time

Factory Setting: 5

Settings 0~20 ms

**PM Sensorless Adjustment Procedure**

1. When using high frequency standstill VFD parameter tuning, use VFD software v1.45 to monitor adjustment procedure. To download VFD Software v1.45, go to:

http://www.delta.com.tw/product/em/drive/ac_motor/download/software/VFDSOft%20v1.45.zip

2. Testing PM High Frequency Standstill VFD (calculation of Rs, Ld, Lg)

Procedures:

- A. Set control mode as VF mode (Pr00-10=0, Pr00-11=0)
- B. Output Frequency of Motor 1 (Pr01-01)
- C. Output Voltage of Motor 1 (Pr01-02)
- D. Induction Motor and Permanent Magnet Motor Selection (Pr05-33=1)
- E. Full-load current of Permanent Magnet Motor(Pr05-34)
- F. Set Motor Auto Tuning Pr 05-00 =13; High frequency and blocked rotor test for PM motor. Then run the drive.

3. Set control mode as PM sensorless Mode (Parameters 00-10=0, 00-11=6)

4. Set VFD Parameters

- Pr05-35 Rated Power of Permanent Magnet Motor
- Pr05-36 Rated speed of Permanent Magnet Motor
- Pr05-37 Pole number of Permanent Magnet Motor
- Pr05-38 Inertia of Permanent Magnet Motor

5. 設定 ASR 參數 Set ASR Parameters


- Pr11-00 bit0=1: Auto tuning for ASR and APR
- Pr11-02 : ASR1/ASR2 Switch Frequency, it is recommended to set Pr10-39 higher than 10Hz.
- Pr11-03: ASR1 Low-speed Bandwidth and Pr11-03, ASR2 High-speed Bandwidth. Do not set Low-speed Bandwidth too high to avoid dissipation of the estimator.

6. Set speed estimator and speed control's parameter.

- Pr10-39 Frequency when switch from I/F Mode to PM sensorless mode.
- Pr10-32 PM Sensorless Observer Bandwidth for High Speed Zone

7. Zero-load test

- Refer to switch point procedure of I/F and FOC as shown in the image below.

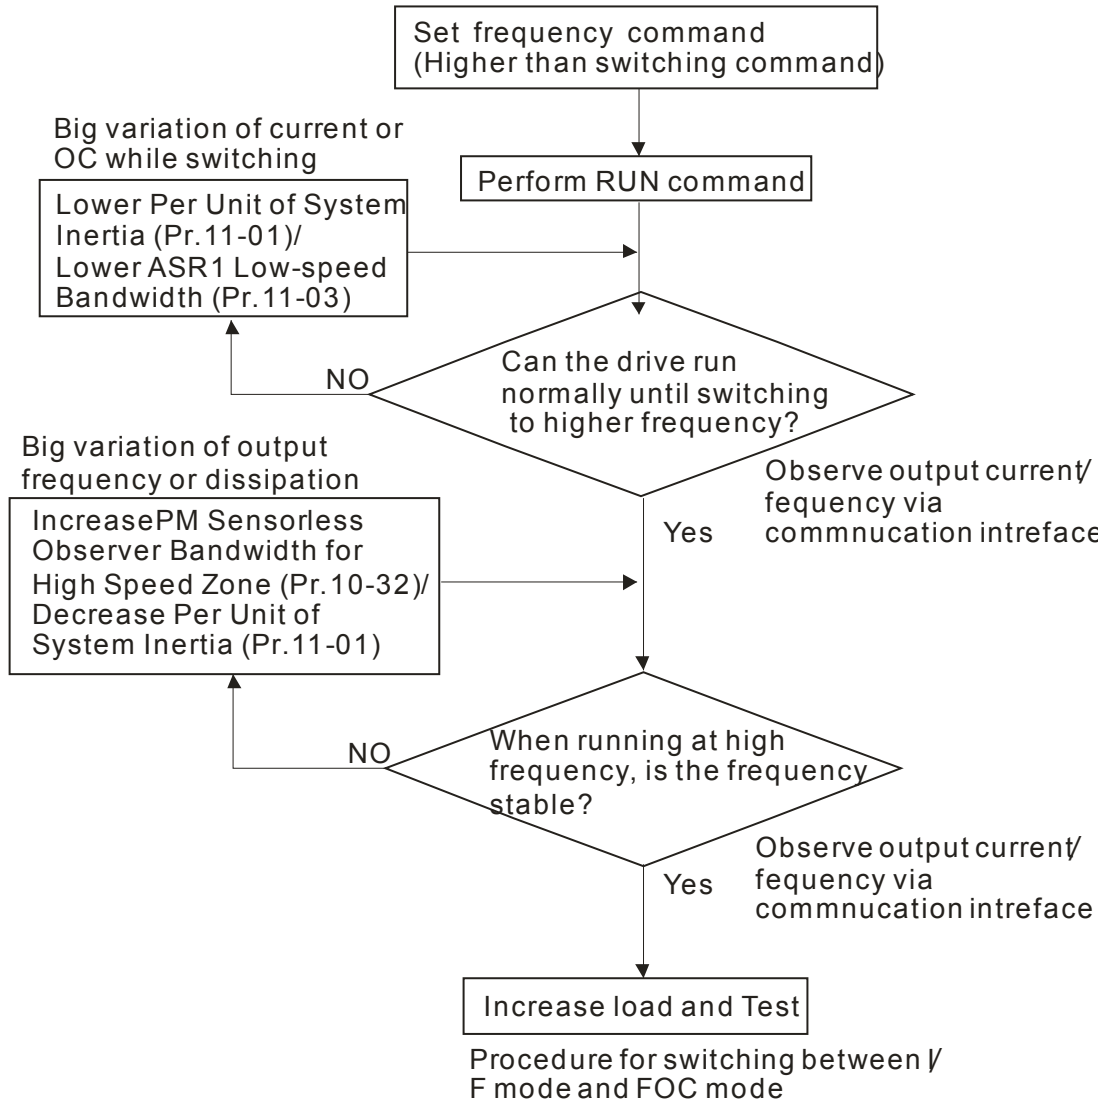

11 Advanced Parameters

↗ This parameter can be set during operation.


In this parameter group, ASR is the abbreviation for Adjust Speed Regulator


11-00 System Control

Factory Setting: 0

- Settings
- 0: Auto tuning for ASR and APR
 - 1: Inertia estimate (only in FOC/PG mode)
 - 2: Zero servo
 - 3: Dead time compensation closed
-
- 7: Selection to save or not save the frequency
-
- 8: Maximum speed of point to point position control

- 📖 Bit 0=0: Pr.11-06 to 11-11 will be valid and Pr.11-03~11-05 are invalid.
 Bit 0=1: system will generate an ASR setting. At this moment, Pr.11-06~11-11 will be invalid and Pr.11-03~11-05 are valid.
- Bit 1=0: no function.
 Bit 1=1: Inertia estimate function is enabled. (Bit 1 setting would not activate the estimation process, please set Pr.05-00=12 to begin FOC/TQC Sensorless inertia estimating)
- Bit 2=0: no function.
 Bit 2=1: when frequency command is less than Fmin (Pr.01-07), it will use zero servo function.

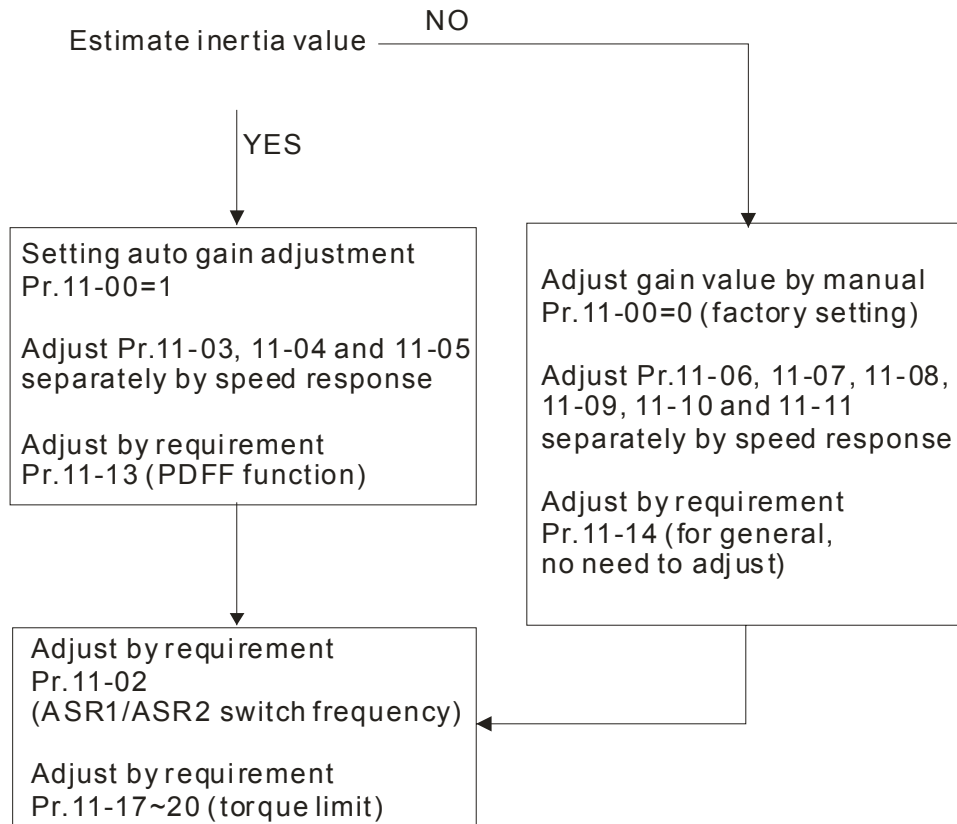

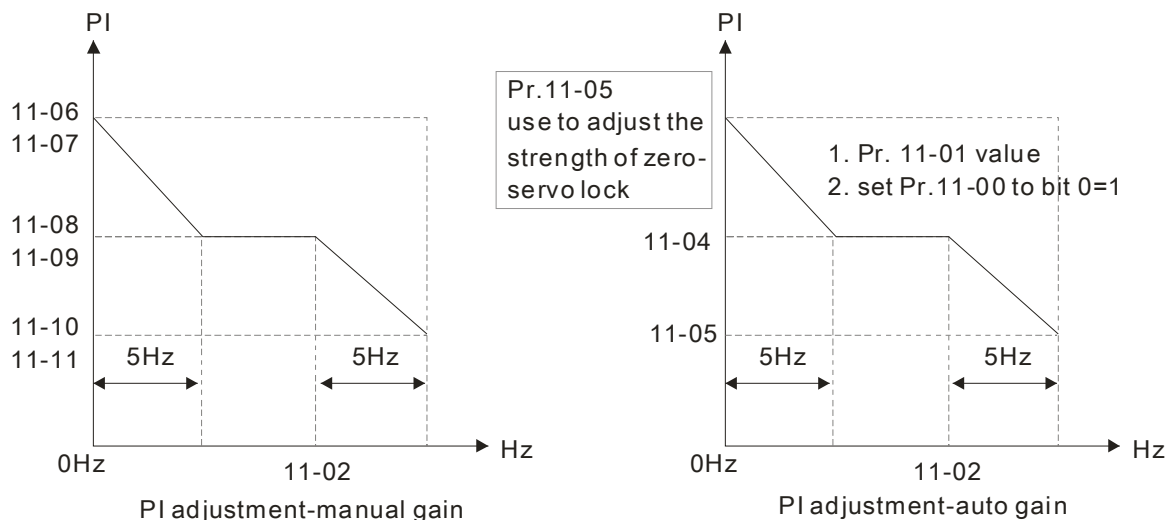

- 📖 Bit 7=0: frequency is saved before power turns off. When power turns on again, the display frequency will be the memorized frequency.
- Bit 7=1: frequency is not saved before power turns off. When power turns ON again, the display frequency will be 0.00Hz.
- Bit 8=0: maximum speed for point-to-point position control is control by the setting of Pr.11-43.
- Bit 8=1: maximum speed for point-to-point position control is control by the multi-step speed setting of the external terminal device. When multi-step speed of the external device is set to 0, the maximum operation speed will bet the setting of Pr.11-43.

⚡ **11-01** Per Unit of System Inertia Factory Setting: 400

Settings 1~65535 (256=1PU)

📖 To get the system inertia from Pr.11-01, user needs to set Pr.11-00 to bit1=1 and execute continuous forward/reverse running.

Unit of induction motor system inertia is 0.001kg·m²:

Power	Setting	Power	Setting	Power	Setting
1HP	2.3	20HP	95.3	100HP	1056.5
2HP	4.3	25HP	142.8	125HP	1275.3
3HP	8.3	30HP	176.5	150HP	1900.0
5HP	14.8	40HP	202.5	175HP	2150.0
7.5HP	26.0	50HP	355.5	215HP	2800.0
10HP	35.8	60HP	410.8	300HP	3550.0
15HP	74.3	75HP	494.8		

The base value for induction motor system inertia is set by Pr.05-38 and the unit is in 0.001kg·m².

⚡ **11-02** ASR1/ASR2 Switch Frequency Factory Setting: 7.00


Settings 5.00~600.00Hz

⚡ **11-03** ASR1 Low-speed Bandwidth Factory Setting: 10

Settings 1~40Hz (IM)/ 1~100Hz (PM)

- ↗ **11-04** ASR2 High-speed Bandwidth Factory Setting: 10
 Settings 1~40Hz (IM)/ 1~100Hz (PM)
- ↗ **11-05** Zero-speed Bandwidth Factory Setting: 10
 Settings 1~40Hz (IM)/ 1~100Hz (PM)
- 📖 After estimating inertia and set Pr.11-00 to bit 0=1 (auto tuning), user can adjust parameters Pr.11-03, 11-04 and 11-05 separately by speed response. The larger number you set, the faster response you will get. Pr.11-02 is the switch frequency for low-speed/high-speed bandwidth.
- ↗ **11-06** ASR (Auto Speed Regulation) control (P) 1 Factory Setting: 10
 Settings 0~40 Hz (IM)/ 1~100Hz (PM)
- ↗ **11-07** ASR (Auto Speed Regulation) control (I) 1 Factory Setting: 0.100
 Settings 0.000~10.000 sec
- ↗ **11-08** ASR (Auto Speed Regulation) control (PI) 2 Factory Setting: 10
 Settings 0~40 Hz (IM)/ 0~100Hz (PM)
- ↗ **11-09** ASR (Auto Speed Regulation) control (I) 2 Factory Setting: 0.100
 Settings 0.000~10.000 sec
- ↗ **11-10** ASR(Auto Speed Regulation) Control (P) of Zero Speed Factory Setting: 10
 Settings 0~40 Hz (IM)/ 0~100Hz (PM)
- ↗ **11-11** ASR(Auto Speed Regulation) Control (I) of Zero Speed Factory Setting: 0.100
 Settings 0.000~10.000 sec
- ↗ **11-12** Gain for ASR Speed Feed Forward Factory Setting: 0
 Settings 0~100%

📖 This parameter is used to improve speed response.

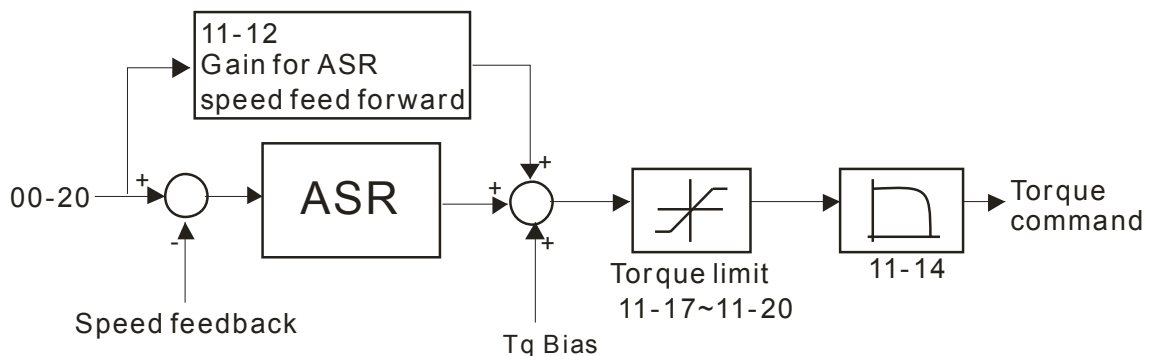


➤ **11-13** PDFF Gain Value

Factory Setting: 30

Settings 0~200%

📖 After finishing estimating and set Pr.11-00 to bit 0=1 (auto tuning), using Pr.11-13 to reduce overshoot. Please adjust PDFF gain value by actual situation.

📖 This parameter will be invalid when Pr.05-24 is set to 1.

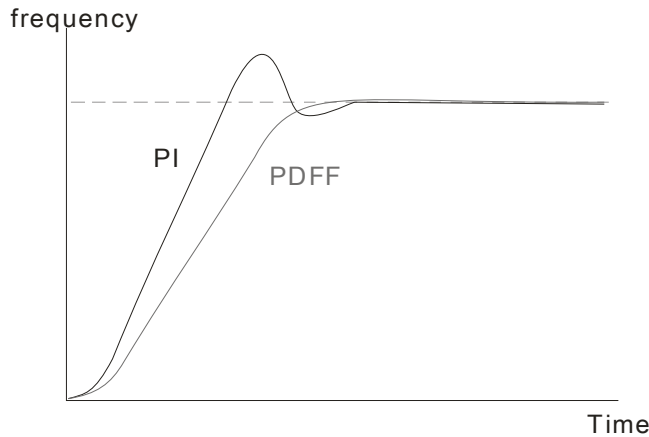

➤ **11-14** Low-pass Filter Time of ASR Output

Factory Setting: 0.008

Settings 0.000~0.350 sec

📖 It is used to set the filter time of ASR command.

➤ **11-15** Notch Filter Depth

Factory Setting: 0

Settings 0~20db

➤ **11-16** Notch Filter Frequency

Factory Setting: 0.00

Settings 0.00~200.00Hz

📖 This parameter is used to set resonance frequency of mechanical system. It can be used to suppress the resonance of mechanical system.

📖 The larger number you set Pr.11-15, the better suppression resonance function you will get.

📖 The notch filter frequency is the resonance of mechanical frequency.

➤ **11-17** Forward Motor Torque Limit

➤ **11-18** Forward Regenerative Torque Limit

➤ **11-19** Reverse Motor Torque Limit

➤ **11-20** Reverse Regenerative Torque Limit

Factory Setting: 500


Settings 0~500%

📖 The motor rated torque is 100%. The settings for Pr.11-17 to Pr.11-20 will compare with Pr.03-00=7, 8, 9, 10. The minimum of the comparison result will be torque limit.

📖 Calculation equation for motor rated torque:

$$T(N.M) = \frac{P(W)}{\omega(rad/s)}$$

Motor rated torque= $\omega(rad/s)$; P(W) value= Pr.05-02;

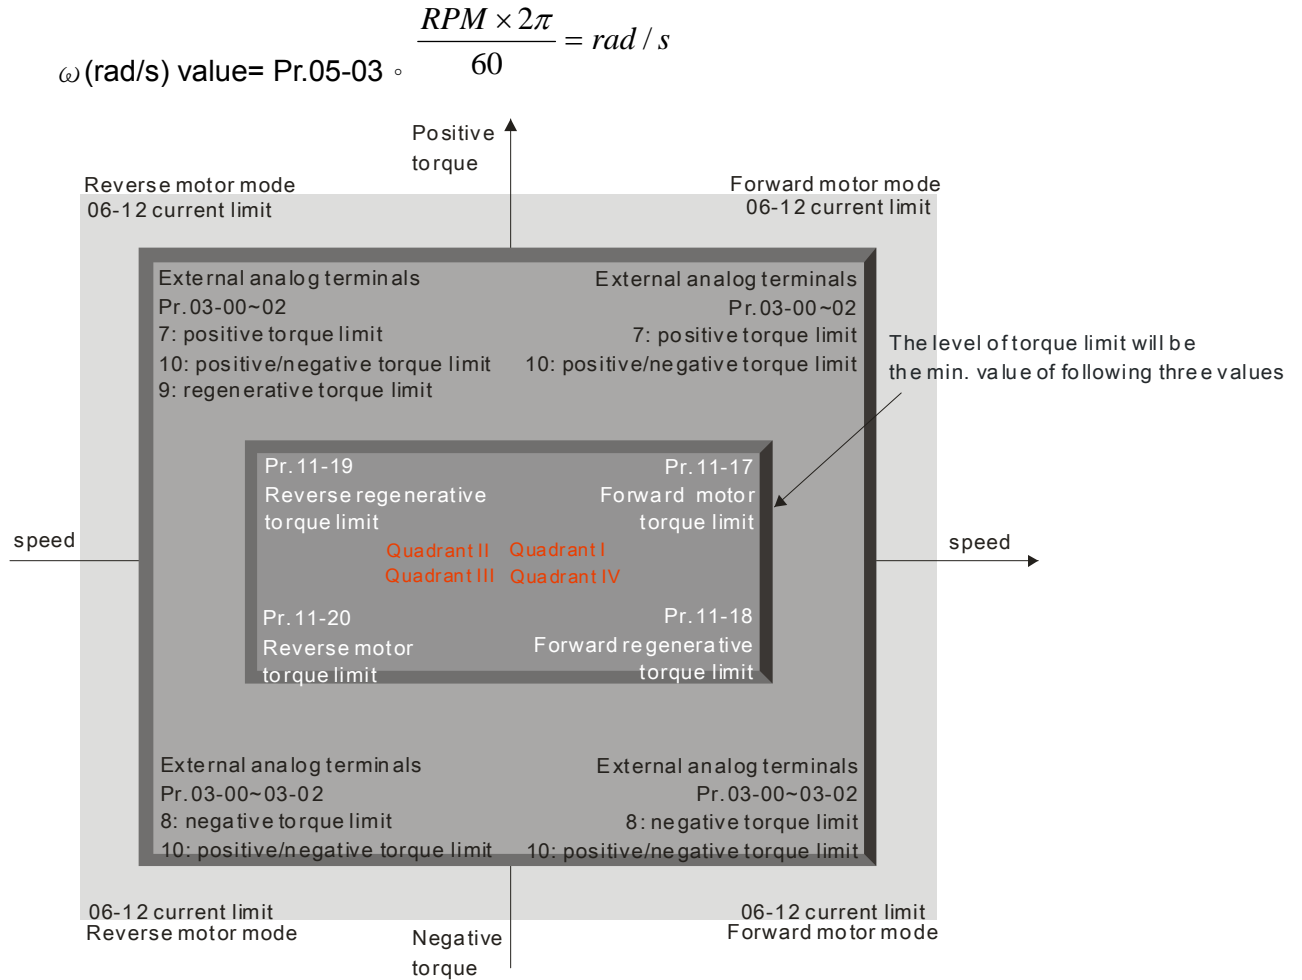


⚡ **11-21** Gain Value of Flux Weakening Curve for Motor 1 Factory Setting: 90

Settings 0~200%

⚡ **11-22** Gain Value of Flux Weakening Curve for Motor 2 Factory Setting: 90

Settings 0~200%

- 📖 Pr.11-21 and 11-22 are used to adjust the output voltage of flux weakening curve.
- 📖 For the spindle application, the adjustment method is
 1. It is used to adjust the output voltage when exceeding rated frequency.
 2. Monitor the output voltage
 3. Adjust Pr.11-21 (motor 1) or Pr.11-22 (motor 2) setting to make the output voltage reach motor rated voltage.
 4. The larger number it is set, the larger output voltage you will get.

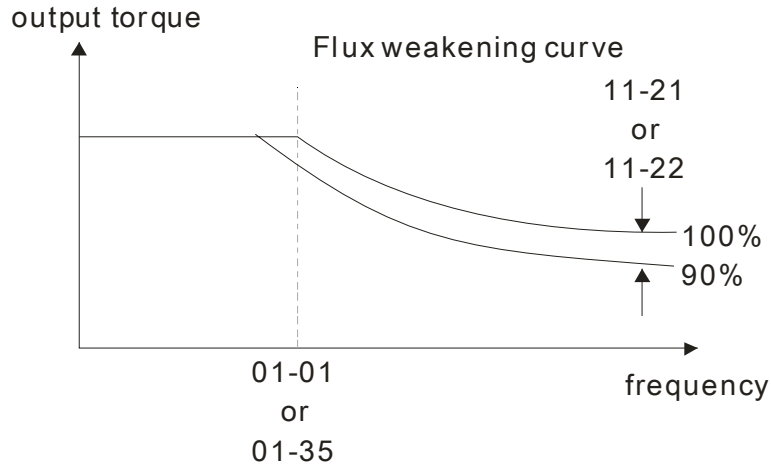

➤ **11-23** Speed Response of Flux Weakening Area Factory Setting: 65

Settings 0: Disable
0~150%

📖 It is used to control the speed in the flux weakening area. The larger value is set in Pr.11-23, the faster acceleration/deceleration will generate. In general, it is not necessary to adjust this parameter.

➤ **11-24** APR Gain Factory Setting: 10.00

Settings 0.00~40.00 (IM)/ 0~100.00Hz (PM)

📖 Kip gain of internal position is determined by Pr.11-05.

➤ **11-25** Gain Value of APR Feed Forward Factory Setting: 30

Settings 0~100


📖 For the position control, if it set a larger value in Pr.11-25, it can shorten the pulse differential and speed up the position response. But it may overshoot.

📖 When the multi-function input terminal is set to 37(ON), this parameter can be set as required. If this parameter is set to a non zero value and adjust Pr.10-21 (PG2 Filter Time) to reduce the position overshoot and pulse differential. If it is set to 0, it won't have overshoot problem in position control but the pulse differential is decided by Pr.11-05 (KP gain).

➤ **11-26** APR Curve Time Factory Setting: 3.00

Settings 0.00~655.35 sec

📖 It is valid when the multi-function input terminal is set to 35(ON). The larger it is set, the longer the position time will be.

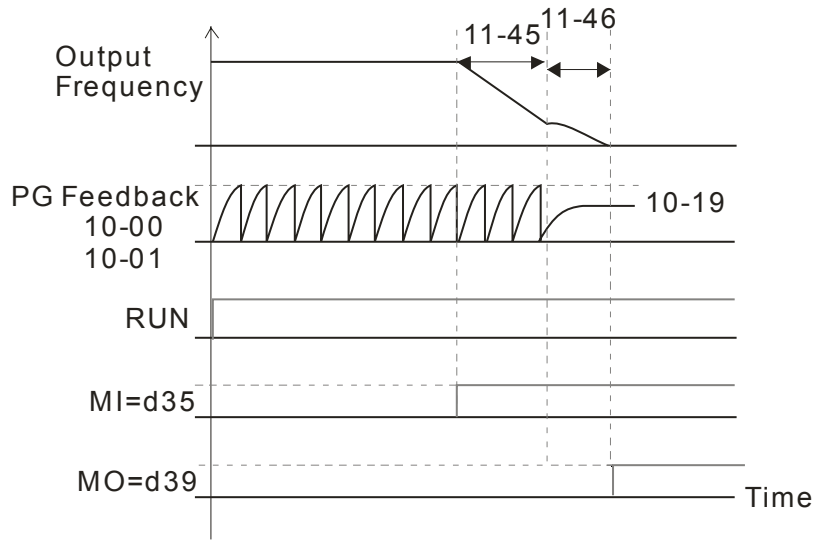

11-27 Max. Torque Command

Factory Setting: 100

Settings 0~500%

- The upper limit of torque command is 100%.
- Calculation equation for motor rated torque:

$$\text{motor rated torque: } T(N.M) = \frac{P(W)}{\omega(rad/s)}; P(W) \text{ value} = \text{Pr.05-02};$$

$$\omega(rad/s) \text{ value} = \text{Pr.05-03} \cdot \frac{RPM \times 2\pi}{60} = rad/s$$

11-28 Source of Torque Offset

Factory Setting: 0

Settings 0: Disable

- 1: Analog input (Pr.03-00)
- 2: Torque offset setting (Pr.11-29)
- 3: Control by external terminal (by Pr.11-30 to Pr.11-32)

- This parameter is the source of torque offset.
- When it is set to 3, source of torque offset would determine Pr.11-30 to Pr.11-32 by
- When it is set to 3, the source of torque offset will regard Pr.11-30~11-32 by the multi-function input terminals (MI) setting (31, 32 or 33).


N.O. switch status: ON= contact closed, OFF= contact open


Pr. 11-32	Pr. 11-31	Pr. 11-30	Torque Offset
MI=33(High)	MI=32(Mid)	MI=31(Low)	
OFF	OFF	OFF	None
OFF	OFF	ON	11-30
OFF	ON	OFF	11-31
OFF	ON	ON	11-30+11-31
ON	OFF	OFF	11-32
ON	OFF	ON	11-30+11-32
ON	ON	OFF	11-31+11-32
ON	ON	ON	11-30+11-31+11-32

11-29 Torque Offset Setting

Factory Setting: 0.0


Settings 0.0~100.0%

 This parameter is torque offset. The motor rated torque is 100%.

 Calculation equation for motor rated torque:

$$\text{motor rated torque: } T(N.M) = \frac{P(W)}{\omega(rad/s)}; P(W) \text{ value= Pr.05-02;}$$

$$\omega(rad/s) \text{ value= Pr.05-03} \cdot \frac{RPM \times 2\pi}{60} = rad/s$$

 **11-30** High Torque Offset


Factory Setting: 30.0

Settings 0.0~100.0%

 **11-31** Middle Torque Offset


Factory Setting: 20.0

Settings 0.0~100.0%

 **11-32** Low Torque Offset

Factory Setting: 10.0


Settings 0.0~100.0%

 When it is set to 3, the source of torque offset will regard Pr.11-30, Pr.11-31 and Pr.11-32 by the multi-function input terminals setting (31, 32 or 33). The motor rated torque is 100%.

 Calculation equation for motor rated torque:

$$\text{motor rated torque: } T(N.M) = \frac{P(W)}{\omega(rad/s)}; P(W) \text{ value= Pr.05-02;}$$

$$\omega(rad/s) \text{ value= Pr.05-03} \cdot \frac{RPM \times 2\pi}{60} = rad/s$$

 **11-33** Source of Torque Command

Factory Setting: 0

Settings 0: Digital Keypad (Pr.11-34)


1: RS485 serial communication


2: Analog signal (Pr.03-00)


3: CANopen

4: Reserved

5: Communication card


 When Pr.11-33 is set to 0, torque command can be set in Pr.11-34.


 When Pr.11-33 is set to 1 or 2, Pr.11-34 would only display the torque command

 **11-34** Torque Command

Factory Setting: 0.0

Settings -100.0~100.0%(Pr.11-27=100%)


 This parameter is for the torque command. When Pr.11-27 is set to 250% and Pr.11-34 is set to 100%, actual torque command=250X100%=250% motor rated torque.

 The drive will save the setting to the record before power turns off.

11-35 Low-pass Filter Time of Torque Command

Factory Setting: 0.000


Settings 0.000~1.000 sec


 When the setting is too long, the control will be stable but the control response will be delay. When the setting is too short, the response will be quickly but the control maybe unstable. User can adjust the setting by the control and response situation.


11-36 Speed Limit Selection

Factory Setting: 0

Settings 0: Set by Pr.11-37 (Forward speed limit) and Pr.11-38 (Reverse speed limit)
 1: Set by Pr.11-37,11-38 and Pr.00-20 (Source of Master Frequency Command)
 2: Set by Pr.00-20 (Source of Master Frequency Command).

 Speed limit function: in TQCPG, when the motor speed is accelerated to speed limit value (Pr.11-36, 11-37 and 11-38), it will switch to speed control mode to stop acceleration.

 When the torque is positive direction, speed limit is positive direction. When the torque is negative direction, speed limit is negative direction.

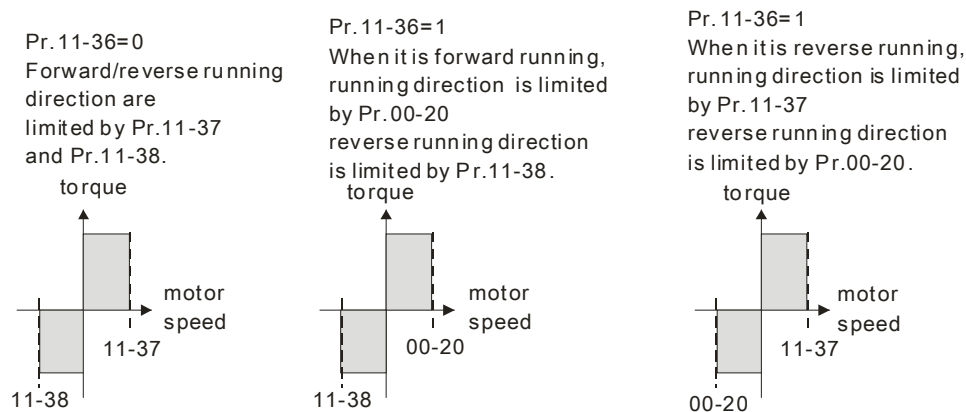

11-37 Forward Speed Limit (torque mode)


Factory Setting: 10

Settings 0~120%

11-38 Reverse Speed Limit (torque mode)

Factory Setting: 10


Settings 0~120%

 These parameters are used in the torque mode to limit the running direction and opposite direction. (Pr.01-00 max. output frequency=100%)

11-39 Zero Torque Command Mode

Factory Setting: 0

Settings 0: Torque mode
 1: Speed mode

 This parameter defines the torque command mode at 0% of torque output. When Pr.11-39 is set

as 0 (the torque mode), if torque command is 0%, the motor will produce excitation current but no torque current. When Pr.11-39 is set as 1 (the speed mode), if torque command is 0%, the AC motor drive can still produce torque current through speed controller to prevent motor race and the drive will also automatically adjust the speed to 0 when the speed command is not equal to 0.

11-40 Command Source of Point-to-Point Position Control

Factory Settings:0

- Settings
- 0: External terminal
 - 1: Reserved
 - 2: RS485
 - 3: CAN
 - 4: PLC
 - 5: Communication card

11-41 Reserved

11-42 系統控制旗標

Factory Settings: 0000

Settings 0000~FFFFh

Bit No.	Function	Description
0	At torque mode, selection between speed control and current control.	0:Speed control at torque mode, the largest current limit is the torque command. 1: Speed control at torque mode, P06-12 the largest current limit is Pr06-12
1	FWD/REV direction control	0: FWD/REV cannot be controlled by 02-12 bit 0 & 1 1: FWD/REV can be controlled by 02-12 bit 0&1
2	Fuzzy PID selection control	0: Fuzzy PID enabled 1: Fuzzy PID disabled
3~15	Reserved	

11-43 Max. Frequency of Point- to-Point Position Control

Factory Settings:10.00

Settings 0.00~327.67Hz

11-44 Accel. Time of Point-to Point Position Control


Factory Settings:1.00

Settings 0.00~655.35sec


11-45 Decel. Time of Point-to Point Position Control

Factory Settings:3.00

Settings 0.00~655.35sec

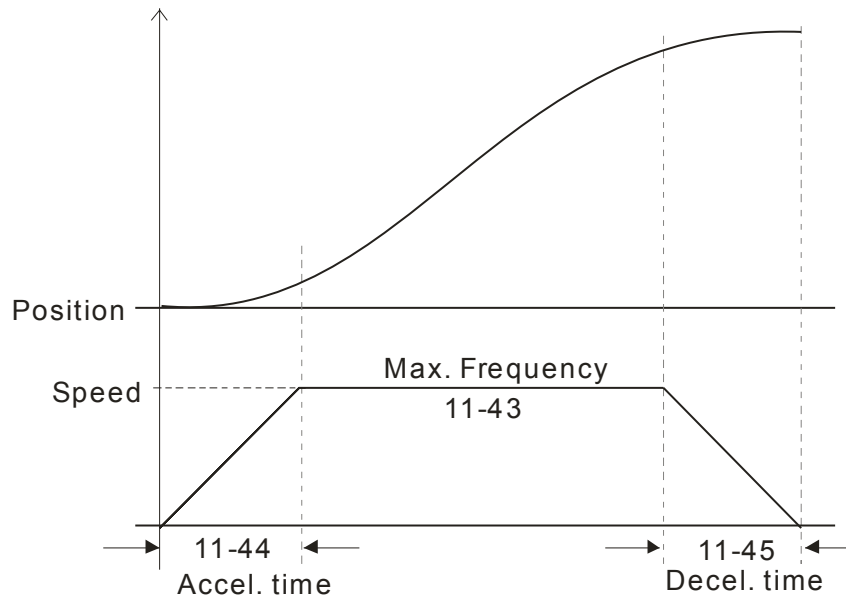

Chapter 13 Warning Codes

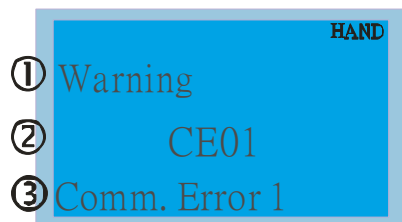

① Warning

② CE01











③ Comm. Error 1

① Display error signal




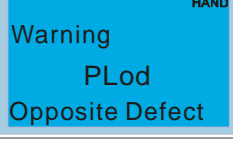
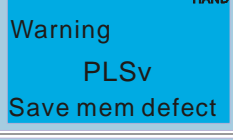
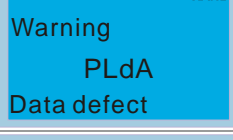
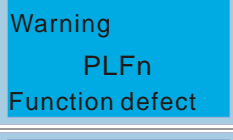
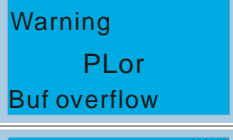
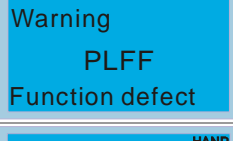
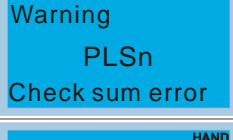
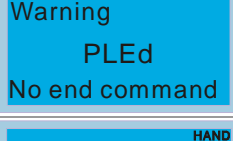
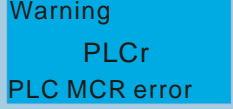 
② Abbreviate error code
The code is displayed as shown on KPC-CE01.



③ Display error description

Display on LCM Keypad	Descriptions
	Modbus function code error
	Address of Modbus data is error
	Modbus data error
	Modbus communication error
	Modbus transmission time-out
	Keypad transmission time-out
	Keypad COPY error 1
	Keypad COPY error 2
	Keypad COPY error 3

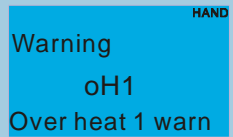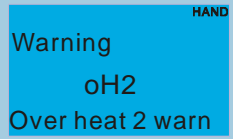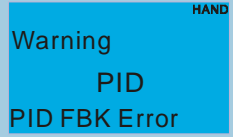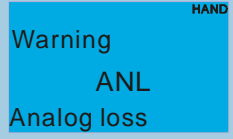
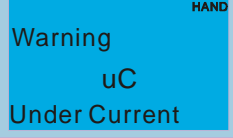
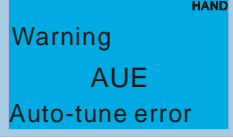
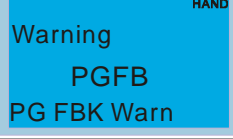
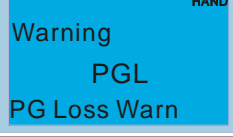
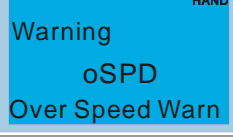
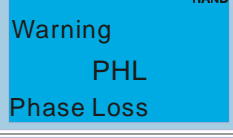
Display on LCM Keypad	Descriptions
 <p>Warning oH1 Over heat 1 warn</p>	IGBT over-heating warning
 <p>Warning oH2 Over heat 2 warn</p>	Capacity over-heating warning
 <p>Warning PID PID FBK Error</p>	PID feedback error
 <p>Warning ANL Analog loss</p>	ACI signal error When Pr03-19 is set to 1 and 2.
 <p>Warning uC Under Current</p>	Low current
 <p>Warning AUE Auto-tune error</p>	Auto tuning error
 <p>Warning PGFB PG FBK Warn</p>	PG feedback error
 <p>Warning PGL PG Loss Warn</p>	PG feedback loss
 <p>Warning oSPD Over Speed Warn</p>	Over-speed warning
 <p>Warning DAvE Deviation Warn</p>	Over speed deviation warning
 <p>Warning PHL Phase Loss</p>	Phase loss
 <p>Warning ot1 Over Torque 1</p>	Over torque 1

Display on LCM Keypad	Descriptions
 <p>Warning ot2 Over Torque 2</p>	Over torque 2
 <p>Warning oH3 Motor Over Heat</p>	Motor over-heating
 <p>Warning oSL Over Slip Warn</p>	Over slip
 <p>Warning tUn Auto tuning</p>	Auto tuning processing
 <p>Warning CGdn Guarding T-out</p>	CAN guarding time-out 1
 <p>Warning CHbn Heartbeat T-out</p>	CAN heartbeat time-out 2
 <p>Warning CSYn SYNC T-out</p>	CAN synchrony time-out
 <p>Warning CbFn Can Bus Off</p>	CAN bus off
 <p>Warning CSdn SDO T-out</p>	CAN SDO transmission time-out
 <p>Warning CSbn Buf Overflow</p>	CAN SDO received register overflow
 <p>Warning Cbtn Boot up fault</p>	CAN boot up error
 <p>Warning CPtn Error Protocol</p>	CAN format error

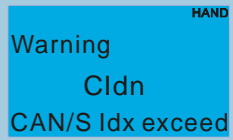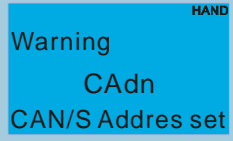Display on LCM Keypad	Descriptions
 <p>Warning CIdn CAN/S Idx exceed</p>	CAN index error
 <p>Warning CA dn CAN/S Adres set</p>	CAN station address error
 <p>Warning CFrn CAN/S FRAM fail</p>	CAN memory error
 <p>Warning PLod Opposite Defect</p>	PLC download error
 <p>Warning PLSv Save mem defect</p>	Save error of PLC download
 <p>Warning PLdA Data defect</p>	Data error during PLC operation
 <p>Warning PLFn Function defect</p>	Function code of PLC download error
 <p>Warning PLor Buf overflow</p>	PLC register overflow
 <p>Warning PLFF Function defect</p>	Function code of PLC operation error
 <p>Warning PLSn Check sum error</p>	PLC checksum error
 <p>Warning PLEd No end command</p>	PLC end command is missing
 <p>Warning PLCr PLC MCR error</p>	PLC MCR command error

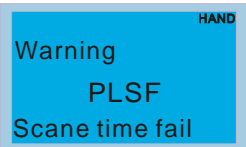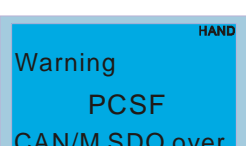Display on LCM Keypad	Descriptions
 <p>Warning PLdF Download fail</p>	PLC download fail
 <p>Warning PLSF Scane time fail</p>	PLC scan time exceed
 <p>Warning PCGd CAN/M Guard err</p>	CAN Master guarding error
 <p>Warning PCbF CAN/M bus off</p>	CAN Master bus off
 <p>Warning PCnL CAN/M Node Lack</p>	CAN Master node error
 <p>Warning PCCt CAN/M Cycle Time</p>	CAN/M cycle time-out
 <p>Warning PCSF CAN/M SDO over</p>	CAN/M SDOover
 <p>Warning PCSD CAN/M Sdo Tout</p>	CAN/M SDO time-out
 <p>Warning PCAd CAN/M Adres set</p>	CAN/M station address error
 <p>Warning ECid ExCom ID failed</p>	Duplicate MAC ID error Node address setting error

Display on LCM Keypad	Descriptions
	Low voltage of communication card
	Communication card in test mode
	DeviceNet bus-off
	DeviceNet no power
	Factory default setting error
	Serious internal error
	IO connection break off
	Profibus parameter data error
	Profibus configuration data error
	Ethernet Link fail
	Communication time-out for communication card and drive
	Check sum error for Communication card and drive


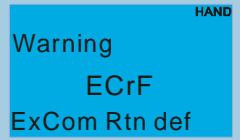
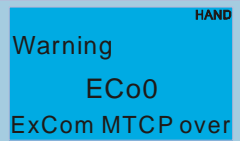
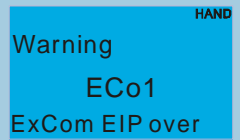
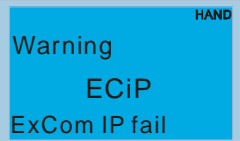
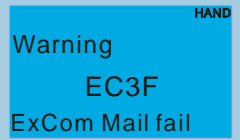
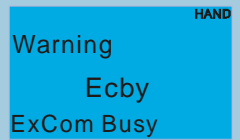
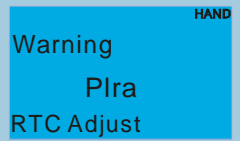
Display on LCM Keypad	Descriptions
 <p>Warning ECrF ExCom Rtn def</p>	Communication card returns to default setting
 <p>Warning ECo0 ExCom MTCP over</p>	Modbus TCP exceed maximum communication value
 <p>Warning ECo1 ExCom EIP over</p>	EtherNet/IP exceed maximum communication value
 <p>Warning ECiP ExCom IP fail</p>	IP fail
 <p>Warning EC3F ExCom Mail fail</p>	Mail fail
 <p>Warning Ecby ExCom Busy</p>	Communication card busy
 <p>Warning PIra RTC Adjust</p>	Adjust RTC











Chapter 14 Fault Codes and Descriptions











<p>① Warning</p> <p>② CE01</p> <p>③ Comm. Error 1</p>	<div style="text-align: right; font-size: 0.8em; font-weight: bold;">HAND</div> <p style="font-size: 1.5em; font-weight: bold; margin: 0;">Warning</p> <p style="font-size: 1.5em; font-weight: bold; margin: 0;">CE01</p> <p style="font-size: 1.5em; font-weight: bold; margin: 0;">Comm. Error 1</p>	<p>① Display error signal</p> <p>② Abbreviate error code The code is displayed as shown on KPC-CE01.</p> <p>③ Display error description</p>
---	---	---











Fault Name	Fault Descriptions	Corrective Actions
<div style="text-align: right; font-size: 0.8em; font-weight: bold;">HAND</div> <p style="font-size: 1.2em; font-weight: bold;">Fault</p> <p style="font-size: 1.2em; font-weight: bold;">ocA</p> <p style="font-size: 1.2em; font-weight: bold;">Oc at accel</p>	Over-current during acceleration (Output current exceeds triple rated current during acceleration.)	<ol style="list-style-type: none"> 1. Short-circuit at motor output: Check for possible poor insulation at the output. 2. Acceleration Time too short: Increase the Acceleration Time. 3. AC motor drive output power is too small: Replace the AC motor drive with the next higher power model.
<div style="text-align: right; font-size: 0.8em; font-weight: bold;">HAND</div> <p style="font-size: 1.2em; font-weight: bold;">Fault</p> <p style="font-size: 1.2em; font-weight: bold;">ocd</p> <p style="font-size: 1.2em; font-weight: bold;">Oc at decel</p>	Over-current during deceleration (Output current exceeds triple rated current during deceleration.)	<ol style="list-style-type: none"> 1. Short-circuit at motor output: Check for possible poor insulation at the output. 2. Deceleration Time too short: Increase the Deceleration Time. 3. AC motor drive output power is too small: Replace the AC motor drive with the next higher power model.
<div style="text-align: right; font-size: 0.8em; font-weight: bold;">HAND</div> <p style="font-size: 1.2em; font-weight: bold;">Fault</p> <p style="font-size: 1.2em; font-weight: bold;">ocn</p> <p style="font-size: 1.2em; font-weight: bold;">Oc at normal SPD</p>	Over-current during steady state operation (Output current exceeds triple rated current during constant speed.)	<ol style="list-style-type: none"> 1. Short-circuit at motor output: Check for possible poor insulation at the output. 2. Sudden increase in motor loading: Check for possible motor stall. 3. AC motor drive output power is too small: Replace the AC motor drive with the next higher power model.
<div style="text-align: right; font-size: 0.8em; font-weight: bold;">HAND</div> <p style="font-size: 1.2em; font-weight: bold;">Fault</p> <p style="font-size: 1.2em; font-weight: bold;">ocS</p> <p style="font-size: 1.2em; font-weight: bold;">Oc at stop</p>	Hardware failure in current detection	Return to the factory
<div style="text-align: right; font-size: 0.8em; font-weight: bold;">HAND</div> <p style="font-size: 1.2em; font-weight: bold;">Fault</p> <p style="font-size: 1.2em; font-weight: bold;">GFF</p> <p style="font-size: 1.2em; font-weight: bold;">Ground fault</p>	Ground fault	<p>When (one of) the output terminal(s) is grounded, short circuit current is more than 50% of AC motor drive rated current, the AC motor drive power module may be damaged.</p> <p>NOTE: The short circuit protection is provided for AC motor drive protection, not for protecting the user.</p> <ol style="list-style-type: none"> 1. Check the wiring connections between the AC motor drive and motor for possible short circuits, also to ground. 2. Check whether the IGBT power module is damaged. 3. Check for possible poor insulation at the output.











Fault Name	Fault Descriptions	Corrective Actions
Fault occ Short Circuit	Short-circuit is detected between upper bridge and lower bridge of the IGBT module	Return to the factory
Fault ovA Ov at accel	DC BUS over-voltage during acceleration (230V: DC 450V; 460V: DC 900V)	<ol style="list-style-type: none"> 1. Check if the input voltage falls within the rated AC motor drive input voltage range. 2. Check for possible voltage transients. 3. If DC BUS over-voltage due to regenerative voltage, please increase the Deceleration Time or add an optional brake resistor.
Fault ovd Ov at decel	DC BUS over-voltage during deceleration (230V: DC 450V; 460V: DC 900V)	<ol style="list-style-type: none"> 1. Check if the input voltage falls within the rated AC motor drive input voltage range. 2. Check for possible voltage transients. 3. If DC BUS over-voltage due to regenerative voltage, please increase the Deceleration Time or add an optional brake resistor.
Fault ovn Ov at normal SPD	DC BUS over-voltage at constant speed (230V: DC 450V; 460V: DC 900V)	<ol style="list-style-type: none"> 1. Check if the input voltage falls within the rated AC motor drive input voltage range. 2. Check for possible voltage transients. 3. If DC BUS over-voltage due to regenerative voltage, please increase the Deceleration Time or add an optional brake resistor.
Fault ovS Ov at stop	Hardware failure in voltage detection	<ol style="list-style-type: none"> 1. Check if the input voltage falls within the rated AC motor drive input voltage range. 2. Check for possible voltage transients.
Fault LvA Lv at accel	DC BUS voltage is less than Pr.06-00 during acceleration	<ol style="list-style-type: none"> 1. Check if the input voltage is normal 2. Check for possible sudden load
Fault Lvd Lv at decel	DC BUS voltage is less than Pr.06-00 during deceleration	<ol style="list-style-type: none"> 1. Check if the input voltage is normal 2. Check for possible sudden load
Fault Lvn Lv at normal SPD	DC BUS voltage is less than Pr.06-00 in constant speed	<ol style="list-style-type: none"> 1. Check if the input voltage is normal 2. Check for possible sudden load
Fault LvS Lv at stop	DC BUS voltage is less than Pr.06-00 at stop	<ol style="list-style-type: none"> 1. Check if the input voltage is normal 2. Check for possible sudden load


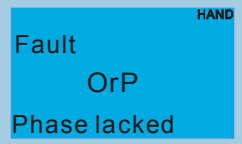
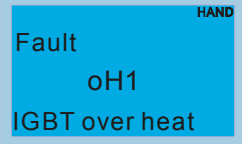
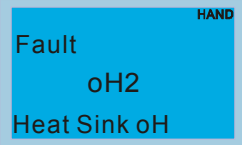
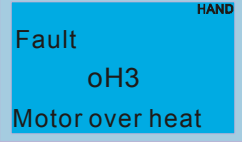
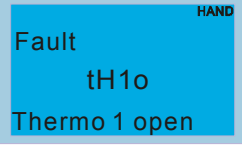
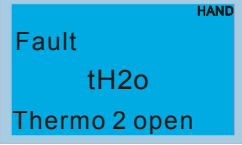
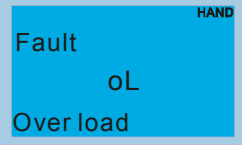
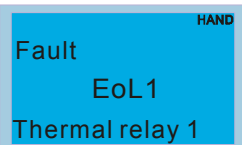

Fault Name	Fault Descriptions	Corrective Actions
 <p>Fault OrP Phase lacked</p>	Phase Loss	<p>Check Power Source Input if all 3 input phases are connected without loose contacts. For models 40hp and above, please check if the fuse for the AC input circuit is blown.</p>
 <p>Fault oH1 IGBT over heat</p>	IGBT overheating IGBT temperature exceeds protection level	<ol style="list-style-type: none"> 1. Ensure that the ambient temperature falls within the specified temperature range. 2. Make sure that the ventilation holes are not obstructed. 3. Remove any foreign objects from the heatsinks and check for possible dirty heat sink fins. 4. Check the fan and clean it. 5. Provide enough spacing for adequate ventilation.
 <p>Fault oH2 Heat Sink oH</p>	Heatsink overheating Capacitance temperature exceeds cause heatsink overheating.	<ol style="list-style-type: none"> 1. Ensure that the ambient temperature falls within the specified temperature range. 2. Make sure heat sink is not obstructed. Check if the fan is operating 3. Check if there is enough ventilation clearance for AC motor drive.
 <p>Fault oH3 Motor over heat</p>	Motor overheating The AC motor drive detecting internal temperature exceeds the setting of Pr.06-30 (PTC level)	<ol style="list-style-type: none"> 1. Make sure that the motor is not obstructed. 2. Ensure that the ambient temperature falls within the specified temperature range. 3. Take the next higher power AC motor drive model.
 <p>Fault tH1o Thermo 1 open</p>	IGBT Hardware Error	Return to the factory
 <p>Fault tH2o Thermo 2 open</p>	Capacitor Hardware Error	Return to the factory
 <p>Fault oL Over load</p>	Overload The AC motor drive detects excessive drive output current.	<ol style="list-style-type: none"> 1. Check if the motor is overloaded. 2. Take the next higher power AC motor drive model.
 <p>Fault EoL1 Thermal relay 1</p>	Electronics thermal relay 1 protection	<ol style="list-style-type: none"> 1. Check the setting of electronics thermal relay (Pr.06-14) Take the next higher power AC motor drive model

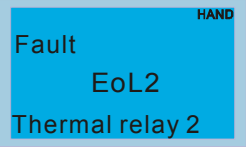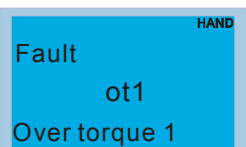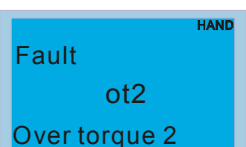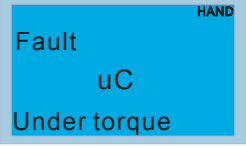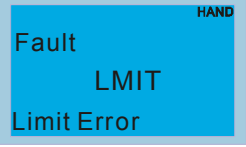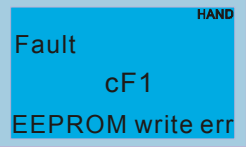
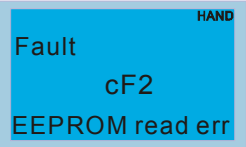
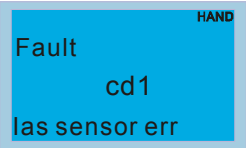
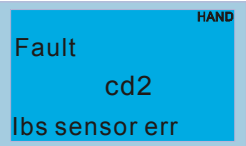
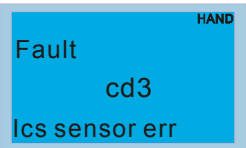
Fault Name	Fault Descriptions	Corrective Actions
 <p>Fault EoL2 Thermal relay 2</p>	<p>Electronics thermal relay 2 protection</p>	<ol style="list-style-type: none"> 1. Check the setting of electronics thermal relay (Pr.06-28) 2. Take the next higher power AC motor drive model
 <p>Fault ot1 Over torque 1</p>	<p>These two fault codes will be displayed when output current exceeds the over-torque detection level (Pr.06-07 or Pr.06-10) and exceeds over-torque detection (Pr.06-08 or Pr.06-11) and it is set to 2 or 4 in Pr.06-06 or Pr.06-09.</p>	<ol style="list-style-type: none"> 1. Check whether the motor is overloaded. 2. Check whether motor rated current setting (Pr.05-01) is suitable 3. Take the next higher power AC motor drive model.
 <p>Fault ot2 Over torque 2</p>		
 <p>Fault uC Under torque</p>	<p>Low current detection</p>	<p>Check Pr.06-71, Pr.06-72, Pr.06-73.</p>
 <p>Fault LMIT Limit Error</p>	<p>Limit error</p>	
 <p>Fault cF1 EEPROM write err</p>	<p>Internal EEPROM can not be programmed.</p>	<ol style="list-style-type: none"> 1. Press “RESET” key to the factory setting 2. Return to the factory.
 <p>Fault cF2 EEPROM read err</p>	<p>Internal EEPROM can not be read.</p>	<ol style="list-style-type: none"> 1. Press “RESET” key to the factory setting 2. Return to the factory.
 <p>Fault cd1 las sensor err</p>	<p>U-phase error</p>	<p>Reboots the power. If fault code is still displayed on the keypad please return to the factory</p>
 <p>Fault cd2 lbs sensor err</p>	<p>V-phase error</p>	<p>Reboots the power. If fault code is still displayed on the keypad please return to the factory</p>
 <p>Fault cd3 lcs sensor err</p>	<p>W-phase error</p>	<p>Reboots the power. If fault code is still displayed on the keypad please return to the factory</p>

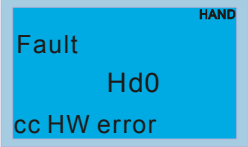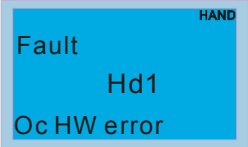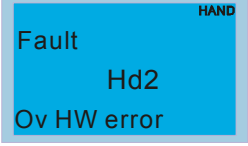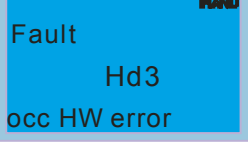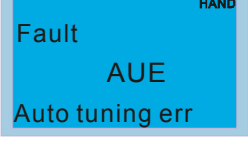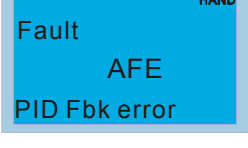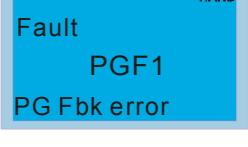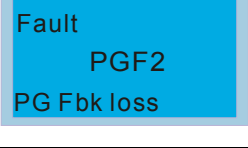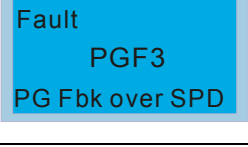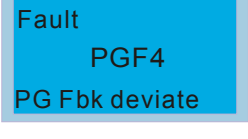Fault Name	Fault Descriptions	Corrective Actions
 <p>Fault Hd0 cc HW error</p>	CC (current clamp)	Reboots the power. If fault code is still displayed on the keypad please return to the factory
 <p>Fault Hd1 Oc HW error</p>	OC hardware error	Reboots the power. If fault code is still displayed on the keypad please return to the factory
 <p>Fault Hd2 Ov HW error</p>	OV hardware error	Reboots the power. If fault code is still displayed on the keypad please return to the factory
 <p>Fault Hd3 occ HW error</p>	Occ hardware error	Reboots the power. If fault code is still displayed on the keypad please return to the factory
 <p>Fault AUE Auto tuning err</p>	Auto tuning error	<ol style="list-style-type: none"> 1. Check cabling between drive and motor 2. Try again.
 <p>Fault AFE PID Fbk error</p>	PID loss (ACI)	<ol style="list-style-type: none"> 1. Check the wiring of the PID feedback 2. Check the PID parameters settings
 <p>Fault PGF1 PG Fbk error</p>	PG feedback error	Check if encoder parameter setting is accurate when it is PG feedback control.
 <p>Fault PGF2 PG Fbk loss</p>	PG feedback loss	Check the wiring of the PG feedback
 <p>Fault PGF3 PG Fbk over SPD</p>	PG feedback stall	<ol style="list-style-type: none"> 1. Check the wiring of the PG feedback 2. Check if the setting of PI gain and deceleration is suitable 3. Return to the factory
 <p>Fault PGF4 PG Fbk deviate</p>	PG slip error	<ol style="list-style-type: none"> 1. Check the wiring of the PG feedback 2. Check if the setting of PI gain and deceleration is suitable 3. Return to the factory

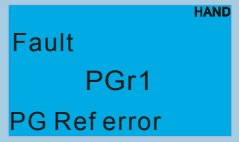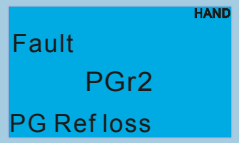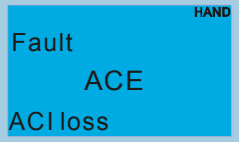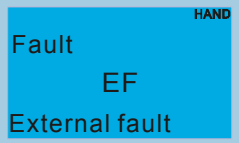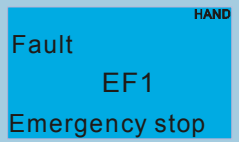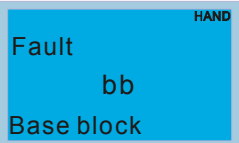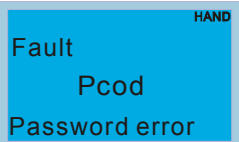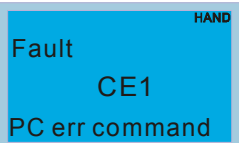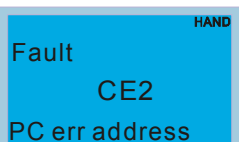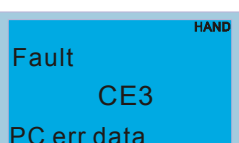Fault Name	Fault Descriptions	Corrective Actions
 <p>Fault PGr1 PG Ref error</p>	Pulse input error	<ol style="list-style-type: none"> 1. Check the pulse wiring 2. Return to the factory
 <p>Fault PGr2 PG Ref loss</p>	Pulse input loss	<ol style="list-style-type: none"> 1. Check the pulse wiring 2. Return to the factory
 <p>Fault ACE ACI loss</p>	ACI loss	<ol style="list-style-type: none"> 1. Check the ACI wiring 2. Check if the ACI signal is less than 4mA
 <p>Fault EF External fault</p>	External Fault	<ol style="list-style-type: none"> 1. Input EF (N.O.) on external terminal is closed to GND. Output U, V, W will be turned off. 2. Give RESET command after fault has been cleared.
 <p>Fault EF1 Emergency stop</p>	Emergency stop	<ol style="list-style-type: none"> 1. When the multi-function input terminals MI1 to MI6 are set to emergency stop, the AC motor drive stops output U, V, W and the motor coasts to stop. 2. Press RESET after fault has been cleared.
 <p>Fault bb Base block</p>	External Base Block	<ol style="list-style-type: none"> 1. When the external input terminal (B.B) is active, the AC motor drive output will be turned off. 2. Deactivate the external input terminal (B.B) to operate the AC motor drive again.
 <p>Fault Pcod Password error</p>	Password is locked.	Keypad will be locked. Turn the power ON after power OFF to re-enter the correct password. See Pr.00-07 and 00-08.
 <p>Fault CE1 PC err command</p>	Illegal function code	Check if the function code is correct (function code must be 03, 06, 10, 63)
 <p>Fault CE2 PC err address</p>	Illegal data address (00H to 254H)	Check if the communication address is correct
 <p>Fault CE3 PC err data</p>	Illegal data value	Check if the data value exceeds max./min. value

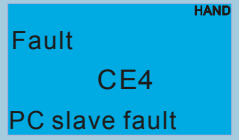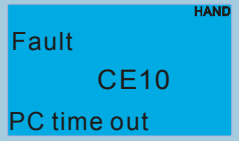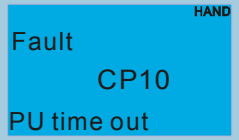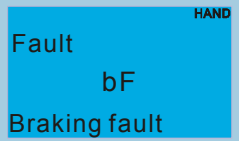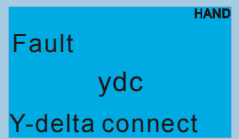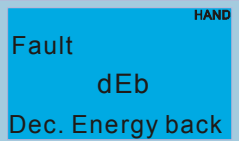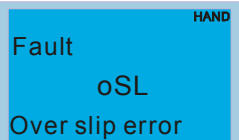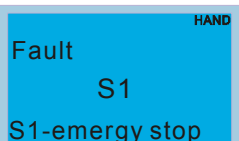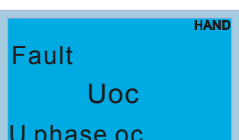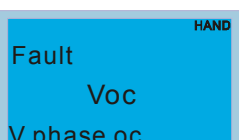Fault Name	Fault Descriptions	Corrective Actions
 <p>Fault CE4 PC slave fault</p>	Data is written to read-only address	Check if the communication address is correct
 <p>Fault CE10 PC time out</p>	Modbus transmission time-out	
 <p>Fault CP10 PU time out</p>	Keypad transmission time-out	
 <p>Fault bF Braking fault</p>	Brake resistor fault	If the fault code is still displayed on the keypad after pressing “RESET” key, please return to the factory.
 <p>Fault ydc Y-delta connect</p>	Y-connection/ Δ -connection switch error	<ol style="list-style-type: none"> 1. Check the wiring of the Y-connection/Δ-connection 2. Check the parameters settings
 <p>Fault dEb Dec. Energy back</p>	When Pr.07-13 is not set to 0 and momentary power off or power cut, it will display dEb during accel./decel. stop.	<ol style="list-style-type: none"> 1. Set Pr.07-13 to 0 2. Check if input power is stable
 <p>Fault oSL Over slip error</p>	It will be displayed when slip exceeds Pr.05-26 setting and time exceeds Pr.05-27 setting.	<ol style="list-style-type: none"> 1. Check if motor parameter is correct (please decrease the load if overload) 2. Check the settings of Pr.05-26 and Pr.05-27
 <p>Fault S1 S1-emergy stop</p>	Emergency stop for external safety	
 <p>Fault Uoc U phase oc</p>	Phase U short circuit	
 <p>Fault Voc V phase oc</p>	Phase V short circuit	

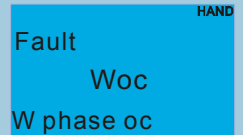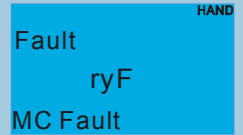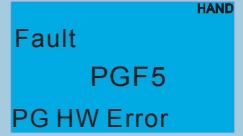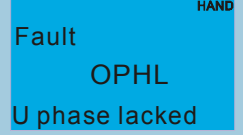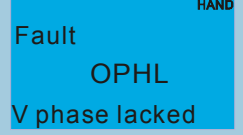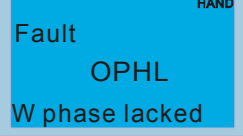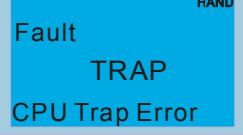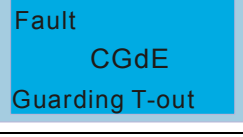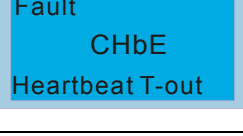Fault Name	Fault Descriptions	Corrective Actions
 <p>Fault Woc W phase oc</p>	<p>W phase short circuit</p>	
 <p>Fault ryF MC Fault</p>	<p>Electric valve switch error when executing Soft Start. (This warning is for frame E and higher frame of AC drives)</p>	<p>Do not disconnect RST when drive is still operating.</p>
 <p>Fault PGF5 PG HW Error</p>	<p>Hardware error of PG Card</p>	<p>Check if PG Card is insert to the right slot and parameter settings for encoder are accurate.</p>
 <p>Fault OPHL U phase lacked</p>	<p>Output phase loss (Phase U)</p>	
 <p>Fault OPHL V phase lacked</p>	<p>Output phase loss (Phase V)</p>	
 <p>Fault OPHL W phase lacked</p>	<p>Output phase loss (Phase W)</p>	
 <p>Fault TRAP CPU Trap Error</p>	<p>CPU trap error</p>	
 <p>Fault CGdE Guarding T-out</p>	<p>CANopen guarding error</p>	
 <p>Fault CHbE Heartbeat T-out</p>	<p>CANopen heartbeat error</p>	
 <p>Fault CSYE SYNC T-out</p>	<p>CANopen synchronous error</p>	

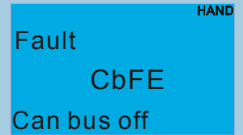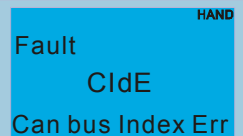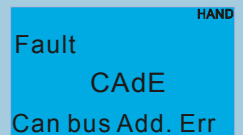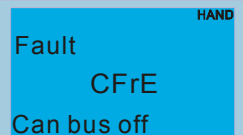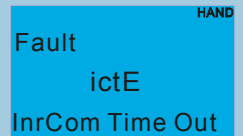Fault Name	Fault Descriptions	Corrective Actions
	CANopen bus off error	
	CANopen index error	
	CANopen station address error	
	CANopen memory error	
	Internal communication time-out	

Chapter 15 CANopen Overview

Newest version is available at <http://www.delta.com.tw/industrialautomation/>

- 15.1 CANopen Overview
- 15.2 Wiring for CANopen
- 15.3 How to control by CANopen
 - 15.3.1 CANopen Control Mode Selection
 - 15.3.2 Delta Defined Control Mode (There are two modes available)
 - 15.3.3 DS402 Standard Control Mode
 - 15.3.4 Remarks to Control Modes
- 15.4 CANopen Supporting Index
- 15.5 CANopen Fault Code
- 15.6 CANopen LED Function

Built-in EMC-COP01 card is included in VFDXXXC23E/VFDXXXC43E models.

The built-in CANopen function is a kind of remote control. Master can control the AC motor drive by using CANopen protocol. CANopen is a CAN-based higher layer protocol. It provides standardized communication objects, including real-time data (Process Data Objects, PDO), configuration data (Service Data Objects, SDO), and special functions (Time Stamp, Sync message, and Emergency message). And it also has network management data, including Boot-up message, NMT message, and Error Control message. Refer to CiA website <http://www.can-cia.org/> for details. The content of this instruction sheet may be revised without prior notice. Please consult our distributors or download the most updated version at <http://www.delta.com.tw/industrialautomation>

Delta CANopen supporting functions:

- Support CAN2.0A Protocol;
- Support CANopen DS301 V4.02;
- Support DSP-402 V2.0.

Delta CANopen supporting services:

- PDO (Process Data Objects): PDO1~ PDO2
- SDO (Service Data Object):
 - Initiate SDO Download;
 - Initiate SDO Upload;
 - Abort SDO;
 - SDO message can be used to configure the slave node and access the Object Dictionary in every node.
- SOP (Special Object Protocol):
 - Support default COB-ID in Predefined Master/Slave Connection Set in DS301 V4.02;
 - Support SYNC service;
 - Support Emergency service.
- NMT (Network Management):
 - Support NMT module control;
 - Support NMT Error control;
 - Support Boot-up.


Delta CANopen not supporting service:

- Time Stamp service


15.1 CANopen Overview

CANopen Protocol

CANopen is a CAN-based higher layer protocol, and was designed for motion-oriented machine control networks, such as handling systems. Version 4 of CANopen (CiA DS301) is standardized as EN50325-4. The CANopen specifications cover application layer and communication profile (CiA DS301), as well as a framework for programmable devices (CiA 302), recommendations for cables and connectors (CiA 303-1) and SI units and prefix representations (CiA 303-2).

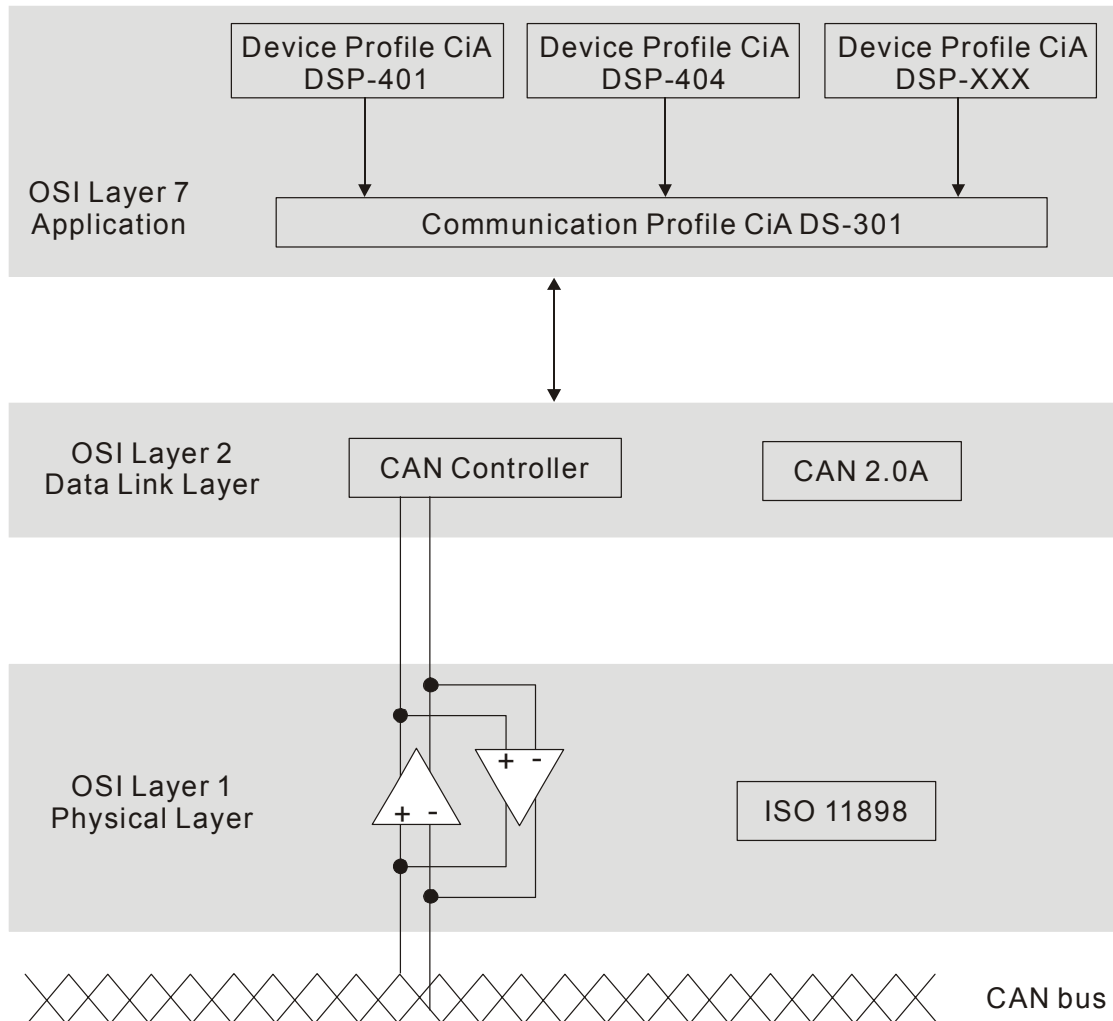

RJ-45 Pin Definition

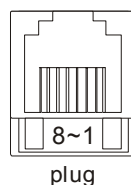

PIN	Signal	Description
1	CAN_H	CAN_H bus line (dominant high)
2	CAN_L	CAN_L bus line (dominant low)
3	CAN_GND	Ground / 0V / V-
7	CAN_GND	Ground / 0V / V-

Pre-Defined Connection Set

To reduce configuration effort for simple networks, CANopen define a mandatory default identifier allocation scheme. The 11-bit identifier structure in predefined connection is set as follows:

COB Identifier (CAN Identifier)										
10	9	8	7	6	5	4	3	2	1	0
Function Code				Node Number						

Object	Function Code	Node Number	COB-ID	Object Dictionary Index
Broadcast messages				
NMT	0000	-	0	-
SYNC	0001	-	80H	1005H, 1006H, 1007H
TIME STAMP	0010	-	100H	1012H, 1013H
Point-to-point messages				
Emergency	0001	1-127	81H-FFH	1014H, 1015H
TPDO1	0011	1-127	181H-1FFH	1800H
RPDO1	0100	1-127	201H-27FH	1400H
TPDO2	0101	1-127	281H-2FFH	1801H
RPDO2	0110	1-127	301H-37FH	1401H
TPDO3	0111	1-127	381H-3FFH	1802H
RPDO3	1000	1-127	401H-47FH	1402H
TPDO4	1001	1-127	481H-4FFH	1803H
RPDO4	1010	1-127	501H-57FH	1403H
Default SDO (tx)	1011	1-127	581H-5FFH	1200H
Default SDO (rx)	1100	1-127	601H-67FH	1200H
NMT Error Control	1110	1-127	701H-77FH	1016H, 1017H


CANopen Communication Protocol

It has services as follows:

- NMT (Network Management Object)
- SDO (Service Data Objects)
- PDO (Process Data Object)
- EMCY (Emergency Object)

NMT (Network Management Object)


The Network Management (NMT) follows a Master/Slave structure for executing NMT service. Only one NMT master is in a network, and other nodes are regarded as slaves. All CANopen nodes have a present NMT state, and NMT master can control the state of the slave nodes. The state diagram of a node is shown as follows:

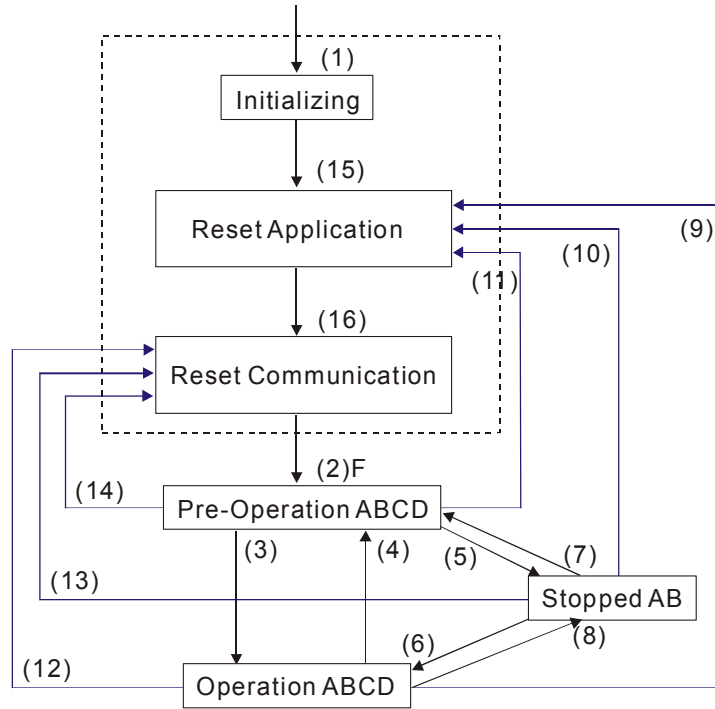

- (1) After power is applied, it is auto in initialization state
 - (2) Enter pre-operational state automatically
 - (3) (6) Start remote node
 - (4) (7) Enter pre-operational state
 - (5) (8) Stop remote node
 - (9) (10) (11) Reset node
 - (12) (13) (14) Reset communication
 - (15) Enter reset application state automatically
 - (16) Enter reset communication state automatically
- A: NMT
 - B: Node Guard
 - C: SDO
 - D: Emergency
 - E: PDO
 - F: Boot-up

	Initializing	Pre-Operational	Operational	Stopped
PDO			○	
SDO		○	○	
SYNC		○	○	
Time Stamp		○	○	
EMCY		○	○	
Boot-up	○			
NMT		○	○	○

NMT Protocol is shown as follows:

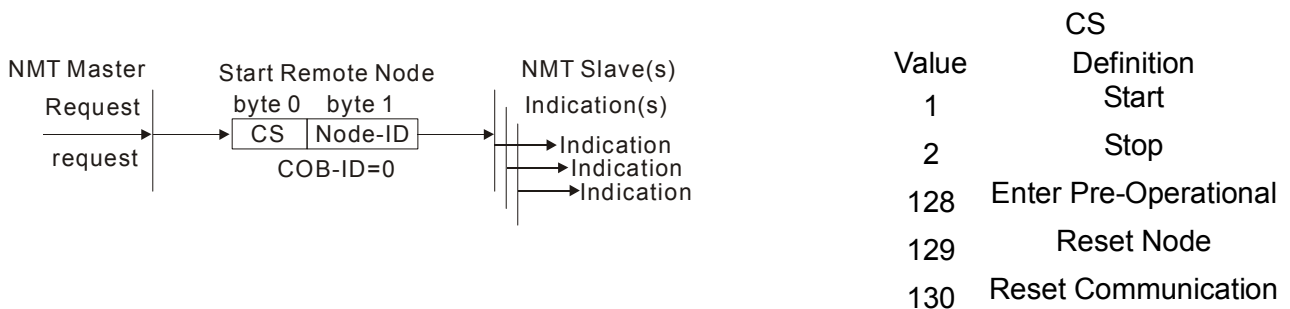

SDO (Service Data Objects)

SDO is used to access the Object Dictionary in every CANopen node by Client/Server model. One SDO has two COB-ID (request SDO and response SDO) to upload or download data between two nodes. No data limit for SDOs to transfer data. But it needs to transfer by segment when data exceeds 4 bytes with an end signal in the last segment.

The Object Dictionary (OD) is a group of objects in CANopen node. Every node has an OD in the system, and OD contains all parameters describing the device and its network behavior. The access path of OD is the index and sub-index, each object has a unique index in OD, and has sub-index if necessary. The request and response frame structure of SDO communication is shown as follows:

Type		Data 0								Data 1	Data 2	Data 3	Data 4	Data 5	Data 6	Data 7
		7	6	5	4	3	2	1	0	Index	Index	Index	Data	Data	Data	Data
		command								L	H	Sub	LL	LH	HL	HH
Initiate Domain Download	Client	0	0	1	-	N	E	S								
	Server	0	1	1	-	-	-	-								
Initiate Domain Upload	Client	0	1	0	-	-	-	-								
	Server	0	1	0	-	N	E	S								
Abort Domain Transfer	Client	1	0	0	-	-	-	-								
	Server	1	0	0	-	-	-	-								

N: Bytes not use

E: normal(0)/expedited(1)

S: size indicated

PDO (Process Data Object)

PDO communication can be described by the producer/consumer model. Each node of the network will listen to the messages of the transmission node and distinguish if the message has to be processed or not after receiving the message. PDO can be transmitted from one device to one another device or to many other devices. Every PDO has two PDO services: a TxPDO and a RxPDO. PDOs are transmitted in a non-confirmed mode.

PDO Transmission type is defined in the PDO communication parameter index (1400h for the 1st RxPDO or 1800h for the 1st TxPDO), and all transmission types are listed in the following table:

Type Number	PDO				
	Cyclic	Acyclic	Synchronous	Asynchronous	RTR only
0		○	○		
1-240	○		○		
241-251	Reserved				
252			○		○
253				○	○
254				○	
255				○	

Type number 1-240 indicates the number of SYNC message between two PDO transmissions.

Type number 252 indicates the data is updated (but not sent) immediately after receiving SYNC.



Type number 253 indicates the data is updated immediately after receiving RTR.

Type number 254: Delta CANopen doesn't support this transmission format.

Type number 255 indicates the data is asynchronous transmission.

All PDO transmission data must be mapped to index via Object Dictionary.

Example:

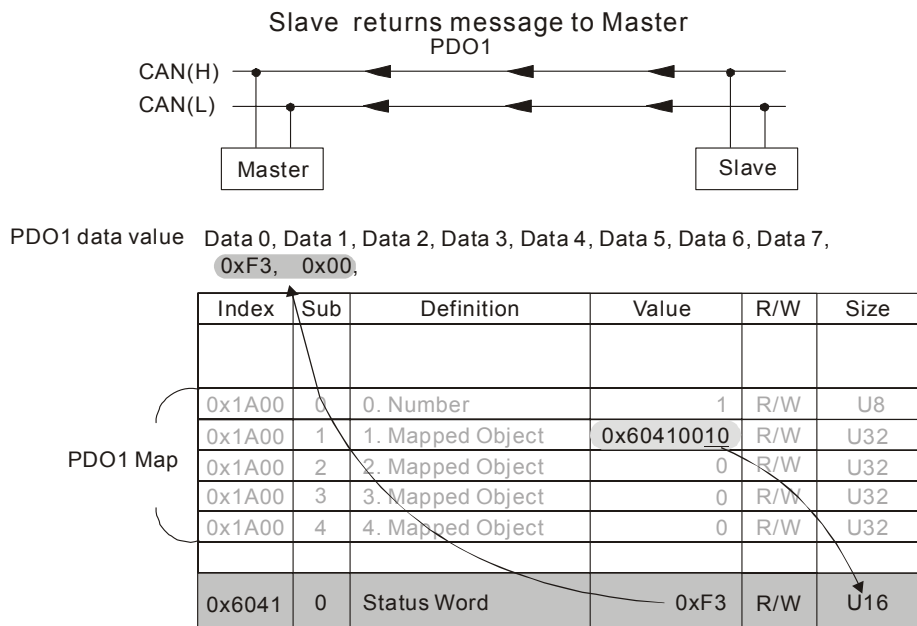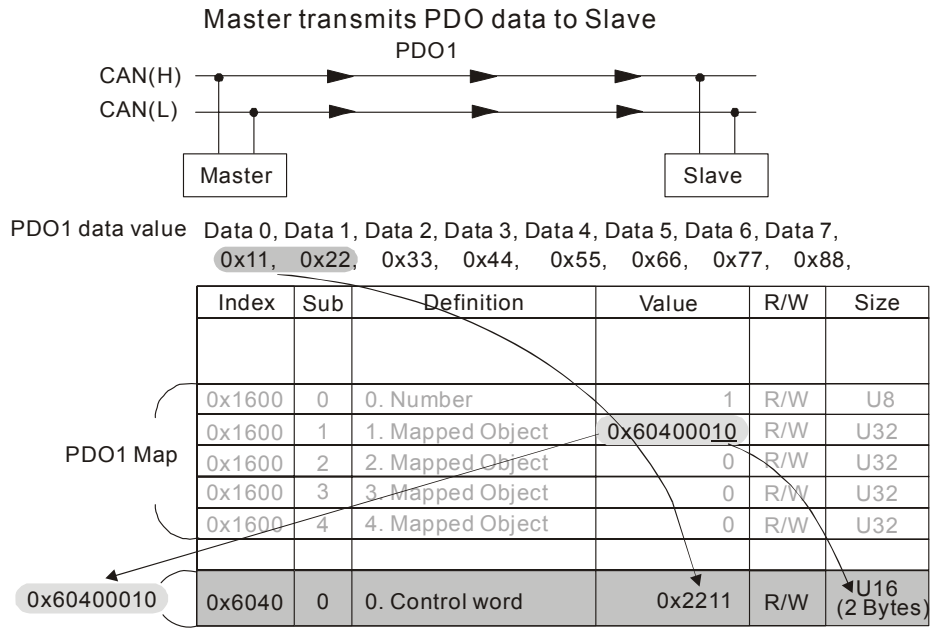

EMCY (Emergency Object)

Emergency objects are triggered when hardware failure occurs for a warning interrupt. The data format of a emergency object is a 8 bytes data as shown in the following:

Byte	0	1	2	3	4	5	6	7
Content	Emergency Error Code		Error register (Object 1001H)		Manufacturer specific Error Field			

Please refer to Chapter 5 CANopen error codes for emergency definition of C2000.

Example:

NO.	COB-ID	RTR	DLC	D0	D1	D2	D3	D4	D5	D6	D7	Time	Description
1	000	0	2	81	01							93633355289810	NMT
2	081	0	8	00	00	00	00	00	00	00	00	93633469867147	EMG:node 1
3	701	0	1	00								93633470029134	NMT Err:node 1
4	601	0	8	28	40	60	00	7E	00	00	00	93638456352665	SDO R<(Master):node 1
5	581	0	8	60	40	60	00	00	00	00	00	93638457784984	SDO T<(Slaver):node 1
6	601	0	8	28	40	60	00	7F	00	00	00	93641854704580	SDO R<(Master):node 1
7	581	0	8	60	40	60	00	00	00	00	00	93641855252946	SDO T<(Slaver):node 1
8	601	0	8	40	41	60	00	00	00	00	00	93644908425033	SDO R<(Master):node 1
9	581	0	8	48	41	60	00	37	06	00	00	93644909145739	SDO T<(Slaver):node 1
10	080	0	0									93646699436227	SYNC
11	201	0	2	11	22							93649160925635	PDO R<(Master)1:node 1

Master send NM message to slave 1 for RESET request.

Slave 1 responds no error

Slave 1 responds a boot up message

Master enter Index6040 = 7EH in slave 1

Slave 1 responds OK

Master enter Index6040= 7FH in slave 1

Slave 1 responds OK

Master enter value for Index6041 to slave 1


Slave 1 responds 0640H

Master enter SYNC

Master enter PDO1=2211H to slave 1

15.2 Wiring for CANopen

An external adapter card: EMC-COP01 is used for CANopen wiring; establish CANopen to VFD C2000 connection. The link is enabled by using RJ45 cable. The two farthest ends must be terminated with 120Ω terminating resistors.

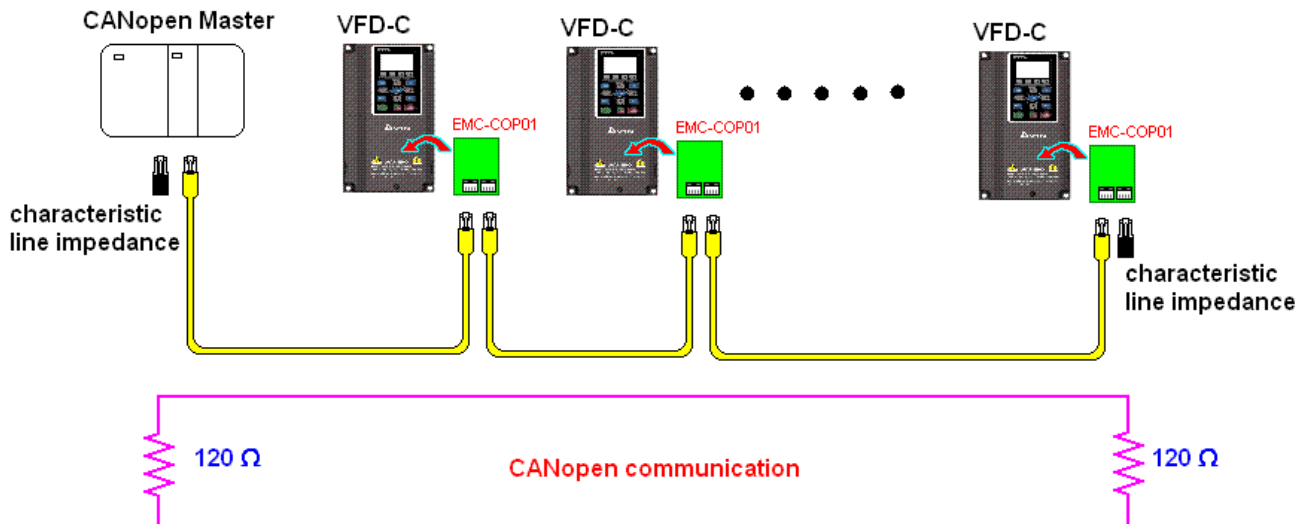

15.3 How to Control by CANopen

15.3.1 CANopen Control Mode Selection

There are two control modes for CANopen; Pr.09.40 set to 1 is the factory setting mode DS402 standard and Pr.09.40 set to 0 is Delta's standard setting mode.

15.3.2 Delta Defined Control Mode

There are two control modes.

1. Wiring for hardware (refer to chapter 15-2 Wiring for CANopen)
2. Operation source setting: set Pr.00-21 to 3 for CANopen communication card control.
3. Frequency source setting: set Pr.00.20 to 6 (CANopen setting. If torque control or position control is required, set Pr.0.02 to 2. Also set Pr.09.30 to 1(default setting) to allow new address 60XX to function, the old address 20XX can not support the control function for position and torque.
4. Source of torque setting is set by Pr.11-33.
5. CANopen station setting: set Pr.09-36 (Range of setting is 1~127. When Pr.09-36=0, CANopen slave function is disabled.) (Note: If error occurred (CAde or CANopen memory error) as station setting is completed, press Pr.00-02=7 for reset.)
6. CANopen baud rate setting: set Pr.09.37 (CANopen Baud Rate: 1M(0), 500K(1), 250K(2), 125K(3), 100K(4) and 50K(5))
7. CANopen decode method setting: set Pr.09.40 to 0 (Delta decoding method). It provides two decoding method by using Pr.09-30 and the default setting of the drive is in decoding method 2 (Pr.09-30=1).
8. Decoding method 1. In index 2020.01 enter 0002H for motor run; 0001H for motor stop. In index 2020.02 enter 1000, frequency will be 10.00Hz. Refer to Index 2020 and 2021 for more detail.
9. Decoding method 2. In index 2060.01 enter 0080H for motor switch on; enter 0x81 for motor run to the target frequency. Various control mode options are available in Pr.00-40, select your control mode.

15.3.3 DS402 Standard Control Mode

To control the AC motor drive by CANopen, please set the parameters by the following steps:

1. Wiring for hardware (refer to Chapter 2 Wiring for CANopen)
2. Operation source setting: set Pr.00.21 to 3 (CANopen communication. Keypad STOP/RESET disabled.)
3. Frequency source setting: set Pr.02.00 to 6 for CANopen communication card control. For CANopen to do torque control, set Pr.11-33 to 3; to do position control, set Pr.11-40 to 3. Also set Pr.09-30 to 1 (decoding method 2), use new address 60XX to control torque and position. The old address 20XX does not support torque and position control.
4. Source of torque setting is set by Pr.11-33.
5. CANopen station setting: set Pr.09-36 (Range of setting is 1~127. When Pr.09-36=0, CANopen slave function is disabled.) (Note: If error occurred (CAde or CANopen memory error) as station

setting is completed, press Pr.00-02=7 for reset.)

6. CANopen baud rate setting: set Pr.09.37 (CANBUS Baud Rate: 1M(0), 500K(1), 250K(2), 125K(3), 100K(4) and 50K(5))
7. Set multiple input functions to Quick Stop (it can also be enable or disable, default setting is disable). If it is necessary to enable the function, set MI terminal to 53 in one of the following parameter: Pr.02.01 ~Pr.02.08 or Pr.02.26 ~ Pr.02.31. (Note: This function is available in DS402 only.)
8. Switch to C2000 operation mode via the NMT string; control word 0x6040 (bit 0, bit 1, bit 2, bit 3 and bit 7) and status word 0x6041.

For example:

1. If the multi-function input terminal MI set Quick Stop to disable, enable the responsive terminal of such MI terminal.
2. Set index 6040H to 7EH.
3. Set index 6040H to 7FH, the drive is now in operation mode.
4. Set index 6042H to 1500 (rpm), the default setting for pole is 4 (50Hz). Set the pole in Pr.05.04 (Motor1) and Pr.05.16 (Motor 2).

Calculation for motor speed: $n = f \times \frac{120}{p}$ where n = ramp per minute (rpm/min);
 P = poles
 f = frequency (Hz)

Example 1: set motor running in forward direction, $f = 30\text{Hz}$, $P = 4$.

$$(120 \times 30) / 4 = 900\text{rpm}$$

Example 2: set motor running in reverse direction, $f = 20\text{Hz}$, $P = 6$.


$$(120 \times 15) / 6 = 300\text{rpm}; 300\text{rpm} = 0x012C$$

Also,

Bit15 defines the positive and negative sign.

$$\text{i.e. Index } 6042 = -300 = (300' + 1) = 012CH' + 1 = FED3H + 1 = FED4H$$

Switching mode:

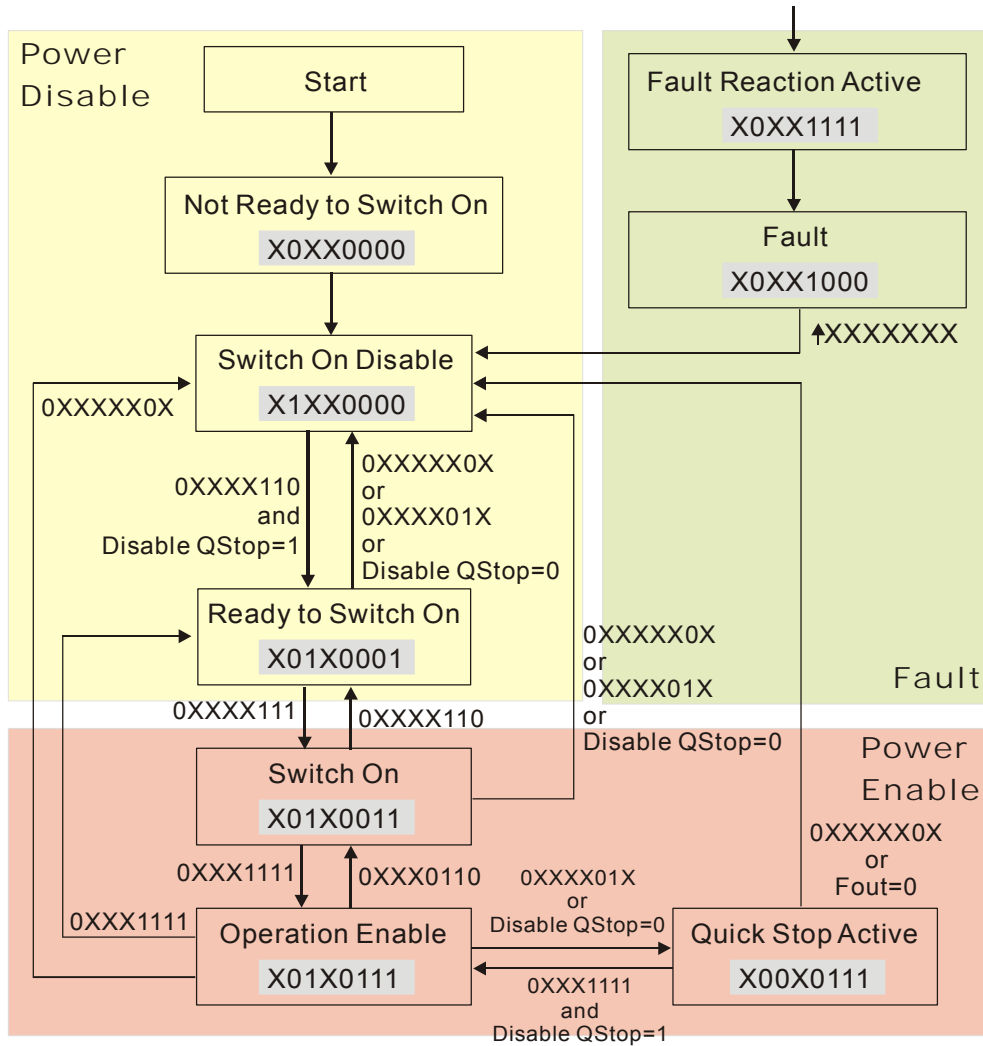

< Status Switching Graph >

9. The operation of AC motor drive in DS402 standard is controlled by the Control Word 0x6040 (bit4~bit6), as shown in the following chart:

bit 6	bit 5	bit 4	Outcome
ramp function reference	ramp function disable	ramp function enable	
0	0	0	STOP
1	0	0	STOP
0	1	0	STOP
1	1	0	STOP
0	0	1	STOP
1	0	1	LOCK (at present frequency)
0	1	1	STOP
1	1	1	RUN

10. Follow the same steps, refer to status switching process for status word 0x6041 (bit 0 to bit 6), bit 7= warn, bit 9 = 1 (permanently), bit 10= target frequency reached, bit 11= output exceeds maximum frequency.

15.3.4 Remarks to Control Modes

C2000 series offers 3 control modes for CANopen. Please refer to the following definitions for the index setting of each control modes:

When CANopen is set in different control mode, the Index Setting is different:

	DS402		Decoding Method 1		Decoding Method 2	
	Pr.09-40=1		Pr.09-40=0 and 09-30=0		Pr.09-40=0 and 09-30=1	
	Index	Sub	Index	Sub	Index	Sub
Control Command	6040h	00h	2020h	01h	2060h	01h
			2020h	03h		
Speed Command	6042h	00h	2020h	02h	2060h	03h
Position Command	607Ah	00h	No control		2060h	05h
Torque Command	6071h	00h	No control		2060h	07h

Control modes have no influence to CANopen, Index setting has no function.

	DS402		Decoding Method 1		Decoding Method 2	
	Pr.09-40=1		Pr.09-40=0 and Pr.09-30=0		Pr.09-40=0 and Pr.09-30=1	
	Index	Sub	Index	Sub	Index	Sub
Treatment to Signal Loss	6007h	00h	Decelerate by maximum speed		Decelerate by maximum speed	
Acceleration Time	604Fh	00h	604Fh	00h	604Fh	00h
Deceleration Time	6050h	00h	6050h	00h	6050h	00h
Quick Stop	6051h	00h	Disable		Disable	
Switching Mode	6060h	00h	6060h	00h	6060h	00h
Max. Torque	6072h	00h	Disable		Disable	

When the drive is in Demo mode, Index can be read when setting to either DS402 mode, Decoding method 1 or Decoding method 2.

15.4 CANopen Supporting Index

Basic Index Support by C2000:

Index	Sub	Definition	Factory Setting	R/W	Size	Note
1000H	0	Device type	00010192H	R	U32	
1001H	0	Error register	0	R	U8	
1005H	0	COB-ID SYNC message	80H	R	U32	
1006H	0	Communication cycle period	0	RW	U32	Unit: us The setting value should be in a multiple of 500us (integer) within the range 500us to 16ms
1008H	0	Manufacturer device name	0	R	U32	
1009H	0	Manufacturer hardware version	0	R	U32	
100AH	0	Manufacturer software version	0	R	U32	
100CH	0	Guarding time	0	RW	U16	Unit: ms
100DH	0	Guarding factor	0	RW	U8	
1010H	0	Store Parameter	2	R	U8	
	1	Save all parameters	0	RW	U32	
	2	Save communication parameter	1	RW	U32	
1011H	0	Restore Parameter	2	R	U8	
	1	Restore all parameters	0	RW	U32	
	2	Restore communication parameter	1	RW	U32	
1014H	0	COB-ID emergency	0000080H+Node-ID	R	U32	
1015H	0	Inhibit time EMCY	0	RW	U16	Unit:100us The setting value should be in a multiple of 10 (integer)
1016H	0	Consumer heartbeat time	1	R	U8	
	1	Consumer 1	0	RW	U32	Unit: 1ms Disable Guarding time to function properly
1017H	0	Producer heartbeat time	0	RW	U16	Unit: 1ms Disable Guarding time to function properly
1018H	0	Number	0	R	U8	
	1	Vender ID	000001DDH	R	U32	
	2	Product code	2A00+machine code	R	U32	
	3	Revision	00010000H	R	U32	
1200H	0	Server SDO Parameter	2	R	U8	
	1	COB-ID Client -> Server	0000600H+Node-ID	R	U32	
	2	COB-ID Client <- Server	0000580H+Node-ID	R	U32	
1400H	0	Number	2	R	U8	

Index	Sub	Definition	Factory Setting	R/W	Size	Note
	1	COB-ID used by PDO	00000200H+Node-ID	RW	U32	
	2	Transmission Type	5	RW	U8	00:Acyclic& Synchronous
						01~240:Cyclic & Synchronous
255:Asynchronous						
1401H	0	Number	2	R	U8	
	1	COB-ID used by PDO	80000300H+Node-ID	RW	U32	
	2	Transmission Type	5	RW	U8	00: Acyclic & Synchronous
01~240:Cyclic & Synchronous						
255:Asynchronous						
1402H	0	Number	2	R	U8	
	1	COB-ID used by PDO	80000400H+Node-ID	RW	U32	
	2	Transmission Type	5	RW	U8	00: Acyclic & Synchronous
01~240:Cyclic & Synchronous						
255:Asynchronous						
1403H	0	Number	2	R	U8	
	1	COB-ID used by PDO	80000500H+Node-ID	RW	U32	
	2	Transmission Type	5H	RW	U8	00: Acyclic & Synchronous
01~240:Cyclic & Synchronous						
255:Asynchronous						
1600H	0	Number	2	RW	U8	
	1	1.Mapped Object	60400010H	RW	U32	
	2	2.Mapped Object	60420010H	RW	U32	
	3	3.Mapped Object	0	RW	U32	
	4	4.Mapped Object	0	RW	U32	
1601H	0	Number	3	RW	U8	
	1	1.Mapped Object	20264110H	RW	U32	
	2	2.Mapped Object	2026A110H	RW	U32	
	3	3.Mapped Object	2026A210H	RW	U32	
	4	4.Mapped Object	0	RW	U32	
1602H	0	Number	3	RW	U8	
	1	1.Mapped Object	60400010H	RW	U32	
	2	2.Mapped Object	607A0020H	RW	U32	
	3	3.Mapped Object	60600008H	RW	U32	
	4	4.Mapped Object	0	RW	U32	
1603H	0	Number	3	RW	U8	
	1	1.Mapped Object	60400010H	RW	U32	
	2	2.Mapped Object	60710010H	RW	U32	
	3	3.Mapped Object	60600008H	RW	U32	
	4	4.Mapped Object	0	RW	U32	

Index	Sub	Definition	Factory Setting	R/W	Size	Note
1800H	0	Number	5	R	U8	
	1	COB-ID used by PDO	00000180H+Node-ID	RW	U32	
	2	Transmission Type	5	RW	U8	00: Acyclic & Synchronous
						01~240: Cyclic & Synchronous
						255: Asynchronous
	3	Inhibit time	0	RW	U16	Unit: 100us The setting value should be in a multiple of 10 (integer)
	4	CMS-Priority Group	3	RW	U8	
5	Event timer	0	RW	U16	Unit: 1ms	
1801H	0	Number	5	R	U8	
	1	COB-ID used by PDO	80000280H+Node-ID	RW	U32	
	2	Transmission Type	5	RW	U8	00: Acyclic & Synchronous
						01~240: Cyclic & Synchronous
						255: Asynchronous
	3	Inhibit time	0	RW	U16	Unit: 100us The setting value should be in a multiple of 10 (integer)
	4	CMS-Priority Group	3	RW	U8	
5	Event timer	0	RW	U16	Unit: 1ms	
1802H	0	Number	5	R	U8	
	1	COB-ID used by PDO	80000380H+Node-ID	RW	U32	
	2	Transmission Type	5	RW	U8	00: Acyclic & Synchronous
						01~240: Cyclic & Synchronous
						255: Asynchronous
	3	Inhibit time	0	RW	U16	Unit: 100us The setting value should be in a multiple of 10 (integer)
	4	CMS-Priority Group	3	RW	U8	
5	Event timer	0	RW	U16	Unit: 1ms	
1803H	0	Number	5	R	U8	
	1	COB-ID used by PDO	80000480H+Node-ID	RW	U32	
	2	Transmission Type	5	RW	U8	00: Acyclic & Synchronous
						01~240: Cyclic & Synchronous
						255: Asynchronous
	3	Inhibit time	0	RW	U16	Unit: 100us The setting value should be in a multiple of 10 (integer)
	4	CMS-Priority Group	3	RW	U8	
5	Event timer	0	RW	U16	Unit: 1ms	
1A00H	0	Number	2	RW	U8	
	1	1.Mapped Object	60410010H	RW	U32	
	2	2.Mapped Object	60430010H	RW	U32	

Index	Sub	Definition	Factory Setting	R/W	Size	Note
	3	3.Mapped Object	0	RW	U32	
	4	4.Mapped Object	0	RW	U32	
1A01H	0	Number	4	RW	U8	
	1	1.Mapped Object	20260110H	RW	U32	
	2	2.Mapped Object	20266110H	RW	U32	
	3	3.Mapped Object	20266210H	RW	U32	
	4	4.Mapped Object	20266310H	RW	U32	
1A02H	0	Number	3	RW	U8	
	1	1.Mapped Object	60410010H	RW	U32	
	2	2.Mapped Object	60640020H	RW	U32	
	3	3.Mapped Object	60610008H	RW	U32	
	4	4.Mapped Object	0	RW	U32	
1A03H	0	Number	3	RW	U8	
	1	1.Mapped Object	60410010H	RW	U32	
	2	2.Mapped Object	60770010H	RW	U32	
	3	3.Mapped Object	60610008H	RW	U32	
	4	4.Mapped Object	0	RW	U32	

C2000 Index:

Parameter index corresponds to each other as following:

Index	sub-Index
2000H + Group	member+1

For example:

Pr.10.15 (Encoder Slip Error Treatment)

Group	member
10(0 \bar{A} H)	- 15(0FH)

Index = 2000H + 0AH = 200A

Sub Index = 0FH + 1H = 10H

C2000 Control Index:

Delta Standard Mode (Old definition)

Index	Sub	Definition	Factory Setting	R/W	Size	Note
2020H	0	Number	3	R	U8	
	1	Control word	0	RW	U16	Bit 0~1 00B:disable 01B:stop 10B:disable 11B: JOG Enable Bit2~3 Reserved Bit4~5 00B:disable 01B: Direction forward

Index	Sub	Definition	Factory Setting	R/W	Size	Note
						10B: Reverse 11B: Switch Direction
						Bit6~7 00B: 1 st step acceleration/deceleration 01B: 2 nd step acceleration/deceleration
						Bit8~15 Reserved
	2	vl target velocity (Hz)	0	RW	U16	
	3	Other trigger	0	RW	U16	Bit0 1: E.F. ON Bit1 1: Reset Bit2~15 Reserved
2021H	0	Number	DH	R	U8	
	1	Error code	0	R	U16	
2021H	2	AC motor drive status	0	R	U16	Bit 0~1 00B: stop 01B: decelerate to stop 10B: waiting for operation command 11B: in operation Bit 2 1: JOG command Bit 3~4 00B: forward running 01B: switch from reverse running to forward running 10B: switch from forward running to reverse running 11B: reverse running Bit 5~7 reserved Bit 8 1: master frequency command controlled by communication interface Bit 9 1: master frequency command controlled by analog signal input Bit 10 1: operation command controlled by communication interface Bit 11~15 Reserved
	3	Frequency command (F)	0	R	U16	
	4	Output frequency (H)	0	R	U16	
	5	Output current (AXX.X)	0	R	U16	
	6	Reserved	0	R	U16	
	7	Reserved	0	R	U16	
	8	Reserved	0	R	U16	
	9	Display output current (A)	0	R	U16	
	A	Display counter value (c)	0	R	U16	
	B	Display actual output frequency (H)	0	R	U16	
	C	Display DC-BUS voltage (u)	0	R	U16	
	D	Display output voltage (E)	0	R	U16	
	E	Display output power angle (n)	0	R	U16	
	F	Display output power in kW (P)	0	R	U16	
	10	Display actual motor speed in rpm (r)	0	R	U16	
2022H	0	Number		R	U8	
	1	Display output current	0	R	U16	
	2	Display counter value	0	R	U16	

Index	Sub	Definition	Factory Setting	R/W	Size	Note	
	3	Display actual output frequency	0	R	U16		
	4	Display DC-BUS voltage	0	R	U16		
	5	Display output voltage	0	R	U16		
	6	Display output power angle	0	R	U16		
	7	Display output power in kW	0	R	U16		
	8	Display actual motor speed rpm	0	R	U16		
	9	Display estimate output torque %	0	R	U16		
	A	Display PG feedback (G)	0	R	U16		
	B	Display PID feedback in %	0	R	U8		
	C	Display AVI in %, 0~10V is set as 0~100%	0	R	U16		
	D	Display ACI in %, 4~20mA/0~10V are set as 0~100%	0	R	U16		
2022H	E	Display AUI in %, -10V~10V is set as -100~100%	0	R	U16		
	F	Display the temperature of IGBT in °C	0	R	U16		
	10	Display the temperature of capacitance in °C	0	R	U16		
	11	The status of digital input (ON/OFF), refer to Pr.02-10	0	R	U16		
	12	The status of digital output (ON/OFF), refer to Pr.02-15	0	R	U16		
	13	Display Multi-step speed	0	R	U16		
	14	The corresponding CPU pin status of digital input	0	R	U16		
	15	The corresponding CPU pin status of digital output	0	R	U16		
	16	Actual motor position (PG1 of PG card). When the motor direction changes or the drive stops, the counter will start from 0 (display value restarts counting from 0) (Max. 65535)	0	R	U16		
	17	Pulse input frequency (PG2 of PG card)	0	R	U16		
	18	Pulse input position (PG2 of PG card) (max. 65535)	0	R	U16		
	19	Display position command tracing error	0	R	U16		
	1A	Overload counting	0	R	U16		
	1B	GFF Ground Fault (Unit :%)	0	R	U16		
	1C	Reserve	0	R	U16		
	1D	Display PLC data D1043	0	R	U16		
	1E	Display PM motor magnetic pole zone	0	R	U16		
	1F	Display output of user defined	0	R	U16		
	20	Display Pr.00-05 output value	0	R	U16		
	21	Number of motor revolution	0	R	U16		
	22	Motor position	0	R	U16		
	23	Operation speed of fan	0	R	U16		

Index	Sub	Definition	Factory Setting	R/W	Size	Note
	24	Control Mode display: 0= Speed control mode (SPD), 1= torque control mode	0	R	U16	
	25	Present operating carrier frequency of drive	0	R	U16	

Index	sub	R/W	Size	Descriptions			Speed Mode	Position Mode	Home Mode	Torque Mode
				bit	Definition	Priority				
2060h	00h	R	U8							
				0	Ack	4	0:fcmd =0 1:fcmd = Fset(Fpid)	Pulse 1: Position control	Pulse 1: Return to home	
				1	Dir	4	0: FWD run command 1: REV run command			
				2						
				3	Halt		0: drive run till target speed is attained 1: drive stop by declaration setting			
				4	Hold		0: drive run till target speed is attained 1: frequency stop at current frequency			
				5	JOG		0:JOG OFF Pulse 1:JOG RUN			
				6	QStop		Quick Stop			
	01h	RW	U16	7	Power		0:Power OFF 1:Power ON	0:Power OFF 1:Power ON	0:Power OFF 1:Power ON	0:Power OFF 1:Power ON
				11~8	Cmd SW		Multi-step frequency switching	Multi-step position switching		
				13~12	Acc/Dec SW		00b: 1st step accel/decel time 01b: 2nd step accel/decel time 10b: 3rd step accel/decel time 11b 4th step accel/decel time			
				14			0: Multi-step command and accel/decel time switching is disabled 1: Multi-step command and accel/decel time switching is enabled	0: Multi-step command and accel/decel time switching is disabled 1: Multi-step command and accel/decel time switching is enabled		
				15			Pulse 1: Fault code cleared	Pulse 1: Fault code cleared	Pulse 1: Fault code cleared	Pulse 1: Fault code cleared
	02h	RW	U16							
	03h	RW	U16				Speed command			

Index	sub	R/W	Size	Descriptions			Speed Mode	Position Mode	Home Mode	Torque Mode	
				bit	Definition	Priority					
							(unsigned decimal)				
	04h	RW	U16								
	05h	RW	S32					Position command			
	06h	RW									
	07h	RW	U16							Torque command (signed decimal)	
	08h	RW	U16							Speed limit (unsigned decimal)	
2061h	01h	R	U16	0	Arrive		Frequency attained	Position attained	Homing complete		Torque attained
				1	Dir		0: Motor FWD run 1: Motor REV run	0: Motor FWD run 1: Motor REV run	0: Motor FWD run 1: Motor REV run	0: Motor FWD run 1: Motor REV run	0: Motor FWD run 1: Motor REV run
				2	Warn		Warning	Warning	Warning	Warning	Warning
				3	Error		Error detected	Error detected	Error detected	Error detected	Error detected
				4							
				5	JOG		JOG	JOG	JOG	JOG	JOG
				6	QStop		Quick stop	Quick stop	Quick stop	Quick stop	Quick stop
				7	Power On		Switch ON	Switch ON	Switch ON	Switch ON	Switch ON
	15~8										
	02h	R									
	03h	R	U16				Actual output frequency	Actual output frequency	Actual output frequency	Actual output frequency	
	04h	R									
	05h	R	S32				Actual position (absolute)	Actual position (absolute)	Actual position (absolute)	Actual position (absolute)	
	06h	R									
07h	R	S16				Actual torque	Actual torque	Actual torque	Actual torque		

DS402 Standard

Index	Sub	Definition	Factory Setting	R/W	Size	Unit	PDO Map	Mode	Note
6007h	0	Abort connection option code	2	RW	S16		Yes		0: No action 2: Disable Voltage, 3: quick stop
603Fh	0	Error code	0	R0	U16		Yes		
6040h	0	Control word	0	RW	U16		Yes		
6041h	0	Status word	0	R0	U16		Yes		
6042h	0	vl target velocity	0	RW	S16	rpm	Yes	vl	
6043h	0	vl velocity demand	0	RO	S16	rpm	Yes	vl	
6044h	0	vl control effort	0	RO	S16	rpm	Yes	vl	
604Fh	0	vl ramp function time	10000	RW	U32	1ms	Yes	vl	Unit must be: 100ms, and check if the setting is set to 0.
6050h	0	vl slow down time	10000	RW	U32	1ms	Yes	vl	
6051h	0	vl quick stop time	1000	RW	U32	1ms	Yes	vl	
605Ah	0	Quick stop option code	2	RW	S16		No		0 : disable drive function 1 :slow down on slow down ramp 2: slow down on quick stop ramp

Index	Sub	Definition	Factory Setting	R/W	Size	Unit	PDO Map	Mode	Note
									5 slow down on slow down ramp and stay in QUICK STOP
									6 slow down on quick stop ramp and stay in QUICK STOP
605Ch	0	Disable operation option code	1	RW	S16		No		0: Disable drive function 1: Slow down with slow down ramp; disable of the drive function
6060h	0	Mode of operation	2	RW	S8		Yes		1: Profile Position Mode 2: Velocity Mode 4: Torque Profile Mode 6: Homing Mode
6061h	0	Mode of operation display	2	RO	S8		Yes		Same as above
6064h	0	pp Position actual value	0	RO	S32		Yes	pp	
6071h	0	tq Target torque	0	RW	S16	0.1 %	Yes	tq	Valid unit: 1%
6072h	0	tq Max torque	150	RW	U16	0.1 %	No	tq	Valid unit: 1%
6075h	0	tq Motor rated current	0	RO	U32	mA	No	tq	
6077h	0	tq torque actual value	0	RO	S16	0.1 %	Yes	tq	
6078h	0	tq current actual value	0	RO	S16	0.1 %	Yes	tq	
6079h	0	tq DC link circuit voltage	0	RO	U32	mV	Yes	tq	
607Ah	0	pp Target position	0	RW	S32	1	Yes	pp	

Remote I/O

Index	Sub	Definition	Factory Setting	R/W	Size	Note
2026H	0h	Number	DFh	R	U8	
	1h	MI Status	0x00	R	U16	Bit 0 FWD Bit 1 REV Bit 2 MI1 Bit 3 MI2 Bit 4 MI3 Bit 5 MI4 Bit 6 MI5 Bit 7 MI6 Bit 8 MI7 Bit 9 MI8 Bit 10 MI9 (Extension card) Bit 11 MI10 (Extension card) Bit 12 MI12 (Extension card) Bit 13 MI13 (Extension card) Bit 14 MI14 (Extension card) Bit 15 MI15 (Extension card)
	2h~40h	Reserved	0x00	R	U16	
	41h	MO Control	0x00	RW	U16	Bit 0 RY1 Bit 1 RY2 Bit 2 Bit 3 MO1

Index	Sub	Definition	Factory Setting	R/W	Size	Note
						Bit 4
						MO2
						Bit 5
						MO3 (Extension card)
						Bit 6
						MO4 (Extension card)
						Bit 7
						MO5 (Extension card)
						Bit 8
						MO6 (Extension card)
						Bit 9
						MO7 (Extension card)
						Bit 10
						MO8 (Extension card)
						Bit 11
						Bit 12
						Bit 13
						Bit 14
						Bit 15
	42h~60h	Reserved	0x00	R	U16	
	61h	AVI	0x00	R	U16	0.0 ~100.0%
	62h	ACI	0x00	R	U16	0.0 ~100.0%
	63h	AUI	0x00	R	S16	-100.0 ~100.0%
	64h~A0h	Reserved	0x00	R	U16	
	A1h	AFM1	0x00	RW	U16	0.0 ~100.0%
	A2h	AFM2	0x00	RW	U16	0.0 ~100.0%
	A3h~DFh	Reserved	0x00	R	U16	

Note: For using Remote I/O, user must set MO or AO as CANopen control first. For example, if wish to control MO2, user must set Pr.02-17=50; if wish to control AO, user must set Pr.03-23=20.

15.5 CANopen Fault Code

Display	Fault code	Description	CANopen fault code	CANopen fault register (bit 0~7)
Fault ocA Oc at accel	0001H	Over-current during acceleration	2213 H	1
ocd Oc at decel	0002H	Over-current during deceleration	2213 H	1
Fault ocn Oc at normal SPD	0003H	Over-current during steady status operation	2214H	1
Fault GFF Ground fault	0004H	Ground fault. When (one of) the output terminal(s) is grounded, short circuit current is more than 50% of AC motor drive rated current. NOTE: The short circuit protection is provided for AC motor drive Protection, not for protection of the user.	2240H	1
Fault occ Short Circuit	0005H	Short-circuit is detected between upper bridge and lower bridge of the IGBT module.	2250H	1
Fault ocS Oc at stop	0006H	Over-current at stop. Hardware failure in current detection	2314H	1
ovA Ov at accel	0007H	Over-current during acceleration. Hardware failure in current detection	3210H	2
Fault ovd Ov at decel	0008H	Over-current during deceleration. Hardware failure in current detection.	3210H	2
Fault ovn Ov at normal SPD	0009H	Over-current during steady speed. Hardware failure in current detection. 230V: 450Vdc; 460V: 900Vdc	3210H	2

Display	Fault code	Description	CANopen fault code	CANopen fault register (bit 0~7)
Fault ^{HAND} ovS Ov at stop	000AH	Over-voltage at stop. Hardware failure in current detection	3210H	2
Fault ^{HAND} LvA Lv at accel	000BH	DC BUS voltage is less than Pr.06.00 during acceleration.	3220H	2
Fault ^{HAND} Lvd Lv at decel	000VH	DC BUS voltage is less than Pr.06.00 during deceleration.	3220H	2
Fault ^{HAND} Lvn Lv at normal SPD	000DH	DC BUS voltage is less than Pr.06.00 in constant speed.	3220H	2
Fault ^{HAND} LvS Lv at stop	000EH	DC BUS voltage is less than Pr.06-00 at stop	3220H	2
Fault ^{HAND} OrP Phase Lacked	000FH	Phase Loss Protection	3130H	2
Fault ^{HAND} oH1 IGBT over heat	0010H	IGBT overheat IGBT temperature exceeds protection level. 1~15HP: 90°C 20~100HP: 100°C	4310H	3
Fault ^{HAND} oH2 Hear Sink oH	0011H	Heatsink overheat Heat sink temperature exceeds 90oC	4310H	3
Fault ^{HAND} tH1o Thermo 1 open	0012H	Temperature detection circuit error (IGBT) IGBT NTC	FF00H	3
Fault ^{HAND} tH2o Thermo 2 open	0013H	Temperature detection circuit error (capacity module) CAP NTC	FF01H	3

Display	Fault code	Description	CANopen fault code	CANopen fault register (bit 0~7)
Fault ^{HAND} PWR Power RST OFF	0014H	Power RST off	FF02H	2
Fault ^{HAND} oL Inverter oL	0015H	Overload. The AC motor drive detects excessive drive output current. NOTE: The AC motor drive can withstand up to 150% of the rated current for a maximum of 60 seconds.	2310H	1
Fault ^{HAND} EoL1 Thermal relay 1	0016H	Electronics thermal relay 1 protection	2310H	1
Fault ^{HAND} EoL2 Thermal relay 2	0017H	Electronics thermal relay 2 protection	2310H	1
Fault ^{HAND} oH3 Motor over heat	0018H	Motor overheating The AC motor drive detects that the internal temperature exceeds Pr.06-30 (PTC level)	FF20H	1
Fault ^{HAND} ot1 Over torque 1	001AH	These two fault codes will be displayed when output current exceeds the over-torque detection level (Pr.06.07 or Pr.06.10) and exceeds over-torque detection(Pr.06.08 or Pr.06.11) and it is set 2 or 4 in Pr.06-06 or Pr.06-09.	8311H	3
Fault ^{HAND} ot2 Over torque 2	001BH		8311H	3
Fault ^{HAND} uC Under torque 1	001CH	Low current	8321H	1
Fault ^{HAND} LMIT Limit Error	001DH	Limit error	7320H	1
Fault ^{HAND} cF1 EEPROM write Err	001EH	Internal EEPROM can not be programmed.	5530H	5

Display	Fault code	Description	CANopen fault code	CANopen fault register (bit 0~7)
Fault ^{HAND} cF2 EEPROM read Err	001FH	Internal EEPROM can not be read.	5530H	5
Fault ^{HAND} cd1 Ias sensor Err	0021H	U-phase error	FF04H	1
Fault ^{HAND} cd2 Ibs sensor Err	0022H	V-phase error	FF05H	1
Fault ^{HAND} cd3 Ics sensor Err	0023H	W-phase error	FF06H	1
Fault ^{HAND} Hd0 cc HW Error	0024H	cc (current clamp) hardware error	FF07H	5
Fault ^{HAND} Hd1 oc HW Error	0025H	oc hardware error	FF08H	5
Fault ^{HAND} Hd2 ov HW Error	0026H	ov hardware error	FF09H	5
Fault ^{HAND} Hd3 GFF HW Error	0027H	GFF hardware error	FF0AH	5
Fault ^{HAND} AUE Auto tuning Err	0028H	Auto tuning error	FF21H	1
Fault ^{HAND} AFE PID Fbk Error	0029H	PID loss (ACI)	FF22H	7
Fault ^{HAND} PGF1 PG Fbk Error	002AH	PG feedback error	7301H	7

Display	Fault code	Description	CANopen fault code	CANopen fault register (bit 0~7)
Fault PGF2 PG Fbk Loss	002BH	PG feedback loss	7301H	7
Fault PGF3 PG Fbk Over SPD	002BH	PG feedback stall	7301H	7
Fault PGF4 PG Fbk deviate	002CH	PG slip error	7301H	7
Fault PGr1 PG ref Error	002DH	Pulse input error	FF23H	7
Fault PGr2 PG ref loss	002FH	Pulse input loss	FF24H	7
Fault ACE ACI loss	0030H	ACI loss	FF25H	1
Fault EF External Fault	0031H	External Fault When input EF (N.O.) on external terminal is closed to GND, AC motor drive stops output U, V, and W.	9000H	5
Fault EF1 Emergency stop	0032H	Emergency stop When the multi-function input terminals MI1 to MI6 are set to emergency stop, the AC motor drive stops output U, V, W and the motor coasts to stop	9000H	5
Fault bb Base block	0033H	External Base Block When the external input terminals MI1 to MI16 are set as bb and active, the AC motor drive output will be turned off	9000H	5

Display	Fault code	Description	CANopen fault code	CANopen fault register (bit 0~7)
Fault Pcod Password Error	0034H	Password will be locked if three fault passwords are entered	FF26H	5
Fault ccod SW code Error	0035H	Software error	6100H	5
Fault cE1 Modbus CMD err	0036H	Illegal function code	7500H	4
Fault cE2 Modbus ADDR err	0037H	Illegal data address (00H to 254H)	7500H	4
Fault cE3 Modbus DATA err	0038H	Illegal data value	7500H	4
Fault cE4 Modbus slave FLT	0039H	Data is written to read-only address	7500H	4
Fault cE10 Modbus time out	003AH	Modbus transmission timeout.	7500H	5
Fault cP10 Keypad time out	003BH	Keypad transmission timeout.	7500H	4
Fault bF Braking fault	003CH	Brake resistor fault	7110H	4
Fault ydc Y-delta connect	003DH	Motor Y-Δ switch error	3330H	2
Fault dEb Dec. Energy back	003EH	Energy regeneration when decelerating	FF27H	2

Display	Fault code	Description	CANopen fault code	CANopen fault register (bit 0~7)
Fault oSL Over slip Error	003FH	Overslip error. Slip exceeds Pr.05.26 limit and slip duration exceeds Pr.05.27 setting.	FF28H	7
Fault ryF MC Fault	0040H	Electromagnet switch error	7110H	5
Fault PGF5 PG HW Error	0041H	PG Card Error	FF29H	5
Fault S1 S1-Emergy stop	0049H	External emergency stop	FF2AH	5
Fault Uocc U phase short	004FH	U phase short circuit	FF2BH	1
Fault Vocc V phase short	0050H	V phase short circuit	FF2CH	1
Fault Wocc W phase short	0051H	W phase short circuit	FF2DH	1
Fault OPHL U phase lacked	0052H	U phase output phase loss	2331H	2
Fault OPHL U phase lacked	0053H	V phase output phase loss	2332H	2
Fault OPHL U phase lacked	0054H	W phase output phase loss	2333H	2
Fault FStP Force Stop	005AH	Force to stop	FF2EH	

Display	Fault code	Description	CANopen fault code	CANopen fault register (bit 0~7)
Fault ^{HAND} TRAP CPU Trap Error	0063H	CPU command error	6000H	7
Fault ^{HAND} CGdE Guarding T-out	0065H	Guarding time-out 1	8130H	4
Fault ^{HAND} CHbE Heartbeat T-out	0066H	Heartbeat time-out	8130H	4
Fault ^{HAND} CSyE SYNC T-out	0067H	CAN synchrony error	8700H	4
Fault ^{HAND} CbFE CAN/S bus off	0068H	CAN bus off	8140H	4
Fault ^{HAND} CIdE CAN/S ldx exceed	0069H	Can index exceed	8110H	4
Fault ^{HAND} CAdE CAN/S add. set	006AH	CAN address error	0x8100	4
Fault ^{HAND} CFdE CAN/S FRAM fail	006BH	CAN frame fail	0x8100	4
Fault ^{HAND} ictE CAN/S com fail	006FH	Internal communication signal fail	0x7500	0x4

15.6 CANopen LED Function

There are two CANopen flash signs: RUN and ERR.

RUN LED:

LED status	Condition	CANopen State
OFF		Initial
Blinking		Pre-Operation
Single flash		Stopped
ON		Operation

ERR LED:

LED status	Condition/ State
OFF	No Error
Single flash	One Message fail
Double flash	Guarding fail or heartbeat fail
Triple flash	SYNC fail
ON	Bus off

Chapter 16 PLC Function

- 16.1 PLC Overview
- 16.2 Precautions for Using PLC
- 16.3 Start-up
- 16.4 PLC Ladder Diagram
- 16.5 PLC Devices
- 16.6 Commands
- 16.7 Error Code and Troubleshoot
- 16.8 CANopen Master Application
- 16.9 Descriptions of PLC Modes and Controls (Speed, Torque, Homing and Position)
- 16.10 Internal Communication for Master Control
- 16.11 Counting Function via MI8

16.1 PLC Overview

16.1.1 Introduction

The built in PLC function in C2000 allows following commands: WPLSoft, basic commands and application commands; the operation methods are the same as Delta DVPPLC series. Other than that, CANopen master provides 8 stations for synchronous control and 126 asynchronous controls.

NOTE

In C2000, CANopen master synchronous control complies with DS402 standard and supports homing mode, speed mode, torque mode and point to point control mode; CANopen slave supports two control modes, speed mode and torque mode.

16.1.2 Ladder Diagram Editor – WPLSoft


WPLSoft is a program editor of Delta DVP-PLC series and C2000 series for WINDOWS. Besides general PLC program planning and general WINDOWS editing functions, such as cut, paste, copy, multi-windows, WPLSoft also provides various Chinese/English comment editing and other special functions (e.g. register editing, settings, the data readout, the file saving, and contacts monitor and set, etc.).

Following is the system requirement for WPLSoft:

Item	System Requirement
Operation System	Windows 95/98/2000/NT/ME/XP
CPU	Pentium 90 and above
Memory	16MB and above (32MB and above is recommended)
Hard Disk	Capacity: 50MB and above CD-ROM (for installing WPLSoft)
Monitor	Resolution: 640×480, 16 colors and above, It is recommended to set display setting of Windows to 800×600.
Mouse	General mouse or the device compatible with Windows
Printer	Printer with Windows driver
RS-232 port	At least one of COM1 to COM8 can be connected to PLC
Applicable Models	All Delta DVP-PLC series and C2000 series

16-2 Precautions for Using PLC Functions

1. Default setting of PLC communication protocol is 7,N,2 ,9600, station number 2. User can change PLC station using Pr.09-35 but station address must be different to the AC motor drive's station address(Pr.09-00).
2. C2000 series offers 2 communication ports for PLC program upload and download. Refer to the figure follows for port location. The communication protocol of Channel 1 is always 19200,8,N,2 °

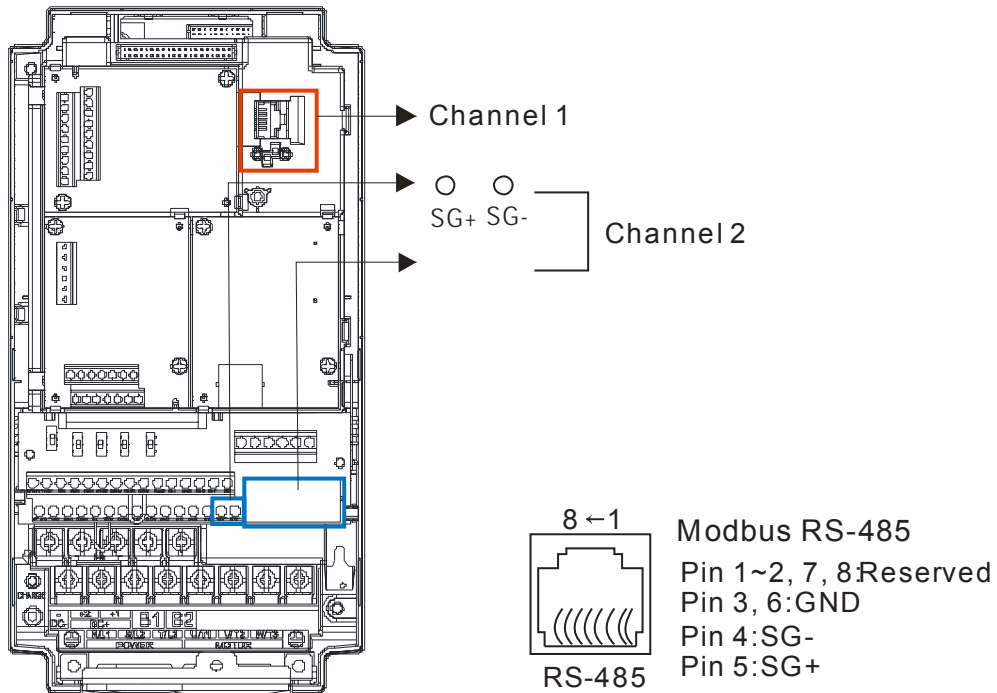


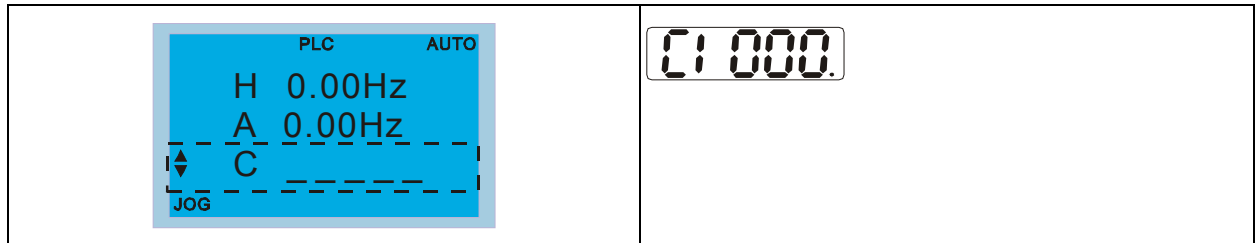
3. Host controller can read/write data from/to both the AC motor drive and the internal PLC program by setting the drive and internal PLC program to two different station numbers. For example, if user wants to set AC motor drive as station 1 and PLC as station 2, please write following setting to the host controller:

When setting 01(Station) 03(Read) 0400(Address) 0001(1 data), the host controller can read the Pr.04-00 from the AC motor drive.

When setting 02(Station) 03(Read) 0400(Address) 0001(1 data), host controller will read X0 data from the internal PLC program.

4. The internal PLC program will stop operation when upload/download programs.
5. When using WPR command to write parameters, parameters can be changed for a maximum of 10^9 times. It is crucial not to exceed this limit to prevent occurrence of serious error.
6. When Pr.00-04 is set to 28, D1043 value of PLC register will be displayed on the digital keypad:

Digital Keypad KPC-CC01 Display range: 0~65535	Digital Keypad KPC-CE01 Display range: 0~9999  Display for values exceed 9999
---	--




7. When PLC is in PLC Run or PLC Stop mode, Pr.00-02 (settings 9 and 10) are disabled.
8. When Pr.00-02 is set to 6, PLC function settings will return to factory settings.
9. When the Input Terminal X of PLC is programmed, the corresponding MI will be disabled (no function).
10. When AC motor drive operation status is controlled by PLC function, the setting of Pr.00-21 has no function and the drive is fully under the control of PLC function.
11. When PLC function is programmed with FREQ command, AC motor drive frequency is now under PLC function control. The setting of Pr.00-20 and Hand ON/OFF are disabled and has no control over AC motor drive frequency.
12. When PLC is programmed with TORQ command, AC motor drive torque is now under PLC function control. The setting of Pr.11-33 and Hand ON/OFF function are disabled and has no control over AC motor drive torque.
13. When PLC is programmed with POS command, AC motor drive position is now under PLC function control. The setting of Pr.11-40 and Hand ON/OFF function are disabled and has no control over AC motor drive position.
14. If the Stop function of digital keypad is enabled when AC motor drive frequency is under PLC function control, the AC motor drive will trigger FStP error and AC motor drive will stop operation.

16.3 Start-up

16.3.1 The Steps for PLC Execution

Please operate PLC functions by following the steps indicate below:

1. Press menu key on KPC-CC01 → select **3: PLC** → ENTER.

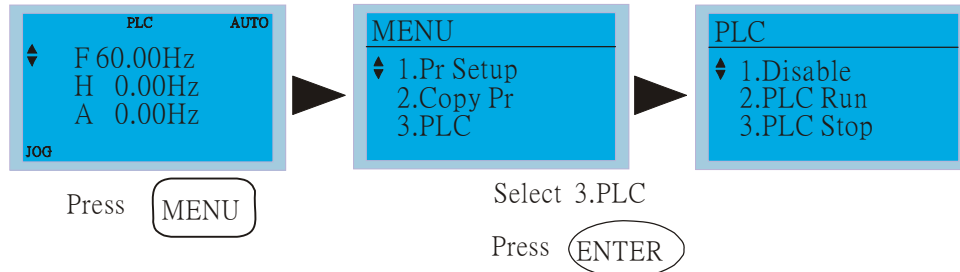

NOTE

When using KPC-CE01 series digital keypad, switch the mode to PLC2 for program download/upload:

- A. Press MODE key and select 'PLC'.
- B. Press 'UP' key and look for 'PLC2' then press 'ENTER'.
- C. If succeed, display 'END' for one to two seconds and return to 'PLC2' page.

The PLC warning that is displayed before program downloaded to C2000 can be ignored, please continue the operation.



Disable




Run PLC



PLC Stop

2. Connection: Connect RJ-45 of AC motor drive to the computer by using RS485.
3. Run the program.

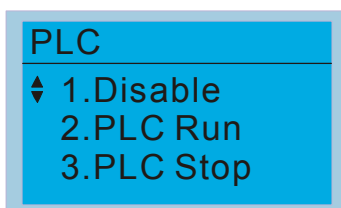

- PLC function, select function 2 (PLC Run).

- 1: Disable (PLC0)
- 2: PLC Run (PLC1)
- 3: PLC Stop (PLC2)

Optional accessories: Digital keypad KPC-CE01, display PLC function as shown in the ().

When external input terminals (MI1~MI8) are set to PLC Mode select bit0 (51) or PLC Mode select bit1 (52), it will force to switch to PLC mode regardless the terminal is ON or OFF. Meanwhile, switching via keypad is disabled. Please refer to the chart below:

PLC Mode	PLC Mode select bit1(52)	PLC Mode select bit0 (51)
Disable (PLC 0)	OFF	OFF
PLC Run (PLC 1)	OFF	ON
PLC Stop (PLC 2)	ON	OFF
Previous state	ON	ON

When KPC-CE01 execute PLC function:

1. When switching the page from PLC to PLC1, it will execute PLC. The motion of PLC (Execute/Stop) is controlled by WPL editor.

2. When switching the page from PLC to PLC2, it will stop PLC. Again the motion of PLC (Execute/Stop) is controlled by WPL editor.
3. The control of external terminals follows the same method.

 **NOTE**

When input/output terminals (FWD REV MI1~MI8 MI10~15, Relay1, Relay2 RY10~RY15, MO1~MO2 MO10~MO11,) are used in PLC program, they cannot be used in other places. For example, when PLC program (PLC1 or PLC2) is activated, such as when it controls Y0, the corresponding output terminals Relay (RA/RB/RC) will be used. At this moment, Pr.03.00 setting will be invalid since the terminal has been used by PLC. Refer to Pr.02-52, 02-53, 03-30 to check which DI DO AO are occupied by PLC.

16.2.2 I/O Device Reference Table

Input device:

Device	X0	X1	X2	X3	X4	X5	X6	X7	X10	X11	X12	X13	X14	X15	X16	X17
1	FWD	REV	MI1	MI2	MI3	MI4	MI5	MI6	MI7	MI8						
2											MI10	MI11	MI12	MI13	MI14	MI15
3											MI10	MI11	MI12	MI13		

1: I/O extension card

2: I/O extension card EMC-D611A (D1022=4)

3: I/O extension card EMC-D42A (D1022=5)

Output device:

Device	Y0	Y1	Y2	Y3	Y4	Y5	Y6	Y7	Y10	Y11	Y12	Y13	Y14	Y15	Y16	Y17
1	RY1	RY2		MO1	MO2											
2						MO10	MO11									
3						RY10	RY11	RY12	RY13	RY14	RY15					


1: I/O extension card

2: I/O extension card EMC-D42A (D1022=5)


3: I/O extension card EMC-R6AA (D1022=6)

16.2.3 WPLSoft Installation

Download PLC program to C2000: Refer to D.3 to D.7 for program coding and download the editor (WPLSoft V2.09) at DELTA website <http://www.delta.com.tw/industrialautomation/>

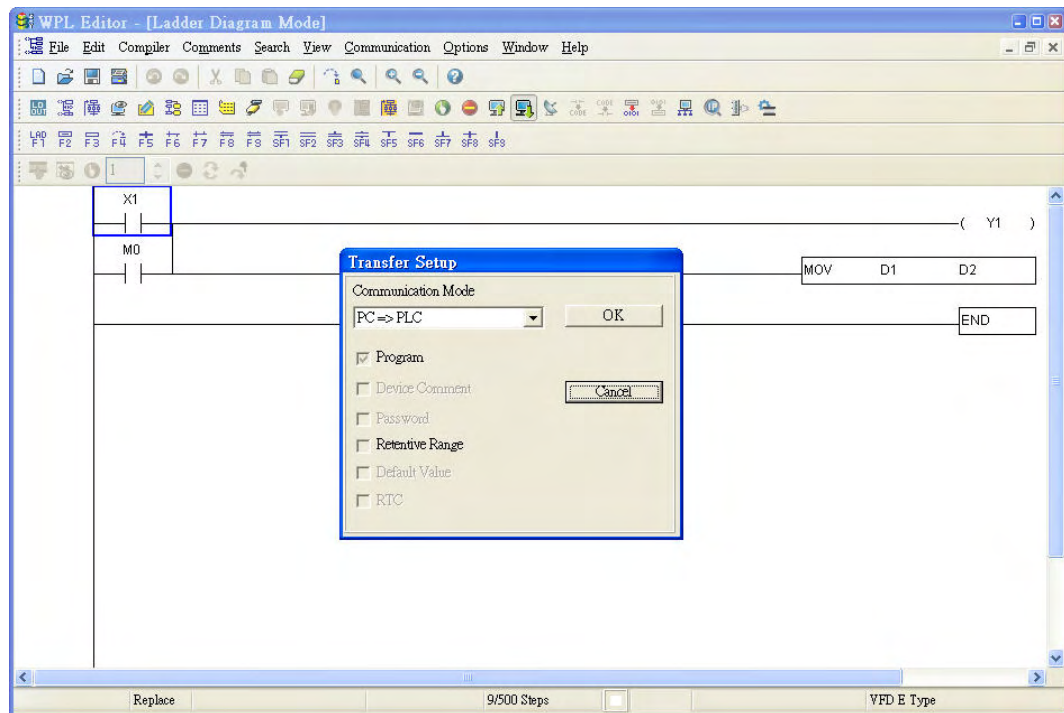


16.2.4 Program Input

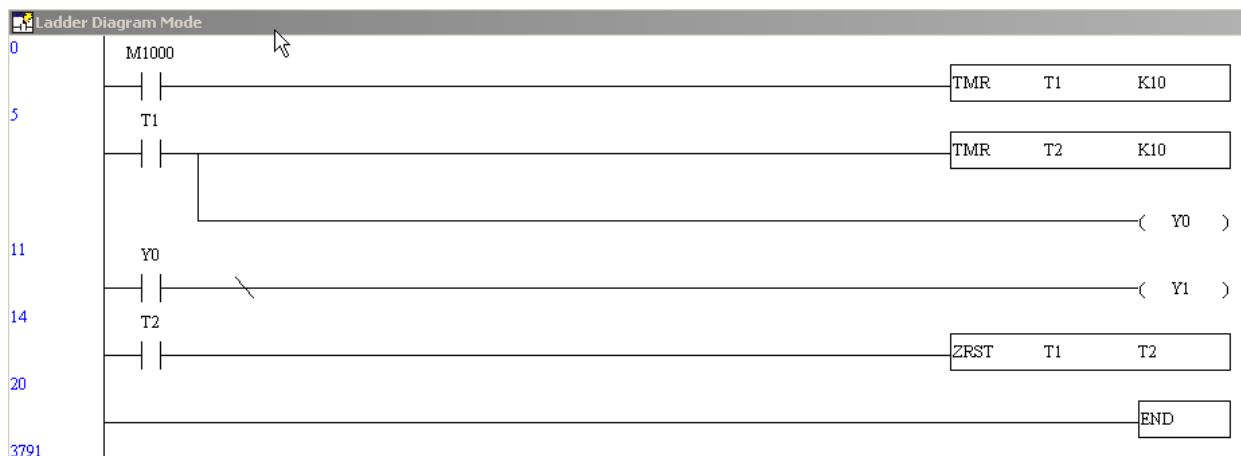

16.2.5 Program Download

Please download the program by following steps:

Step 1. Press  button for compiler after inputting program in WPLSoft.

Step 2. After compiler is finished, choose the item "Write to PLC" in the communication items.

After finishing Step 2, the program will be downloaded from WPLSoft to the AC motor drive by the communication format.


16.2.6 Program Monitor

If you execute “start monitor” in the communication item during executing PLC, the ladder diagram will be shown as follows.



16.3 Ladder Diagram

16.3.1 Program Scan Chart of the PLC Ladder Diagram

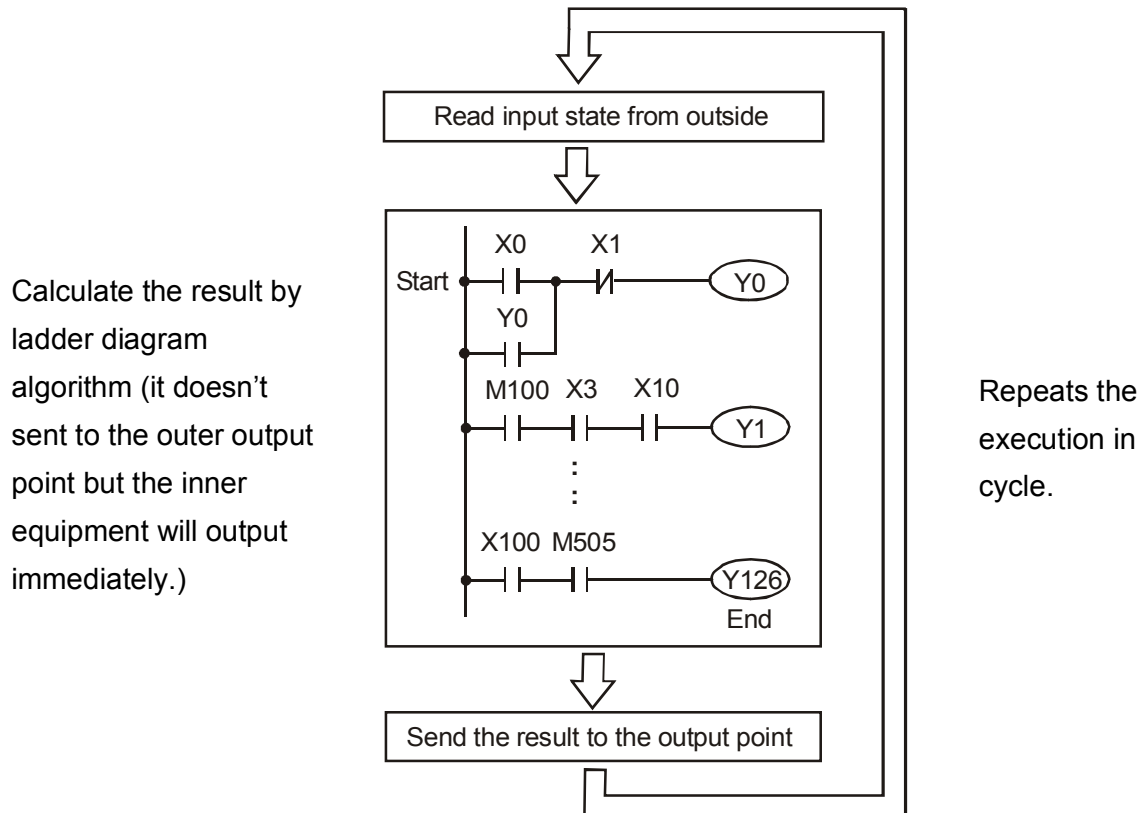

16.3.2 Ladder Diagram

Ladder diagram is a diagram language that applied on the automatic control and it is also a diagram that made up of the symbols of electric control circuit. PLC procedures are finished after ladder diagram editor edits the ladder diagram. It is easy to understand the control flow that indicated with diagram and also accept by technical staff of electric control circuit. Many basic symbols and motions of ladder diagram are the same as mechanical and electrical equipments of traditional automatic power panel, such as button, switch, relay, timer, counter and etc.

The kinds and amounts of PLC internal equipment will be different with brands. Although internal equipment has the name of traditional electric control circuit, such as relay, coil and contact. It doesn't have the real components in it. In PLC, it just has a basic unit of internal memory. If this bit is 1, it means the coil is ON and if this bit is 0, it means the coil is OFF. You should read the corresponding value of that bit when using contact (Normally Open, NO or contact a). Otherwise, you should read the opposite state of corresponding value of that bit when using contact (Normally Closed, NC or contact b). Many relays will need many bits, such as 8-bits makes up a byte. 2 bytes can make up a word. 2 words make up double word. When using many relays to do calculation, such as add/subtraction or shift, you could use byte, word or double word. Furthermore, the two equipments, timer and counter, in PLC not only have coil but also value of counting time and times.

 


 





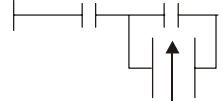 
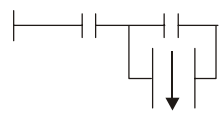 
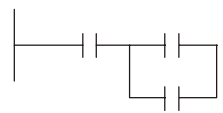 
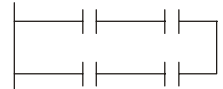 
In conclusion, each internal storage unit occupies fixed storage unit. When using these equipments, the corresponding content will be read by bit, byte or word.

 

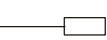 
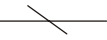 
Brief introduction to the internal devices of PLC:

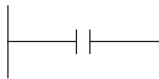Internal Device	Function
Input Relay	<p>Input relay is the basic storage unit of internal memory that corresponds to external input point (it is the terminal that used to connect to external input switch and receive external input signal). Input signal from external will decide it to display 0 or 1. You couldn't change the state of input relay by program design or forced ON/OFF via WPLSoft. The contacts (contact a, b) can be used unlimitedly. If there is no input signal, the corresponding input relay could be empty and can't be used with other functions.</p> <p><input checked="" type="checkbox"/> Equipment indication method: X0, X1...X7, X10, X11... The symbol of equipment is X and numbering in octal.</p>
Output Relay	<p>Output relay is the basic storage unit of internal memory that corresponds to external output point (it is used to connect to external load). It can be driven by input relay contact, the contact of other internal equipment and itself contact. It uses a normally open contact to connect to external load and other contacts can be used unlimitedly as input contacts. It doesn't have the corresponding output relay, if need, it can be used as internal relay.</p> <p><input checked="" type="checkbox"/> Equipment indication: Y0, Y1...Y7, Y10, Y11... The symbol of equipment is Y and numbering in octal.</p>
Internal Relay	<p>The internal relay doesn't connect directly to outside. It is an auxiliary relay in PLC. Its function is the same as the auxiliary relay in electric control circuit. Each auxiliary relay has the corresponding basic unit. It can be driven by the contact of input relay, output relay or other internal equipment. Its contacts can be used unlimitedly. Internal auxiliary relay can't output directly, it should output with output point.</p> <p><input checked="" type="checkbox"/> Equipment indication: M0, M1...M799. The symbol of equipment is M and numbering in decimal system.</p>
Counter	<p>Counter is used to count. It needs to set counter before using counter (i.e. the pulse of counter). There are coil, contacts and storage unit of counter in counter. When coil is from OFF to ON, that means input a pulse in counter and the counter should add 1. There are 16-bit, 32-bit and high-speed counter for user to use.</p> <p><input checked="" type="checkbox"/> Equipment indication: C0, C1... C79. The symbol of equipment is C and numbering in decimal system.</p>
Timer	<p>Timer is used to control time. There are coil, contact and timer storage. When coil is ON, its contact will act (contact a is close, contact b is open) when attaining desired time. The time value of timer is set by settings and each timer has its regular period. User sets the timer value and each timer has its timing period. Once the coil is OFF, the contact won't act (contact a is open and contact b is close) and the timer will be set to zero.</p> <p><input checked="" type="checkbox"/> Equipment indication: T0, T1...T159. The symbol of equipment is T and numbering in decimal system. The different number range corresponds with the different timing period.</p>
Data register	PLC needs to handle data and operation when controlling each order, timer value

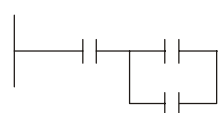	<p>and counter value. The data register is used to store data or parameters. It stores 16-bit binary number, i.e. a word, in each register. It uses two continuous number of data register to store double words.</p> <p>☑ Equipment indication: D0, D1,...,D399. The symbol of equipment is D and numbering in decimal system.</p>
--	---


The structure of ladder diagram and information:

Ladder Diagram Structure	Explanation	Command	Device
	Normally open, contact a	LD	X, Y, M, T, C
	Normally closed, contact b	LDI	X, Y, M, T, C
	Serial normally open	AND	X, Y, M, T, C
	Parallel normally open	OR	X, Y, M, T, C
	Parallel normally closed	ORI	X, Y, M, T, C
	Rising-edge trigger switch	LDP	X, Y, M, T, C
	Falling-edge trigger switch	LDF	X, Y, M, T, C
	Rising-edge trigger in serial	ANDP	X, Y, M, T, C
	Falling-edge trigger in serial	ANDF	X, Y, M, T, C
	Rising-edge trigger in parallel	ORP	X, Y, M, T, C
	Falling-edge trigger in parallel	ORF	X, Y, M, T, C
	Block in serial	ANB	none
	Block in parallel	ORB	none

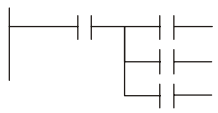	Multiple output	MPS MRD MPP	none
	Output command of coil drive	OUT	Y, M
	Basic command, Application command	Basic command/ Application command	
	Inverse logic	INV	none


16.3.3 The Edition of PLC Ladder Diagram

The program edited method is from left power line to right power line. (The right power line will be omitted during the edited of WPLSoft.) After editing a row, go to editing the next row. The maximum contacts in a row are 11 contacts. If you need more than 11 contacts, you could have the new row and start with continuous line to continue more input devices. The continuous number will be produced automatically and the same input point can be used repeatedly. The drawing is shown as follows.

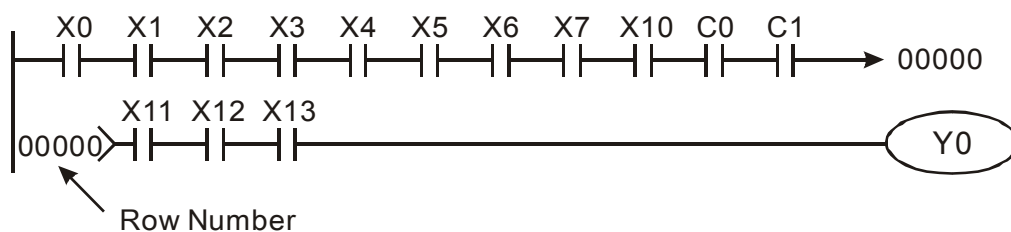

The operation of ladder diagram is to scan from left upper corner to right lower corner. The output handling, including the operation frame of coil and application command, at the most right side in ladder diagram.

Take the following diagram for example; we analyze the process step by step. The number at the right corner is the explanation order.

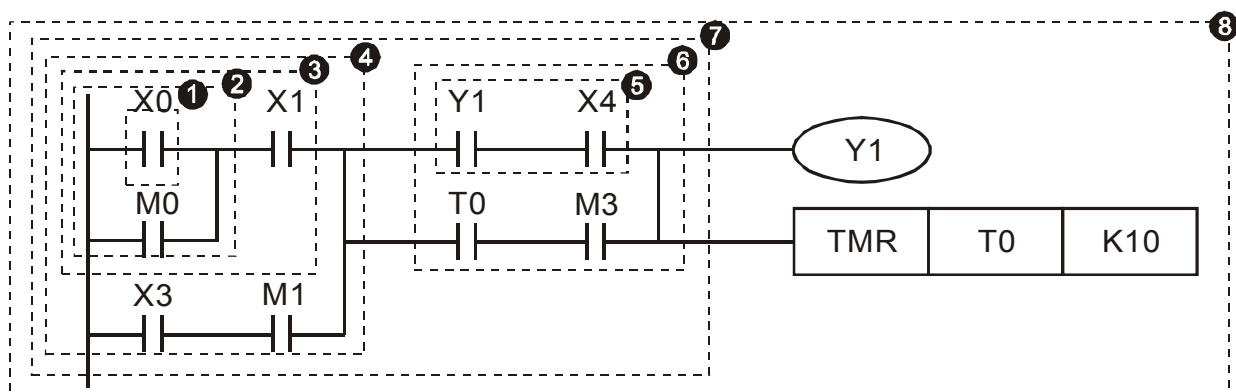

The explanation of command order:


- 1 LD X0
- 2 OR M0
- 3 AND X1
- 4 LD X3
- AND M1
- ORB
- 5 LD Y1

```


        AND  X4
The explanation of command order:
6      LD   T0
        AND  M3
        ORB
7      ANB
8      OUT  Y1
        TMR T0  K10
    
```

The detail explanation of basic structure of ladder diagram


1. **LD (LDI) command:** give the command LD or LDI in the start of a block.

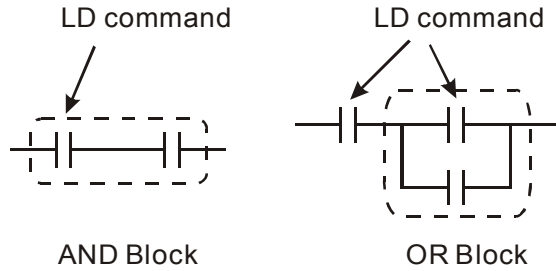

The structures of command LDP and LDF are similar to the command LD. The difference is that command LDP and LDF will act in the rising-edge or falling-edge when contact is ON as shown in the following.

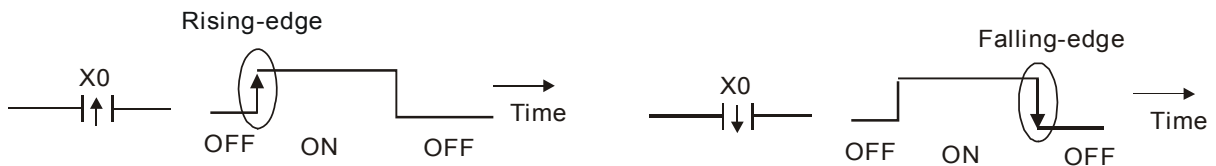


2. **AND (ANI) command:** single device connects to a device or a block in series.

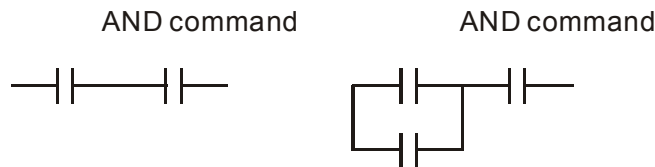


The structures of ANDP and ANDF are the same but the action is in rising-edge or falling-edge.

3. **OR (ORI) command:** single device connects to a device or a block.

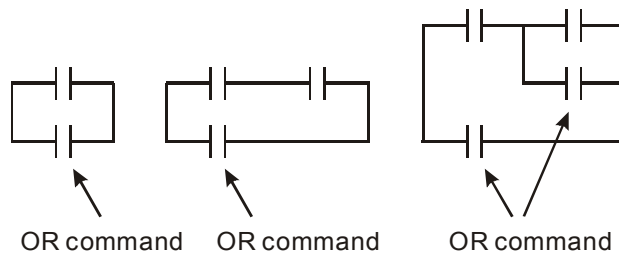


The structures of ORP and ORF are the same but the action is in rising-edge or falling-edge.

4. **ANB command:** a block connects to a device or a block in series.

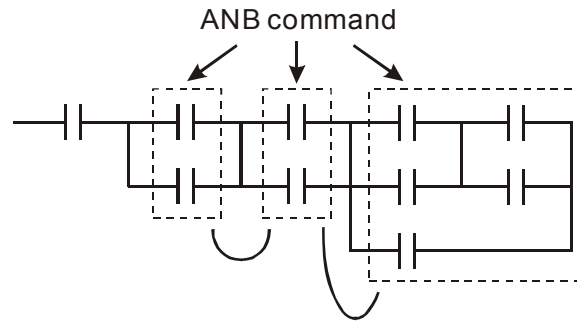


5. **ORB command:** a block connects to a device or a block in parallel.

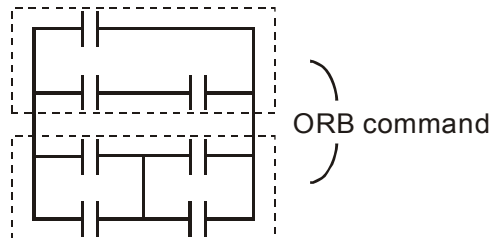

If there are several blocks when operate ANB or ORB, they should be combined to blocks or network from up to down or from left to right.

6. **MPS, MRD, MPP commands:** Divergent memory of multi-output. It can produce many various outputs.
7. The command MPS is the start of divergent point. The divergent point means the connection place between horizontal line and vertical line. We should determine to have contact memory command or not according to the contacts status in the same vertical line. Basically, each contact could have memory command but in some places of ladder diagram conversion will be omitted due to the PLC operation convenience and capacity limit. MPS command can be used for 8 continuous times and you can recognize this command by the symbol “┐”.
8. MRD command is used to read memory of divergent point. Because the logical status is the same in the same horizontal line, it needs to read the status of original contact to keep on analyzing other ladder diagram. You can recognize the command MRD by the symbol “┌”.
9. MPP command is used to read the start status of the top level and pop it out from stack. Because it is the last item of the horizontal line, it means the status of this horizontal line is ending.

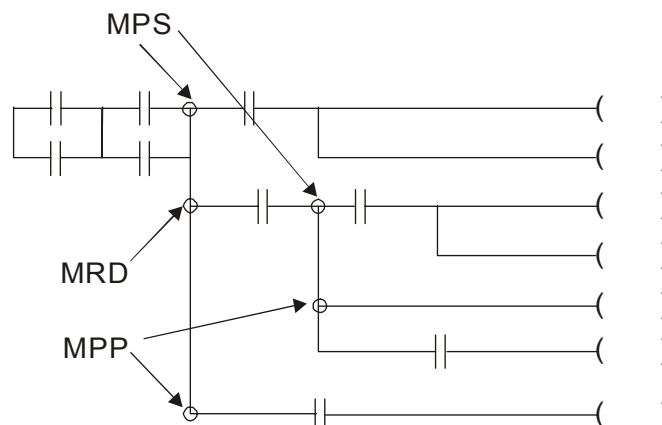


16.3.4 The Example for Designing Basic Program

Start, Stop and Latching

In the same occasions, it needs transient close button and transient open button to be start and stop switch. Therefore, if you want to keep the action, you should design latching circuit. There are several latching circuits in the following:


Example 1: the latching circuit for priority of stop

When start normally open contact X1=On, stop normally contact X2=Off, and Y1=On are set at the same time, if X2=On, the coil Y1 will stop acting. Therefore, it calls priority of stop.

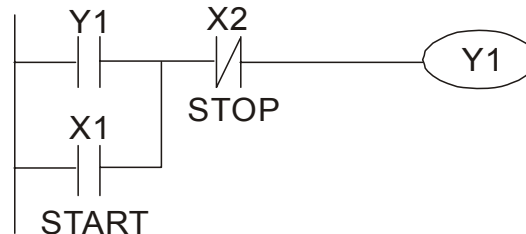

Example 2: the latching circuit for priority of start


When start normally open contact X1=On, stop normally contact X2=Off and Y1=On (coil Y1 will be active and latching) are valid at the same time, if X2=On, coil Y1 will be active due to latched contact. Therefore, it calls priority of start.

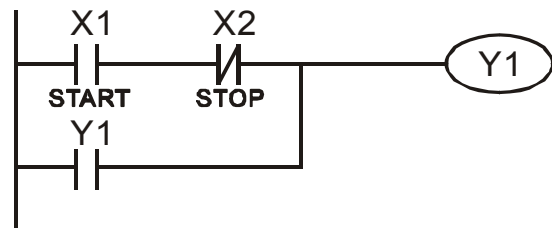

Example 3: the latching circuit of SET and RST commands


The figure at the right side is latching circuit that made up of RST and SET command. It is top priority of stop when RST command is set behind SET command. When executing PLC from up to down, The coil Y1 is ON and coil Y1 will be OFF when X1 and X2 act at the same time, therefore it calls priority of stop.

Top priority of stop

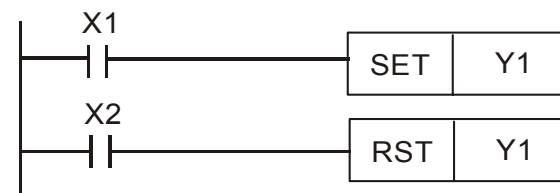

It is top priority of start when SET command is set after RST command. When X1 and X2 act at the same time, Y1 is ON so it calls top priority of start.



Top priority of start

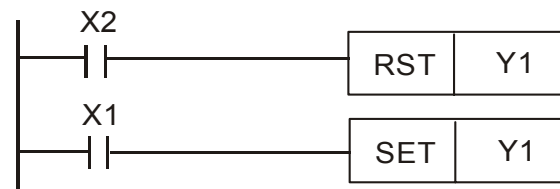

The common control circuit



Example 4: condition control

X1 and X3 can start/stop Y1 separately, X2 and X4 can start/stop Y2 separately and they are all self latched circuit. Y1 is an element for Y2 to do AND function due to the normally open contact connects to Y2 in series. Therefore, Y1 is the input of Y2 and Y2 is also the input of Y1.

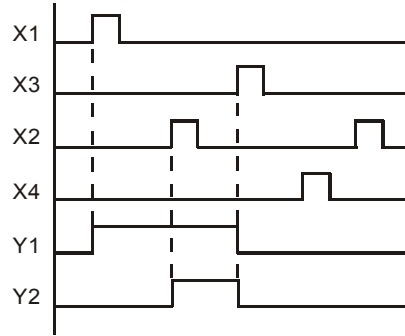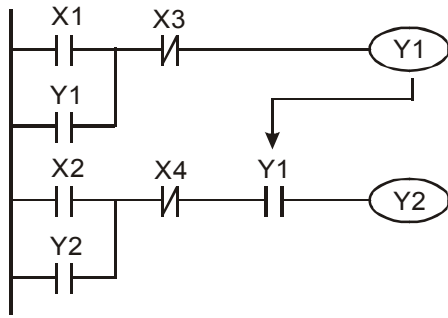


Example 5: Interlock control

The figure above is the circuit of interlock control. Y1 and Y2 will act according to the start contact X1 and X2. Y1 and Y2 will act not at the same time, once one of them acts and the other won't act. (This is called interlock.) Even if X1 and X2 are valid at the same time, Y1 and Y2 won't act at the same time due to up-to-down scan of ladder diagram. For this ladder diagram, Y1 has higher priority than Y2.

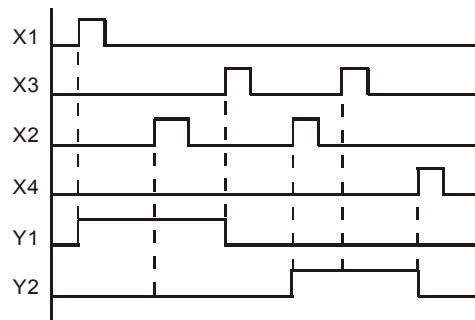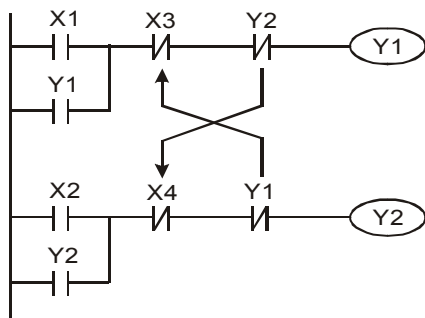



Example 6: Sequential Control

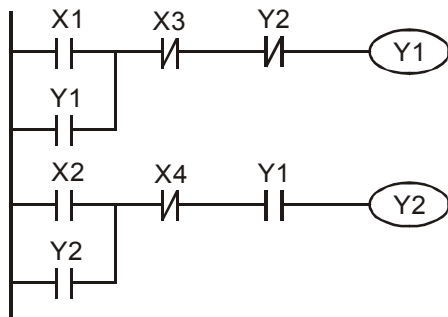

If add normally close contact Y2 into Y1 circuit to be an input for Y1 to do AND function. (as shown in the left side) Y1 is an input of Y2 and Y2 can stop Y1 after acting. In this way, Y1 and Y2 can execute in sequential.


Example 7: Oscillating Circuit

The period of oscillating circuit is $\Delta T + \Delta T$

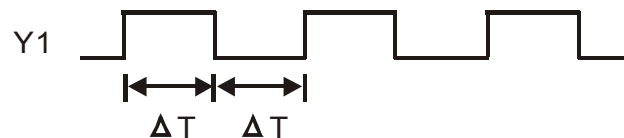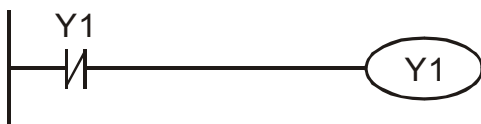


The figure above is a very simple ladder step diagram. When starting to scan Y1 normally close contact, Y1 normally close contact is close due to the coil Y1 is OFF. Then it will scan Y1 and the coil Y1 will be ON and output 1. In the next scan period to scan normally close contact Y1, Y1 normally close contact will be open due to Y1 is ON. Finally, coil Y1 will be OFF. The result of repeated scan, coil Y will output the vibrating pulse with cycle time ΔT (On) + ΔT (Off).

The vibrating circuitry of cycle time ΔT (On) + ΔT (Off):

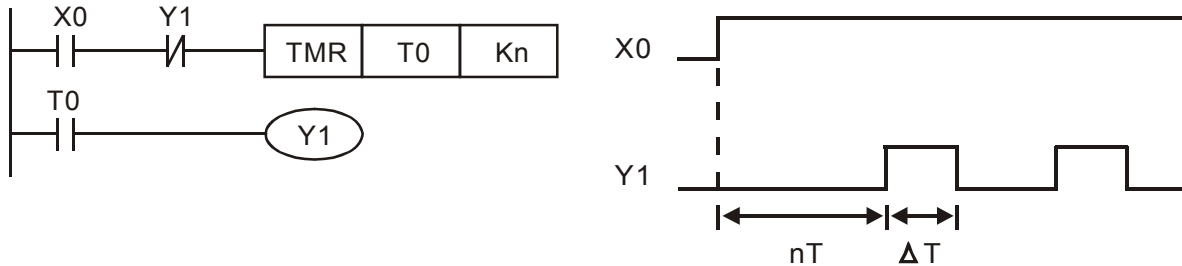


The figure above uses timer T0 to control coil Y1 to be ON. After Y1 is ON, timer T0 will be closed at the next scan period and output Y1. The oscillating circuit will be shown as above. (n is the setting of timer and it is decimal number. T is the base of timer. (clock period))

Example 8: Blinking Circuit

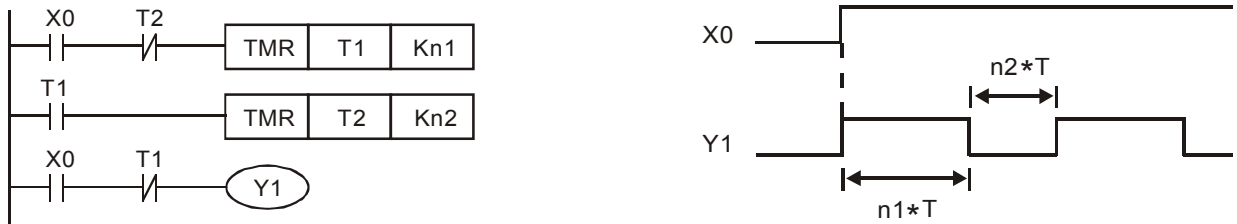


The figure above is common used oscillating circuit for indication light blinks or buzzer alarms. It uses two timers to control On/OFF time of Y1 coil. If figure, n1 and n2 are timer setting of T1 and T2. T is the base of timer (clock period)

Example 9: Triggered Circuit

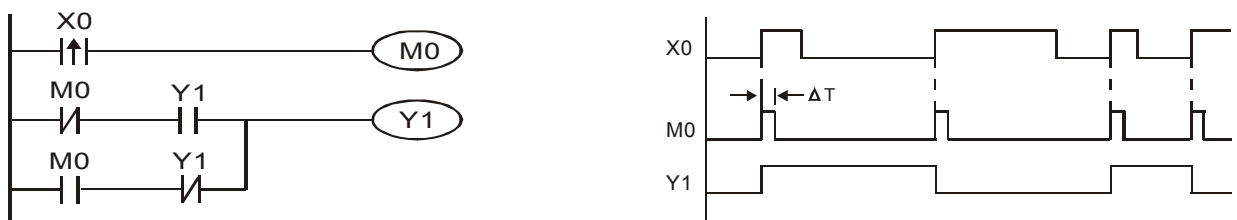

In figure above, the rising-edge differential command of X0 will make coil M0 to have a single pulse of ΔT (a scan time). Y1 will be ON during this scan time. In the next scan time, coil M0 will be OFF, normally close M0 and normally close Y1 are all closed. However, coil Y1 will keep on being ON and it will make coil Y1 to be OFF once a rising-edge comes after input X0 and coil M0 is ON for a scan time. The timing chart is as shown above. This circuit usually executes alternate two actions with an input. From above timing: when input X0 is a square wave of a period T, output coil Y1 is square wave of a period 2T.



Example 10: Delay Circuit

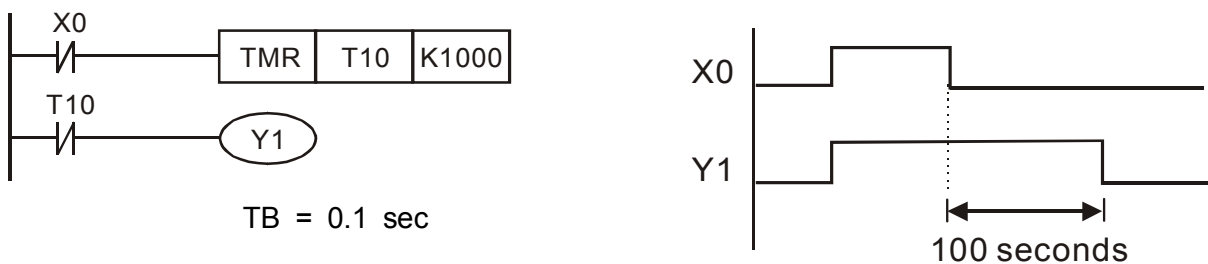

When input X0 is ON, output coil Y1 will be ON at the same time due to the corresponding normally close contact OFF makes timer T10 to be OFF. Output coil Y1 will be OFF after delaying 100 seconds ($K1000 \times 0.1 \text{ seconds} = 100 \text{ seconds}$) once input X0 is OFF and T10 is ON. Please refer to timing chart above.



Example 11: Output delay circuit, in the following example, the circuit is made up of two timers.

No matter input X0 is ON or OFF, output Y4 will be delay.

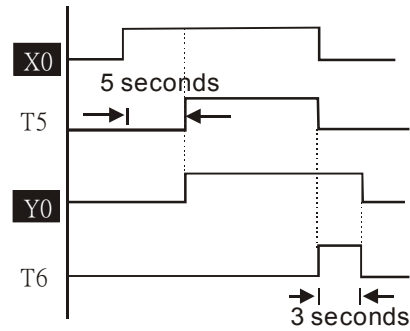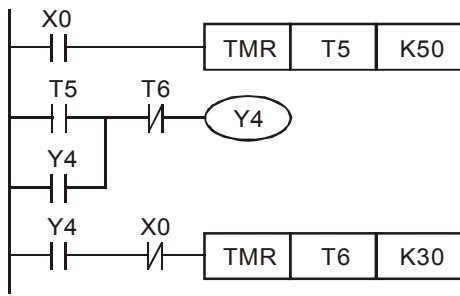

Example 12: Extend Timer Circuit

In this circuit, the total delay time from input X0 is close and output Y1 is ON = $(n1+n2) * T$. where T is clock period. Timer: T11, T12; Timer cycle: T.

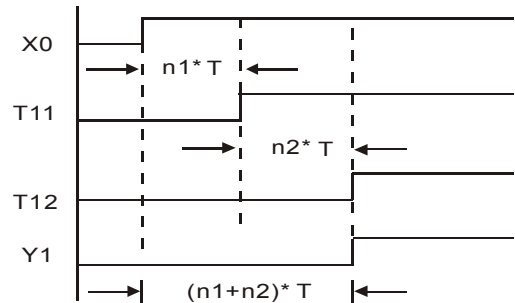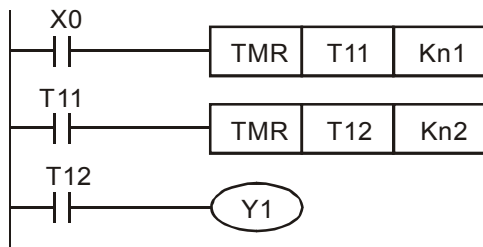

16.4 PLC Devices Function

Items	Specifications	Remarks
Control Method	Stored program, cyclic scan system	
I/O Processing Method	Batch processing (when END instruction is executed)	I/O refresh instruction is available
Execution Speed	Basic commands (minimum 0.24 us)	Application commands (1 ~ dozens us)
Program Language	Instruction, Ladder Logic, SFC	
Program Capacity	1000 STEPS	
Commands	80 commands	30 basic commands 50 application commands
Input/Output Contact	Input (X): 10, output (Y): 4	

	Device	Item	Range	Function	
Relay [bit mode]	X	External Input Relay	X0~X17, 16 points, octal number system	Total is 32 points Correspond to external input point	
	Y	External Output Relay	Y0~Y17, 16 points, octal number system		Correspond to external output point
	M	Auxiliary	For general	M0~M799, 800 points	Total is 192 points Contacts can switch to On/Off in program
			For special	M1000~M1079, 80 points	
	T	Timer	100ms timer	T0~T159, 160 points	Total is 16 points When the timer indicated by TMR command attains the setting, the T contact with the same number will be On.
C	Counter	16-bit count up for general	C0~C79, 80 points	Total is 80 points When the counter indicated by CNT command attains the setting, the C contact with the same number will be On.	
Register [WORD data]	T	Present value of timer	T0~T15, 160 points	When timer attains, the contact of timer will be On.	
	C	Present value of counter	C0~C79, 16-bit counter, 80 points	When timer attains, the contact of timer will be On.	
	D	Data register	For latched	D0~D399, 400 points	Total is 1300 points It can be memory area for storing data.
For general			D1000~D1099, 100 points		
For special			D2000~D2799, 800 points		
Constant	K	Decimal	K-32,768 ~ K32,767 (16-bit operation)		
	H	Hexadecimal	H0000 ~ HFFFF (16-bit operation)		
Communication port (program read/write)			RS485 (slave)		
Analog input/output			Built-in 2 analog inputs and 1 analog output		
Function extension module (optional)			EMC-D42A; EMC-R6AA; EMCD611A		


16.4.1 Devices Functions

The Function of Input/output Contacts

The function of input contact X: input contact X reads input signal and enter PLC by connecting with input equipment. It is unlimited usage times for contact A or contact B of each input contact X in program. The On/Off of input contact X can be changed with the On/Off of input equipment but can't be changed by using peripheral equipment (WPLSoft).

The Function of Output Contact Y

The mission of output contact Y is to drive the load that connects to output contact Y by sending On/Off signal. There are two kinds of output contact: one is relay and the other is transistor. It is unlimited usage times for A or B contact of each output contact Y in program. But there is number for output coil Y and it is recommended to use one time in program. Otherwise, the output result will be decided by the circuit of last output Y with PLC program scan method.

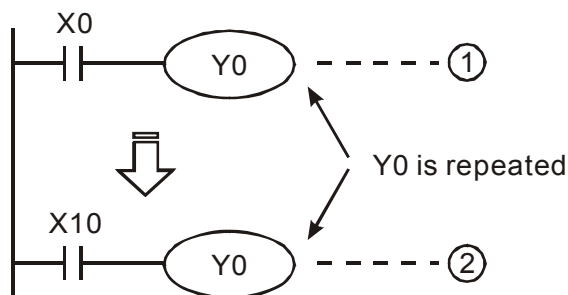

The output of Y0 will be decided by circuit 2, i.e. decided by On/Off of X10.

Value, Constant [K] / [H]

Constant	K	Decimal	K-32,768 ~ K32,767 (16-bit operation)
	H	Hexadecimal	H0000 ~ HFFFF (16-bit operation)


There are five value types for DVP-PLC to use by the different control destination. The following is the explanation of value types.

Binary Number (BIN)

It uses binary system for the PLC internal operation or storage. The relative information of binary system is in the following.

Bit	Bit is the basic unit of binary system, the status are 1 or 0.
Nibble	It is made up of continuous 4 bits, such as b3~b0. It can be used to represent number 0~9 of decimal or 0~F of hexadecimal.
Byte	It is made up of continuous 2 nibbles, i.e. 8 bits, b7~b0. It can used to represent 00~FF of hexadecimal system.
Word	It is made up of continuous 2 bytes, i.e. 16-bit, b15~b0. It can used to represent 0000~FFFF of hexadecimal system.
Double Word	It is made up of continuous 2 words, i.e. 32-bit, b31~b0. It can used to represent 00000000~FFFFFFFF of hexadecimal system.

The relations among bit, nibble, byte, word, and double word of binary number are shown as follows.

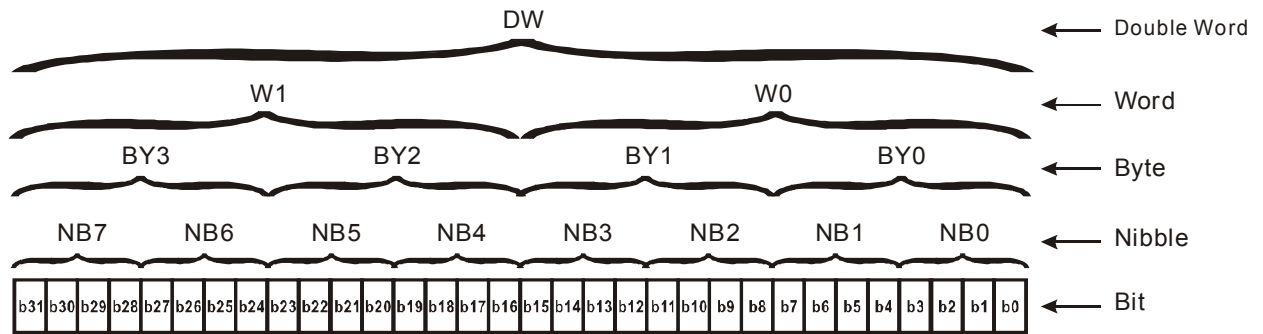

➤ Octal Number (OCT)

The numbers of external input and output terminal of DVP-PLC use octal number.

Example:

External input: X0~X7, X10~X17... (device number)

External output: Y0~Y7, Y10~Y17... (device number)

➤ Decimal Number, DEC

The suitable time for decimal number to be used in DVP-PLC system.

- To be the setting value of timer T or counter C, such as TMR C0 K50. (K constant)
- To be the device number of M, T, C and D. For example: M10, T30. (device number)
- To be operand in application command, such as MOV K123 D0. (K constant)

➤ Binary Code Decimal (BCD)

It shows a decimal number by a unit number or four bits so continuous 16-bit can use to represent the four numbers of decimal number. BCD code is usually used to read the input value of DIP switch or output value to 7-segment display to be display.

➤ Hexadecimal Number (HEX)

The suitable time for hexadecimal number to be used in DVP-PLC system.

- To be operand in application command. For example: MOV H1A2B D0. (constant H)

➤ Constant K:

In PLC, it is usually have K before constant to mean decimal number. For example, K100 means 100 in decimal number.

Exception: The value that is made up of K and bit equipment X, Y, M, S will be bit, byte, word or double word. For example, K2Y10, K4M100. K1 means a 4-bit data and K2~K4 can be 8, 12 and 16-bit data separately.

➤ Constant H:

In PLC, it is usually have H before constant to mean hexadecimal number. For example, H100 means 100 in hexadecimal number.

The Function of Auxiliary Relay

There are output coil and A, B contacts in auxiliary relay M and output relay Y. It is unlimited usage times in program. User can control loop by using auxiliary relay, but can't drive external load directly. There are two types divided by its characteristics.

1. Auxiliary relay for general : It will reset to Off when power loss during running. Its state will be Off when power on after power loss.
2. Auxiliary relay for special : Each special auxiliary relay has its special function.
Please don't use undefined auxiliary relay.

The Function of Timer

The unit of timer is 1ms, 10ms and 100ms. The count method is count up. The output coil will be On when the present value of timer equals to the settings. The setting is K in decimal number. Data register D can be also used as settings.

- The real setting time of timer = unit of timer * settings

The Features and Functions of Counter

Item	16-bit counters	32-bit counters	
Type	General	General	High speed
Count direction	Count up	Count up/down	
Settings	0~32,767	-2,147,483,648~+2,147,483,647	
Designate for constant	Constant K or data register D	Constant K or data register D (2 for designated)	
Present value change	Counter will stop when attaining settings	Counter will keep on counting when attaining settings	
Output contact	When count attains the settings value, contact will be On and latched.	When count up attains settings, contact will be On and latched. When count down attains settings, contact will reset to Off.	
Reset action	The present value will reset to 0 when RST command is executed and contact will reset to Off.		
Present register	16-bit	32-bit	
Contact action	After scanning, act together.	After scanning, act together. Act immediately when count attains. It has no relation with scan period.	


Functions:

When pulse input signal of counter is from Off to On, the present value of counter equals to settings and output coil is On. Settings are decimal system and data register D can also be used as settings.


16-bit counters C0~C79:

- ☑ Setting range of 16-bit counter is K0~K32, 767. (K0 is the same as K1. output contact will be On immediately at the first count.
- ☑ General counter will be clear when PLC is power loss. If counter is latched, it will remember the value before power loss and keep on counting when power on after power loss.
- ☑ If using MOV command, WPLSoft to send a value, which is large than setting to C0, register, at the next time that X1 is from Off to On, C0 counter contact will be On and present value will be set to the same as settings.
- ☑ The setting of counter can use constant K or register D (not includes special data register D1000~D1044) to be indirect setting.
- ☑ If using constant K to be setting, it can only be positive number but if setting is data register D, it can be positive/negative number. The next number that counter counts up from 32,767 is -32,768.

Example:

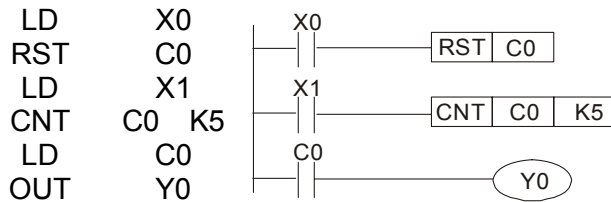

1. When X0=On, RST command is executed, C0 reset to 0 and output contact reset to Off.
2. When X1 is from Off to On, counter will count up (add 1).
3. When counter C0 attains settings K5, C0 contact is On and C0 = setting =K5. C0 won't accept X1 trigger signal and C0 remains K5.

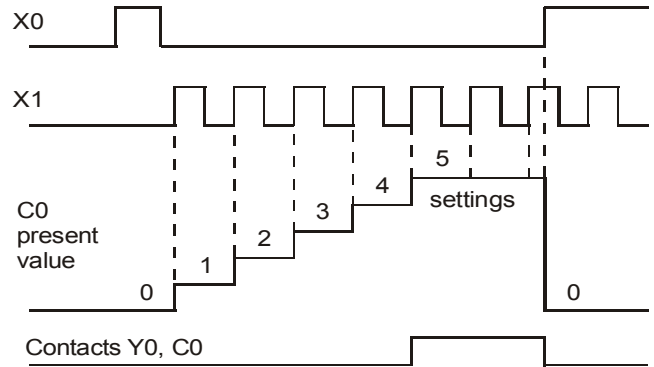

16.4.2 Special Auxiliary Relays

Special M	Function	Read(R)/Write(W)
M1000	Normally open contact (a contact). This contact is On when running and it is On when the status is set to RUN.	Read only
M1001	Normally closed contact (b contact). This contact is Off when running and it is Off when the status is set to RUN.	Read only
M1002	On only for 1 scan after RUN. Initial pulse is contact a. It will get positive pulse in the RUN moment. Pulse width=scan period.	Read only
M1003	Off only for 1 scan after RUN. Initial pulse is contact a. It will get negative pulse in the RUN moment. Pulse width=scan period.	Read only
M1004	Reserved	-
M1005	Fault indication of the AC motor drives	Read only
M1006	Output frequency is 0, M1006 On	Read only
M1007	Operation direction of AC motor drives (FWD: M1007 Off, REV: M1007On)	Read only
M1008 ~ M1010	Reserved	-
M1011	10ms clock pulse, 5ms On/5ms Off	Read only
M1012	100ms clock pulse, 50ms On / 50ms Off	Read only
M1013	1s clock pulse, 0.5s On / 0.5s Off	Read only
M1014	1min clock pulse, 30s On / 30s Off	Read only
M1015	Frequency attained, M1015=On	Read only
M1016	Parameter read/write error, M1016=On	Read only
M1017	Succeed to write parameter, M1017 =On	Read only
M1018	Reserved	
M1019	Reserved	
M1020	Zero flag	Read only
M1021	Borrow flag	Read only
M1022	Carry flag	Read only

Special M	Function	Read(R)/Write(W)
M1023	Divisor is 0	Read only
M1024	Reserved	-
M1025	RUN(ON) / STOP(OFF) the AC motor drive	Read/Write
M1026	The operation direction of the AC motor drive (FWD: OFF, REV: ON)	Read/Write
M1027	AC motor drive reset	Read/Write
M1028	Reserved	
M1029	Reserved	
M1030	Reserved	
M1031	Reserved	
M1032	Reserved	
M1033	Reserved	
M1034	Enable CANopen real time control	Read/Write
M1035 ~ M1039	Reserved	-
M1040	Power On	Read/Write
M1041	Reserved	-
M1042	Quick stop	Read/Write
M1043	Reserved	-
M1044	Halt	Read/Write
M1045 ~ M1047	Reserved	-
M1048	New position	Read/Write
M1049~ M1051	Reserved	
M1052	Frequency Lock	Read/Write
M1053 ~ M1054	Reserved	-
M1055	Home	Read/Write
M1056	Power on ready	Read only
M1057	Reserved	-
M1058	On quick stopping	Read only
M1059	CANopen master setting complete	Read only
M1060	Initializing CANopen slave	Read only
M1061	Initialize CANopen slave failed	Read only
M1062	Reserved	-
M1063	Target torque attained	Read only
M1064	Target position attained	Read only
M1065	Set pos ack	Read only
M1066	Read/ Write CANopen data complete	Read only
M1067	Read/ Write CANopen data succeed	Read only

Special M	Function	Read(R)/Write(W)
M1068 ~ M1079	Reserved	-
M1070	Homing complete	Read only
M1071	Home error	Read only
M1072 ~ M1079	Reserved	

16.4.3 Special Registers

Special D	Function	Read(R)/Write(W)
D1000	Reserved	-
D1001	PLC firmware version	Read only
D1002	Program capacity	Read only
D1003	Checksum	Read only
D1004 ~ D1009	Reserved	-
D1010	Present scan time (Unit: 0.1ms)	Read only
D1011	Minimum scan time (Unit: 0.1ms)	Read only
D1012	Maximum scan time (Unit: 0.1ms)	Read only
D1013 ~ D1019	Reserved	-
D1020	Output frequency (0.000~600.00Hz)	Read only
D1021	Output current (####.#A)	Read only
D1022	The ID of the extension card: 0: no card 1: Relay Card(6 out) 2: I/O Card (4 in 2 out) 3~7: Reserved	Read only
D1023	The ID of the extension card: 0: no card 1: DeviceNet Slave 2: Profibus-DP Slave 3: CANopen Slave 4: Modbus-TCP Slave 5: EtherNet/IP Slave 6~8: Reserved	Read only
D1024 ~ D1026	Reserved	-
D1027	Frequency command of the PID control	Read only
D1028	The responsive value of AUI AVI (analog voltage input) (0.00~100.00%)	Read only
D1029	The responsive value of AUI ACI (analog current input) (0.0~100.00%)	Read only
D1030	The corresponding value for AUI (-100.0~100.00%)	Read only
D1031	Reserved	-

Special D	Function	Read(R)/ Write(W)
~ D1035		
D1036	AC motor drive error code	Read only
D1037	AC motor drive output frequency	Read only
D1038	DC Bus voltage	Read only
D1039	Output voltage	Read only
D1040	Analog output value AFM1 (-100.00~100.00%)	Read/Write
D1041 ~ D1042	Reserved	-
D1043	User defined (When Pr.00.04 is set to 28, the register data will be displayed as C xxx)	Read/Write
D1044	Reserved	-
D1045	Analog output value AFM2 (-100.00~100.00%)	Read/Write
D1046 ~ D1049	Reserved	-
D1050	Actual mode 0: Velocity mode 1: Position mode 2: Torque mode 3: Homing mode	Read only
+D1051 ~ D1052	Reserved	-
D1053	Actual torque	Read only
D1054	Present count value of MI8(L word)	
D1055	Present count value of MI8 (H word)	
D1056 ~ D1059	Reserved	Read only
D1060	Mode setting 0: Speed Mode 1: Position Mode 2: Torque Mode 3: Homing Mode	Read/Write
D1061 ~ D1069	Reserved	Read/Write
D1100	Target frequency	Read only
D1101	Target frequency (operating)	Read only
D1102	Reference frequency	Read only
D1103	Target position L	Read only
D1104	Target position H	Read only
D1105	Target torque	Read only
D1106	-	-
D1107	-	-
D1108	-	-
D1109	Random value	Read only
D1110	Number of internal communication nodes	RW
D1111	-	-
D1112	-	-
D1113	-	-

Special D	Function	Read(R)/ Write(W)
D1114	-	-
D1115	Synchronous time cycle of internal communication	Read only
D1116	Internal communication node error	Read only
D1117	Corresponding on-line bit of internal communication node	Read only
D1118	-	-
D1119	Random value	Read only
D1120	Control command of internal communication node 0	Read/Write
D1121	Mode of internal communication node 0	Read/Write
D1122	Reference command L of internal communication node 0	Read/Write
D1123	Referenc command H of internal communication node 0	Read/Write
D1124	-	-
D1125	-	-
D1126	Status of internal communication node 0	Read only
D1127	Reference status L of internal communication node 0	Read only
D1128	Reference status H of internal communication node 0	Read only
D1129	-	-
D1130	Control command of internal communication node 1	Read/Write
D1131	Mode of internal communication node 1	Read/Write
D1132	Reference command L of internal communication node 1	Read/Write
D1133	Referenc command H of internal communication node 1	Read/Write
D1134	-	-
D1135	-	-
D1136	Status of internal communication node 1	Read only
D1137	Reference status L of internal communication node 1	Read only
D1138	Reference status H of internal communication node 1	Read only
D1139	-	-
D1140	Control command of internal communication node 2	Read/Write
D1141	Mode of internal communication node 2	Read/Write
D1142	Reference command L of internal communication node 2	Read/Write
D1143	Referenc command H of internal communication node 2	Read/Write
D1144	-	-
D1145	-	-
D1146	Status of internal communication node 2	Read only
D1147	Reference status L of internal communication node 2	Read only
D1148	Reference status H of internal communication node 2	Read only
D1149	-	-
D1150	Control command of internal communication node 3	Read/Write
D1151	Mode of internal communication node 3	Read/Write
D1152	Reference command L of internal communication node 3	Read/Write
D1153	Referenc command H of internal communication node 3	Read/Write
D1154	-	-
D1155	-	-
D1156	Status of internal communication node 3	Read only
D1157	Reference status L of internal communication node 3	Read only
D1158	Reference status H of internal communication node 3	Read only
D1159	-	-
D1160	Control command of internal communication node 4	Read/Write
D1161	Mode of internal communication node 4	Read/Write
D1162	Reference command L of internal communication node 4	Read/Write
D1163	Referenc command H of internal communication node 4	Read/Write
D1164	-	-
D1165	-	-
D1166	Status of internal communication node 4	Read only
D1167	Reference status L of internal communication node 4	Read only

Special D	Function	Read(R)/ Write(W)
D1168	Reference status H of internal communication node 4	Read only
D1169	-	-
D1170	Control command of internal communication node 5	Read/Write
D1171	Mode of internal communication node 5	Read/Write
D1172	Reference command L of internal communication node 5	Read/Write
D1173	Referenc command H of internal communication node 5	Read/Write
D1174	-	-
D1175	-	-
D1176	Status of internal communication node 5	Read only
D1177	Reference status L of internal communication node 5	Read only
D1178	Reference status H of internal communication node 5	Read only
D1179	-	-
D1180	Control command of internal communication node 6	Read/Write
D1181	Mode of internal communication node 6	Read/Write
D1182	Reference command L of internal communication node 6	Read/Write
D1183	Referenc command H of internal communication node 6	Read/Write
D1184	-	-
D1185	-	-
D1186	Status of internal communication node 6	Read only
D1187	Reference status L of internal communication node 6	Read only
D1188	Reference status H of internal communication node 6	Read only
D1189	-	-
D1190	Control command of internal communication node 7	Read/Write
D1191	Mode of internal communication node 7	Read/Write
D1192	Reference command L of internal communication node 7	Read/Write
D1193	Referenc command H of internal communication node 7	Read/Write
D1194	-	-
D1195	-	-
D1196	Status of internal communication node 7	Read only
D1197	Reference status L of internal communication node 7	Read only
D1198	Reference status H of internal communication node 7	Read only
D1199	-	Read only


CANopen Master Special D (Special D can be written only when PLC is at STOP)

Special D	Function	PDO Map	Power Failure Memory	Factory Setting	R/W
D1070	The station which completed CANopen initialization (bit0=Machine code0	NO	NO	0	R
D1071	The station which error occurs during CANopen initialization (bit0=Machine code0	NO	NO	0	R
D1072	Reserved	-	-	-	-
D1073	CANopen station cut off (bit0=Machine code0	NO	NO		R
D1074	Error code of master error 0: no error 1: slave setting error 2: synchronous cycle setting error (the setting is too low)	NO	NO	0	R
D1075	Reserved	-	-	-	-
D1076	SDO fault (main index value)	NO	NO		R
D1077	SDO fault (sub-index value)	NO	NO		R

Special D	Function	PDO Map	Power Failure Memory	Factory Setting	R/W
D1078	SDO fault (error code L)	NO	NO		R
D1079	SDO fault (error code H)	NO	NO		R
D1080	Reserved	-	-		-
D1081	Reserved	NO	NO		R
D1082	Reserved	NO	NO		R
D1083	Reserved	NO	NO		R
D1084	Reserved	NO	NO		R
D1085	Reserved	NO	NO		R
D1086	Reserved	NO	NO		R
D1087 ~ D1089	Reserved	-	-		-
D1090	Synchronous cycle setting	NO	YES	4	RW
D1091	The station for initialization during initializing process.	NO	YES	FFFFH	RW
D1092	Delay time before initializing	NO	YES	0	RW
D1093	Break off detection time	NO	YES	1000ms	RW
D1094	Times of Break off detection	NO	YES	3	RW
D1095 ~ D1096	Reserved	-	-		-
D1097	Type of P to P send (PDO) Setting range: 1~240	NO	YES	1	RW
D1098	Type of P to P received (PDO) Setting range: 1~240	NO	YES	1	RW
D1099	Delay time of initialization complete Setting range: 1~60000 sec.	NO	YES	15 sec	RW

C2000 supports up to 8 CANopen protocol slaves; each slave occupies 100 of special D register and is numbered in 1~8. There are in total of 8 stations.

Slave No.	Slave No. 1	Slave No. 2	Slave No. 3
	D2000	D2100	D2200
	D2001	D2101	D2201
	~	~	~
	D2099	D2199	D2299
	Station number	Station number	Station number
	Factory code(L)	Factory code(L)	Factory code(L)
	~	~	~
	Mapping address 4 (H)of receiving station	Mapping address 4(H) of receiving station	Mapping address 4(H) of receiving station
		4	

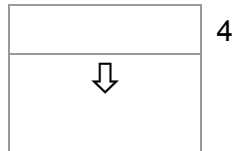

Slave No. 8	D2700	Station number
	D2701	Factory code(L)
	~	~
	D2799	Mapping address 4(H)of receiving station
		4

Slave No. 0~7

Special D	Function	PDO Map	Save	Pre-defined setting	R/W
D2000+100* n	Station number of slave No. n Setting range: 0~127 0: CANopen disable	NO		0	RW
D2001+100* n	The category of slave No. n 192H: AC motor drive/ AC servo motor and drive 191H: remote I/O module	NO		0	R
D2002+100* n	Factory code (L) of slave No. n	NO		0	R
D2003+100* n	Factory code (H) of slave No. n	NO		0	R
D2004+100* n	Factory product code (L) of slave No. n	NO		0	R
D2005+100* n	Factory product code (H) of slave No. n	NO		0	R

Basic definition

Slave No. 0~7

Special D	Function	PDO Map	Save	Pre-defined setting	CAN Index	PDO				R/W
						1	2	3	4	
D2006+100*n	Treatment for slave No. n communication disconnect	YES		0	6007H-001 0H	•		•	•	RW
D2007+100*n	Error code of slave No. n	YES		0	603FH-001 0H	•		•	•	R
D2008+100*n	Control word of slave No. n	YES		0	6040H-001 0H					RW
D2009+100*n	Status word of slave No. n	YES		0	6041H-001 0H					R
D2010+100*n	Control mode of slave No. n	YES		2	6060H-000 8H					RW
D2011+100*n	Actual mode of slave No. n	YES		2	6061H-000 8H					R

Speed Control

Slave No. 0~7

Special D	Function	PDO Map	Save	Pre-defined Setting	CAN Index	PDO				R/W
						1	2	3	4	
D2012+100*n	Target speed of slave No. n	YES		0	6042H-001 0H	•				RW
D2013+100*n	Actual speed of slave No. n	YES		0	6043H-001 0H	•				R
D2014+100*n	Speed deviation of slave No. n	YES		0	6044H-001 0H					R
D2015+100*n	Accel. Time of slave No. n	YES		1000	604FH-002 0H					R
D2016+100*n	Decel. Time of slave No. n	YES		1000	6050H-002 0H					RW

Torque control

Slave No. 0~7

Special D	Function	PDO Map	Save	Pre-defined Setting	CAN Index	PDO				R/W
						1	2	3	4	
D2017+100*n	Target torque of slave No. n	YES		0	6071H-001 0H				•	RW
D2018+100*n	Actual torque of slave No. n	YES		0	6077H-001 0H				•	R
D2019+100*n	Actual current of slave No. n	YES		0	6078H-001 0H					R

Position control

Slave No. 0~7

Special D	Function	PDO Map	Save	Pre-defined Setting	CAN Index	PDO				R/W
						1	2	3	4	
D2020+100*n	Target position(L) of slave No. n	YES		0	607AH-002					RW
D2021+100*n	Target position(H) of slave No. n	YES		0	0H			•		RW
D2022+100*n	Actual position(L) of slave No. n	YES		0	6064H-002					R
D2023+100*n	Actual position(H) of slave No. n	YES		0	0H			•		R
D2024+100*n	Speed diagram(L) of slave No. n	YES		10000	6081H-002					RW
D2025+100*n	Speed diagram (H) of slave No. n	YES		0	0H					RW

20XXH address corresponds to MI MO AI AO.

Slave No. n=0~7

Special D	Function	PDO Map	Save	Pre-defined Setting	CAN Index	PDO				R/W
						1	2	3	4	
D2026+100*n	MI status of slave No. n	YES		0	2026H-011 0H	•				RW
D2027+100*n	MO setting of slave No. n	YES		0	2026H-411 0H	•				RW
D2028+100*n	AI1 status of slave No. n	YES		0	2026H-611 0H	•				RW
D2029+100*n	AI2 status of slave No. n	YES		0	2026H-621 0H	•				RW
D2030+100*n	AI3 status of slave No. n	YES		0	2026H-631 0H	•				RW
D2031+100*n	AO1 status of slave No. n	YES		0	2026H-A11 0H	•				RW
D2032+100*n	AO2 status of slave No. n	YES		0	2026H-A2 10H	•				RW
D2033+100*n	AO3 status of slave No. n	YES		0	2026H-A3 10H	•				RW

Special D	Function	PDO Map	Save	Pre-defined Setting	R/W
D2034+100*n	Transmission setting of slave No. n	NO	YES	000AH	RW
D2035+100*n	The mapping address 1(L) for slave No. n transmitting station 1	NO	YES	0010H	RW
D2036+100*n	The mapping address 1(H) for slave No.n transmitting station 1	NO	YES	6040H	RW
D2037+100*n	The mapping address 2(L) for slave No. n transmitting station 1	NO	YES	0010H	RW
D2038+100*n	The mapping address 2(H) for slave No.n transmitting station 1	NO	YES	6042H	RW
D2039+100*n	The mapping address 3(L) for slave No. n transmitting station 1	NO	YES	0	RW
D2040+100*n	The mapping address 3(H) for slave No.n transmitting station 1	NO	YES	0	RW
D2041+100*n	The mapping address 4(L) for slave No. n transmitting station 1	NO	YES	0	RW
D2042+100*n	The mapping address 4(H) for slave No.n transmitting station 1	NO	YES	0	RW
D2043+100*n	The mapping address 1(L) for slave No. n transmitting station 2	NO	YES	0110H	RW
D2044+100*n	The mapping address 1(H) for slave No.n transmitting station 2	NO	YES	2026H	RW
D2045+100*n	The mapping address 2(L) for slave No. n transmitting station 2	NO	YES	6110H	RW

Special D	Function	PDO Map	Save	Pre-defined Setting	R/W
D2046+100*n	The mapping address 2(H) for slave No.n transmitting station 2	NO	YES	2026H	RW
D2047+100*n	The mapping address 3(L) for slave No. n transmitting station 2	NO	YES	6210H	RW
D2048+100*n	The mapping address 3(H) for slave No.n transmitting station 2	NO	YES	2026H	RW
D2049+100*n	The mapping address 4(L) for slave No. n transmitting station 2	NO	YES	6310H	RW
D2050+100*n	The mapping address 4(H) for slave No.n transmitting station 2	NO	YES	2026H	RW
D2051+100*n	The mapping address 1(L) for slave No. n transmitting station 3	NO	YES	0010H	RW
D2052+100*n	The mapping address 1(H) for slave No.n transmitting station 3	NO	YES	6040H	RW
D2053+100*n	The mapping address 2(L) for slave No. n transmitting station 3	NO	YES	0020H	RW
D2054+100*n	The mapping address 2(H) for slave No.n transmitting station 3	NO	YES	607AH	RW
D2055+100*n	The mapping address 3(L) for slave No. n transmitting station 3	NO	YES	0	RW
D2056+100*n	The mapping address 3(H) for slave No.n transmitting station 3	NO	YES	0	RW
D2057+100*n	The mapping address 4(L) for slave No. n transmitting station 3	NO	YES	0	RW
D2058+100*n	The mapping address 4(H) for slave No.n transmitting station 3	NO	YES	0	RW
D2059+100*n	The mapping address 1(L) for slave No. n transmitting station 4	NO	YES	0010H	RW
D2060+100*n	The mapping address 1(H) for slave No.n transmitting station 4	NO	YES	6040H	RW
D2061+100*n	The mapping address 2(L) for slave No. n transmitting station 4	NO	YES	0010H	RW
D2062+100*n	The mapping address 2(H) for slave No.n transmitting station 4	NO	YES	6071H	RW
D2063+100*n	The mapping address 3(L) for slave No. n transmitting station 4	NO	YES	0	RW
D2064+100*n	The mapping address 3(H) for slave No.n transmitting station 4	NO	YES	0	RW
D2065+100*n	The mapping address 4(L) for slave No. n transmitting station 4	NO	YES	0	RW
D2066+100*n	The mapping address 4(H) for slave No.n transmitting station 4	NO	YES	0	RW
D2067+100*n	Receiving setting of slave No. n	NO	YES	0000H	RW
D2068+100*n	The mapping address 1(L) for slave No. n receiving station 1	NO	YES	0010H	RW
D2069+100*n	The mapping address 1(H) for slave No.n receiving station 1	NO	YES	6041H	RW
D2070+100*n	The mapping address 2(L) for slave No. n receiving station 1	NO	YES	0010H	RW

Special D	Function	PDO Map	Save	Pre-defined Setting	R/W
D2071+100*n	The mapping address 2(H) for slave No.n receiving station 1	NO	YES	6043H	RW
D2072+100*n	The mapping address 3(L) for slave No. n receiving station 1	NO	YES	0	RW
D2073+100*n	The mapping address 3(H) for slave No.n receiving station 1	NO	YES	0	RW
D2074+100*n	The mapping address 4(L) for slave No. n receiving station 1	NO	YES	0	RW
D2075+100*n	The mapping address 4(H) for slave No.n receiving station 1	NO	YES	0	RW
D2076+100*n	The mapping address 1(L) for slave No. n receiving station 2	NO	YES	4110H	RW
D2077+100*n	The mapping address 1(H) for slave No.n receiving station 2	NO	YES	2026H	RW
D2078+100*n	The mapping address 2(L) for slave No. n receiving station 2	NO	YES	A110H	RW
D2079+100*n	The mapping address 2(H) for slave No.n receiving station 2	NO	YES	2026H	RW
D2080+100*n	The mapping address 3(L) for slave No. n receiving station 2	NO	YES	A210H	RW
D2081+100*n	The mapping address 3(H) for slave No.n receiving station 2	NO	YES	2026H	RW
D2082+100*n	The mapping address 4(L) for slave No. n receiving station 2	NO	YES	A310H	RW
D2083+100*n	The mapping address 4(H) for slave No.n receiving station 2	NO	YES	2026H	RW
D2084+100*n	The mapping address 1(L) for slave No. n receiving station 3	NO	YES	0010H	RW
D2085+100*n	The mapping address 1(H) for slave No.n receiving station 3	NO	YES	6041H	RW
D2086+100*n	The mapping address 2(L) for slave No. n receiving station 3	NO	YES	0020H	RW
D2087+100*n	The mapping address 2(H) for slave No.n receiving station 3	NO	YES	6064H	RW
D2088+100*n	The mapping address 3(L) for slave No. n receiving station 3	NO	YES	0	RW
D2089+100*n	The mapping address 3(H) for slave No.n receiving station 3	NO	YES	0	RW
D2090+100*n	The mapping address 4(L) for slave No. n receiving station 3	NO	YES	0	RW
D2091+100*n	The mapping address 4(H) for slave No.n receiving station 3	NO	YES	0	RW
D2092+100*n	The mapping address 1(L) for slave No. n receiving station 4	NO	YES	0010H	RW
D2093+100*n	The mapping address 1(H) for slave No.n receiving station 4	NO	YES	6041H	RW
D2094+100*n	The mapping address 2(L) for slave No. n receiving station 4	NO	YES	0010H	RW
D2095+100*n	The mapping address 2(H) for slave No.n receiving station 4	NO	YES	6077H	RW

Special D	Function	PDO Map	Save	Pre-defined Setting	R/W
D2096+100*n	The mapping address 3(L) for slave No. n receiving station 4	NO	YES	0	RW
D2097+100*n	The mapping address 3(H) for slave No.n receiving station 4	NO	YES	0	RW
D2098+100*n	The mapping address 4(L) for slave No. n receiving station 4	NO	YES	0	RW
D2099+100*n	The mapping address 4(H) for slave No.n receiving station 4	NO	YES	0	RW

16.4.4 Communication Address for PLC Devices

Device	Range	Type	Address (Hex)
X	00~17 (Octal)	bit	0400~040F
Y	00~17 (Octal)	bit	0500~050F
T	00~159	bit/word	0600~069F
M	000~799	bit	0800~0B1F
M	1000~1079	bit	0BE8~0C37
C	0~79	bit/word	0E00~0E47
D	00~399	word	1000~118F
D	1000~1099	word	13E8~144B
D	2000~2799	word	17D0~1AEF

Function Code

Function Code	Description	Supported Devices
01	Read coil status	Y, M, T, C
02	Read input status	X,Y,M,T,C
03	Read one data	T,C,D
05	Force changing one coil status	Y,M,T,C
06	Write in one data	T,C,D
0F	Force changing multiple coil status	Y,M,T,C
10	Write in multiple data	T,C,D

Only when PLC is at Stop status, PLC data can be read/write via communication device. When PLC is at Run status, the communication address should be the mapping address, e.g. for Pr.04-00 it maps to 0400H.

NOTE

When PLC function is activated, C2000 can Read/Write the PLC and drive's parameter by different addresses (pre-defined station number for the AC motor drive is 1, for PLC station number is 2)

16.5 Commands

16.5.1 Basic Commands

Commands

Commands	Function	Operands
LD	Load contact A	X, Y, M, T, C
LDI	Load contact B	X, Y, M, T, C
AND	Series connection with A contact	X, Y, M, T, C
ANI	Series connection with B contact	X, Y, M, T, C
OR	Parallel connection with A contact	X, Y, M, T, C
ORI	Parallel connection with B contact	X, Y, M, T, C
ANB	Series connects the circuit block	--
ORB	Parallel connects the circuit block	--
MPS	Save the operation result	--
MRD	Read the operation result (the pointer is not moving)	--
MPP	Read the result	--

Output Command

Commands	Function	Operands
OUT	Drive coil	Y, M
SET	Action latched (ON)	Y, M
RST	Clear the contacts or the registers	Y, M, T, C, D

Timer and Counter

Commands	Function	Operands
TMR	16-bit timer	T-K or T-D
CNT	16-bit counter	C-K or C-D (16 bit)

Main Control Command

Commands	Function	Operands
MC	Connect the common series connection contacts	N0~N7
MCR	Disconnect the common series connection contacts	N0~N7

Rising-edge/falling-edge Detection Commands of Contact

Commands	Function	Operands
LDP	Rising-edge detection operation starts	X, Y, M, T, C
LDF	Falling-edge detection operation starts	X, Y, M, T, C
ANDP	Rising-edge detection series connection	X, Y, M, T, C
ANDF	Falling-edge detection series connection	X, Y, M, T, C
ORP	Rising-edge detection parallel connection	X, Y, M, T, C
ORF	Falling-edge detection parallel connection	X, Y, M, T, C

Rising-edge/falling-edge Output Commands

Commands	Function	Operands
PLS	Rising-edge output	Y, M
PLF	Falling-edge output	Y, M

End Command

Commands	Function	Operands
END	Program end	--

Other Command

Commands	Function	Operands
NOP	No function	--
INV	Inverse operation result	--
P	Indicator	P

16.5.2 Explanation for the Command

Mnemonic	Function					
LD	Load A contact					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—

L The LD command is used on the A contact that has its start from the left BUS or the A contact that is the start of a contact circuit. Function of the command is to save present contents, and at the same time, save the acquired contact status into the accumulative register.

Explanation

Example

Ladder diagram



Command code Operation

LD	X0	Load contact A of X0
AND	X1	Connect to contact A of X1 in series
OUT	Y1	Drive Y1 coil

Mnemonic	Function					
LDI	Load B contact					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—

The LDI command is used on the B contact that has its start from the left BUS or the B contact that is the start of a contact circuit. Function of the command is to save present contents, and at the same time, save the acquired contact status into the accumulative register.

Explanation

Example

Ladder diagram:



Command code: Operation:


LDI	X0	Load contact B of X0
AND	X1	Connect to contact A of X1 in series
OUT	Y1	Drive Y1 coil

Mnemonic	Function					
AND	Series connection- A contact					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—

The AND command is used in the series connection of A contact. The function of the command is to readout the status of present specific series connection contacts first, and then to perform the “AND” calculation with the logic calculation result before the contacts, thereafter, saving the result into the accumulative register.

Explanation**Example**

 Ladder diagram:

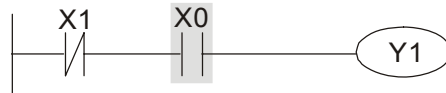

Command code: Operation:

LDI X1 Load contact B of X1

AND X0 Connect to contact A of X0 in series

OUT Y1 Drive Y1 coil

Mnemonic	Function					
ANI	Series connection- B contact					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—

The ANI command is used in the series connection of B contact. The function of the command is to readout the status of present specific series connection contacts first, and then to perform the “AND” calculation with the logic calculation result before the contacts, thereafter, saving the result into the accumulative register.

Explanation**Example**

Ladder diagram:



Command code: Operation:

LD X1 Load contact A of X1

ANI X0 Connect to contact B of X0 in series


OUT Y1 Drive Y1 coil

Mnemonic	Function					
OR	Parallel connection- A contact					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—

The OR command is used in the parallel connection of A contact. The function of the command is to readout the status of present specific series connection contacts, and then to perform the “OR” calculations with the logic calculation result before the contacts, thereafter, saving the result into the accumulative register.

Explanation

Ladder diagram:

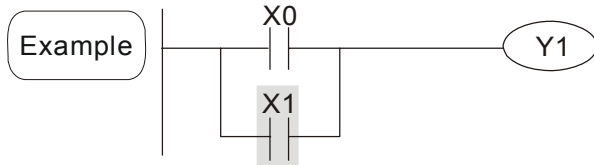

Command code: Operation:

LD	X0	Load contact A of X0
OR	X1	Connect to contact A of X1 in parallel
OUT	Y1	Drive Y1 coil


Mnemonic	Function					
ORI	Parallel connection- B contact					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—

Explanation

The ORI command is used in the parallel connection of B contact. The function of the command is to readout the status of present specific series connection contacts, and then to perform the “OR” calculations with the logic calculation result before the contacts, thereafter, saving the result into the accumulative register.

Example

Ladder diagram:

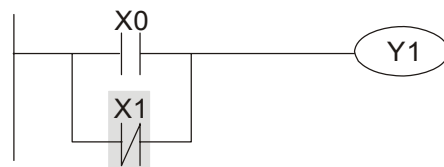

Command code: Operation:

LD	X0	Load contact A of X0
ORI	X1	Connect to contact B of X1 in parallel
OUT	Y1	Drive Y1 coil


Mnemonic	Function
ANB	Series connection (Multiple Circuits)
Operand	None

Explanation

To perform the “ANB” calculation between the previous reserved logic results and contents of the accumulative register.

Example

Ladder diagram:

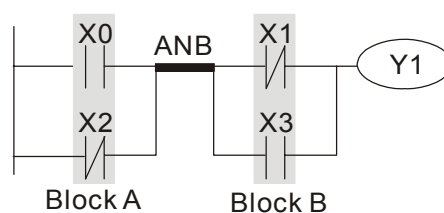

Command code: Operation:

LD	X0	Load contact A of X0
ORI	X2	Connect to contact B of X2 in parallel
LDI	X1	Load contact B of X1
OR	X3	Connect to contact A of X3 in parallel
ANB		Connect circuit block in series
OUT	Y1	Drive Y1 coil


Mnemonic	Function
ORB	Parallel connection (Multiple circuits)
Operand	None

Explanation

ORB is to perform the “OR” calculation between the previous reserved logic results and contents of the accumulative register.

Example

Ladder diagram:

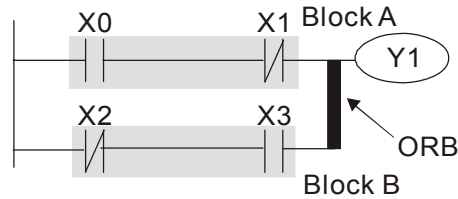

Command code: Operation:

LD	X0	Load contact A of X0
ANI	X1	Connect to contact B of X1 in series
LDI	X2	Load contact B of X2
AND	X3	Connect to contact A of X3 in series
ORB		Connect circuit block in parallel
OUT	Y1	Drive Y1 coil

Mnemonic	Function
MPS	Store the current result of the internal PLC operations
Operand	None

Explanation

To save contents of the accumulative register into the operation result. (the result operation pointer plus 1)

Mnemonic	Function
MRD	Reads the current result of the internal PLC operations
Operand	None

Explanation

Reading content of the operation result to the accumulative register. (the pointer of operation result doesn't move)


Mnemonic	Function
MPP	Reads the current result of the internal PLC operations
Operand	None

Explanation

Reading content of the operation result to the accumulative register. (the stack pointer will decrease 1)

Example

Ladder diagram:

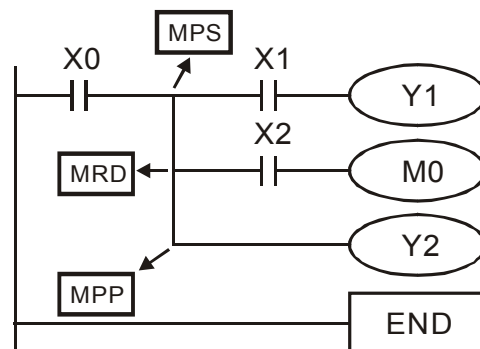

Command code: Operation:

LD	X0	Load contact A of X0
MPS		Save in stack
AND	X1	Connect to contact A of X1 in series
OUT	Y1	Drive Y1 coil
MRD		Read from the stack (without moving pointer)
AND	X2	Connect to contact A of X2 in series
OUT	M0	Drive M0 coil
MPP		Read from the stack
OUT	Y2	Drive Y2 coil
END		End program

Mnemonic	Function					
OUT	Output coil					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	—	✓	✓	—	—	—

Explanation

Output the logic calculation result before the OUT command to specific device.
Motion of coil contact:

Operation result	OUT command		
	Coil	Contact	
		A contact (normally open)	B contact (normally closed)
FALSE	Off	Non-continuity	Continuity
TRUE	On	Continuity	Non-continuity

Example

Ladder diagram:



Command code: Operation:

```
LD    X0    Load contact B of X0
AND   X1    Connect to contact A of X1 in series
OUT  Y1    Drive Y1 coil
```


Mnemonic	Function					
SET	Latch (ON)					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	—	✓	✓	—	—	—

Explanation

When the SET command is driven, its specific device is set to be “ON,” which will keep “ON” whether the SET command is still driven. You can use the RST command to set the device to “OFF”.

Example

 Ladder diagram:

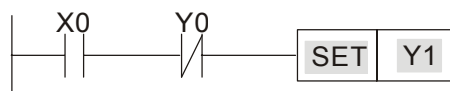

Command code: Operation:

```
LD    X0    Load contact A of X0
AN   Y0    Connect to contact B of Y0 in series
SET  Y1    Y1 latch (ON)
```

Mnemonic	Function					
RST	Clear the contacts or the registers					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	—	✓	✓	✓	✓	✓

Explanation

When the RST command is driven, motion of its specific device is as follows:

Device	Status
Y, M	Coil and contact will be set to “OFF”.
T, C	Present values of the timer or counter will be set to 0, and the coil and contact will be set to “OFF.”
D	The content value will be set to 0.

When the RST command is not driven, motion of its specific device is unchanged.

Example

Ladder diagram



Command code: Operation:

LD	X0	Load contact A of X0
RST	Y5	Clear contact Y5

Mnemonic	Function	
TMR	16-bit timer	
Operand	T-K	T0~T159, K0~K32,767
	T-D	T0~T159, D0~D399

Explanation


When TMR command is executed, the specific coil of timer is ON and timer will start to count. When the setting value of timer is attained (counting value >= setting value), the contact will be as following

NO(Normally Open) contact	Open collector
NC(Normally Closed) contact	Close collector

When the RST command is not driven, motion of its specific device remains unchanged.

Example

 Ladder Diagram:

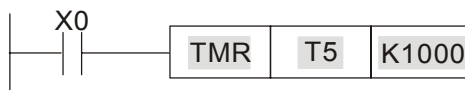

Command code: Operation:

LD	X0	Load contact A of X0
TMR	T5 K1000	Setting of T5 counter is K1000.

Mnemonic	Function	
CNT	Clear contact or register	
Operand	C-K	C0~C79, K0~K32,767
	C-D	C0~C79, D0~D399

Explanation


When the CNT command is executed from OFF→ON, which means that the counter coil is driven, and 1 should thus be added to the counter's value; when the counter achieved specific set value (value of counter = the setting value), motion of the contact is as follows:

NO(Normally Open) contact	Open collector
NC(Normally Close) contact	Close collector

If there is counting pulse input after counting is attained, the contacts and the counting values will be unchanged. To re-count or to conduct the CLEAR motion, please use the RST command.

Example

 Ladder diagram:

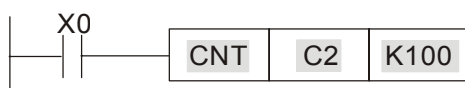

Command code: Operation

LD	X0	Load contact A of
CNT	C2 K100	Setting of C2 counter is K100.

Mnemonic	Function
MC/MCR	Master control Start/Reset
Operand	N0~N7

Explanation

1. MC is the main-control start command. When the MC command is executed, the execution of commands between MC and MCR will not be interrupted. When MC command is OFF, the motion of the commands that between MC and MCR is described as follows:


Command	Description
Timer	The counting value is set back to zero, the coil and the contact are both turned OFF
Accumulative timer	The coil is OFF, and the timer value and the contact stay at their present condition
Subroutine timer	The counting value is back to zero. Both coil and contact are turned OFF.
Counter	The coil is OFF, and the counting value and the contact stay at their present condition
Coils driven up by the OUT command	All turned OFF
Devices driven up by the SET and RST commands	Stay at present condition
Application commands	All of them are not acted , but the nest loop FOR-NEXT command will still be executed for times defined by users even though the MC-MCR commands is OFF.

2. MCR is the main-control ending command that is placed at the end of the main-control program and there should not be any contact commands prior to the MCR command.

3. Commands of the MC-MCR main-control program support the nest program structure, with 8 layers as its greatest. Please use the commands in order from N0~N7, and refer to the following:

Example

Ladder Diagram:

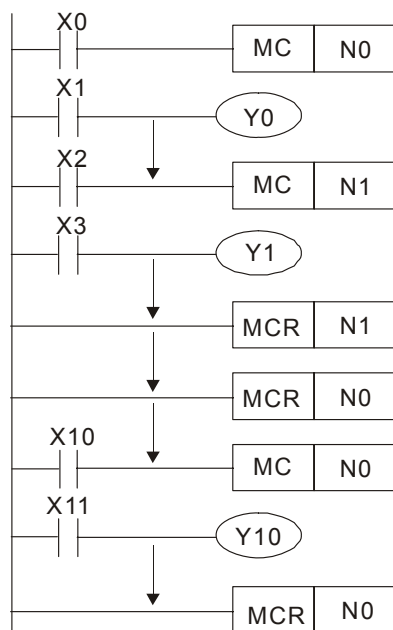

Command code:	Operation:
LD X0	Load A contact of X0
MC N0	Enable N0 common series connection contact
LD X1	Load A contact of X1
OUT Y0	Drive Y0 coil
:	
LD X2	Load A contact of X2
MC N1	Enable N1 common series connection contact
LD X3	Load A contact of X3
OUT Y1	Drive Y1 coil
:	
MCR N1	Disable N1 common series connection contact

:		
MCR	NO	Disable NO common series connection contact
:		
LD	X10	Load A contact of X10
MC	NO	Enable NO common series connection contact
LD	X11	Load A contact of X0
OUT	Y10	Enable NO common series connection contact
:		
MCR	NO	Drive Y0 coil


Mnemonic	Function					
LDP	Rising-edge detection operation					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—

Explanation

Usage of the LDP command is the same as the LD command, but the motion is different. It is used to reserve present contents and at the same time, saving the detection status of the acquired contact rising-edge into the accumulative register.

Example

 Ladder diagram:

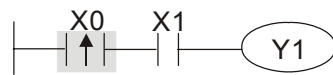

Command code: Operation:

LDP	X0	Start X0 rising-edge detection
AND	X1	Series connection A contact of X1
OUT	Y1	Drive Y1 coil

Remarks


Please refer to the specification of each model series for the applicable range of operands.

If rising-edge status is ON when PLC power is off, then the rising-edge status will be TRUE when PLC power is on.

Mnemonic	Function					
LDF	Falling-edge detection operation					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—

Explanation


Usage of the LDF command is the same as the LD command, but the motion is different. It is used to reserve present contents and at the same time, saving the detection status of the acquired contact falling-edge into the accumulative register.

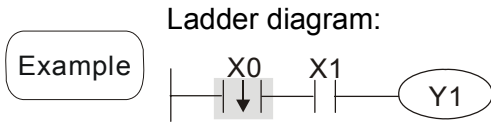

Command code:	Operation:
LDF X0	Start X0 falling-edge detection
AND X1	Series connection A contact of X1
OUT Y1	Drive Y1 coil

Mnemonic	Function					
ANDP	Rising-edge series connection					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—


Explanation ANDP command is used in the series connection of the contacts' rising-edge detection.

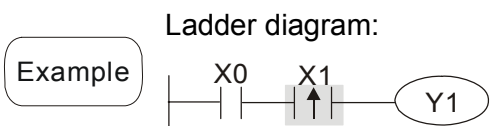

Command code:	Operation:
LD X0	Load A contact of X0
ANDP X1	X1 rising-edge detection in series connection
OUT Y1	Drive Y1 coil

Mnemonic	Function					
ANDF	Falling-edge series connection					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—


Explanation ANDF command is used in the series connection of the contacts' falling-edge detection.

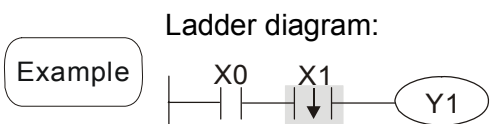

Command code:	Operation:
LD X0	Load A contact of X0
ANDF X1	X1 falling-edge detection in series connection
OUT Y1	Drive Y1 coil

Mnemonic	Function					
ORP	Rising-edge parallel connection					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—


Explanation The ORP commands are used in the parallel connection of the contact's rising-edge detection.

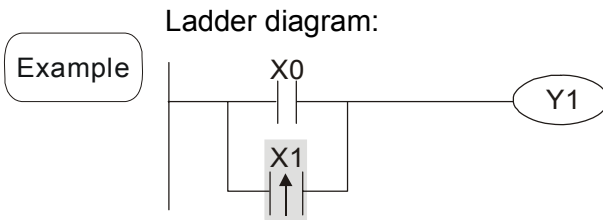

Command code:		Operation:
LD	X0	Load A contact of X0
ORP	X1	X1 rising-edge detection in parallel connection
OUT	Y1	Drive Y1 coil

Mnemonic	Function					
ORP	Falling-edge parallel connection					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	✓	✓	✓	✓	✓	—


Explanation The ORP commands are used in the parallel connection of the contact's falling-edge detection.

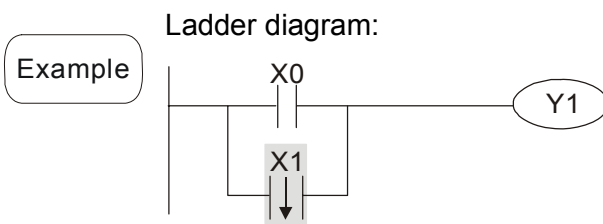


Command code:		Operation:
LD	X0	Load A contact of X0
ORF	X1	X1 falling-edge detection in parallel connection
OUT	Y1	Drive Y1 coil

Mnemonic	Function					
PLS	Rising-edge output					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	—	✓	✓	—	—	—

Explanation When X0=OFF→ON (rising-edge trigger), PLS command will be executed and M0 will send the pulse of one time which the length is the time needed for one scan cycle.

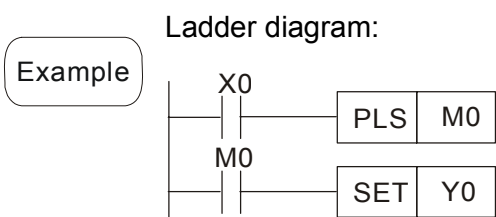


Command code:		Operation:
LD	X0	Load A contact of X0
PLS	M0	M0 rising-edge output
LD	M0	Load the contact A of M0
SET	Y0	Y0 latched (ON)

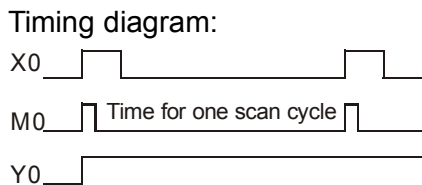


Mnemonic	Function					
PLF	Falling-edge output					
Operand	X0~X17	Y0~Y17	M0~M799	T0~159	C0~C79	D0~D399
	—	✓	✓	—	—	—

Explanation When X0= ON→OFF (falling-edge trigger), PLF command will be executed and M0 will send the pulse of one time which the length is the time for scan one time.

Example

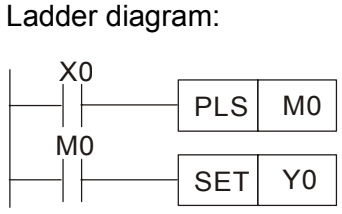

Command code:	Operation:
LD X0	Load contact A of X0
PLF M0	M0 falling-edge output
LD M0	Load contact A of M0
SET Y0	Y0 latched (ON)

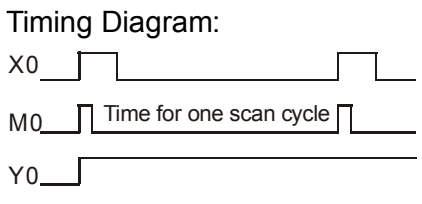

Mnemonic	Function
END	Program End
Operand	None

Explanation


It needs to add the END command at the end of ladder diagram program or command program. PLC will scan from address 0 to END command, after the execution it will return to address 0 and scan again.

Mnemonic	Function
NOP	No action
Operand	None

Explanation

NOP command does no operation in the program; the result of executing this command will remain the logic operation. Use NOP command if user wants to delete certain command without changing the length of the program.

Example

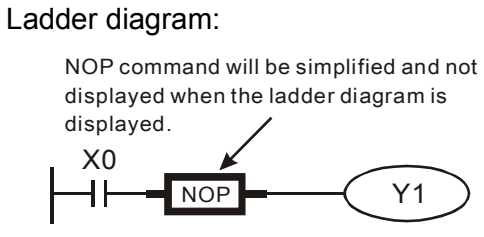


Command code:	Operation:
LD X0	Load contact B of X0
NOP	No function
OUT Y1	Drive Y1 coil

Mnemonic	Function
INV	Inverse operation result
Operand	None

Explanation

The operation result (before executing INV command) will be saved inversely into cumulative register.

Example

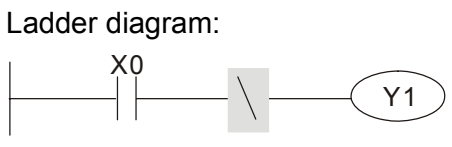

Command code:	Operation:
LD X0	Load contact A of X0
INV	Operation result inverted
OUT Y1	Drive Y1 coil

Mnemonic	Function
P	Indicator
Operand	P0~P255


Indicator P allows API 00 CJ command and API 01 CALL command to skip from 0.

Explanation

Though it is not necessary to start from number 0, same number can not be used twice or serious error would occur.

Example

Ladder diagram:

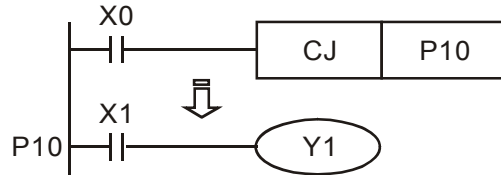

Command code: Operation:

LD X0 Load contact A of X0
CJ P10 Skip command CJ to P10

:

P10 Indicator P10

LD X1 Load contact A of X1

OUT Y1 Drive Y1 coil

16.5.3 Description of the Application Commands

	API	Mnemonic Codes		P Command	Function	STEPS	
		16-bit	32-bit			16bit	32bit
Loop control	01	CALL	-	✓	CALL subroutine	3	-
	06	FEND	-	-	The end of main program	1	-
Transmission Comparison	10	CMP	-	✓	Compare	7	13
	11	ZCP	-	✓	Zone compare	9	17
	12	MOV	-	✓	Data Move	5	9
	15	BMOV	-	✓	Block move	7	-
Four Fundamental Operations of Arithmetic	20	ADD	-	✓	Perform the addition of BIN data	7	13
	21	SUB	-	✓	Perform the subtraction of BIN data	7	13
	22	MUL	-	✓	Perform the multiplication of BIN data	7	13
	23	DIV	-	✓	Perform the division of BIN data	7	13
	24	INC	-	✓	Perform the addition of 1	3	5
	25	DEC	-	✓	Perform the subtraction of 1	3	5
Rotation and Displacement	30	ROR	-	✓	Rotate to the right	5	-
	31	ROL	-	✓	Rotate to the left	5	-
Data Processing	40	ZRST	-	✓	Zero Reset	5	-
Contact type logic operation	215	LD&	DLD&	-	Contact Logical Operation LD#	5	9
	216	LD	DLD	-	Contact type logic operation LD #	5	9
	217	LD^	DLD^	-	Contact Logical Operation LD#	5	9
	218	AND&	DAND&	-	Contact Logical Operation AND#	5	9


	API	Mnemonic Codes		P Command	Function	STEPS	
		16-bit	32-bit			16bit	32bit
	219	ANDI	DANDI	-	Contact Logical Operation AND#	5	9
	220	AND^	DAND^	-	Contact Logical Operation AND#	5	9
	221	OR&	DOR&	-	Contact Logical Operation OR#	5	9
	222	OR	DOR	-	Contact Logical Operation OR#	5	9
	223	OR^	DOR^	-	Contact Logical Operation OR#	5	9
Contact Type Comparison	224	LD=	DLD=	-	Load Compare LD※	5	9
	225	LD>	DLD>	-	Load Compare LD※	5	9
	226	LD<	DLD<	-	Load Compare LD※	5	9
	228	LD<>	DLD<>	-	Load Compare LD※	5	9
	229	LD<=	DLD<=	-	Load Compare LD※	5	9
	230	LD>=	DLD>=	-	Load Compare LD※	5	9
	232	AND=	DAND=	-	AND Compare※	5	9
	233	AND>	DAND>	-	AND Compare※	5	9
	234	AND<	DAND<	-	AND Compare※	5	9
	236	AND<>	DAND< >	-	AND Compare※	5	9
	237	AND<=	DAND< =	-	AND Compare※	5	9
	238	AND>=	DAND> =	-	AND Compare※	5	9
	240	OR=	DOR=	-	OR compare ※	5	9
	241	OR>	DOR>	-	OR compare ※	5	9
	242	OR<	DOR<	-	OR compare ※	5	9
244	OR<>	DOR<>	-	OR compare ※	5	9	
245	OR<=	DOR<=	-	OR compare ※	5	9	
246	OR>=	DOR>=	-	OR compare ※	5	9	
Special command for AC motor drive	139	RPR	-	✓	Read the parameters	5	-
	140	WPR	-	✓	Write the parameters	5	-
	141	FPID	-	✓	Drive PID control	9	-
	142	FREQ	-	✓	Control the drive frequency	7	-
	261	CANRX	-	✓	Read CANopen Slave data	9	-
	263	TORQ	-	✓	Set target torque	5	-
	264	CANTX	-	✓	Write CANopen Slave data	9	-
	265	CANFLS	-	✓	Update the mapping special D of CANopen	3	-

API	BMOV	P	<div style="display: flex; gap: 10px;"> S D n </div>	Block Move
15				


	Bit Devices			Word Devices								16-bit command (7 STEPS) BMOV BMOV P	
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D		
S						*	*	*	*	*	*		
D							*	*	*	*	*		
n				*	*								
Operand: Range of n = 1~512												32-bit command — — — —	
												Flag signal: None	

- Explanation**
- S: Start of source devices D: Start of destination devices n: Number of data to be moved
 - The contents in n registers starting from the device designated by S will be moved to n registers starting from the device designated by D. If n exceeds the actual number of available source devices, only the devices that fall within the valid range will be used.

Example 1 When X10 = On, the contents in registers D0 ~ D3 will be moved to the 4 registers D20 ~ D23.

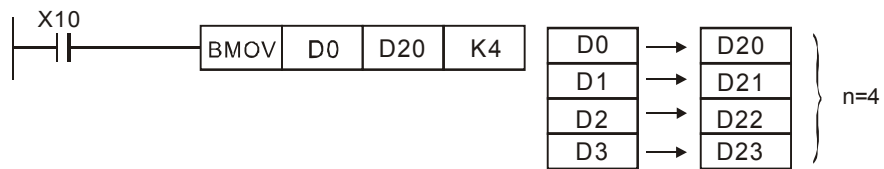

Example 2 Assume the bit devices KnX, KnY, KnM and KnS are designated for moving, the number of digits of S and D has to be the same, i.e. their n has to be the same.

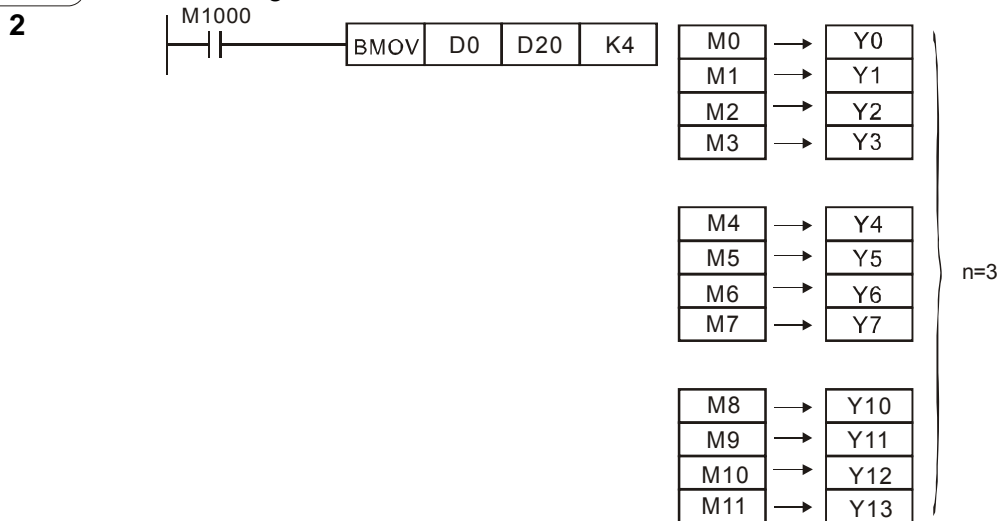


Example


3

To avoid coincidence of the device numbers to be moved designated by the two operands and cause confusion, please be aware of the arrangement on the designated device numbers.

When $S > D$, the BMOV command is processed in the order as ①→②→③

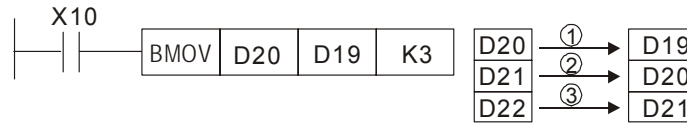

 When $S < D$, the BMOV command is processed in the order as ③→②→①

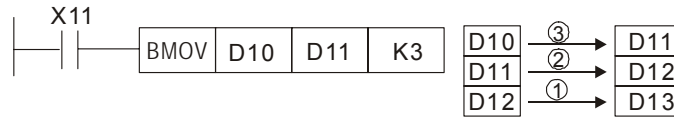

API												
20	D	ADD	P	(S1)	(S2)	(D)	BIN Addition					

	Bit Devices			Word Devices								16-bit command (7 STEPS)	
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D	ADD	ADDP
S ₁				*	*	*	*	*	*	*	*		
S ₂				*	*	*	*	*	*	*	*		
D							*	*	*	*	*		
Operands: None												Flag signal: M1020 Zero flag M1021 Borrow flag M1022 Carry flag	

Explanation

1. S₁: Summand S₂: Addend D: Sum
2. This instruction adds S₁ and S₂ in BIN format and store the result in D.
3. The highest bit is symbolic bit 0 (+) and 1 (-), which is suitable for algebraic addition, e.g. 3 + (-9) = -6.
4. Flag changes in binary addition
 - 16-bit command:
 - A. If the operation result = 0, zero flag M1020 = On.
 - B. If the operation result < -32,768, borrow flag M1021 = On.
 - C. If the operation result > 32,767, carry flag M1022 = On.

Example

16-bit command:

When X0 = On, the content in D0 will plus the content in D10 and the sum will be stored in D20.



API											
215~ 217	D	LD#		(S1)	(S2)						Contact Logical Operation LD#

	Bit Devices			Word Devices								:16-bit command (5 STEPS)	
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D	LD#	ZRSTP
S₁				*	*	*	*	*	*	*	*		
S₂				*	*	*	*	*	*	*	*		
Operands: #: &, , ^												:32-bit command (9 STEPS)	
Please refer to the specifications of each model for the range of operands.												DLD# - - -	
												Flag signal: none	

Explanation


- S₁**: Data source device 1 **S₂**: Data source device 2
- This instruction compares the content in **S₁** and **S₂**. If the result is not "0", the continuity of the instruction is enabled. If the result is "0", the continuity of the instruction is disabled.
- LD#** (**#**: &, |, ^) instruction is used for direct connection with BUS.

API No.	16-bit instruction	32-bit instruction	Continuity condition	No-continuity condition
215	LD&	DLD&	S₁ & S₂ ≠ 0	S₁ & S₂ = 0
216	LD	DLD	S₁ S₂ ≠ 0	S₁ S₂ = 0
217	LD^	DLD^	S₁ ^ S₂ ≠ 0	S₁ ^ S₂ = 0

- &**: Logical "AND" operation
- |**: Logical "OR" operation
- ^**: Logical "XOR" operation

Example

- When the result of logical AND operation of C0 and C10 ≠ 0, Y10 = On.
- When the result of logical OR operation of D200 and D300 ≠ 0 and X1 = On, Y11 = On will be retained.

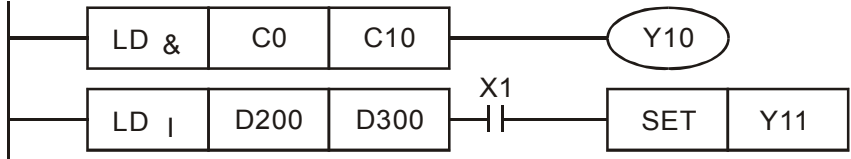

API												
218~ 220	D	AND#		(S1)	(S2)							Contact Logical Operation AND#

Bit Devices			Word Devices									16-bit command (5 STEPS)	
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D	AND#	ZRSTP
S ₁				*	*	*	*	*	*	*	*		
S ₂				*	*	*	*	*	*	*	*		
Operands: #: &, , ^												32-bit command (9 STEPS)	
Please refer to the specifications of each model for the range of operands.												DAND# - - -	
												Flag signal: none	

Explanation


1. S₁: Data source device 1 S₂: Data source device 2
2. This instruction compares the content in S₁ and S₂. If the result is not "0", the continuity of the instruction is enabled. If the result is "0", the continuity of the instruction is disabled.
3. AND# (#: &, |, ^) is an operation instruction used on series contacts.

API No.	16-bit instruction	32-bit instruction	Continuity condition	No-continuity condition
218	AND&	DAND&	S ₁ & S ₂ ≠ 0	S ₁ & S ₂ = 0
219	AND	DAND	S ₁ S ₂ ≠ 0	S ₁ S ₂ = 0
220	AND^	DAND^	S ₁ ^ S ₂ ≠ 0	S ₁ ^ S ₂ = 0

4. &: Logical "AND" operation
5. |: Logical "OR" operation
6. ^: Logical "XOR" operation

Example

1. When X0 = On and the result of logical AND operation of C0 and C10 ≠ 0, Y10 = On.
2. When X1 = Off and the result of logical OR operation of D10 and D0 ≠ 0 and X1 = On, Y11 = On will be retained.
3. When X2 = On and the result of logical XOR operation of 32-bit register D200 (D201) and 32-bit register D100 (D101) ≠ 0 or M3 = On, M50 = On.

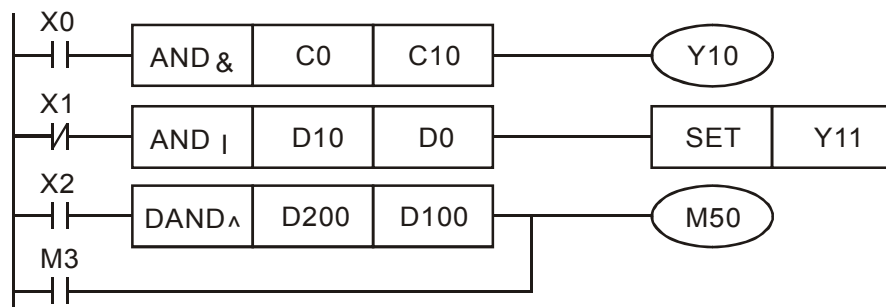

API											
221~223	D	OR#		(S1)	(S2)						Contact Logical operation OR#

	Bit Devices			Word Devices								16-bit command (5 STEPS)	
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D	OR#	ZRSTP
S ₁				*	*	*	*	*	*	*	*		
S ₂				*	*	*	*	*	*	*	*		
Operand: #: &, , ^												32-bit command (9 STEPS)	
Please refer to the specifications of each model for the range of operands.												DOR# - - -	
												Flag signal: none	

Explanation

1. S₁: Data source device 1 S₂: Data source device 2
2. This instruction compares the content in S₁ and S₂. If the result is not "0", the continuity of the instruction is enabled. If the result is "0", the continuity of the instruction is disabled.
3. OR# (#: &, |, ^) is an operation instruction used on parallel contacts.


API No.	16-bit instruction	32-bit instruction	Continuity condition	No-continuity condition
221	OR&	DOR&	S ₁ & S ₂ ≠ 0	S ₁ & S ₂ = 0
222	OR	DOR	S ₁ S ₂ ≠ 0	S ₁ S ₂ = 0
223	OR^	DOR^	S ₁ ^ S ₂ ≠ 0	S ₁ ^ S ₂ = 0

4. &: Logical "AND" operation
5. |: Logical "OR" operation
6. ^: Logical "XOR" operation

Example

When X1 = On and the result of logical AND operation of C0 and C10 ≠ 0, Y10 = On.

1. M60 will be On, if X2 and M30 are On with one of the following two conditions: 1. The OR operation result of 32-bit register D10 (D11) and 32-bit register D20(D21) does not equal to 0. 2. The XOR operation result of 32-bit counter C235 and 32bits register D200 (D201) does not equal 0.

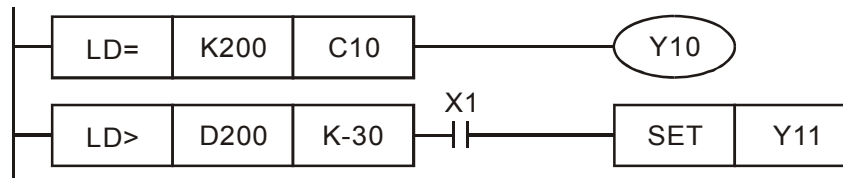

API											
224~230	D	LD※		(S1)	(S2)						Load Compare※

	Bit Devices			Word Devices								16-bit command (5 STEPS)	
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D	LD※	ZRSTP
S ₁				*	*	*	*	*	*	*	*		
S ₂				*	*	*	*	*	*	*	*		

Operands: ※: =, >, <, <>, ≤, ≥
Please refer to the specifications of each model for the range of operands.

32-bit command (9 STEPS)
DLD※ - - -

Flag signal: none


Explanation

1. S₁: Data source device 1 S₂: Data source device 2
2. This instruction compares the content in S₁ and S₂. Take API224 (LD=) for example, if the result is "=", the continuity of the instruction is enabled. If the result is "≠", the continuity of the instruction is disabled.
3. LD※ (※: =, >, <, <>, ≤, ≥) instruction is used for direct connection with BUS.

API No.	16-bit instruction	32-bit instruction	Continuity condition	No-continuity condition
224	LD=	DLD=	S ₁ = S ₂	S ₁ ≠ S ₂
225	LD>	DLD>	S ₁ > S ₂	S ₁ ≤ S ₂
226	LD<	DLD<	S ₁ < S ₂	S ₁ ≥ S ₂
228	LD<>	DLD<>	S ₁ ≠ S ₂	S ₁ = S ₂
229	LD≤	DLD≤	S ₁ ≤ S ₂	S ₁ > S ₂
230	LD≥	DLD≥	S ₁ ≥ S ₂	S ₁ < S ₂

Example

1. When the content in C10 = K200, Y10 = On.
2. When the content in D200 > K-30 and X1 = On, Y11= On will be retained.

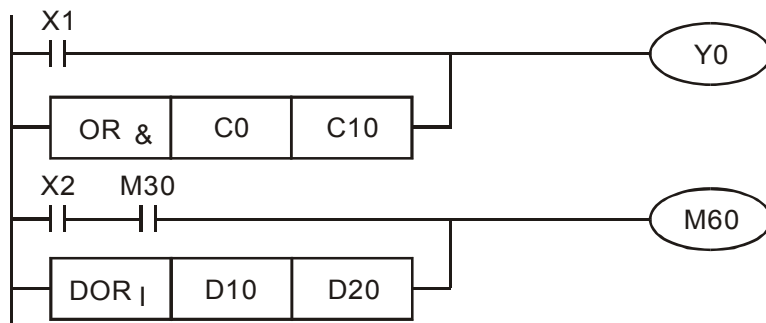

API												
232~238	D	AND※		(S1)	(S2)							AND Compare※

	Bit Devices			Word Devices								:16-bit command (5 STEPS)	
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D	AND※	ZRSTP
S ₁				*	*	*	*	*	*	*	*		
S ₂				*	*	*	*	*	*	*	*		

Operands: ※: =, >, <, <>, ≤, ≥
Please refer to the specifications of each model for the range of operands.

32-bit command (9 STEPS)
DAND※ — — —
Flag signal: none


Explanation

1. S₁: Data source device 1 S₂: Data source device 2
2. This instruction compares the content in S₁ and S₂. Take API232 (AND=) for example, if the result is "=", the continuity of the instruction is enabled. If the result is "≠", the continuity of the instruction is disabled.
3. AND※ (※: =, >, <, <>, ≤, ≥) is a comparison instruction is used on series contacts

API No.	16-bit instruction	32-bit instruction	Continuity condition	No-continuity condition
232	AND=	DAND=	S ₁ = S ₂	S ₁ ≠ S ₂
233	AND>	DAND>	S ₁ > S ₂	S ₁ ≤ S ₂
234	AND<	DAND<	S ₁ < S ₂	S ₁ ≥ S ₂
236	AND<>	DAND<>	S ₁ ≠ S ₂	S ₁ = S ₂
237	AND≤	DAND≤	S ₁ ≤ S ₂	S ₁ > S ₂
238	AND≥	DAND≥	S ₁ ≥ S ₂	S ₁ < S ₂

Example

1. When X0 = On and the content in C10 = K200, Y10 = On.
2. When X1 = Off and the content in D0 ≠ K-10, Y11 = On will be retained.
3. When X2 = On and the content in 32-bit register D0 (D11) < 678,493 or M3 = On, M50 = On.

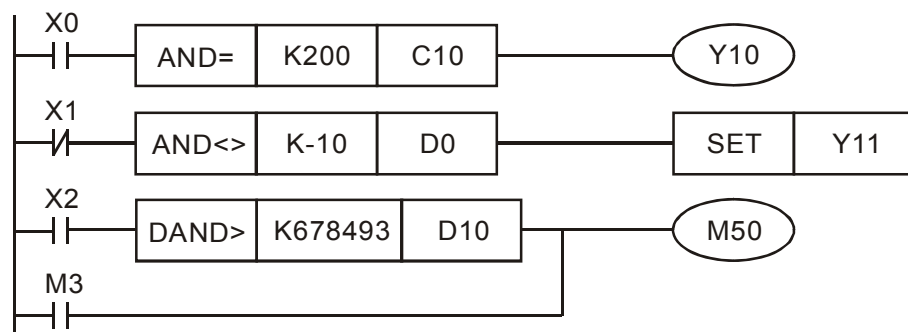

16.5.5 Description to drive's special commands

API 139	RPR	P	(S1) (S2)	Read the AC motor drive's parameters
------------	-----	---	-----------	--------------------------------------

	Bit Devices			Word Devices							16-bit command (5 STEPS)		
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D	RPR	RPRP
S ₁				*	*							*	
S ₂												*	
Operands: none												32-bit command	
												Flag signal: none	

Explanation

S₁: Data address for reading S₂: The register that saves the read data

API 140	WPR	P	(S1) (S2)	Write the AC motor drive's parameters
------------	-----	---	-----------	---------------------------------------


	Bit Devices			Word Devices							16-bit command (5 STEPS)		
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D	WPR	WPRP
S ₁				*	*							*	
S ₂				*	*							*	
Operands: None												32-bit command	
												Flag signal: none	

Explanation

S₁: The data for writing. S₂: The parameters address for the write data.

Example

1. It will read the data in parameter H2100 of the C2000 and write into D0; H2101 is read and write into D1.
2. When M0=On, data in D10 will be written into Pr. H2001 of C2000.
3. When M1=ON, data in H2 will be written into Pr. H2001 of C2000, which is to activate the AC motor drive.
4. When M2=ON, data in H1 will be written into H2000 of C2000, which is to stop the AC motor drive.
5. When data writing successfully, M1017 will be on.

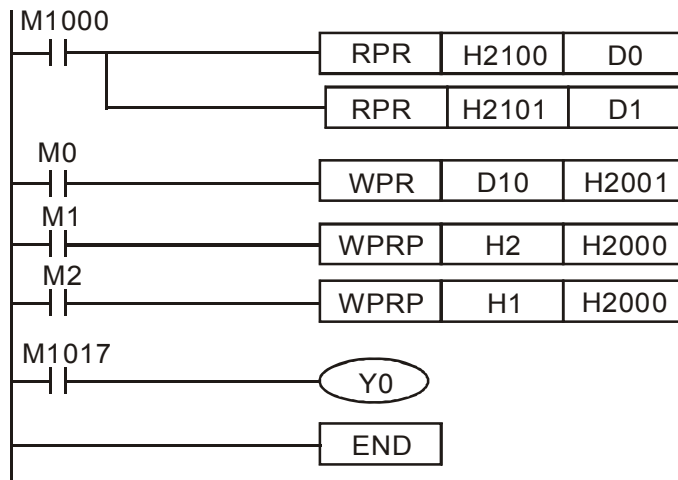

API					(S1) (S2) (S3)	Operation control of the AC motor drive
142		FREQ		P		

	Bit Devices			Word Devices							16-bit command (7 STEPS)		
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D	FREQ	FREQP
S₁				*	*						*		
S₂				*	*						*		
S₃				*	*						*		
Operands: None												32-bit command	
												Flag signal: M1028	

Explanation

- S₁**: frequency command, **S₂**: acceleration time, **S₃**: deceleration time
- This command FREQ can control frequency command, acceleration time and deceleration time of the AC motor drive. Special register control is shown as following:

M1025: controls RUN (On)/STOP (Off) of the drive. (Run is valid when Servo On (M1040 On).)

M1026: Operation directions FWD (On)/REV (Off) of the drive.

M1040: controls Servo On (On)/ Servo Off (Off).


M1042: enable quick stop(ON)/ disable quick stop(Off)

M1044: enable Stop (On)/ disable stop(Off)

M1052: frequency locked (On)/ disable frequency locked(Off)

Example

- M1025: controls RUN (On)/STOP (Off) of the drive. M1026: operation direction FWD (On)/REV (Off) of the drive. M1015: frequency attained.
- When M10=ON, setting frequency command of the AC motor drive to K300(3.00Hz) and acceleration/deceleration time is 0.
- When M11=ON, setting frequency command of the AC motor drive to K3000(30.00Hz), acceleration time is 50 and deceleration time is 60.

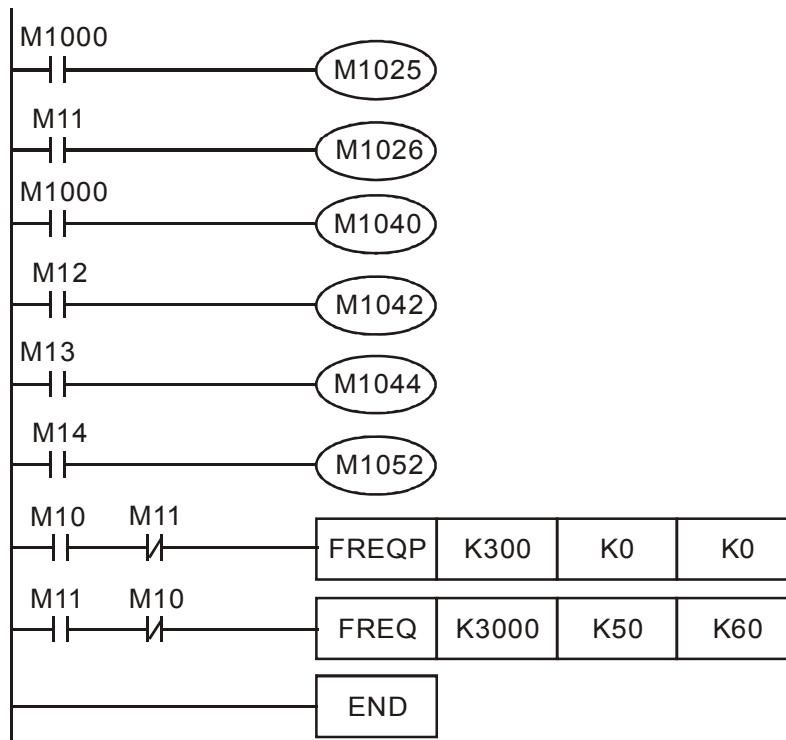


API					(S1) (S2)	Torque Control of AC Motor Drive
263		TORQ	P			

	Bit Devices			Word Devices							16-bit command (7 STEPS)		
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D	TORQ	TORQ P
S ₁				*	*								
S ₂				*	*								
Operands: None												32-bit command	
												Flag signal: M1063	

- Explanation**
1. **S₁**: torque command (display in signed decimal with one decimal place)
S₂: speed limit
 2. This command can control torque command and speed limi. Special register control is shown as following:
M1040: controls Servo On(On)/ Servo Off(Off). Torque output and speed limit are defined by the setting of TORQ command when TORQ command is set when Servo is ON.

- Example**
1. M1040: control Servo On(On)/ Servo Off(Off). M1063: target torque attained. D1060: control mode setting. D1053: actual torque.
 2. When M0=Off, setting torque command of the AC motor drive to K+300(+30.0%) and speed limit to 3000(30Hz).
 3. When M0=On, setting torque command of AC motor drive to K-300(-30.0%) and speed limit to 3000(30Hz) .
 4. When M10=On, AC motor drive begins to execute torque command.
 5. When target torque is attained, M1063 will switch ON and flag signal will be blinking.

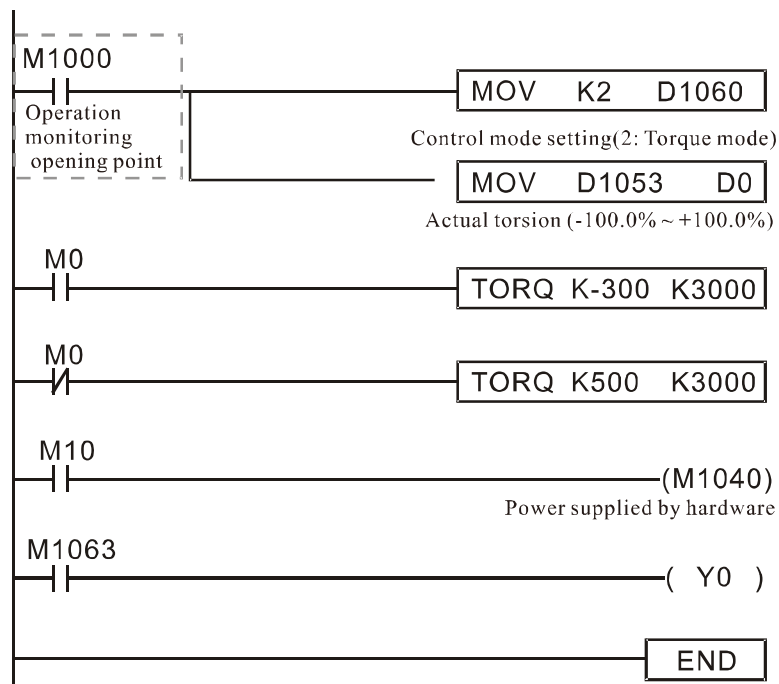

261		P	
-----	--	----------	--

	Bit Devices			Word Devices								16-bit command (7 STEPS)	
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D	FREQ	FREQP
S₁				*	*								
S₂				*	*								
S₃				*	*								
D									*	*	*		

Operand: none


Flag signal: M1028

Explanation

- S₁**: Slave station number, **S₂**: main index, **S₃**: sub-index + bit length, **D**: save address
- Command CANRX can read the corresponding slave. Index. When executing this command, it will send SDO message to the slave. At this time, M1066 and M1067 are 0 but when reading is complete M1066 will set to 1. If the slave replied an accurate response, the value will be written to the designated register and M1067 is now set to 1. However, if the slave replied an inaccurate response, this error message will be recorded in D1076~D1079.

Example

M1002: touch once to activate PLC and change K4M400=K1. After the change, different message will be displayed when M1066 is set to 1.

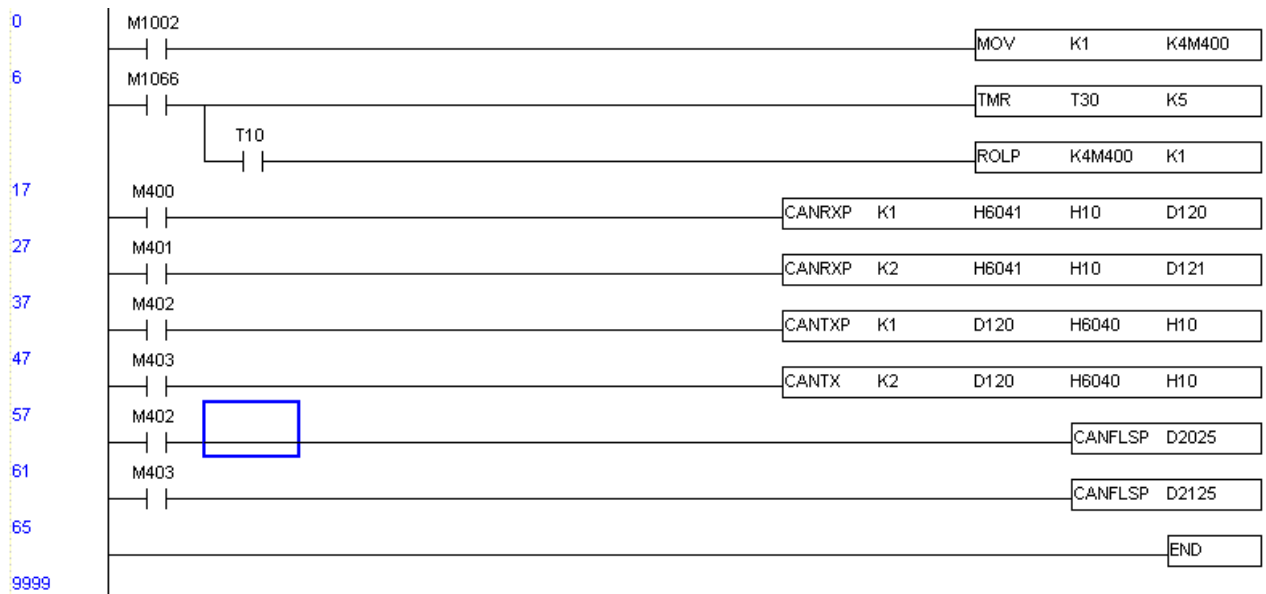

API	CANTX	P	(S1) (S2) (S3) (S4)	Write CANopen slave data
264				

	Bit Devices			Word Devices										
	X	Y	M	K	H	KnX	KnY	KnM	T	C	D			
S₁				*	*							16-bit command (7 STEPS) FREQ FREQP		
S₂				*	*				*	*	*	32-bit command — — — —		
S₃				*	*									
S₄				*	*							Flag signal: M1028		
Operands: None														

Explanation

- S₁**: slave station number, **S₂**: the address to write, **S₃**: main index, **S₄**: sub-index+ bit length.
- Command CANTX can read the corresponding index of the slave. When executing this command, it will send SDO message to the slave. At this time, M1066 and M1067 are 0 but when reading is complete M1066 will set to 1. If the slave replied an accurate response, the value will be written to the designated register and M1067 is now set to 1. However, if the slave replied an inaccurate response, this error message will be recorded in D1076~D1079.

16.6 Error and Troubleshoot

Fault	ID	Fault Descript	Corrective Action
PLiC	48	Internal communication signal off	Check if shielded wire is properly inserted to communication port COM1.
PLod	50	Data write error	Check if there is error in the program and download the program again.
PLSv	51	Data write error when executing	Re-apply the power and download the program again.
PLdA	52	Program upload error	Upload again. If error occurs continuously, please return to the factory.
PLFn	53	Command error when download program	Check if there is error in the program and download the program again.
PLor	54	Program capacity exceeds memory capacity	Re-apply the power and download the program again.
PLFF	55	Command error when executing	Check if there is error in the program and download the program again.
PLSn	56	Check sum error	Check if there is error in the program and download the program again.
PLEd	57	There is no "END" command in the program	Check if there is error in the program and download the program again.
PLCr	58	The command MC is continuous used more than 9 times	Check if there is error in the program and download the program again.
PLdF	59	Download program error	Check if there is error in the program and download the program again.
PLSF	60	PLC scan time over-time	Check if the program code is inaccurately written and download the program again.

16.7 CANopen Master Application

Simple control of multiple-axes for certain application can be done by C2000 if the device supports CANopen protocol. One of the C2000 could acts as Master to perform simple synchronous control, e.g. position, speed, zero return, and torque control. The setup can be done in 7 steps:

Step 1: Activate CANopen Master

1. Set Pr.09-45 to 1. (To activate Master function, turn off the power after setting and reboot. The digital keypad KPC-CC01 status will display “CAN Master”.)
2. Set Pr.00-02 to 6 for PLC reset. (Note: This action will erase the program and PLC register and will be set to factory setting.)
3. Turn off the power and reboot.
4. Set PLC control to “**PLC Stop mode**” by digital keypad KPC-CC01. (If the digital keypad is KPC-CE01 series, set PLC control to “PLC 2”. If the drive just came out of the factory, since PLC program is not yet installed, the digital keypad will show PLFF warning code.)

Step 2: Configuration of the Special D in Master


Each slave occupies 100 of Special D space and is numbered 1 to 8. There are in total of 8 stations. Please refer to 4-3 Special Register in this chapter for Special D register definition.

Slave No.	Slave No. 1	D2000 D2001 ~ D2099	Station number Factory code(L) ~ The mapping address 4(H) of receiving station 4
	Slave No. 2	D2100 D2101 ~ D2199	Station number Factory code(L) ~ The mapping address 4 (H)of receiving station 4
	Slave No. 3	D2200 D2201 ~ D2299	Station number Factory code(L) ~ The mapping address 4 (H)of receiving station 4
	Slave No. 8	D2700 D2701 ~ D2799	Station number Factory code(L) ~ The mapping address 4(H) of receiving station 4


1. When communication cable 485 is connected, set PLC status to “stop” by WPL soft. (If PLC had already switched to “PLC Stop” mode then PLC status should be “stop” already.)

2. To control the slave address and corresponding station. For example, control 2 stations of the slave (max. 8 stations synchronous control), if the station number is 21 and 22, set D2000 and D2100 to 20 and 21 and then set D2200, D2300, D2400, D2500, D2600 and D2700 to 0. The setting can be done via PLC software editor WPL, follow the steps shown:

- Open WPL Editor > communication> Edit Register Memory(T C D)

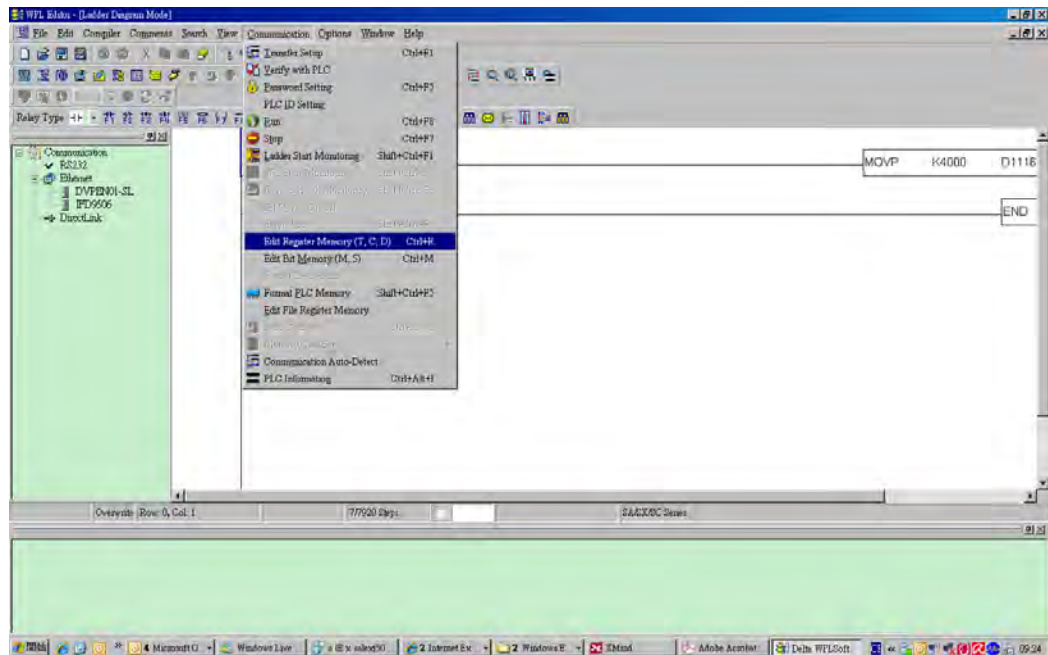

- When the “Register” window appears, click “Transmit”.

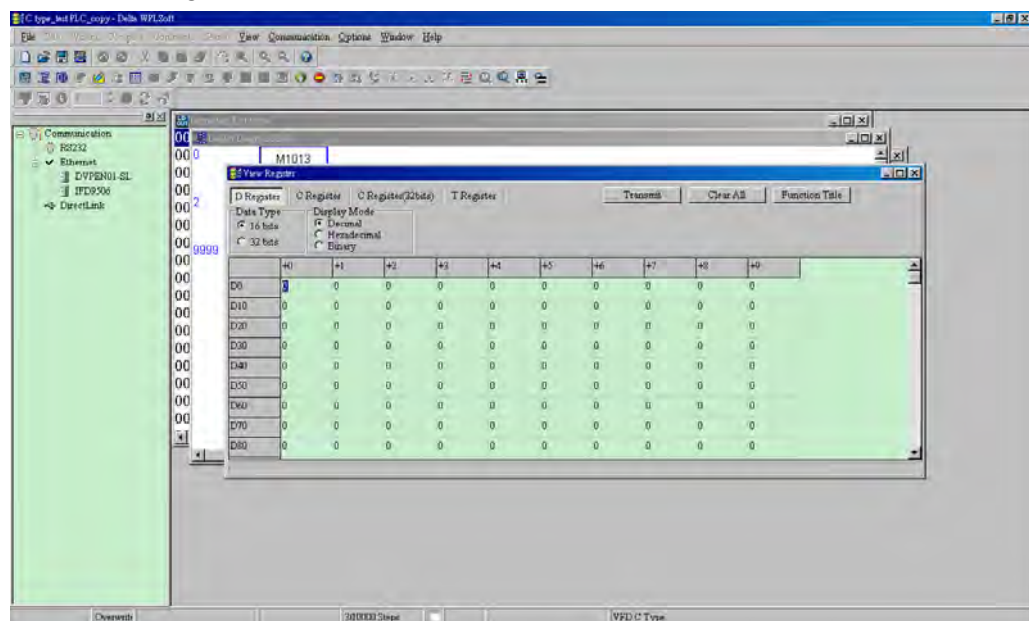

- When transmission window appear, select “read” and input the range D2000~D2799 then press enter. The value in D2000~D2799 will be read. If communication failed, check the communication format (pre-defined PLC station is 2, 9600, 7N2, ASCII).
- Insert the slave station for control. Set D2000 and D2100 to 20 and 21 then set D2200, D2300, D2400, D2500, D2600 and D2700 to 0.
- Click”Transmit” again. When transmission window appears, input the range D2000~D2799 and enter. The value in D2000~D2799 will be write (If communication error occur and display failed, it means PLC is not in “stop” status. The value can only

be write in “stop” status, pleas switch PLC to “stop”.)

- Another method is by setting D1091. Set the corresponding bit of the excluding slave to 0 (slave station range from No.1~8). For example, if the user wants to exclude slave No. 2, 6 and 7, please set D1091 = 003B by following steps: WPL Editor > communication> Edit Register Memory(T C D)

3. Setup the communication setting. If following conditions apply to you then no additional setting needs to be done:

- ☑ **If the only control in this application is the speed mode of AC motor drive.** (For other control such as position and torque control, D2000~D2799 should be set. Please refer to synchronous control on position, torque and zero return for more set up detail.

To perform synchronous control on position for the slave, please enable the corresponding function PDO 3. (P to P function is not yet supported by C2000.)

- To activate PDO 3 TX (Master sending command to Slave), please set up bit 8~11 of the PLC address D2034+n*100. This special D register is defined as below:

	PDO4		PDO3		PDO2		PDO1	
	Torque		Position		Remote I/O		Speed	
Bit	15	14 ~ 12	11	10 ~ 8	7	6 ~ 4	3	2 ~ 0
Definition	En	Number	En	Number	En	Number	En	Number

The pre-defined setting of PDO 3 TX has corresponded to CANopen control word “Index 6040”and CANopen target position” Index 607A”. If position control is the only control in this application then simply set Special D register value to 0x0A00.

- To activate PDO 3 RX (Slave response with the status to Master), please set up bit 8~11 of the PLC address D2067+n*100. This special D register is defined as below:

	PDO4		PDO3		PDO2		PDO1	
	Torque		Position		Remote I/O		Speed	
Bit	15	14 ~ 12	11	10 ~ 8	7	6 ~ 4	3	2 ~ 0
Definition	En	Number	En	Number	En	Number	En	Number

The pre-defined setting of PDO 3 TX has corresponded to CANopen control word “Index 6041”and CANopen actual position” Index 6064”. If position control is the only control in this application then simply set Special D register value to 0x0A00.

In same theory, to perform torque control, please enable the mapping function PDO4.

- ☑ The speed for 1 corresponding cycle is 8ms. (When shorten the cycle time to < 8ms, make sure the time is enough for the data to be transmitted.

User should calculate the corresponding PDO quantity before setting the cycle. The PDO quantity should not be greater than the N. The quantity can be calculated by the following formula.

$$N = (1 \text{ cycle (ms)} * \text{rate (kbs)}) / 250$$

Example: 1 cycle is 2ms, speed= 1000k, max PDO value is $2*1000/250 = 8$. If user wants to set the cycle time to 2ms, turns off 4 of the C type AC motor drive slave stations must be turned off (since the pre-defined setting is 8 slaves, half of the slave station would be 4). The slave station can be turned off by setting the $D2000+n*100$ of the unused slaves to 0.

☑ **Number of control station ≤ 8 .**

Controlling 8 slave stations at once can only be done by asynchronous control where to Read/Write the slave is done by CANRX and CANTX command. This is similar to the Read/Write action of Modbus protocol.

☑ **The slave complies with DS402 standard.**

☑ **Does not control Slave IO terminal.**

☑ If above conditions do not apply, please set up the slave corresponding addresses manually by open WPL editor > communication> Edit Register Memory (**T C D**).

Step 3: Set up Master station number and communication speed.

- ☑ Set up the station number for the Master (the default setting of Pr.09-46=100). Do not to set the same station number as the Slave.
- ☑ Set up CANopen communication parameter Pr.09-37. It does not matter if the drive is defined as a Master or a Slave, communication speed is set by Pr.09-37 in both case.

Step 4: Coding

Real-time corresponding action: the data can be Read/Write directly to the corresponding special "D" register.

Non Real-time corresponding action:

Read: Reading is made by CANRX command. When reading process is complete, M1066=1. If reading succeeded, M1067 =1; if reading failed, M1067= 0.

Write: Writing is made by CANTX command. When writing process is complete, M1066 =1. If writing succeeded, M1067=1; if reading failed, M1067 =0.

Update: Updating the data is made by CANFLS command. (If special D register is defined as RW type, Master will write the value into the slave. If special D register is defined as RO type, then the data in the Slave will be read and write into the Master.) When updating process is complete, M1066 will be 1. If updating succeeded, M1067=1; if updating failed, M1067=0.

 **NOTE**

When executing CANRX, CANTX and CANFLS commands, the device will wait till M1066 is completed before the next CANRX, CANT or CANFLS begins. When the commands completed, download the program to the drive. (Note: The factory setting of PLC communication protocol is ASCII 7N2 9600 and station number is 2. Please change WPL Editor setting at Setting> Communication Setting)

Step 5: Setting the Slave station number, communication speed, operation source and command source

CANopen communication is supported by Delta C2000 series and EC series AC motor drive. The corresponding slave and CANopen speed are shown as below:

	Corresponding Parameter of Drive		Value	Definition
	C2000	E-C		
Slave address	09-36	09-20	0	Disable CANopen Hardware Interface
			1~127	CANopen communication address
CANopen speed	09-37	09-21	0	1M
			1	500K
			2	250K
			3	125K
			4	100K
			5	50K
Source of operation command	00-21		3	
		02-01	5	
Source of frequency command	00-20		6	
		02-00	5	
Torque command	11-34		3	


The only servo motor and drive that supports CANopen communication interface is A2 series.

The corresponding slave station number and communication speed are shown as below:

	Corresponding Parameter of Drive		Value	Definition
	A2			
Slave address	03-00		1~127	CANopen communication address
CANopen speed	bit8~11 of Pr.03-01 XRXX		R= 0	125K
			R= 1	250K
			R= 2	500K
			R= 3	750K
			R= 4	1M
Control/Command Source	01-01		B	

Step 6: Hardware connection

The terminating resistor must be installed at the two farthest ends as shown in the figure below:

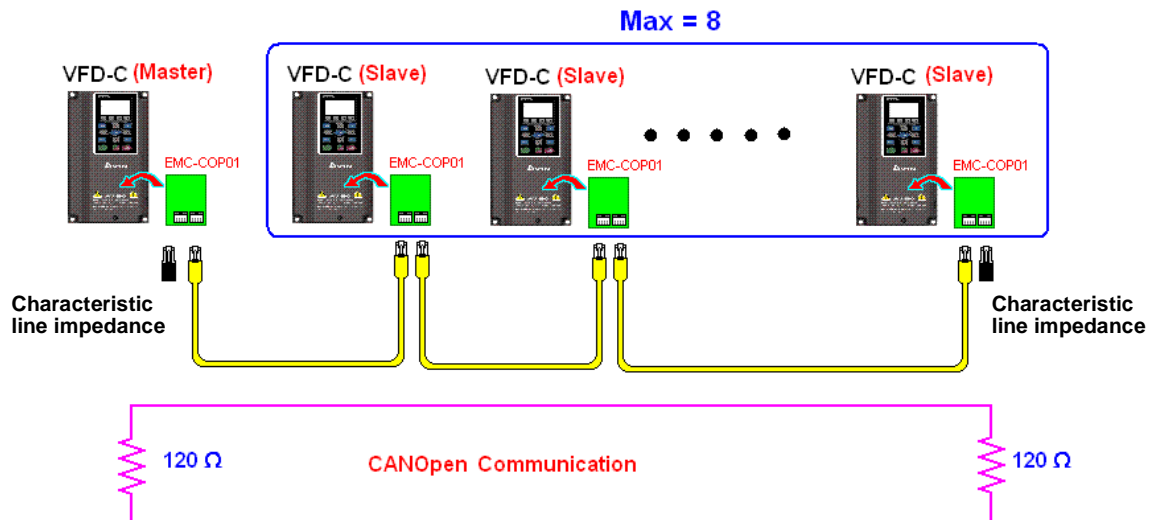

Step 7: Activate PLC Control Function

Download the program after coding is complete and switch PLC mode to Run status. Then reboots the power for Slave and Master. Please refer to CANMaster Test 1 vs. 2 driver.dvp.

Example:

C2000 AC motor drive (1 master vs. 2 slave control)

Step 1: Activate CANOpen Master

- ☑ Set Pr.09-45 to 1. (To activate Master function, turn off the power after setting and reboot. The digital keypad KPC-CC01 status will display "CAN Master".)
- ☑ Set Pr.00-02 to 6 for PLC reset. (Note: This action will erase the program and PLC register and will be set to factory setting.)
- ☑ Turn off the power and reboot.
- ☑ Set PLC control to "PLC Stop mode" by digital keypad KPC-CC01. (If the digital keypad is KPC-CE01 series, set PLC control to "PLC 2". If the drive just came out of the factory, since PLC program is not yet installed, the digital keypad will show PLFF warning code.)

Step 2: Configuration of the Special D in Master

- ☑ Open WPL editor
- ☑ Set PLC mode to PLC Stop (PLC2) via the keypad
- ☑ WPL editor read D1070~D1099 and D2000~D2799
- ☑ Set D2000=10 and D2100=11
- ☑ Set D2100, 2200, 2300 2400 2500 2600 2700=0
- ☑ Download D2000~D2799 setting

Step 3: Set up Master station number and communication speed

- ☑ Set up the station number for the Master (the default setting of Pr.09-46=100). Do not to set the same station number as the Slave.
- ☑ Set up CANopen communication speed to 1 M (parameter Pr.09-37= 0). It does not matter if the drive is defined as a Master or a Slave, communication speed is set by Pr.09-37 in both case.

Step 4: Coding

Real-time corresponding action: the data can be Read/Write directly to the corresponding special "D" register.

Non Real-time corresponding action:

Read: Reading is made by CANRX command. When reading process is complete, M1066=1. If reading succeeded, M1067 =1; if reading failed, M1067= 0.

Write: Writing is made by CANTX command. When writing process is complete, M1066 =1. If writing succeeded, M1067=1; if reading failed, M1067 =0.

Update: Updating the data is made by CANFLS command. (If special D register is defined as RW type, Master will write the value into the slave. If special D register is defined as RO type, then the data in the Slave will be read and write into the Master.) When updating process is complete, M1066 will be 1. If updating succeeded, M1067=1; if updating failed, M1067=0.

 **NOTE**

When executing CANRX, CANTX and CANFLS commands, the device will wait till M1066 is completed before the next CANRX, CANT or CANFLS begins. When the commands completed, download the program to the drive. (Note: The factory setting of PLC communication protocol is ASCII 7N2 9600 and station number is 2. Please change WPL setting at setting> communication setting)


Step 5: Set Slave station number and communication speed.

Slave No.1: Pr.09-37 = 0(speed 1M), Pr.09-36=10 (station number 10)

Slave No.2: Pr. 09-37 = 0(speed 1M), Pr.09-36=10 (station number 11)

Step 6: Hardware connection

The terminating resistor must be installed at the two farthest ends as shown in the figure below:

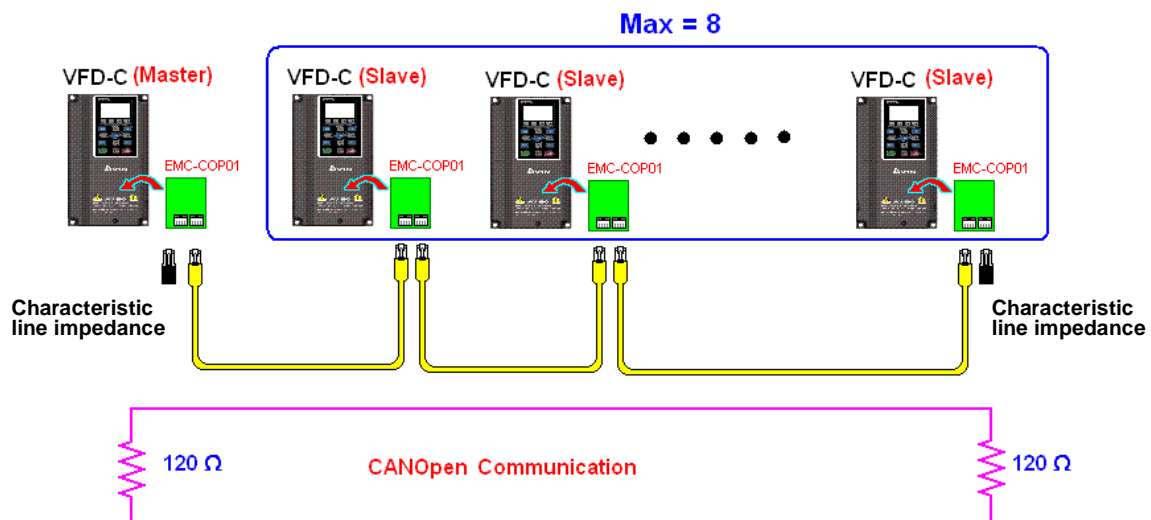

Step 7: Activate PLC Control Function

Download the program after coding is complete and switch PLC mode to Run status. Then reboots the power for Slave and Master. Please refer to CAN Master Test 1 vs. 2 driver.dvp.

16-9 Descriptions of PLC Control Modes

(Speed, Torque, Homing and Position Modes)

When the AC motor drive is in FOC vector control, it can perform torque mode, position mode and speed mode. However, auto-tuning of motor must be done first for these modes to function.

There are two types of motors, Induction Motor (IM) and Permanent Magnetic Motor (PM). After auto-tuning process, IM motor is ready for AC motor drive to control. For PM motor, user must complete PG offset angle process after auto-tuning. Please refer to Pr.12-58 and Pr.05-00 for more detail.

※ Set up Delta ECMA series PM motor by enter motor parameters, follow the motor parameters shown in Delta Servo Motor Catalogue. It is not required to execute auto-tuning for using Delta ECMA series PM motors.

Setting and Description for Other Control Modes:

Speed Control:

The corresponding registers for Speed Mode are listed in the chart below:

Special M Control Settings

Special M	Descriptions	R/W
M1025	AC motor drive operation status: (0) Stop (1) Start up (must also set M1040 =1)	RW
M1026	AC motor drive operation direction: (0) FWD (1) REV	RW
M1040	Power ON	RW
M1042	Quick stop	RW
M1044	Halt	RW
M1052	Frequency lock	RW

Special M Status

Special M	Descriptions	R/W
M1015	Target frequency attained	RO
M1056	Power ON ready	RO
M1058	Quick decelerating to stop	RO

Special D Control Settings

Special D	Descriptions	R/W
D1060	Mode setting (speed mode = 0)	RW

Special D Status

Special D	Descriptions	R/W
D1037	Output frequency of AC motor drive command (0.00~600.00)	RO

Special D	Descriptions	R/W
D1050	Actual mode (0:Speed, 1: Position, 2: Torque, 3: Homing)	RO


Control command for Speed Mode:

FREQ(P)	S1	S2	S3
	Target speed	1st step accel. time	1st step decel. time

Example of Speed Control Mode:

If the drive is in FOC control mode, please auto-tuning the motor before setting PLC control mode to speed control.

1. When setting D1060 = 0, AC motor drive is in speed mode (default setting).
2. Write FREQ command to PLC program to control AC motor drive's frequency and accel./decel. time.
3. When setting M1040 = 1, AC motor drive power turns ON but frequency remains 0.
4. When setting M1025 = 1, AC motor drive begins to operate till the FREQ frequency is attained and will accel./decel. according to the setting of FREQ.
5. Use M1052 to lock present operation frequency.
6. Use M1044 to halt the drive and decelerate by the deceleration setting.
7. Use M1042 to quick stopping the drive. The drive will decelerate by it's maximum deceleration speed and it is the speed that would not trigger a fault alarm. However if loading is too large, a fault alarm may still occur.
8. Priority of the control command is: M1040(Power ON) > M1042(Quick Stop) > M1044(Halt) > M1052(LOCK)

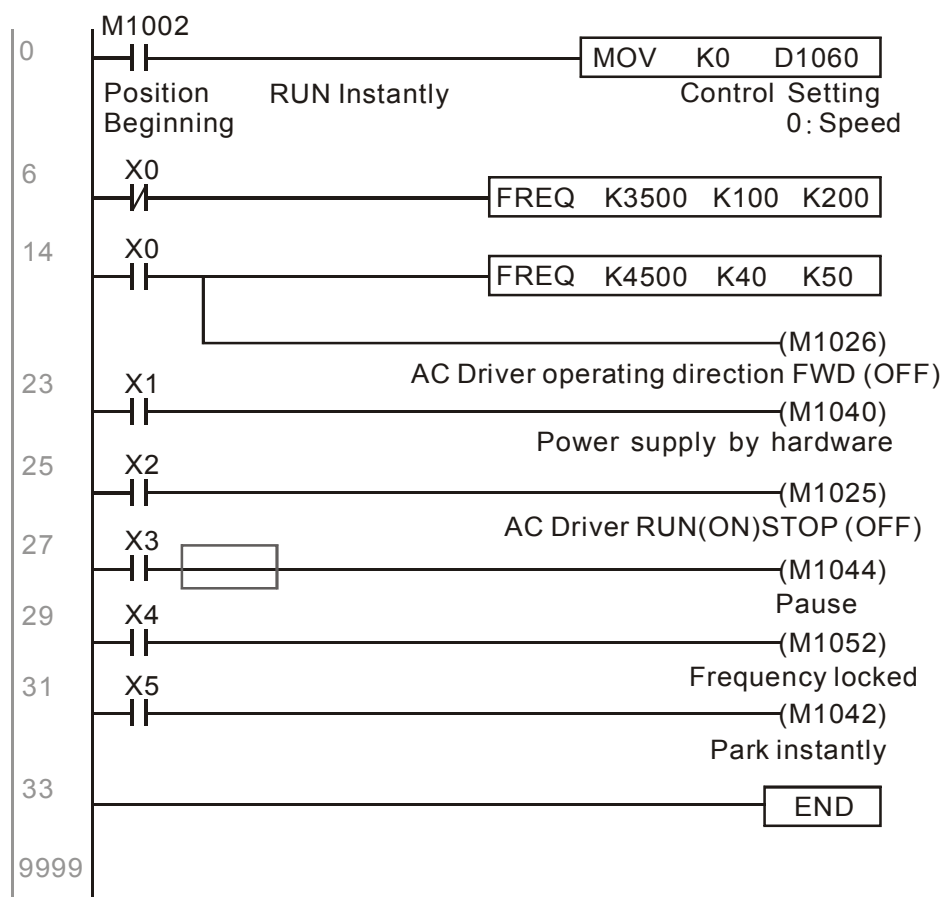

Torque Control:

The corresponding registers for Torque Mode are listed in the chart below:

Special M Control Setting

Special M	Description	R/W
M1040	Power ON	RW

Special M Status

Special M	Description	R/W
M1056	Power ON ready	RO
M1063	Target torque attained	RO

Special D Control Setting

Special D	Description	R/W
D1060	Mode setting (Torque mode=2)	RW

Special D Status

Special D	Description	R/W
D1050	Actual mode (0:Speed, 1: Position, 2: Torque, 3: Homing)	RO
D1053	Actual torque	RO


Control command for Torque Mode:

TORQ(P)	S1	S2
	Target torque (signed decimal)	Frequency limit

Example of Torque Control Mode:

Before setting PLC program to torque control mode, make sure the torque parameter settings of the AC motor drive are completed.

1. When setting D1060 = 2, AC motor drive is in torque mode.
2. Write TORQ command to PLC program for torque and speed limit control.
3. When setting M1040 = 1, AC motor drive power turns ON and operate till target torque or speed limit is attained. Actual torque value can be read in D1053.

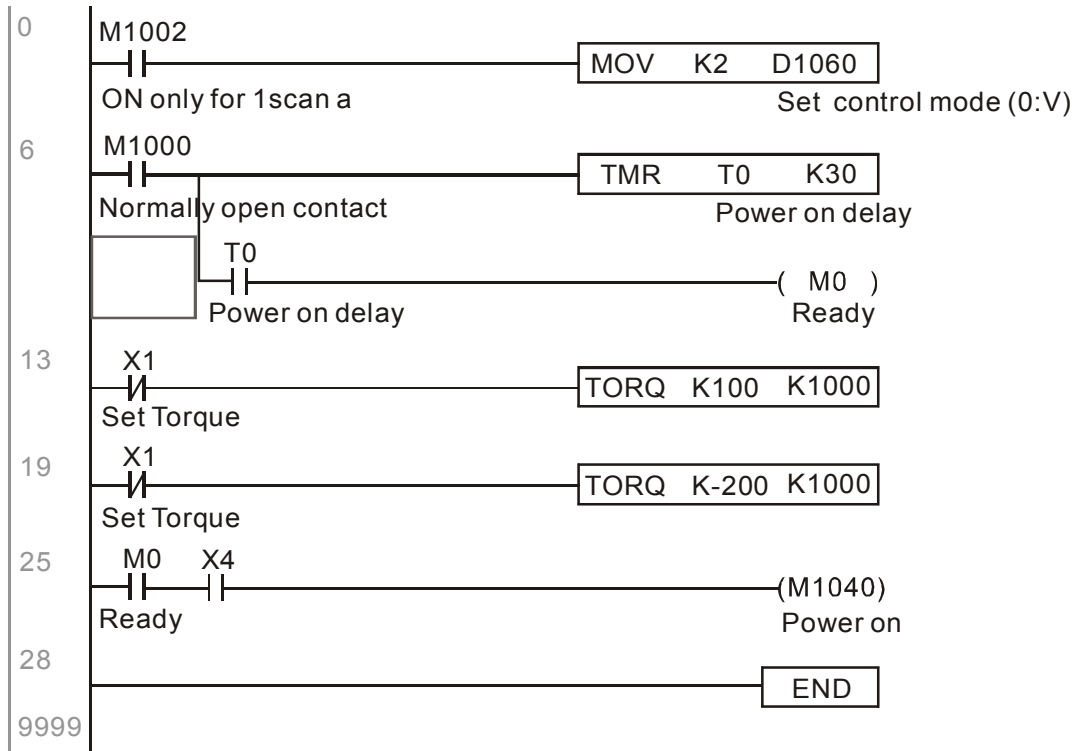

Homing/Position Control:

The corresponding registers for Homing/Position Mode are listed in the chart below:

Special M Control Setting

Special M	Description	R/W
M1040	Power ON	RW
M1048	Run till the new position is attained. For M1048 to function, also need to set control mode to position mode (D1060=1) and set M1040 = 1.	RW
M1055	Home action begins. For 1055 to function, also need to set control mode to position mode (D1060=3) and set M1040=1.	RW

Special M Status

Special M	Description	R/W
M1064	Target position attained	RO
M1070	Homing completed	RO
M1071	Homing error	RO

Special D Control Setting

Special D	Description	R/W
D1060	Mode selection (1: Position, 3: Homing)	RW

Special D Status

Special D	Description	R/W
D1050	Actual mode (0:Speed, 1: Position, 2: Torque, 3: Homing)	RO
D1051	Actual position (Low word)	RO
D1052	Actual position (High word)	

※ Read both D1051 and D1052 for actual position. The display value is in signed decimal.

Control Command for Position Mode:

DPOS(P)	S1	
	Target position (signed decimal)	

Example of **Homing** and Position Mode:


Before setting PLC program to homing mode or position mode, maker sure the motor parameter settings of the AC motor drive are completed.

1. Set Pr.00-40 to homing mode and set up corresponding limit sensor and origin point by MI (MI=44 is for reverse run limit, MI=45 is for forward run limit and MI=46 is for homing to origin point). C2000 series AC motor drive only supports Z phase homing to origin point, please choose an Encoder with Z phase.


2. When setting D1060 = 3, AC motor drive is in homing mode.
3. When setting M1040 = 1, AC motor drive power turns ON.
4. When setting M1055=1, AC motor drive search for origin point.
5. When homing is complete, M1070 will be ON. Then set D1060=1 to switch control mode to position mode. (Ensure M1040 should not be turned OFF to avoid inaccurate origin point.)
6. Write DPOS command to PLC program for setting AC motor drive's target position. Use Pr.00-12 for the absolute or relative position selection.
7. Set M1048 to Pulse ON for one time and needs to be longer than 1ms, then AC motor drive will begin to operate till the target position is attained (only when M1040=1). Present motor position can be read from D1051 and D1052.

Step 1 ~ 7 can be categorized into three parts, please refer to the following example:


Part I: Set control mode to Homing Mode (D1060=3) and turn AC motor drive power ON by trigger X2.

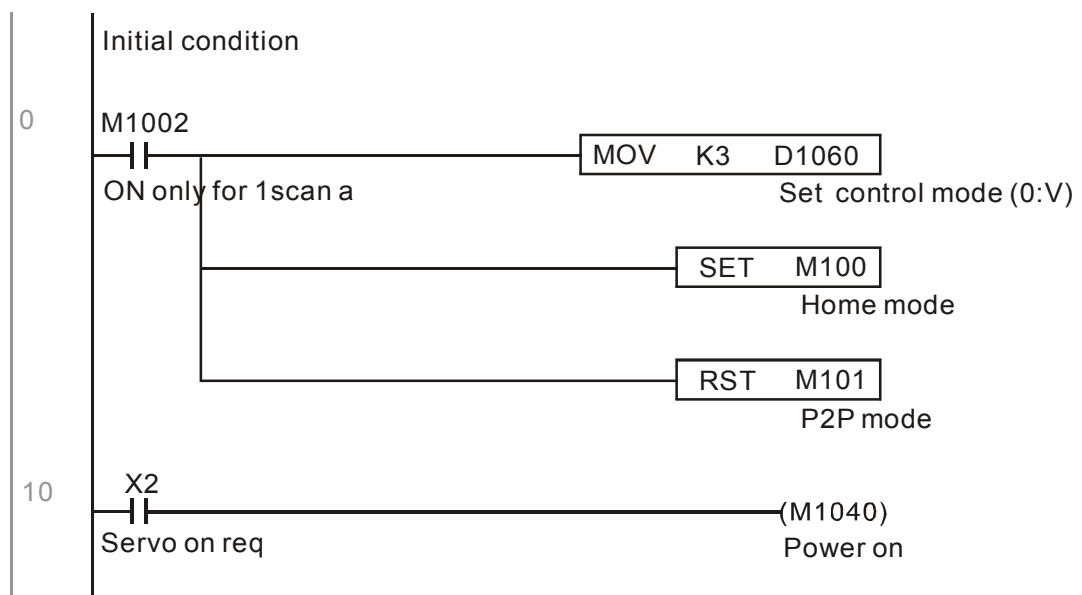

Part II (Homing action): Begins homing mode by trigger X3. The drive will switch to position mode automatically when homing is complete.

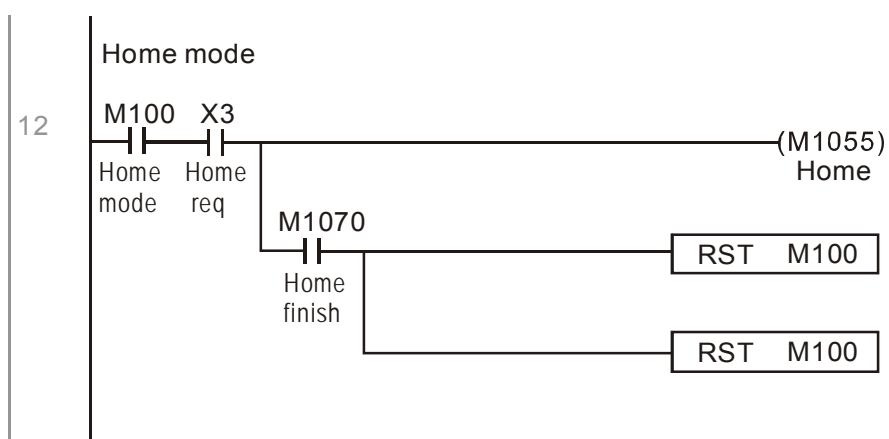

Part III (Point to Point Position Control): Switch control mode to Position Mode (D1060=1) and motor will be running forward and reverse between the position setting(+300000 ~ -300000).

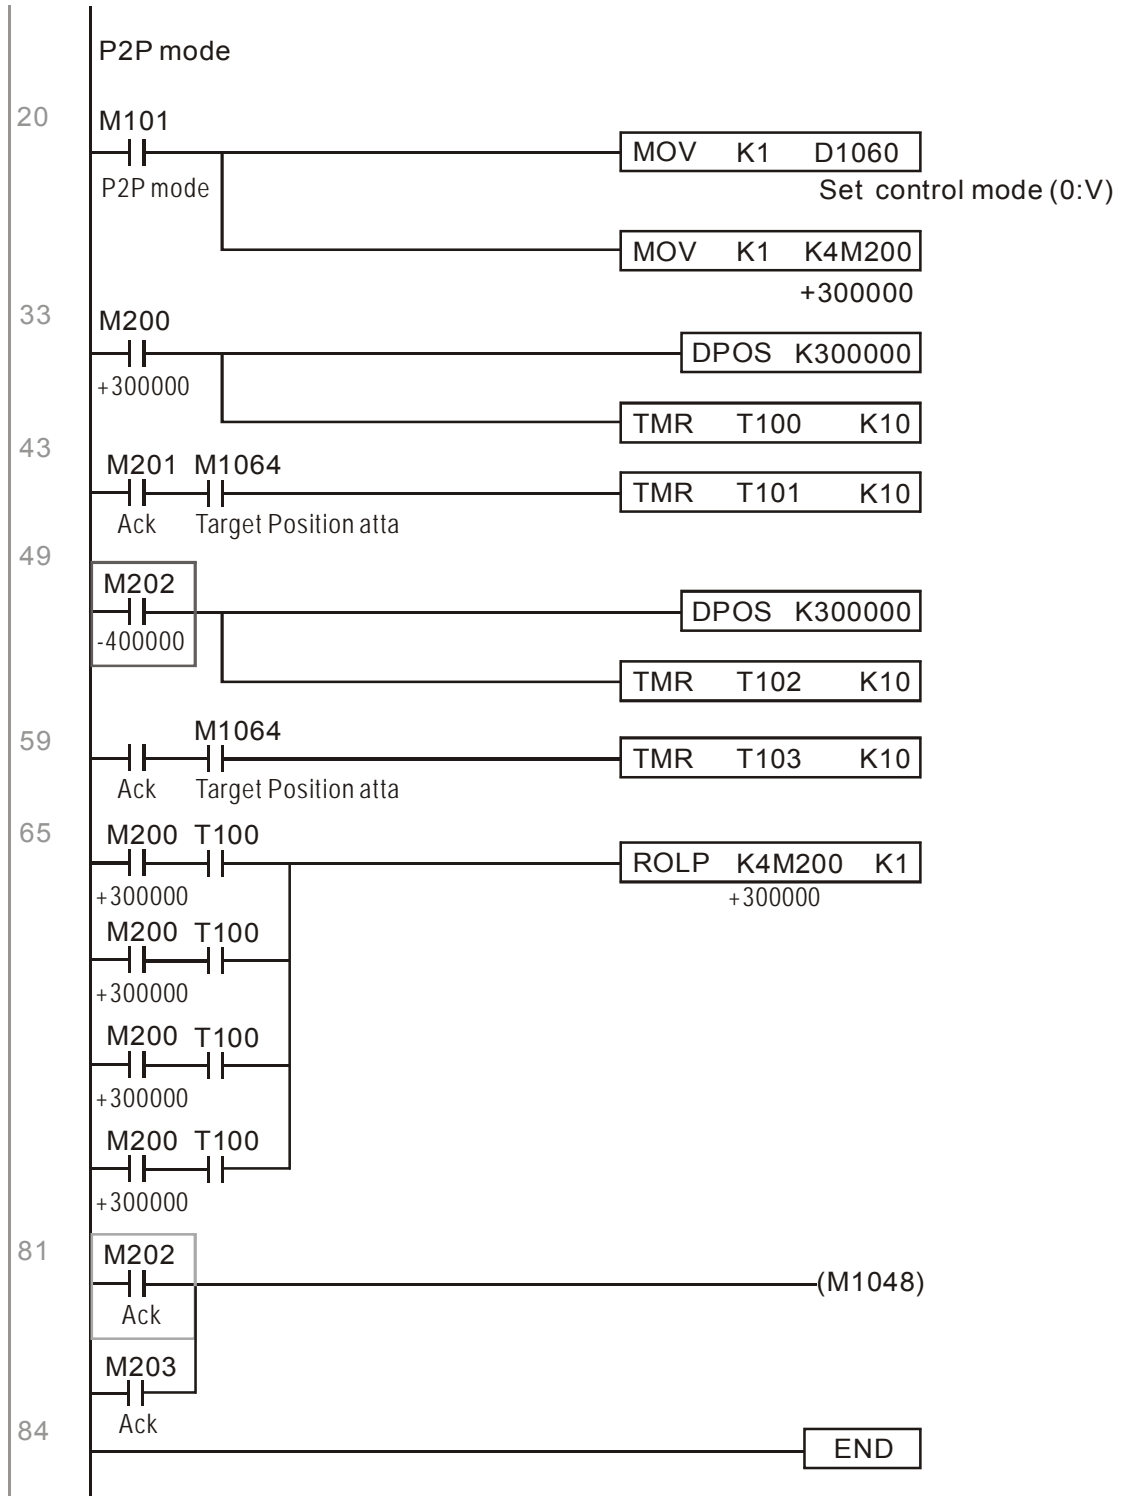

※ If user's application does not require homing action, you may skip Part I and Part II and go to the next step. In this example, turn AC motor drive power ON by trigger X2 and set M1002 to position mode, then the PLC program will be in position mode when drive power turns ON.

16-10 Internal Communication for Master Control

The 'Internal Communication' function is designed and developed for the applications where CANopen communication is not applicable or accessible. It replaces CANopen by RS485 and provides real-time transmission as CANopen communication. This communication protocol is available for C2000 series and CT2000 series AC motor drives only and the way it functions is similar to Master/Slave control. A master drive could control a maximum of 8 slaves and the master/slave setting process is very simple.

Slave Drives Settings:

1. Set Pr.09-31= -1~-8, the drive is able to control 8 nodes.
2. Set Pr.00-21=1, set source of control to RS485.
3. Select for what RS485 should control: Pr.00-21=2 (Speed command) or Pr.11-33 = 1 (Torque command) or Pr.11-40=2 (Position command).
4. Once completed, the slave setting is done. It is not required to turn on PLC functions.


Master Drives Settings:


1. Set Pr.09-31= -10 and set PLC to Enable.

Connection for Hardware:

Establish Master drive and Slave drives connections by using RS485 cable. The CT2000 series AC motor drive is designed with 2 types of RS485 ports, as shown in the figure following:

(Refer to Chapter 06 Control Terminal for more about wiring terminals)

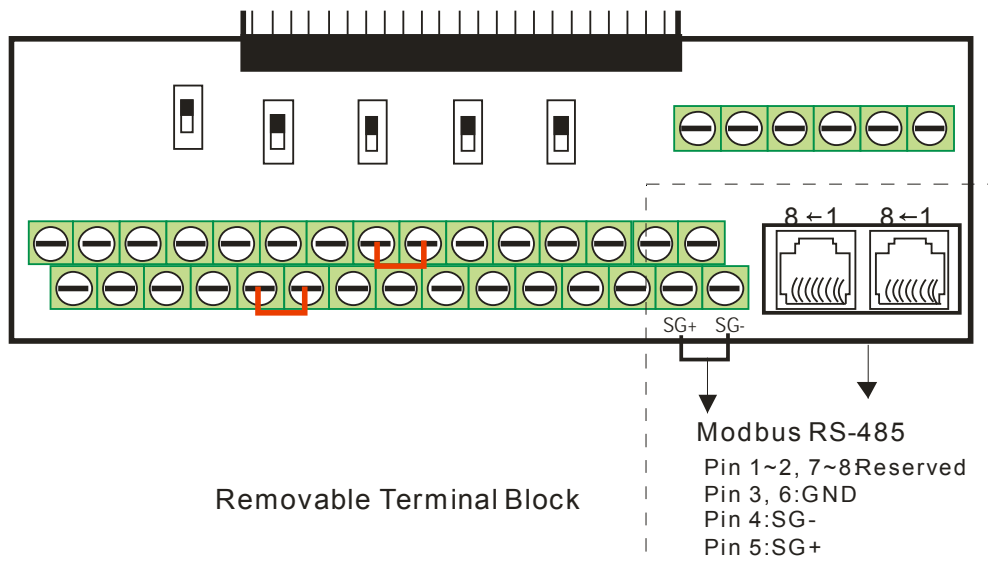

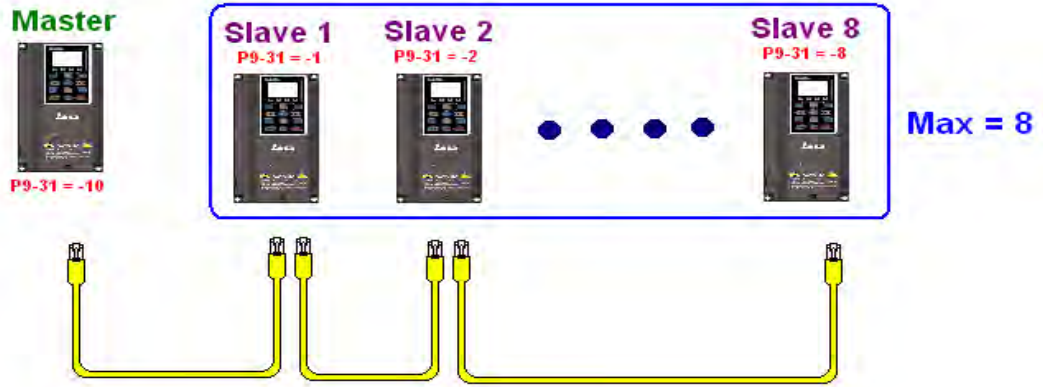

PLC Programming for Master Drive Control

1. In PLC program, D1110 is used for assigning the slave drive user wishes to control. The range setting for D1110 is 1~8 (if D1110 is set to 0 slave 8 is assigned).
2. Once the Slave drive is assigned, set M1035=1 for the Master to control the Slave.
3. Write control command to the corresponding Slave address then Master is able to control the Slave drive.

The corresponding registers for Internal Communication are listed in the chart below:

Special M Control Setting

Special M	Description	R/W
M1035	Enable internal communication control	RW

Special D Control Setting

Special D	Description	R/W
D1110	Number of internal communication nodes(1~8)	RW

Special D	Description							R/W
	Definition	bit	Priority	Speed Mode	Position Mode	Torque Mode	Homing Mode	
D1120 + 10*N	Control Command for Internal Communication Node N	0	4	Command Enable	-	-	Return to Origin Point	RW
		1	4	Reverse Command	Switch	-	-	
		2	4	-	-	-	-	
		3	3	Momentary Stop	Momentary Stop	-	-	
		4	4	Frequency Locked	-	-	Momentary Stop	
		5	4	JOG	-	-	-	
		6	2	Quick Stop	Quick Stop	Quick Stop	Quick Stop	
		7	1	Servo ON	Servo ON	Servo ON	Servo ON	
		11~8	4	Switch Multi-step Speed	Switch Multi-step Speed	-	-	
		13~12	4	Switch Deceleration Time	-	-	-	
	14	4	Enable Bit 13 ~ 8	Enable Bit 13 ~ 8	-	-		
	15	4	Clear Fault Code	Clear Fault Code	Clear Fault Code	Clear Fault Code		
D1121 + 10*N	Control Mode for Internal Communication Node N			0	1	2	3	RW
D1122 + 10*N	Reference Command L of Internal Communication Node N			Speed Command (unsigned decimal)	Position Command (signed decimal)	Torque Command (signed decimal)	-	RW
D1123 + 10*N	Reference Command H of Internal Communication Node N			-		Speed Limit	-	RW

※ N = 0 ~ 7

Special D Status

Special D	Description	R/W
D1115	Synchronous time cycle of internal communication(ms)	RO
D1116	Internal communication node error (bit0= Slave 1, bit1= Slave 2, ..., bit7= Slave 8)	RO
D1117	Corresponding on-line bit of internal communication node (bit0= Slave 1, bit1=	RO

Diagram 2: When Slave 1 on-line status is detected, it will delay for 3 seconds before control command is enabled.



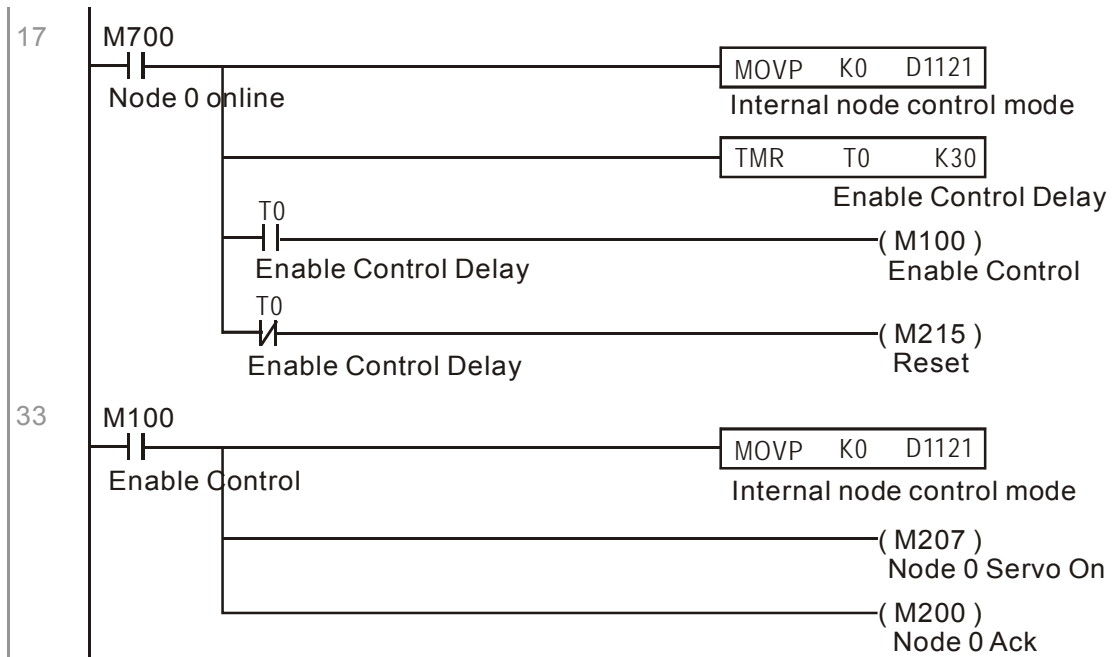


Diagram 3: Commanding Slave 1 to forward run in 30.00Hz for 1 second and reverse run in 60.00Hz for 1 second and repeats frequency switching.

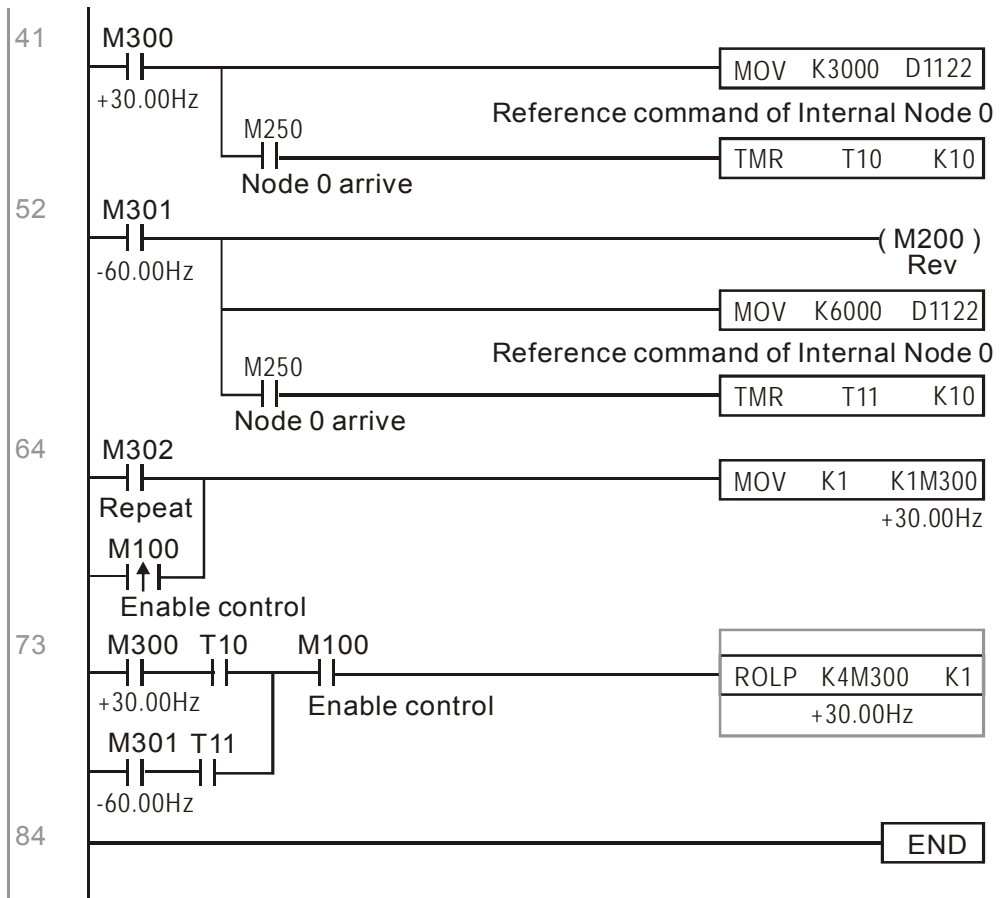

16-11 Counting Function via MI8

The Multi-function Input Terminal (MI8) can be used for single direction Pulse counting and provides a maximum speed of 100K. To initiate MI8 for counting, simply set M1038 to ON and the count value will be saved to D1054 and D1055 in 32bit signed decimal. When M1039 is ON, counting value will reset to 0.

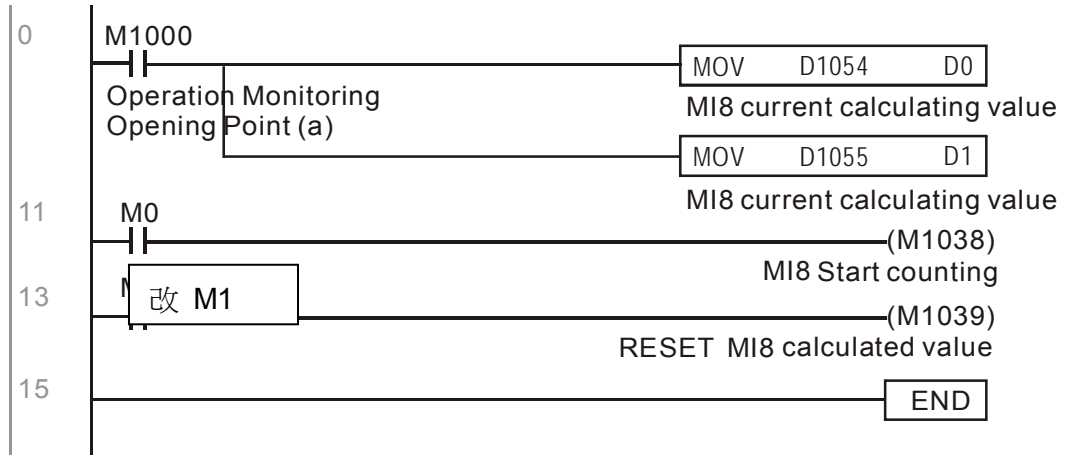

- ※ When PLC program M1038 and M1039 uses MI8 for counting function, the previous AC motor drive setting of MI8 is disabled and have no function.

Chapter 17 How to Select the Right AC Motor Drive

17-1 Capacity formula

17-2 General Precautions

17-3 How to choose a suitable motor

The choice of the right AC motor drive for the application is very important and has great influence on its lifetime. If the capacity of AC motor drive is too large, it cannot offer complete protection to the motor and motor maybe damaged. If the capacity of AC motor drive is too small, it cannot offer the required performance and the AC motor drive maybe damaged due to overloading.

But by simply selecting the AC motor drive of the same capacity as the motor, user application requirements cannot be met completely. Therefore, a designer should consider all the conditions, including load type, load speed, load characteristic, operation method, rated output, rated speed, power and the change of load capacity. The following table lists the factors you need to consider, depending on your requirements.

Item		Related Specification			
		Speed and torque characteristics	Time ratings	Overload capacity	Starting torque
Load type	Friction load and weight load				
	Liquid (viscous) load	●			●
	Inertia load				
	Load with power transmission				
Load speed and torque characteristics	Constant torque				
	Constant output	●	●		
	Decreasing torque				
	Decreasing output				
Load characteristics	Constant load				
	Shock load	●	●	●	●
	Repetitive load				
	High starting torque				
	Low starting torque				
Continuous operation, Short-time operation			●	●	
Long-time operation at medium/low speeds					
Maximum output current (instantaneous)		●		●	
Constant output current (continuous)					
Maximum frequency, Base frequency		●			
Power supply transformer capacity or percentage impedance					
Voltage fluctuations and unbalance				●	●
Number of phases, single phase protection					
Frequency					
Mechanical friction, losses in wiring				●	●
Duty cycle modification			●		

17-1 Capacity Formulas

1. When one AC motor drive operates one motor

The starting capacity should be less than 1.5x rated capacity of AC motor drive

The starting capacity=

$$\frac{k \times N}{973 \times \eta \times \cos \varphi} \left(T_L + \frac{GD^2}{375} \times \frac{N}{t_A} \right) \leq 1.5 \times \text{the_capacity_of_AC_motor_drive(kVA)}$$

2. When one AC motor drive operates more than one motor

2.1 The starting capacity should be less than the rated capacity of AC motor drive

- Acceleration time ≤ 60 seconds

The starting capacity=

$$\frac{k \times N}{\eta \times \cos \varphi} [n_r + n_s(k_s - 1)] = P_{C1} \left[1 + \frac{n_s}{n_r} (k_s - 1) \right] \leq 1.5 \times \text{the_capacity_of_AC_motor_drive(kVA)}$$

- Acceleration time ≥ 60 seconds

The starting capacity=

$$\frac{k \times N}{\eta \times \cos \varphi} [n_r + n_s(k_s - 1)] = P_{C1} \left[1 + \frac{n_s}{n_r} (k_s - 1) \right] \leq \text{the_capacity_of_AC_motor_drive(kVA)}$$

2.2 The current should be less than the rated current of AC motor drive(A)

- Acceleration time ≤ 60 seconds

$$n_r + I_M \left[1 + \frac{n_s}{n_r} (k_s - 1) \right] \leq 1.5 \times \text{the_rated_current_of_AC_motor_drive(A)}$$

- Acceleration time ≥ 60 seconds

$$n_r + I_M \left[1 + \frac{n_s}{n_r} (k_s - 1) \right] \leq \text{the_rated_current_of_AC_motor_drive(A)}$$

2.3 When it is running continuously

- The requirement of load capacity should be less than the capacity of AC motor drive(kVA)

The requirement of load capacity=

$$\frac{k \times P_M}{\eta \times \cos \varphi} \leq \text{the_capacity_of_AC_motor_drive(kVA)}$$

- The motor capacity should be less than the capacity of AC motor drive

$$k \times \sqrt{3} \times V_M \times I_M \times 10^{-3} \leq \text{the_capacity_of_AC_motor_drive(kVA)}$$

- The current should be less than the rated current of AC motor drive(A)

$$k \times I_M \leq \text{the_rated_current_of_AC_motor_drive(A)}$$

Symbol explanation

P_M : Motor shaft output for load (kW)

η : Motor efficiency (normally, approx. 0.85)

$\cos \varphi$: Motor power factor (normally, approx. 0.75)

V_M : Motor rated voltage(V)

I_M : Motor rated current(A), for commercial power

k : Correction factor calculated from current distortion factor (1.05-1.1, depending on PWM method)

P_{C1} : Continuous motor capacity (kVA)

k_S : Starting current/rated current of motor

n_r : Number of motors in parallel

n_s : Number of simultaneously started motors

GD^2 : Total inertia (GD^2) calculated back to motor shaft (kg m^2)

T_L : Load torque

t_A : Motor acceleration time

N : Motor speed

17-2 General Precaution

Selection Note

1. When the AC Motor Drive is connected directly to a large-capacity power transformer (600kVA or above) or when a phase lead capacitor is switched, excess peak currents may occur in the power input circuit and the converter section may be damaged. To avoid this, use an AC input reactor (optional) before AC Motor Drive mains input to reduce the current and improve the input power efficiency.
2. When a special motor is used or more than one motor is driven in parallel with a single AC Motor Drive, select the AC Motor Drive current $\geq 1.25 \times$ (Sum of the motor rated currents).
3. The starting and accel./decel. characteristics of a motor are limited by the rated current and the overload protection of the AC Motor Drive. Compared to running the motor D.O.L. (Direct On-Line), a lower starting torque output with AC Motor Drive can be expected. If higher starting torque is required (such as for elevators, mixers, tooling machines, etc.) use an AC Motor Drive of higher capacity or increase the capacities for both the motor and the AC Motor Drive.
4. When an error occurs on the drive, a protective circuit will be activated and the AC Motor Drive output is turned off. Then the motor will coast to stop. For an emergency stop, an external mechanical brake is needed to quickly stop the motor.

Parameter Settings Note


1. The AC Motor Drive can be driven at an output frequency up to 400Hz (less for some models) with the digital keypad. Setting errors may create a dangerous situation. For safety, the use of the upper limit frequency function is strongly recommended.
2. High DC brake operating voltages and long operation time (at low frequencies) may cause overheating of the motor. In that case, forced external motor cooling is recommended.
3. Motor accel./decel. time is determined by motor rated torque, load torque, and load inertia.
4. If the stall prevention function is activated, the accel./decel. time is automatically extended to a length that the AC Motor Drive can handle. If the motor needs to decelerate within a certain time with high load inertia that can't be handled by the AC Motor Drive in the required time, either use an external brake resistor and/or brake unit, depending on the model, (to shorten deceleration time only) or increase the capacity for both the motor and the AC Motor Drive.

17-3 How to Choose a Suitable Motor

Standard motor

When using the AC Motor Drive to operate a standard 3-phase induction motor, take the following precautions:

1. The energy loss is greater than for an inverter duty motor.
2. Avoid running motor at low speed for a long time. Under this condition, the motor temperature may rise above the motor rating due to limited airflow produced by the motor's fan. Consider external forced motor cooling.
3. When the standard motor operates at low speed for long time, the output load must be decreased.
4. The load tolerance of a standard motor is as follows:

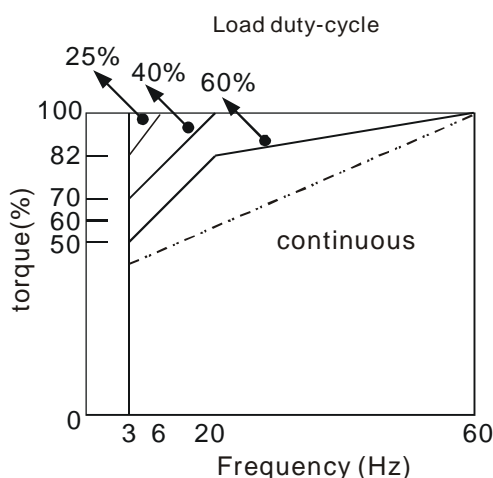

5. If 100% continuous torque is required at low speed, it may be necessary to use a special inverter duty motor.
6. Motor dynamic balance and rotor endurance should be considered once the operating speed exceeds the rated speed (60Hz) of a standard motor.
7. Motor torque characteristics vary when an AC Motor Drive instead of commercial power supply drives the motor. Check the load torque characteristics of the machine to be connected.
8. Because of the high carrier frequency PWM control of the VFD series, pay attention to the following motor vibration problems:
 - Resonant mechanical vibration: anti-vibration (damping) rubbers should be used to mount equipment that runs at varying speed.
 - Motor imbalance: special care is required for operation at 50 or 60 Hz and higher frequency.
 - To avoid resonances, use the Skip frequencies.
9. The motor fan will be very noisy when the motor speed exceeds 50 or 60Hz.

Special motors:

1. Pole-changing (Dahlander) motor:

The rated current is differs from that of a standard motor. Please check before operation and select the capacity of the AC motor drive carefully. When changing the pole number the motor needs to be stopped first. If over current occurs during operation or regenerative voltage is too high, please let the motor free run to stop (coast).

2. Submersible motor:

The rated current is higher than that of a standard motor. Please check before operation and choose the capacity of the AC motor drive carefully. With long motor cable between AC motor drive and motor, available motor torque is reduced.

3. Explosion-proof (Ex) motor:

Needs to be installed in a safe place and the wiring should comply with the (Ex) requirements. Delta AC Motor Drives are not suitable for (Ex) areas with special precautions.

4. Gear reduction motor:

The lubricating method of reduction gearbox and speed range for continuous operation will be different and depending on brand. The lubricating function for operating long time at low speed and for high-speed operation needs to be considered carefully.

5. Synchronous motor:

The rated current and starting current are higher than for standard motors. Please check before operation and choose the capacity of the AC motor drive carefully. When the AC motor drive operates more than one motor, please pay attention to starting and changing the motor.


Power Transmission Mechanism

Pay attention to reduced lubrication when operating gear reduction motors, gearboxes, belts and chains, etc. over longer periods at low speeds. At high speeds of 50/60Hz and above, lifetime reducing noises and vibrations may occur.

Motor torque

The torque characteristics of a motor operated by an AC motor drive and commercial mains power are different.

Below you'll find the torque-speed characteristics of a standard motor (4-pole, 15kW):

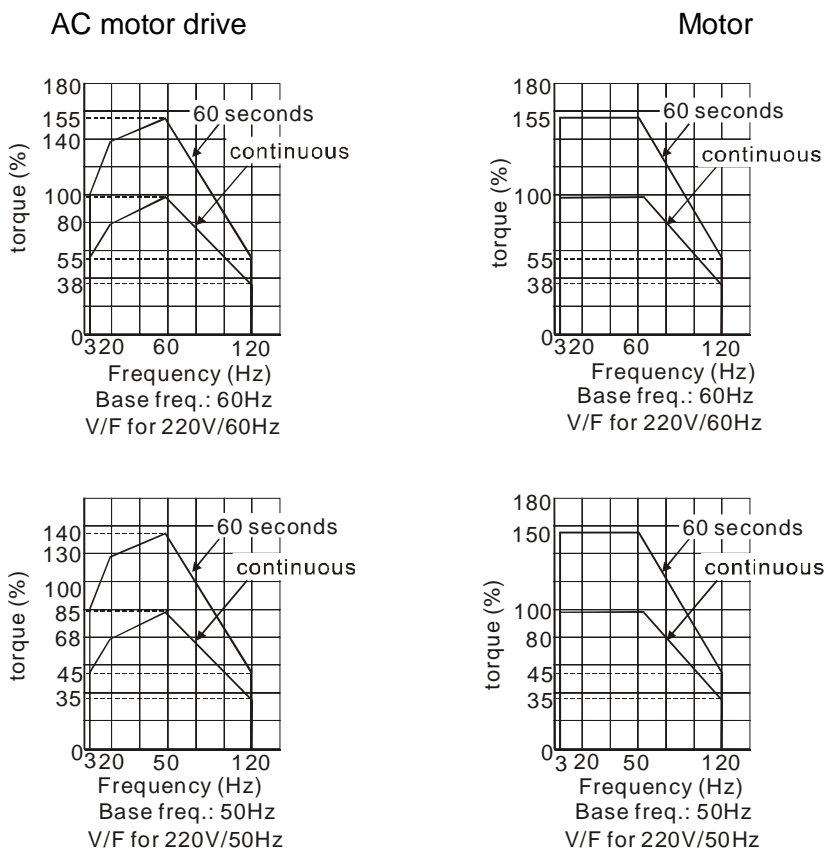

Chapter 18 Suggestions and Error Corrections for Standard AC Motor Drives

- 18-1 Maintenance and Inspections
- 18-2 Greasy Dirt Problem
- 18-3 Fiber Dust Problem
- 18-4 Erosion Problem
- 18-5 Industrial Dust Problem
- 18-6 Wiring and Installation Problem
- 18-7 Multi-function Input/Output Terminals Problem

The AC motor drive has a comprehensive fault diagnostic system that includes several different alarms and fault messages. Once a fault is detected, the corresponding protective functions will be activated. The following faults are displayed as shown on the AC motor drive digital keypad display. The six most recent faults can be read from the digital keypad or communication.

The AC motor drive is made up by numerous components, such as electronic components, including IC, resistor, capacitor, transistor, and cooling fan, relay, etc. These components can't be used permanently. They have limited-life even under normal operation. Preventive maintenance is required to operate this AC motor drive in its optimal condition, and to ensure a long life.

Check your AC motor drive regularly to ensure there are no abnormalities during operation and follows the precautions:



- Wait 5 seconds after a fault has been cleared before performing reset via keypad of input terminal.
- When the power is off after 5 minutes for $\leq 22\text{kW}$ models and 10 minutes for $\geq 30\text{kW}$ models, please confirm that the capacitors have fully discharged by measuring the voltage between + and -. The voltage between + and - should be less than 25VDC.
- Only qualified personnel can install, wire and maintain drives. Please take off any metal objects, such as watches and rings, before operation. And only insulated tools are allowed.
- Never reassemble internal components or wiring.
- Make sure that installation environment comply with regulations without abnormal noise, vibration and smell.

18-1 Maintenance and Inspections

Before the check-up, always turn off the AC input power and remove the cover. Wait at least 10 minutes after all display lamps have gone out, and then confirm that the capacitors have fully discharged by measuring the voltage between DC+ and DC-. The voltage between DC+ and DC- should be less than 25VDC.

Ambient environment

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
Check the ambient temperature, humidity, vibration and see if there are any dust, gas, oil or water drops	Visual inspection and measurement with equipment with standard specification	<input type="radio"/>		
If there are any dangerous objects	Visual inspection	<input type="radio"/>		

Voltage

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
Check if the voltage of main circuit and control circuit is correct	Measure with multimeter with standard specification	<input type="radio"/>		

Digital Keypad Display

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
Is the display clear for reading	Visual inspection	<input type="radio"/>		
Any missing characters	Visual inspection	<input type="radio"/>		

Mechanical parts

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If there is any abnormal sound or vibration	Visual and aural inspection		<input type="radio"/>	
If there are any loose screws	Tighten the screws		<input type="radio"/>	
If any part is deformed or damaged	Visual inspection		<input type="radio"/>	
If there is any color change by overheating	Visual inspection		<input type="radio"/>	
If there is any dust or dirt	Visual inspection		<input type="radio"/>	

Main circuit

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If there are any loose or missing screws	Tighten or replace the screw	<input type="radio"/>		
If machine or insulator is deformed, cracked, damaged or with color change due to overheating or ageing	Visual inspection NOTE: Please ignore the color change of copper plate		<input type="radio"/>	
If there is any dust or dirt	Visual inspection		<input type="radio"/>	

Terminals and wiring of main circuit

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If the terminal or the plate is color change or deformation due to overheat	Visual inspection		<input type="radio"/>	
If the insulator of wiring is damaged or color change	Visual inspection		<input type="radio"/>	
If there is any damage	Visual inspection	<input type="radio"/>		

DC capacity of main circuit

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If there is any leak of liquid, color change, crack or deformation	Visual inspection	<input type="radio"/>		
If the safety valve is not removed? If valve is inflated?	Visual inspection	<input type="radio"/>		
Measure static capacity when required		<input type="radio"/>		

Resistor of main circuit

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If there is any peculiar smell or insulator cracks due to overheat	Visual inspection, smell	<input type="radio"/>		
If there is any disconnection	Visual inspection	<input type="radio"/>		
If connection is damaged?	Measure with multimeter with standard specification	<input type="radio"/>		

Transformer and reactor of main circuit

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If there is any abnormal vibration or peculiar smell	Visual, aural inspection and smell	○		

Magnetic contactor and relay of main circuit

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If there are any loose screws	Visual and aural inspection	○		
If the contact works correctly	Visual inspection	○		

Printed circuit board and connector of main circuit

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If there are any loose screws and connectors	Tighten the screws and press the connectors firmly in place.		○	
If there is any peculiar smell and color change	Visual and smell inspection		○	
If there is any crack, damage, deformation or corrosion	Visual inspection		○	
If there is any liquid is leaked or deformation in capacity	Visual inspection		○	

Cooling fan of cooling system

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If there is any abnormal sound or vibration	Visual, aural inspection and turn the fan with hand (turn off the power before operation) to see if it rotates smoothly		○	
If there is any loose screw	Tighten the screw		○	
If there is any color change due to overheat	Change fan		○	

Ventilation channel of cooling system

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If there is any obstruction in the heat sink, air intake or air outlet	Visual inspection		○	

 **NOTE**

Please use the neutral cloth for clean and use dust cleaner to remove dust when necessary.


18-2 Greasy Dirt Problem

Serious greasy dirt problems generally occur in processing industries such as machine tools, punching machines and so on. Please be aware of the possible damages that greasy oil may cause to your drive:

1. Electronic components that silt up with greasy oil may cause the drive to burn out or even explode.
2. Most greasy dirt contains corrosive substances that may damage the drive.

Solution:

Install the AC motor drive in a standard cabinet to keep it away from dirt. Clean and remove greasy dirt regularly to prevent damage of the drive.

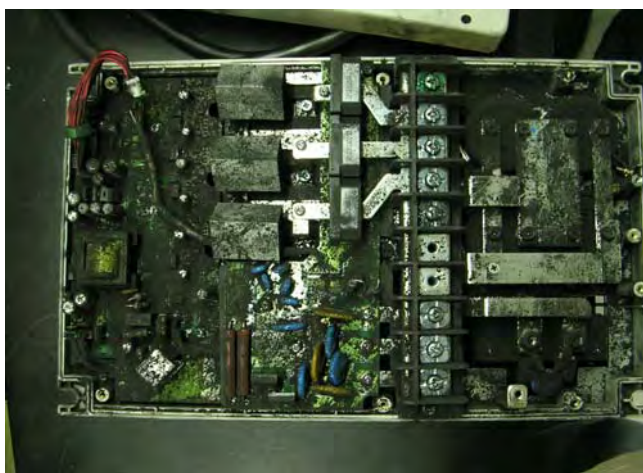

18-3 Fiber Dust Problem

Serious fiber dust problems generally occur in the textile industry. Please be aware of the possible damages that fiber may cause to your drives:

1. Fiber that accumulates or adheres to the fans will lead to poor ventilation and cause overheating problems.
2. Plant environments in the textile industry have higher degrees of humidity that may cause the drive to burn out, become damaged or explode due to wet fiber dust adhering to the devices.

Solution:

Install the AC motor drive in a standard cabinet to keep it away from fiber dust. Clean and remove fiber dust regularly to prevent damage to the drive.






18-4 Erosion Problem

Erosion problems may occur if any fluids flow into the drives. Please be aware of the damages that erosion may cause to your drive.

1. Erosion of internal components may cause the drive to malfunction and possibility to explode.

Solution:

Install the AC motor drive in a standard cabinet to keep it away from fluids. Clean the drive regularly to prevent erosion.

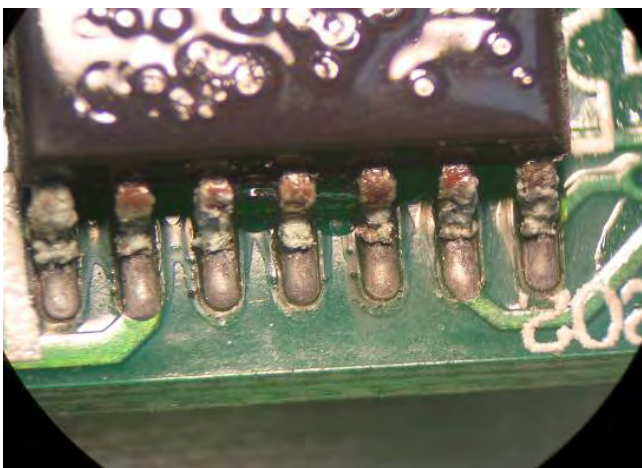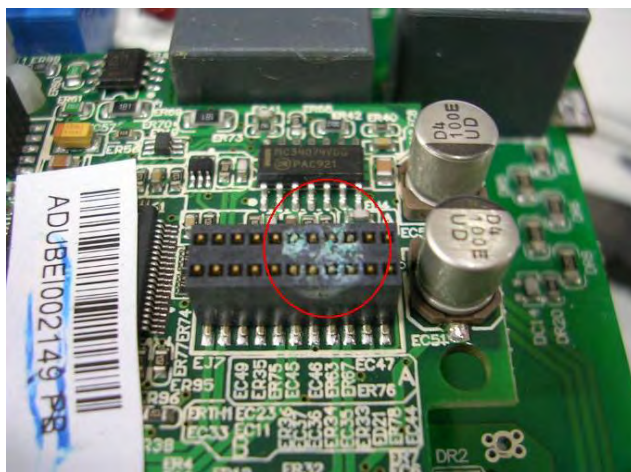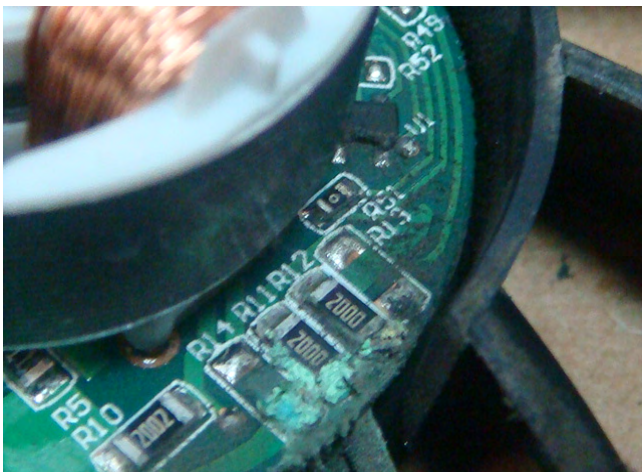



18-5 Industrial Dust Problem

Serious industrial dust pollution frequently occurs in stone processing plants, flour mills, cement plants, and so on. Please be aware of the possible damage that industrial dust may cause to your drives:

1. Dust accumulating on electronic components may cause overheating problem and shorten the service life of the drive.
2. Conductive dust may damage the circuit board and may even cause the drive to explode.

Solution:

Install the AC motor drive in a standard cabinet and cover the drive with a dust cover. Clean the cabinet and ventilation hole regularly for good ventilation.

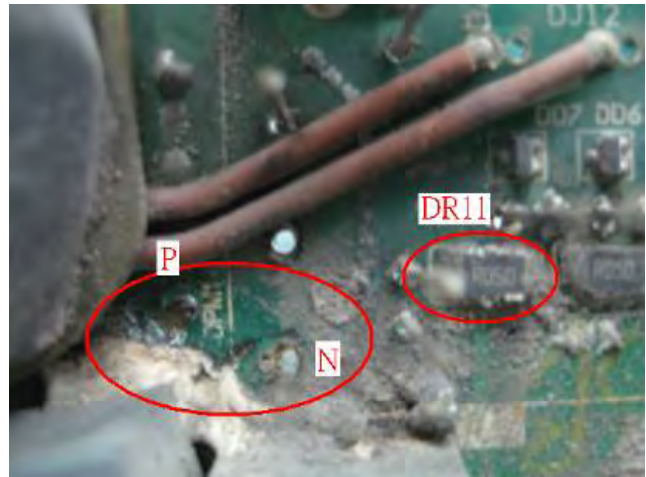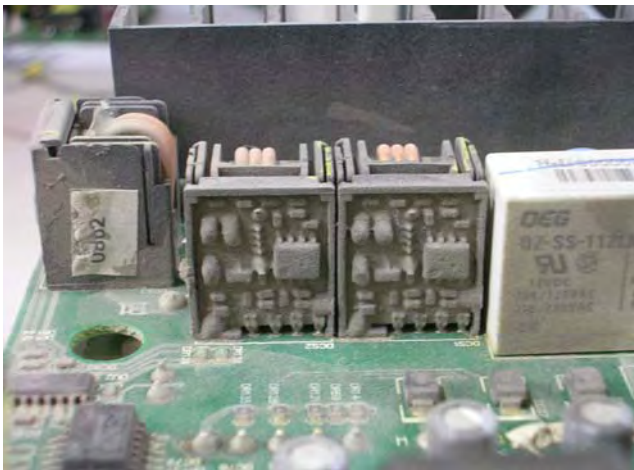



18-6 Wiring and Installation Problem

When wiring the drive, the most common problem is wrong wire installation or poor wiring. Please be aware of the possible damages that poor wiring may cause to your drives:

1. Screws are not fully fastened. Occurrence of sparks as impedance increases.
2. If a customer has opened the drive and modified the internal circuit board, the internal components may have been damaged.

Solution:

Ensure all screws are fastened when installing the AC motor drive. If the AC motor drive functions abnormally, send it back to the repair station. DO NOT try to reassemble the internal components or wire.

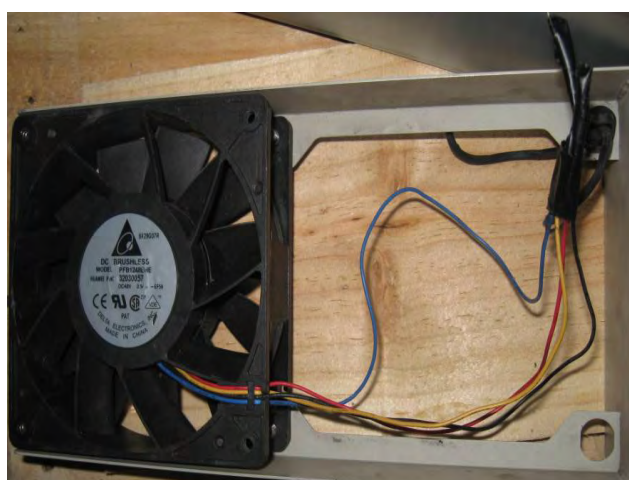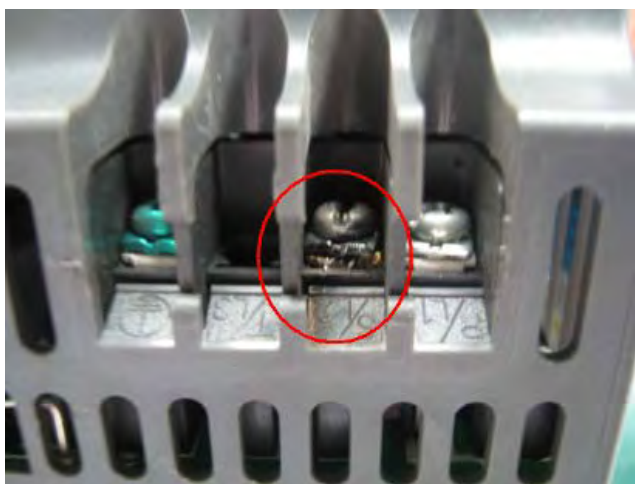

18-7 Multi-function Input/Output Terminals Problem

Multi-function input/output terminal errors are generally caused by over usage of terminals and not following specifications. Please be aware of the possible damages that errors on multi-function input/output terminals may cause to your drives:

1. Input/output circuit may burn out when the terminal usage exceeds its limit.

Solution:

Refer to the user manual for multi-function input output terminals usage and follow the specified voltage and current. DO NOT exceed the specification limits.

